


UAD POWERED PLUG-INS

USER GUIDE

SOFTWARE VERSION 6.1

MANUAL VERSION 111025

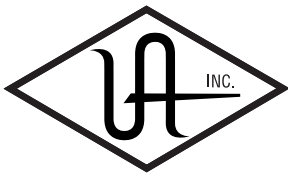

UNIVERSAL AUDIO

Universal Audio, Inc.
1700 Green Hills Road
Scotts Valley, CA 95066-4926
Voice: +1-831-440-1176
Fax: +1-831-461-1550
www.uaudio.com

Customer Support (USA):
1-877-MY-UAUDIO (877-698-2834)

NOTICES

Disclaimer

This manual provides general information, preparation for use, installation and operating instructions for the Universal Audio UAD Powered Plug-Ins. The information contained in this manual is subject to change without notice.

Universal Audio, Inc. makes no warranties of any kind with regard to this manual, or the product(s) it refers to, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Universal Audio, Inc. shall not be liable for errors contained herein or direct, indirect, special, incidental, or consequential damages in connection with the furnishing, performance, or use of this material or the product(s).

Important Safety Instructions

Before using this unit, be sure to carefully read the applicable items of these operating instructions and the safety suggestions. Afterwards keep them handy for future reference. Take special care to follow the warnings indicated on the unit, as well as in the operating instructions.

Water and Moisture

Do not use the unit near any source of water or in excessively moist environments.

Object and Liquid Entry

Care should be taken so that objects do not fall, and liquids are not spilled, into the enclosure through openings.

Ventilation

When installing the unit in a rack or any other location, be sure there is adequate ventilation. Improper ventilation will cause overheating, and can damage the unit.

Heat

The unit should be situated away from heat sources, or other equipment that produces heat.

Power Sources

The unit should be connected to a power supply only of the type described in the operating instructions, or as marked on the unit.

Power Cord Protection

AC power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit. Never take hold of the plug or cord if your hand is wet. Always grasp the plug body when connecting or disconnecting AC.

Cleaning

The external unit should be cleaned only with a damp cloth and mild soap if necessary. Chemical cleaners may damage the silkscreen and/or finish.

Nonuse Periods

The AC power supply cord of the unit should be unplugged from the AC outlet when left unused for a long period of time.

Damage Requiring Service

The unit should be serviced by qualified service personnel when:

- The AC power supply cord or the plug has been damaged;
- Objects have fallen or liquid has been spilled into the unit;
- The unit has been exposed to rain;
- The unit does not operate normally or exhibits a marked change in performance;
- The unit has been dropped, or the enclosure damaged.

FCC Compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by Universal Audio could void the user's authority to operate the equipment.

Warranty

The Warranty for all Universal Audio hardware is one (1) year from date of purchase, including parts and labor.

Service & Support

Even the best-built audio equipment in the world will sometimes fail. In those rare instances, our goal here at UA is to get you up and running again as soon as possible. If you are experiencing problems with your UAD product, please visit the Universal Audio website at <http://www.uaudio.com> to validate compatibility, and read the FAQs regarding UAD products. If you still require service, contact UA Tech Support at 877-MY-UAUDIO, or visit <http://www.uaudio.com/support/contact.html> to create a help ticket, and we will help troubleshoot your system. (Canadian and overseas customers should contact their local distributor, which can be found using the Dealer Locator at <http://www.uaudio.com>.) When calling Tech Support for assistance, please have the product serial number available, and have your unit set up in front of you, turned on, and exhibiting the problem. This will help us diagnose and solve any problems as quickly as possible. Thank you.

The user should not attempt to service the unit beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

Universal Audio, Inc.

End User License Agreement

By installing the software, you confirm your acceptance of the Universal Audio and third-party End User License Agreements, as well as the Universal Audio terms of service and privacy policy, all of which can be found at:

<http://www.uaudio.com/eula>

This Agreement is between Universal Audio, Inc., and you. IMPORTANT - PLEASE READ THIS LICENSE AGREEMENT CAREFULLY BEFORE INSTALLING THIS SOFTWARE. By using the Universal Audio software ("Universal Audio Software"), you accept these terms. The Universal Audio Software may be distributed with software or components from third-parties ("Third-party Software") that are subject to different terms which can be found at: <http://www.uaudio.com/eula>, and also the provisions of Section 11 below.

If you do not accept these terms, do not use the software provided with this installation. Instead, return the Universal Audio Software or Third-Party Software to the reseller for a refund or credit. If you cannot obtain a refund from the reseller, or if you purchased your software license directly from Universal Audio, Inc. ("Universal Audio"), contact Universal Audio for information about Universal Audio's refund policies. Please visit the Web sites listed at the end of this document for contact details.

This Universal Audio End-User License Agreement ("Agreement") is a legal agreement between you (either an individual or a single entity), as an end-user, and Universal Audio for the Universal Audio Software accompanying this Agreement, which includes computer software, updates and any bug fixes subsequently delivered and associated media, printed materials and "online" or electronic documentation. The Universal Audio Software is licensed, not sold, by Universal Audio to the original end user for use only on the terms set forth here.

1. Limited Use License. Universal Audio, as Licensor, grants you, as Licensee, a non-exclusive license to use the Software with a single computer unit at a single location.

2. Title. The Software is owned by Universal Audio or its suppliers and is protected by copyright laws and international treaty provisions, as well as other intellectual property laws and treaties. Universal Audio retains title to and ownership of the Software and all copies thereof in any form. Universal Audio retains all rights in the Software not specifically granted to the Licensee. This Agreement only gives you certain rights to use the Software and related documentation, which may be revoked if you do not follow these terms.

3. Limited Rights to Install and Use the Software

(i) Permitted use and restrictions. You may install the Software into the memory of a single computer, but may not electronically transfer the Software to someone else's computer or operate it in a time-sharing or service-bureau operation. Additionally, you may only use the Software on a computer that contains a maximum of eight (8) UAD cards, specifically four UAD-1 cards and four UAD-2 cards. The sole exception is that, if you are a licensee of the UAD-2 Solo/Laptop card or UAD-2 Satellite, you may link the card to an existing computer previously registered.

(ii) Reverse engineering and copying limitations. You may make one copy of the Software for backup purposes only (and replacement backup copies in the event of loss of or damage to a backup copy), provided you include all copyright notices contained on the original media on the backup copy. You may not modify, translate, adapt, reverse engineer, decompile, create other works from, or disassemble the Software or any portions thereof (except and to the extent that applicable law expressly permits reverse engineering, decompilation or disassembly). Similarly, you may not copy, modify, adapt, transfer, or create other works based upon the printed materials and "online" or electronic documentation accompanying or published for use with the Software (the "Documentation").

(iii) Technical limitations. The Software may include technological measures, whether in the Software or in bundled hardware or both, that are designed to prevent or detect unlicensed use of the Software. Circumvention of these technological measures is prohibited, except and only to the extent that applicable law expressly permits, despite this limitation. Any attempt to circumvent technical limitations may render the Software or certain features unusable or unstable, and may prevent you from updating or upgrading the Software.

(iv) No reconfiguration. The Software is licensed for installation and use only in the manner it was provided to you, as configured by an automated installation program provided with the Software, or as described in Universal Audio's documentation. You may not separate the components contained in the Software or otherwise reconfigure the Software to circumvent technical limitations on the use of the Software or to otherwise exceed the scope of your license.

4. Export, Renting and Transfer Restrictions. You may not export, convey, rent, sublicense, or otherwise distribute the Software or any rights therein to any person or entity. You may, however, transfer the Software license but only under the following limited terms and conditions.

(i) Eligible transferees: You may transfer the license to a transferee:

(a) for whom you have provided registration details (your name, hardware ID(s), user e-mail ID, buyer's name and buyer's e-mail address) to Universal Audio at info@uaudio.com in advance of such transfer; and (b) who has agreed to be bound by the terms of this license by registering with Universal Audio at my.uaudio.com and confirming such agreement during installation of the Software. Any such permitted transferee may not subsequently transfer this license and the limited 90 day warranty set forth in Section 5 shall expire upon such permitted transfer.

(ii) Eligible products: the Software may only be transferred in connection with up to four (4) UAD-1 cards and four (4) UAD-2 cards per user account. Special exceptions may arise where the use of more than eight (8) UAD cards is required. These cases are generally related to areas of education and multi-room facilities, and require advanced approval if requesting to sell or transfer over the allotted (8) cards per account. If you have questions or are seeking an exception, please contact customer support.

5. Limited Warranty. Universal Audio grants solely to you a limited warranty for a period of ninety (90) days from the original purchase date that the media on which the Software is distributed shall be substantially free from material defects. Your exclusive remedy, at Universal Audio's option, is to return and have replaced the inaccurate media containing the Software programs or receive a refund of the price paid within the warranty period. UNIVERSAL AUDIO DOES NOT WARRANT THAT THE SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT ITS OPERATION WILL BE UNINTERRUPTED OR ERROR-FREE. EXCEPT AS SPECIFIED HEREIN, UNIVERSAL AUDIO MAKES NO WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, REGARDING THE SOFTWARE, DOCUMENTATION, OR MEDIA, AND HEREBY EXPRESSLY DISCLAIMS THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. FURTHERMORE, UNIVERSAL AUDIO DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE SOFTWARE OR DOCUMENTATION IN TERMS OF THEIR CORRECTNESS, ACCURACY, RELIABILITY, OR OTHERWISE. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY UNIVERSAL AUDIO OR A UNIVERSAL AUDIO-AUTHORIZED REPRESENTATIVE SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY. EXCEPT AS SPECIFIED HEREIN, SHOULD THE SOFTWARE PROVE DEFECTIVE, YOU (AND NOT UNIVERSAL AUDIO OR A UNIVERSAL AUDIO-AUTHORIZED REPRESENTATIVE) ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR, OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

6. Limitation of Liability. UNIVERSAL AUDIO SHALL HAVE NO LIABILITY TO YOU OR ANY THIRD PARTY, WHETHER IN CONTRACT, TORT, NEGLIGENCE OR PRODUCTS LIABILITY, FOR ANY CLAIM, LOSS, OR DAMAGE, INCLUDING BUT NOT LIMITED TO LOST PROFITS, LOSS OF USE, BUSINESS INTERRUPTION, LOST DATA, OR LOST FILES, OR FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE WHATSOEVER ARISING OUT OF OR IN CONNECTION WITH THE USE OF OR INABILITY TO USE THE SOFTWARE OR DOCUMENTATION, OR THE PERFORMANCE OR OPERATION OF THE SOFTWARE, EVEN IF Universal Audio HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. IN NO EVENT SHALL UNIVERSAL AUDIO'S TOTAL LIABILITY TO YOU FOR ALL DAMAGES, LOSSES, AND CAUSES OF ACTION WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE) OR OTHERWISE EXCEED THE AMOUNT PAID BY YOU FOR THE SOFTWARE.

(EULA continued next page)

7. Termination. To the extent permitted by law, and without prejudice to any other rights Universal Audio may have, Universal Audio may terminate your license if you materially breach these terms and conditions. Upon termination by Universal Audio, you will return to Universal Audio, at your expense, the Software, including documentation, and any copies thereof.

8. United States Government Rights. The Software and Documentation are provided with RESTRICTED RIGHTS. Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 or subparagraphs (c)(1) and (2) of the Commercial Computer Software-Restricted Rights at 48 CFR 52.227-19, as applicable. Manufacturer is Universal Audio, Inc., 1700 Green Hills Road, Scotts Valley, CA, 95066-4926 USA.

9. Export restrictions. The Software is subject to United States export laws and regulations. If you are subject to U.S. laws, you must comply with these laws, which include restrictions on destinations, end users and end use. For further information, please see <http://www.bis.doc.gov>.

10. Consent to Use Data. Universal Audio may collect and use technical information about the Software and hardware devices you use in connection with the Software in a manner that does not personally identify you. Universal Audio may use this information to improve our products or to provide customized services or technologies. Universal Audio may also disclose this information to third parties so that they may improve the way their products or services interact with the Software.

11. Third Party Software; Third Party Information. Your installation and use of Third-Party Software is subject to different terms, which can be found on the media on which the software is provided, or at: <http://www.uaudio.com/eula>. Nothing in this agreement limits rights granted to you by third parties, which may include rights under free software or open source software license. Additionally, Universal Audio may include information about third party products and services, including links to Web sites run by others. Universal Audio is not responsible for, and does not endorse or sponsor, this third-party information.

12. Miscellaneous. This Agreement shall be governed by and construed in accordance with the laws of the United States and the State of California, as applied to agreements entered into and to be performed entirely within California between California residents. If for any reason a court of competent jurisdiction finds any provision of this License or portion thereof to be unenforceable, that provision of the License shall be enforced to the maximum extent permissible so as to effect the intent of the parties, and the remainder of this License shall continue in full force and effect. This Agreement constitutes the entire agreement between the parties with respect to the use of the Software and Documentation, and supersedes all prior or contemporaneous understandings or agreements, written or oral, regarding such subject matter. No amendment to or modification of this License will be binding unless in writing and signed by a duly authorized representative of Universal Audio.

Should you have any questions concerning this Agreement, please contact Universal Audio at 1700 Green Hills Road, Scotts Valley, CA, 95066-4926 USA, +1-831-440-1176 voice, +1-831-461-1550 fax, www.uaudio.com web.

Copyright

©2011 Universal Audio, Inc. All rights reserved.

This manual and any associated software, artwork, product designs, and design concepts are subject to copyright protection. No part of this document may be reproduced, in any form, without prior written permission of Universal Audio, Inc. Your rights to the Software are governed by the accompanying End-User license agreement.

Trademarks

Universal Audio, the Universal Audio "diamond" logo, UAD, UAD Series, UAD-1, UAD-2, UAD-2 SOLO, UAD-2 DUO, UAD-2 QUAD, "Powered Plug-Ins", 1176LN, 1176SE, Teletronix, LA-2A, LA-3A, LA-610, LA-610MkII, 2-1176, 2-610, 6176, 710 Twin-Finity, 2192, Cambridge EQ, DreamVerb, Plate 140, Precision Limiter, RealVerb Pro, Precision Buss Compressor, Precision De-Esser, Precision Maximizer, Satellite DUO, Satellite QUAD, and "Analog Ears | Digital Minds," are trademarks or registered trademarks of Universal Audio, Inc. Other company and product names mentioned herein are trademarks of their respective owners.

EULA v110412

TABLE OF CONTENTS

Chapter 1. Introduction	18
Welcome!	18
Features	20
The UAD System	21
Package Contents	21
Documentation Overview	21
Online Documentation	23
Customer Support	23
Chapter 2. UAD Installation	25
Overview	25
Install Videos	25
System Requirements	26
Supported Hosts	26
Latest Information & Software Updates	27
UAD Software Installation	28
UAD Hardware Installation	30
Authorization	32
Authorize Plug-Ins Procedure	33
Offline Authorization	34
Using Unlicensed Plug-Ins (Demo Mode)	35
Verifying Installation	35
Learn More	37
Software Removal	37
Chapter 3. UAD System Overview	38
The UAD Environment	38
The UAD Hardware	38
The UAD Software	42
The DAW Environment	44
My.uaudio.com	46
Authorization	46
Chapter 4. My.uaudio.com	47
Optional Plug-Ins	47
Authorization Overview	48
Demo Mode	51
UA Online Store	52
Buying Plug-Ins	53
Transferring UAD devices and licenses	54

TABLE OF CONTENTS

Chapter 5. Using Multiple UAD Devices	55
Overview	55
Plug-In License Policy	55
UAD Link Licensing	56
Authorizing Multiple Devices	57
UAD-1 with UAD-2	57
Power Requirement	57
Multidevice DSP Loading	58
Device Info Display	59
Disabling Devices	59
Host CPU	59
Chapter 6. UAD Meter & Control Panel	61
Overview	61
Launching the UAD Meter & Control Panel Application	62
Using the UAD Meter	62
UAD Meter Elements	63
UAD Control Panel	64
System Information Panel	65
Plug-Ins Panel	68
Configuration Panel	71
FireWire Panel	78
Help & Support Panel	84
Chapter 7. Using UAD Powered Plug-Ins	85
Overview	85
Launching a UAD Powered Plug-In	85
The UAD Plug-In Window	86
UAD Toolbar	87
LiveTrack Mode	89
Adjusting Parameters	91
Shortcuts	92
DSP Loading Information	93
Automation	94
External MIDI Control	95
Chapter 8. Tempo Sync	96
Overview	96
Tempo Sync Plug-Ins	96
Available Note Values	97

TABLE OF CONTENTS

Range Limits	98
Entering Values	98
Out of range	99
Modes with Tempo Sync	99
Roland RE-201 Sync	100
Chapter 9. UAD Delay Compensation	101
Latency & Delay Compensation	101
Host PDC Implementation	101
UAD-1 Delay Compensator	103
UAD-1 Track Advance	106
Compensating Upsampled Plug-Ins	108
Upsampling Values Table	110
Upsampled Compensation Examples	111
Live Processing	113
Chapter 10. UAD ExpressCard Products	114
Overview	114
UAD-2 SOLO/Laptop Details	116
Important SOLO/Laptop Notes	119
UAD-Xtenda	120
UAD-Xpander Details	121
UAD-Xpander Connections	123
Xpander Operation	123
Important Xpander Notes	127
Chapter 11. UAD-2 Satellite	128
Overview	128
UAD-2 Satellite Details	129
UAD-2 Satellite Installation	130
UAD-2 Satellite Operation	133
Important UAD-2 Satellite Notes	135
FireWire Basics	137
FireWire Bandwidth	141
FireWire Bandwidth vs. UAD DSP	143
FireWire Bus Power	144
Chapter 12. Ampex ATR-102	146
Mastering Tape Recorder	146
Ampex ATR-102 Screenshots	147
Operational Overview	148

TABLE OF CONTENTS

Primary Controls	151
Secondary Controls	159
Manual Calibration Procedure	167
Manual Calibration Notes	170
Parameter Dependencies	171
Chapter 13. Cambridge EQ.	173
Overview	173
Cambridge EQ Screenshot	173
Cambridge EQ Controls	174
Low Cut / High Cut Filters	177
EQ Bands	178
Parametric EQ	179
Shelf EQ	182
Chapter 14. Cooper Time Cube.	184
Dual Mechanical Delay Line	184
Cooper Time Cube Screenshot	184
Design Overview	185
Cooper Time Cube Controls	185
Channel Controls	188
Cooper Time Cube Hardware	189
Chapter 15. CS-1 Channel Strip	190
Overview	190
EX-1 Equalizer and Compressor	191
EX-1 Equalizer Controls	191
EX-1 Compressor Controls	192
EX-1M Overview	193
DM-1 Delay Modulator	194
DM-1 Controls	194
DM-1L	196
RS-1 Reflection Engine	197
RS-1 Controls	198
Chapter 16. dbx 160 Compressor/Limiter	200
Overview	200
dbx 160 Screenshot	200
dbx 160 Controls	201
WebZine Articles	202

TABLE OF CONTENTS

Chapter 17. DreamVerb	203
Overview	203
Signal Flow	204
Resonance (Equalization) Panel	205
Shape Panel	207
Materials Panel	209
Reflections Panel	211
Reverberation Panel	213
Positioning Panel	214
Levels Panel	216
DreamVerb Preset Management	217
Spatial Characteristics	218
Preset Design Tips	219
Chapter 18. Empirical Labs EL7 FATS0	221
Introduction	221
FATS0 Screenshots	222
FATS0 Functional Overview	222
FATS0 Controls	225
Channel Controls	226
Global Controls	229
FATS0 Sr. Controls	230
WebZine Article	233
Chapter 19. EMT 140 Plate Reverb	234
Overview	234
EMT 140 Screenshot	234
EMT 140 Controls	235
Reverb Controls	236
Stereo Controls	237
EQ Controls	237
Modulation Controls	238
Blend Controls	239
Chapter 20. EMT 250 Electronic Reverberator	241
Introduction	241
EMT 250 Screenshot	242
Functional Overview	242
Program Mode Controls	245
Global Controls	252

TABLE OF CONTENTS

Webzine Article	253
Chapter 21. EP-34 Classic Tape Echo	255
EP-34 Overview	255
EP-34 Tape Echo Screenshot	256
EP-34 Controls	256
EP-34 Hardware History	260
WebZine Article	261
Chapter 22. Fairchild 670	262
Overview	262
Fairchild Screenshot	263
2 Compressors, 4 Modes	263
Controls Overview	264
Fairchild Modes	265
Controls	266
Chapter 23. Harrison 32C EQ	270
Overview	270
Harrison 32C EQ Screenshot	270
Harrison 32C EQ and Harrison 32C SE Controls	271
Harrison 32C SE	273
Harrison 32C Latency	274
WebZine Article	274
Chapter 24. Helios Type 69 Equalizer	275
Overview	275
Helios Type 69 Screenshot	275
Helios Type 69 Controls	276
Helios 69 Latency	279
WebZine Article	279
Chapter 25. LA-2A and 1176LN	281
Overview	281
Compressor Basics	281
Teletronix LA-2A Leveling Amplifier	284
LA-2A Controls	285
1176LN Solid-State Limiting Amplifier	286
1176LN Controls	287
1176SE “Special Edition”	289

TABLE OF CONTENTS

Chapter 26. LA-3A Compressor	290
Overview	290
LA-3A Screenshot	290
LA-3A Controls	291
Chapter 27. Lexicon 224	292
Classic Digital Reverb	292
Lexicon 224 Screenshot	294
Operational Overview	295
Primary Controls	299
Hidden Controls	306
Program Descriptions	309
Chapter 28. Little Labs IBP	312
Overview	312
Little Labs IBP Screenshot	312
Little Labs IBP Controls	313
Little Labs IBP Latency	314
WebZine article	314
Chapter 29. Little Labs VOG	315
Bass Resonance Processor	315
Little Labs VOG Screenshot	316
Operational Overview	316
Little Labs VOG Parameters	317
Chapter 30. Manley Massive Passive EQ	319
Overview	319
Massive Passive Screenshots	320
Unusual EQ Conventions	320
Massive Passive Mastering EQ	321
Standard vs. Mastering Versions	322
Massive Passive Band Controls	322
Channel Controls	326
Other Controls	328
Massive Passive Latency	329
Notes from Manley Laboratories	329
Additional Information	331
Chapter 31. Moog Multimode Filter	332
Overview	332

TABLE OF CONTENTS

Moog Filter Screenshot	333
Moog Filter Controls	333
Moog Filter SE	339
Moog Filter Latency	340
WebZine Articles	340
Chapter 32. MXR Flanger/Doubler	341
Classic Electronic Flanging	341
MXR Flanger/Doubler Screenshot	342
Operational Overview	342
MXR Flanger/Doubler Controls	343
MXR Flanger/Doubler Latency	348
Chapter 33. Neve 1073 Equalizer	349
Overview	349
Neve 1073 Screenshot	349
Neve 1073 and 1073SE Controls	349
Neve 1073SE	352
Neve 1073 Latency	353
Chapter 34. Neve 1081 Equalizer	354
Overview	354
Neve 1081 Screenshot	354
Neve 1081 and 1081SE Controls	355
Neve 1081SE	360
Neve 1081 Latency	360
Chapter 35. Neve 31102 Console EQ	361
Overview	361
Neve 31102 Screenshot	361
Neve 31102 and 31102SE Controls	362
Neve 31102SE	365
Neve 31102 Latency	366
Chapter 36. Neve 33609 Compressor	367
Overview	367
Neve 33609 Screenshot	368
Operation	368
Neve 33609 and 33609SE Controls	369
Limiter	369
Compressor	370

TABLE OF CONTENTS

Other Controls	371
Neve 33609SE	376
Neve 33609 Latency	376
Chapter 37. Neve 88RS Channel Strip	377
Overview	377
Neve 88RS Screenshot	378
Neve 88RS Controls	379
Dynamics	379
Gate/Expander	380
Limiter/Compressor	383
EQ	386
Cut Filters	389
Global	390
WebZine Article	391
Chapter 38. Nigel	392
Introduction	392
Preflex Plug-in	394
Preflex Modules	394
Gate/Comp Module	395
Amp Module	398
Amp Controls	399
Cabinet Module	402
Phasor Module	404
Mod Filter Module	407
TremModEcho plug-in	411
Trem/Fade Module	412
Mod Delay Module	415
Echo Module	419
Chapter 39. Precision Buss Compressor	421
Overview	421
Precision Buss Compressor Screenshot	422
Precision Buss Compressor Controls	422
Extra Presets	426
WebZine Article	426
Chapter 40. Precision De-Esser	427
Overview	427
Precision De-Esser Screenshot	427

TABLE OF CONTENTS

Precision De-Esser Controls	428
Operating Tips.....	430
Chapter 41. Precision Enhancer Hz.....	431
Overview	431
Precision Enhancer Hz Screenshot.....	431
Precision Enhancer Hz Controls.....	432
Precision Enhancer Hz Usage Notes	435
Chapter 42. Precision Enhancer kHz.....	436
Overview	436
Precision Enhancer kHz Screenshot.....	437
Precision Enhancer kHz Controls.....	437
Chapter 43. Precision Equalizer	440
Overview	440
Precision Equalizer Screenshot.....	440
Precision Equalizer Controls.....	441
Control Grouping	441
Modes	441
Band Controls	443
Precision Equalizer Latency	445
Chapter 44. Precision Limiter	446
Overview	446
Precision Limiter Screenshot.....	447
Controls Overview.....	447
Precision Limiter Controls	447
Precision Limiter Meters Overview	448
Precision Limiter Latency.....	453
Chapter 45. Precision Maximizer	454
Overview	454
Precision Maximizer Screenshot.....	455
Precision Maximizer Controls.....	455
Operating Tips.....	459
Precision Maximizer Latency	459
WebZine Article	460
Chapter 46. Precision Multiband	461
Overview	461
Precision Multiband Screenshot.....	461

TABLE OF CONTENTS

Precision Multiband Interface	462
Band Controls	463
Band Parameters	464
EQ Display	468
Frequency Controls	470
Dynamics Meters	471
Global Controls	472
Precision Multiband Latency	474
Chapter 47. Pultec and Pultec-Pro	475
Overview	475
Pultec Latency	476
Pultec EQP-1A Screenshot	476
Pultec EQP-1A Controls	476
Low Frequency Controls	477
High Frequency Controls	478
High Attenuation Controls	478
Pultec MEQ-5 Screenshot	479
Pultec MEQ-5 Controls	479
Low Peak Controls	480
Dip Controls	480
High Peak Controls	480
MEQ-5 Response Curves	480
Chapter 48. RealVerb Pro	484
Overview	484
RealVerb Pro Background	485
Spectral Characteristics	486
Resonance (Equalization)	491
Timing	492
Positioning	494
Levels	495
Morphing	496
RealVerb Pro Preset Management	498
RealVerb Pro Preset List	498
Chapter 49. Boss CE-1 Chorus Ensemble	499
Overview	499
Boss CE-1 Screenshot	499
Boss CE-1 Controls	500

TABLE OF CONTENTS

Chapter 50. Roland Dimension D	503
Overview	503
Roland Dimension D Screenshot	503
Roland Dimension D Controls	504
Chapter 51. Roland RE-201 Space Echo	505
Overview	505
Roland RE-201 Screenshot	506
Roland RE-201 Interface	506
Roland RE-201 Controls	506
Chapter 52. SPL Transient Designer	512
Overview	512
SPL Transient Designer Screenshot	512
SPL Transient Designer Controls	513
WebZine Article	514
Acknowledgement	515
Applications	515
Technology	519
Chapter 53. SSL E Channel Strip	523
Large Format Mix Module	523
SSL E Channel Strip Screenshot	524
SSL E Channel Strip Controls	524
Filters	525
Dynamics	526
Compressor/Limiter	526
Gate/Expander	527
EQ	530
Global	534
Usage Notes	535
WebZine Article	536
Chapter 54. SSL G Bus Compressor	537
Large Format Console Dynamics	537
SSL G Bus Compressor Screenshot	537
SSL G Bus Compressor Controls	538
General Usage Notes	540
WebZine Article	541

TABLE OF CONTENTS

Chapter 55. Studer A800	542
Multichannel Tape Recorder	542
Studer A800 Screenshot	543
Operational Overview	543
Primary Controls	546
Secondary Controls	549
Studer A800 Latency	555
Chapter 56. Trident A-Range EQ	557
Overview	557
Trident A-Range EQ Screenshot	557
Operational Overview	558
Trident A-Range EQ Controls	559
Trident A-Range Latency	561
WebZine Article	561
Chapter 57. History	563
Bill Putnam Sr.	563
Classic Compressors	567
Pros Talk UA	570
Thank You	574

CHAPTER 1

Introduction

Welcome!

Congratulations, and welcome to the UA Family! You now own the best sounding, most powerful sonic upgrade available for your DAW. The UAD-2 and version 6 software represents the culmination of a multi-year development effort delivering the latest in state-of-the-art audio processing technology and is the next evolution of the revolutionary, award-winning UAD Powered Plug-Ins & DSP Device Platform.

For many years our customers have been asking for a UAD with more power and the UAD-2 is all about putting more power in your hands – more power to track, mix and master. The UAD-2 Quad offers, on average, an incredible 10 times the power of the UAD-1, while the UAD-2 Duo offers 5 times, and UAD-2 Solo offers 2.5 times the power. The UAD-2 Quad supports an awe-inspiring 128-channel Neve 88RS mixer at 44.1k. That’s a full console for the largest of professional mixes on ONE incredibly priced UAD-2 device!

Up to four UAD-2 devices can be mixed and matched to conveniently scale the DSP power you want at the price you can afford. Start with a Nevana 32 and instantly run a 32 channel Neve 88RS console. Then, simply add more devices for additional outboard FX or more mix channels as your needs grow. Pro power-users can now use up to four UAD-2 Quads for the most demanding applications with equivalent potency to 40 UAD-1 cards! Now inside-the-box mixing is as powerful as outside.

Once you’re settled in with your new UAD-2 select from our ever growing Powered Plug-Ins Collection to custom build your own virtual mixing console, mastering console, mix sidecar, or inboard dream-FX-rack from UA’s exclusive collection of revered studio gear including classics from Neve®, Roland/BOSS®, Helios®, Fairchild, Pultec, SPL®, Moog®, Empirical Labs®, Manley Laboratories®, dbx®, Studer®, Ampex®, SSL®, Harmon®, and of course UA’s own 1176LN, LA-2A, and LA-3A compressors, as well as our critically acclaimed line of Precision Mix Series and Mastering Series plug-ins. Digital recreations of other seminal analog studio gems from other legendary analog manufacturers are on the way.

The UAD-2 also includes version 6 of the UAD software, which has major driver enhancements and an all-new UAD Meter & Control Panel. Version 6 features multicore-aware drivers, LiveTrack™ for low-latency tracking and monitoring through UAD-2 plug-ins, and L.O.D.E.™ [Live Optimizing DSP Engine], which dynamically balances the load on the UAD-2. The new UAD Meter & Control Panel offers improved status monitoring, easy Quick-Click Plug Purchasing, Help and Support resources, Software Updates, and improved rollover help. There's also a new streamlined web shopping experience via a completely re-designed UA website with integrated audio and video demo's, tutorials, in-depth webzine articles, FAQ's and enhanced support so you can really get the most out of your UAD-2.

Developing the UAD-2 as well as Universal Audio's entire line of quality audio products designed to meet the needs of the modern recording studio while retaining the character of classic vintage equipment—has been a very special experience for me and for all who have been involved. We hope that you will enjoy using your UAD-2 and Powered Plug-Ins as much as we do.

Thanks for your support of Universal Audio.

Sincerely,
Bill Putnam, Jr.
CEO, Owner

A handwritten signature in black ink, appearing to be 'Bill Putnam, Jr.', written in a cursive style.

Features

- High-bandwidth x1 PCI Express card (PCIe 2.0 compatible)
- UAD-2 Solo: low-profile, half-height, short PCIe card
- UAD-2 Duo/Quad: full-height, short PCIe card
- UAD-2 Satellite: Duo or Quad in FireWire enclosure w/power supply
- 1, 2 or 4 Analog Devices SHARC floating-point processors
- UAD-2 averages 2.5X(Solo), 5X(Duo), 10X(Quad) the power of the UAD-1
- Multi-device support for up to four UAD-2's in one computer
- Cross-Platform* for Mac OS X 10.5/10.6/10.7, Windows XP/Vista/7
- Supports VST, RTAS, and Audio Units plug-in formats
- 44.1, 48, 88.2, 96, 176.4, 192 kHz sample rate support for all plug-ins
- Drivers optimized for modern multi-thread and multi-processor architectures
- Real-time and faster than real-time processing for mix bounces
- LiveTrack™ low-latency mode for monitoring, tracking, and performance (not available on UAD-2 Satellite)
- SessionMap™ bi-directional UAD-1 <> UAD-2 session compatibility
- L.O.D.E.™ (Live Optimizing DSP Engine) automatically balances DSP loads*
- LoadLock™ ensures resource availability on loaded plug-ins
- Redesigned plug-in Toolbar includes improved preset management
- Redesigned UAD Meter & Control Panel application
- Simplified Registration/Authorization process via one button click
- World's best plug-in library with premier titles from Neve®, Roland®, Moog®, SPL®, Manley®, Empirical Labs®, SSL®, Pultec, and more
- 14-day full function demo for all plug-ins; try before you buy
- UAD Powered Plug-Ins™ available 24/7 @ my.uaudio.com
- Easy license transfer for existing UAD-1/1e/Xpander users
- Generous upgrade promotions for existing UAD-1 users
- UAD version 6 supports all existing UAD hardware

*UAD-2 Satellite is
Mac Only

The UAD System

The UAD Powered Plug-Ins package is a hardware-plus-software system that consists of one or more UAD DSP accelerator devices combined with the Powered Plug-Ins software. Multiple UAD package types are available in the product line to accommodate your particular hardware system, processing needs, and budget.

The difference between each package are the UAD device type and the selection of plug-ins that are bundled with the device. Each bundle has either a set of included plug-ins, or a voucher system that you use to specify the particular plug-ins you want at our online store.

For a detailed overview about the UAD Powered Plug-Ins system and how it operates, see [Chapter 3, “UAD System Overview.”](#)

Package Contents

Each UAD retail package includes:

- Printed Information Sheet
- UAD DSP hardware device
- UAD Software Installer CD-ROM (with PDF user documentation)
- UAD-2 Satellite ([Chapter 11, “UAD-2 Satellite”](#)) and UAD-2 SOLO/Laptop ([Chapter 10, “UAD ExpressCard Products”](#)) have additional contents

Documentation Overview

This section describes the various instructional and technical resources that are available for installing, using, and troubleshooting UAD Powered Plug-Ins. Documentation for the product line is available in written, video, and on-line formats.

ReadMe

The ReadMe contains important, late-breaking information that may not be available in other locations. Please review all the information in the ReadMe before installing or using UAD Powered Plug-Ins. The ReadMe file is presented for viewing during the software installation process, and installed to:

Windows

- Start Menu>All Programs>UAD Powered Plug-Ins

Mac

- Startup Disk/Applications/Powered Plug-Ins Tools

User Manuals

This complete user manual for the product (the document you are reading now) is included in the software bundle. The filename of the manual is UADManual.pdf. The User Manual is the primary product user documentation. It is on the software CD-ROM, and is also placed inside the Powered Plug-Ins Documentation folder on the hard drive during software installation.

Direct Developers

As of version 6.0, UAD Powered Plug-Ins includes plug-ins from our Direct Developer partners. Documentation for these 3rd-party plug-ins are separate files that are written and provided by the plug-in developers themselves. The filenames for these plug-ins are the same as the plug-in names.

Installed Locations

The UAD and Direct Developer manual files are copied to the hard drive by the software installer to the following locations:

Windows

- Start Menu>All Programs>UAD Powered Plug-Ins>Documentation

Mac

- Startup Disk/Applications/Powered Plug-Ins Tools/Documentation

Manual Conventions

UAD Powered Plug-Ins is a cross-platform solution for both Windows and Mac computers. * The UAD hardware device can be installed into either platform; it is the exact same hardware for both platforms. Operation of the plug-ins is practically identical regardless of the host system platform and application. However, certain platform-specific instructions will differ according to the host system you are using.

*UAD-2 Satellite is Mac only.

Platforms

Instructions in this guide that are platform-specific are indicated with a heading in red letters. Instructions that are identical regardless of platform are not differentiated.

Windows

Instructions specific to the Windows platform use this red Windows heading.

Mac

Instructions specific to the Mac platform use this red Mac heading.

UAD Nomenclature

Unless specified otherwise, for descriptive purposes within this manual, "UAD-2" means all UAD-2 family products (Solo, Duo, Quad, SOLO/Laptop, Satellite); "UAD-1" means all UAD-1 family products (UAD-1, UAD-1e, and UAD-Xpander); and "UAD" means all UAD-2 and UAD-1 family products.

Screen Shots

Screenshots in this manual may be taken from the Windows and/or Mac version of the software, and are used interchangeably when the content and functionality of the screenshot is the same on both platforms. Slight variations in the appearance of a screenshot between operating systems are inevitable.

When the content of and function of the software represented in a screenshot is identical on both platforms, no differentiation is made in the screenshot title. If there is a significant difference between platforms, screenshots from both platforms are included.

Online Documentation

The technical support pages on our website offer a wealth of helpful information that is not included in the documentation contained within the software bundle. Please visit our support pages for important technical information including the latest release notes, host application notes, and more. The main UAD Powered Plug-Ins support website is:

Support Website

- <http://www.uaudio.com/support/uad>

Videos

Our support website contains many helpful videos that explain how to install UAD hardware and software, register and authorize the products, obtain optional plug-ins, and more:

- <http://www.uaudio.com/blog/cat/videos>

Blog

Our online magazine is published regularly and contains lots of useful and interesting information. How-to pages, artist/producer/engineer interviews, support Q & A, detailed scientific notes, and other fascinating articles make the Webzine a great place to routinely visit:

- <http://www.uaudio.com/blog>

Users Forum

The unofficial UAD Powered Plug-Ins users forum, for the exchange of tips and information, is on the world wide web at:

- <http://www.studionu.com/uadforums>

Customer Support

Customer support is provided by Universal Audio staff to all registered UAD Powered Plug-Ins users (see *“Registration”* on page 53 for details).

- Support Hours** Our support specialists are available to assist you via email and telephone during our normal business hours, which are from 9am to 5pm, Monday through Friday, Pacific Standard Time.
- Phone Support** Customer Service & Technical Support
 USA toll-free: 877-MY-UAUDIO (1-877-698-2834)
 International: +1-831-440-1176
 FAX: +1-831-461-1550
- Online Support** To request online support, please visit our support page, then click the “Submit Support Ticket” button to create a help ticket:
- <http://www.uaudio.com/support/uad>
- Factory Address** Universal Audio, Inc.
 1700 Green Hills Road
 Scotts Valley, CA 95066-4926
 USA
- Main Website** • <http://www.uaudio.com>
- Feedback** Your feedback on the performance and features of UAD Powered Plug-Ins is very important to us. Please send your comments and suggestions to us. Comments (not technical support issues) may be sent to info@uaudio.com.



CHAPTER 2

UAD Installation

Overview

UAD Powered Plug-Ins installation and configuration consists of four steps:

- UAD software installation
Insert the enclosed CD-ROM and run the installer.
- UAD hardware installation
Follow the instructions in this chapter.
- UAD device registration
Add your device to your [my.uaudio.com Account](#).
- UAD plug-in authorization
Download and apply UAD authorization file. UAD vouchers can be redeemed and optional plug-in licenses can be purchased anytime.

These steps are detailed in this chapter. Your host computer must meet the hardware and software requirements to operate properly, and you need a supported VST, RTAS, or Audio Units host application to run the UAD Powered Plug-Ins.

UAD-2 SOLO/Laptop and UAD-Xpander

These ExpressCard products have their own set of hardware connection and operation instructions. Refer to [Chapter 10, “UAD ExpressCard Products”](#) for complete details.

UAD-2 Satellite

This Firewire product has its own set of hardware connection and operation instructions. Refer to [Chapter 11, “UAD-2 Satellite”](#) for complete details.

Install Videos

Our support website contains many helpful support videos that explain how to install the hardware and software, register and authorize the product, obtain optional plug-ins, and more:

- <http://www.uaudio.com/blog/cat/videos>

System Requirements

UAD Powered Plug-Ins require the following hardware and software:

Windows (x86 and x64)

- Microsoft Windows XP (Home, Professional, or x64 Edition), Windows Server 2003, Windows Vista, or Windows 7

Mac (32-bit and 64-bit*)

- Mac OS X 10.5 Leopard, 10.6 Snow Leopard, or 10.7 Lion
- *64-bit drivers are available for UAD-2 devices only
- Processor upgrade cards are not officially supported

All Platforms:

- Available PCIe x1/x4/x8/x16 slot for each UAD-2 and UAD-1e card
- Available PCI or PCI-X slot for each UAD-1 card
- ExpressCard/34 or ExpressCard/54 expansion slot for each UAD-2 Solo/Laptop and UAD-1 Xpander
- Available Firewire 400 or Firewire 800 expansion port for UAD-2 Satellite
- 512 MB RAM (1 GB or higher is strongly recommended)
- 600 MB available hard drive space for UAD-2 or UAD-1 install
- 800 MB available HD space for combined UAD-2 plus UAD-1 install
- 1024 x 768 or higher resolution monitor
- CD-ROM drive or internet connection for software installation
- Internet connection required for registration and plug-in authorization
- Compatible VST, RTAS, or Audio Units plug-in host application software (see [Table 1 on page 27](#))
- AGP or PCIe graphics video adapter card (PCI graphics not supported)

Supported Hosts

UAD Powered Plug-Ins, when combined with a plug-in host application, is a technically complex system with many variables. Because the host application environment is integral to the system but is completely out of our control, we cannot claim compatibility with all hosts that may claim to support the use of VST, RTAS, and/or Audio Units plug-ins.

We test the specific host applications listed in [Table 1 on page 27](#) for compatibility with UAD Powered Plug-Ins, and only these hosts are supported by our technical staff. We recommend the latest versions of these host applications for optimum performance. Host applications that are not listed may work with UAD Powered Plug-ins, but compatibility with them cannot be guaranteed.

For detailed technical information about using UAD Powered Plug-Ins with these supported hosts, please review the Host Application Notes pages on the UAD support website:

- <http://www.uaudio.com/support/uad/compatibility>

Table 1. Supported Host Applications

Windows VST	Mac VST	Mac Audio Units
Steinberg Cubase	Steinberg Cubase	MOTU Digital Performer (4.5+)
Steinberg Nuendo	Steinberg Nuendo	Ableton Live
Steinberg Wavelab	Steinberg Wavelab	Apple Logic Pro
Ableton Live	BIAS Peak	Apple Final Cut Pro
Cakewalk Sonar	Ableton Live	Apple Soundtrack
Magix Samplitude	DSP Quatro Pro	Apple Garage Band
Magix Sequoia		Audiofile Wave Editor 1.3
Image-Line FL Studio		
Adobe Audition	Win & Mac RTAS	
Sony Vegas	Avid/Digidesign Pro Tools	
Sony Acid Pro		
Sony Sound Forge		

Latest Information & Software Updates

Technical Updates

Updated UAD technical information is regularly posted to the UA website. Please visit the UAD support pages for the latest bulletins:

- <http://www.uaudio.com/support/uad>

Software Updates

The CD-ROM in the retail package may not contain the latest UAD software. Check our website for software updates:

- <http://www.uaudio.com/support/uad/downloads.html>

If the UAD software is already installed, the UAD Meter & Control Panel application has a convenient button that checks for the most recent version (see [“Check for Updates” on page 65](#)).

UAD Software Installation

Install Software First

If you are installing UAD Powered Plug-Ins for the first time, install the software before installing the UAD device(s). This is particularly important on Windows systems. If you are updating to a newer version of the software or installing additional UAD devices, it is not necessary to remove the previous UAD software or hardware from the system, but you should still install the newer software before adding new devices.

Note: *The UAD Powered Plug-Ins software installer is identical for all UAD hardware (there are only two UAD installers, one each for Win & Mac).*

Install Options

The UAD software is comprised of many components, and the version of all the components must match for proper operation. When the UAD installer is run, all existing UAD components are deleted to avoid version mismatch. Therefore, it is necessary to select all the desired driver and plug-in format options during each UAD installation. Partial installations are not possible.

Important: *Select all desired options each time the UAD installer is run. Previously installed components are deleted during installation.*

Win & Mac

Software installation and removal for Windows and Mac platforms have their own particular procedures; each are described below.

Important: *Close all open files and applications before starting the installation procedure. Specifically, make sure the UAD Meter & Control Panel and all UAD host applications are not running.*

Windows Install



Software Installation Procedure for Windows Systems

Important: *Verify the computer system date and time are set correctly before installing the software and/or launching the UAD Meter & Control Panel application for the first time.*

1. Launch the software installer.
 - To install from CD-ROM, insert the UAD Powered Plug-Ins CD. If the installer doesn't automatically run, double click the Setup.exe application located on the CD
 - To install from a download, double-click the downloaded software archive, which is an executable application. The installer will run automatically.
2. Setup will guide you through the installation procedure.

3. When installation has completed, power down your system to install the UAD card(s) following the instructions on [page 30](#). If the UAD device is already installed or you are updating, restart the system.
4. After restarting, the New Hardware Wizard will try to locate the new drivers. Follow these steps:
 - a) Select the “Install the software automatically (Recommended)” option, and click “Next.”
 - b) The UAD device driver will be installed, click “Finish” when it is complete.
 - c) (UAD-1 only) The New Hardware Wizard will run again to look for the second UAD-1 driver. Select the “Install the software automatically (Recommended)” option, and click “Next.” The second UAD-1 driver will be installed; click “Finish” when it’s complete.

Software installation is now complete. Proceed to the Authorization section ([page 32](#)).

You can use the UAD Meter & Control Panel to verify installation (see “[Verifying Installation](#)” on [page 35](#).)

Note: *If you want to install the UAD plug-ins into another application, run the installer again.*

Mac Install



Software Installation Procedure for Mac Systems

Important: *Verify the computer system date and time are set correctly before installing the software and/or launching the UAD Meter & Control Panel application for the first time.*

1. Launch the software installer.
 - To install from CD-ROM, insert the UAD Powered Plug-Ins CD. Open the CD window, then double-click the application named “UAD Powered Plug-Ins Installer.”
 - To install from a download, first decompress the downloaded .zip archive by double-clicking it. Then double-click the UAD Powered Plug-Ins Installer application.
2. The installer will guide you through the installation procedure.
3. Restart the computer after the software is installed.

Software installation is now complete. Proceed to hardware installation or if that is done already, proceed to the Authorization section ([page 32](#)).

Verify Install

You can use the UAD Meter & Control Panel to verify installation (see [“Verifying Installation”](#) on page 35.)

Installed Locations

The UAD Meter & Control Panel application and UAD documentation is copied to these locations on the hard drive during installation:

Windows



- C:\Program Files\Universal Audio\Powered Plug-Ins

You can access these files from the Windows Start Menu at:

- Start>All Programs>UAD Powered Plug-Ins

The VST plug-in files are installed to the location specified during installation.

Mac



- Startup Disk/Applications/Powered Plug-Ins Tools

The plug-in files are installed to the standardized OS X locations:

- VST: Startup Disk/Library/Audio/Plug-Ins/VST/Powered Plug-Ins

- Audio Units: Startup Disk/Library/Audio/Plug-Ins/Components

- RTAS: Startup Disk/Library/Application Support/Digidesign/Plug-Ins

UAD Hardware Installation

The UAD software should be installed before installing the UAD DSP device(s). See the previous section for software installation instructions.

ExpressCard Products

The UAD-Xpander and UAD-2 SOLO/Laptop are UAD products that are designed for use with the ExpressCard expansion slot typically found on notebook computers. These UAD products have their own set of hardware connection and operation instructions. Refer to [Chapter 10, “UAD ExpressCard Products”](#) for complete details.

UAD-2 Satellite

The UAD-2 Satellite is a UAD product that is designed for use with the Firewire interface. This product has its own set of hardware connection and operation instructions. Refer to [Chapter 11, “UAD-2 Satellite”](#) for complete details.

About PCI and PCI Express

PCI and PCI-X should not be confused with PCI Express (also known as PCIe). PCIe is not compatible with PCI or PCI-X because PCIe uses a completely different connector (see [Figure 1 on page 31](#)).

However, if a computer system has both PCI/PCI-X and PCIe slots, the UAD-1, UAD-1e, and UAD-2 can all be installed and used simultaneously as a multidevice system. See [Chapter 5, “Using Multiple UAD Devices.”](#)

Important: The UAD-1 will ONLY work in PCI and PCI-X slots, and the UAD-1e, UAD-2, and UAD-Xtenda will ONLY work in PCI Express (PCIe) slots. Be extremely careful to only install the UAD device(s) into a compatible slot!

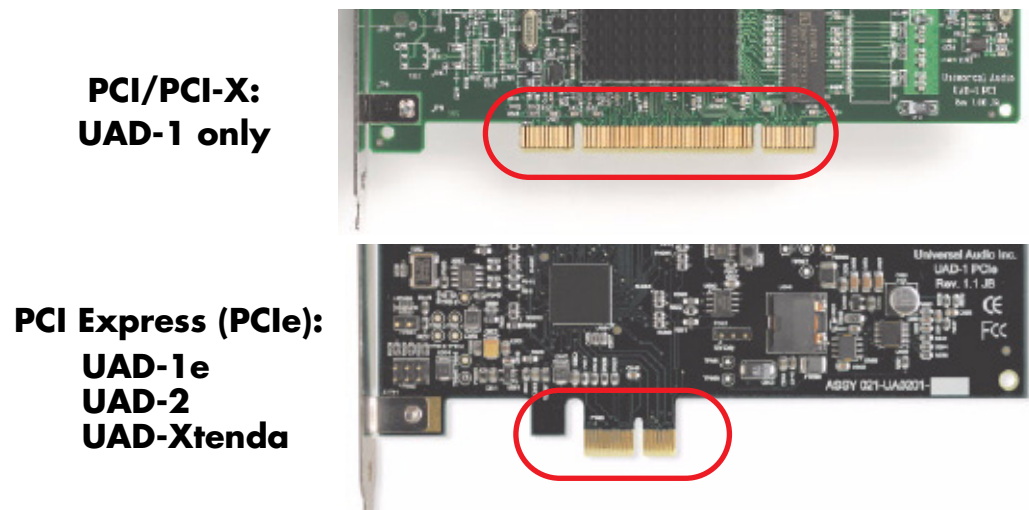


Figure 1. PCI and PCIe connectors are incompatible

PCIe x1

UAD-2, UAD-1e, and UAD-Xtenda are “x1” PCIe cards. Although these cards can be installed in any x1/x4/x8/x16 PCIe slot, putting a them in any PCIe slot faster than x1 will not improve performance.

Installing the UAD Cards

After installing the UAD Powered Plug-Ins software, install the UAD DSP card(s). Hardware installation is the same for all platforms.

To install the UAD DSP and/or UAD-Xtenda card(s):

1. Install the UAD software first ([page 28](#)).
2. Power down the computer system.
3. Open the computer case. If necessary, refer to the computer manufacturer’s documentation for instructions.
4. Remove the rear slot cover and screw of an available expansion slot.

5. Before handling the UAD card, discharge any static electricity by touching the outer casing of the power supply.
6. Remove the UAD card from its protective anti-static bag. Do not touch the gold edge connector contacts.
7. Hold the card gently by the top edges, and line up its connector with the slot inside the computer.

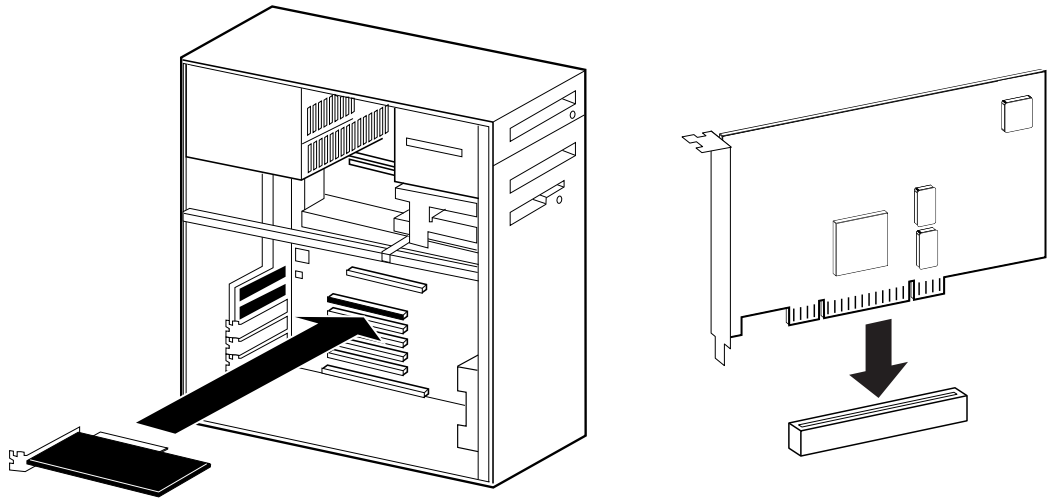


Figure 2. UAD-1 card installation in PCI slot. UAD-2 in PCIe is similar.

8. When the connector and slot are aligned, press the card into the slot with firm, even pressure. The card should “pop” into place. The top of the slot on the motherboard should be flush and parallel with the edge of the UAD card.
9. Secure the card with the previously removed screw.
10. Replace the computer case

Hardware installation is now complete. Proceed to Authorization in the next section.

Authorization

Your UAD device must be registered at my.uaudio.com to download an authorization file, and you need a my.uaudio.com account to register the device. These steps are detailed in the “[Authorize Plug-Ins Procedure](#)” on [page 33](#).

Important: All UAD plug-ins must be authorized before they can be used (unauthorized plug-ins can be used in demo mode for 14 days without authorization). Authorization is accomplished by clicking the “Authorize Plug-Ins” button in the UAD Meter & Control Panel application. The procedure is in the next section.

Authorize Plug-Ins Procedure

This procedure provides only the step-by-step process for UAD authorization. A complete overview of UAD authorization, my.uaudio.com, and the UA online store is in [Chapter 4, “My.uaudio.com.”](#)

Note: The following procedure requires an internet connection on the UAD host computer. To authorize from a system that is not online, see “[Offline Authorization](#)” on page 34.

Online Authorization

To download and apply the UAD authorization file when connected to the internet:

1. Install UAD version 5 (or higher) software and the UAD hardware using the procedures detailed in this chapter (the system must be operating properly).
2. Launch the UAD Meter & Control Panel application (see [page 62](#)) and open the Plug-Ins panel (see [page 64](#)).
3. Click the “Authorize Plug-Ins” button ([page 68](#)). The my.uaudio.com online store opens in the default web browser.
 - If you don’t already have a my.uaudio.com account, you are directed to create one. Follow the instructions online.
 - If you already have a my.uaudio.com account, login with your email address and password. If your password is lost, the store can email it to you.
4. Your device will be automatically registered and added to your “My Systems” Computer group, and your authorization file is generated.
5. The authorization file should begin downloading automatically. If not, click the “Download Authorization” link to download the auth file. The authorization file is downloaded by the browser to the location specified in the browser preferences.
6. Double click the authorization file. The authorization is loaded onto the UAD device(s) and after a few seconds the “Authorizations Updated Successfully” window appears ([Figure 3](#)).

Online UAD authorization is now complete, and UAD Powered Plug-Ins are ready for use.



Figure 3. Double-click the downloaded UAD authorization file.

Offline Authorization


If the UAD computer is not connected to the internet, you will need to manually transfer the registration URL into the browser of a web-enabled computer.

To download and apply the UAD authorization file if not connected to the internet:


1. Install UAD version 5 (or higher) software and the UAD hardware using the procedures detailed in this chapter (the system must be operating properly).
2. Launch the UAD Meter & Control Panel application (see page 62) and open the Plug-Ins panel (see page 64).
3. Click the “Authorize Plug-Ins” button (page 68). The default web browser opens with the registration URL in the address bar (and you may get an error that the computer is not connected to the internet).
4. You must enter this URL into a web-connected computer, so either:
 - a) Drag the URL icon to the Desktop to create a weblink shortcut then transfer the weblink shortcut to the internet computer (preferred, Figure 4 on page 35), OR
 - b) Carefully write down the URL, EXACTLY as it appears.
5. Go to the URL using a web browser on an internet-connected computer. Double-click the transferred weblink shortcut, or enter the URL as noted.
 - If you don’t already have a my.uaudio.com account, you are directed to create one. Follow the instructions online.
 - If you already have a my.uaudio.com account, login with your email address and password. If your password is lost, the store can email it to you.
6. Your device will be automatically registered and added to your “My Systems” Computer group, and your authorization file is generated.

7. The authorization file should begin downloading automatically. Click the “Download Authorization” link to download the auth file if not.
8. Transfer the authorization file to the UAD computer.
9. Double-click the authorization file. The authorization is loaded onto the UAD device(s) and after a few seconds the “Authorizations Updated Successfully” window appears (Figure 3).

Online UAD authorization is now complete, and UAD Powered Plug-Ins are ready for use.

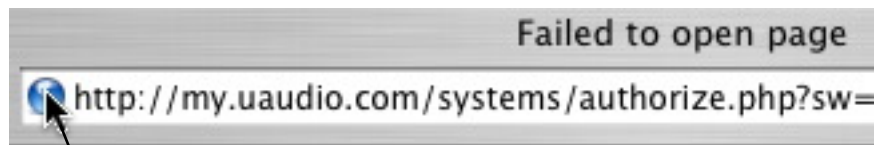

1. Click + hold this URL icon in the browser's address bar, then...

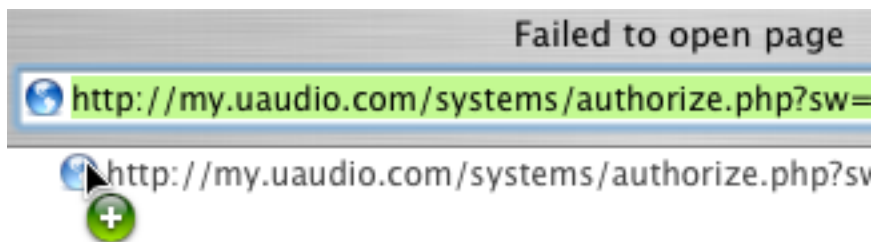

2. Drag the icon to the Desktop and release to create a weblink shortcut for easier transfer.

Figure 4. To authorize a system that is not connected to the internet, create a weblink shortcut on the UAD system for easier transfer of the URL to an online system.

Using Unlicensed Plug-Ins (Demo Mode)

To run unlicensed UAD plug-ins after authorization, see “Demo Mode” on page 51. To redeem vouchers or coupons, or purchase additional UAD plug-in licenses, see “UA Online Store” on page 52.

Verifying Installation

The **UAD Meter & Control Panel** displays the current resource loads of the UAD DSP hardware device in realtime. It also contains the System Information panel, where UAD software and hardware installation can be verified to ensure the system is working properly.

To confirm proper UAD installation and operation:

1. Launch the UAD Meter & Control Panel application (see page 62).
2. Open the System Information panel (see page 64).
3. When the UAD device is displayed in the Hardware area and its status is "OK" then the UAD driver is communicating with the UAD device and the system is operating properly. Done!

UAD-2 LED

The UAD-2 has an LED indicator. This LED provides certain indications about the operational state of the UAD-2. The location of the LED depends on the UAD-2 product. On UAD-2 PCIe cards, the LED is on the mounting bracket of the card. On the SOLO/Laptop, the LED is next to the UA logo on the black housing. On UAD-2 Satellite, the LED is on the rear panel.

Alternating red and green

When the LED alternates between solid red and solid green, the device is powered up properly but the UAD driver is not yet loaded or communicating with the device. This is the expected state if the device is installed but the software is not yet installed, or when booting the system and the UAD driver is not yet loaded.

Solid green

When the LED is solid green, the UAD driver is loaded and properly communicating with the device. This is the normal state when using UAD Powered Plug-Ins.

Solid red or other blinking patterns

When the LED is producing any pattern other than the two conditions above, there is a problem with communication between the driver and the device. Try a cold reboot (complete power down) and/or reinstalling the UAD software before contacting customer support.

Learn More

After installation, registration, and authorization, you're ready to use UAD Powered Plug-Ins. We especially recommend reading chapters 3, 4, 6, and 7 in this manual to gain important insights about using the product.

Visit our support site for the latest technical information and additional information not included with the software, or to contact technical support about any technical difficulties:

- <http://www.uaudio.com/support/uad>

Our support website contains many helpful videos that explain how to install the hardware and software, register, authorize, and use the product, obtain optional plug-ins, and more:

- <http://www.uaudio.com/blog/cat/videos>

Software Removal

To remove all UAD software from the computer:

Windows



1. From the Windows Start Menu at, select:
 - Start>All Programs>UAD Powered Plug-Ins>Remove UAD Powered Plug-Ins

Mac



1. Launch the UAD Powered Plug-Ins Installer application. Click through the splash screen and license agreement.
2. When you get to the install screen, select "Uninstall" from the drop menu.
3. Click the "Uninstall" button. The software is removed.
4. Drag the UAD Meter & Control Panel icon out of the Dock.

UAD software removal is complete.

Important: Power down the computer before removing any UAD cards!

CHAPTER 3

UAD System Overview

The UAD Environment

The complete UAD Powered Plug-Ins environment consists of many components. These components are:

- One or more UAD DSP hardware accelerator devices
- The UAD device drivers
- The UAD plug-ins
- The host computer system
- The plug-in host application software
- An audio I/O interface and its drivers

All these components operate together simultaneously within one computer to form the complete audio processing system.

The other UAD component is your account at my.uaudio.com (page 47) and the UA online store, where UAD devices are registered, UAD vouchers are redeemed, and UAD plug-in licenses and authorizations are obtained. Although my.uaudio.com is not required during normal system use, it is essential for initializing the overall UAD system because authorization is required to use UAD-Powered Plug-Ins (see “[Authorization Overview](#)” on page 48).

The UAD Hardware

The UAD DSP (Digital Signal Processing) hardware accelerator devices provide the “power” behind UAD Powered Plug-Ins. Most of the UAD plug-ins use extremely complex algorithms to provide the quality sound and accurate modeling Universal Audio is famous for. The UAD processor engines are significantly more optimized to perform the complex DSP routines required for these algorithms than a standard desktop computer CPU can deliver.

Two main UAD device “families” are available: UAD-2 and UAD-1. Each device family has its own set of drivers which are specified during UAD software installation. All UAD devices are Mac and Windows compatible unless stated otherwise; the hardware is identical for both OS platforms.

Note: Multiple UAD hardware types can be used concurrently in the same computer. For details, see [Chapter 5, “Using Multiple UAD Devices.”](#)

UAD-2 Family



UAD-2 is our second-generation UAD product line that offers many improvements over the original UAD-1, most notable is significantly increased DSP horsepower.

A variety of UAD-2 models are available to suit various processing and protocol needs. Each model is defined by its number of DSP chips (1, 2, or 4) and its connection protocol (PCIe, ExpressCard, or Firewire). Up to four UAD-2 devices can be run concurrently in one system.

Solo/Duo/Quad

UAD-2 devices are designated as Solo, Duo, or Quad, which indicates the number of SHARC® DSP chips in each device. Solo devices have one DSP, Duo devices have two DSPs, and Quad devices have four DSPs.



Each UAD-2 DSP provides approximately 2.5x the processing power of the UAD-1, therefore one UAD-2 Quad offers approximately 10 times the processing power of UAD-1. When comparing the processing power of UAD-2 to UAD-1, a range is given because there are many variables that affect UAD-2 DSP loads (such as plug-in type, host system, etc). Therefore, a single direct comparison cannot be made.

UAD-2 PCIe Cards



UAD-2 PCI-Express (PCIe) cards are available in Solo, Duo, and Quad configurations. All UAD-2 PCIe cards use the PCIe “x1” architecture, which offers plenty of data bandwidth for even the most demanding audio processing requirements, such as four UAD-2 Quads (16 DSPs) in the same system.

UAD-2 SOLO/Laptop

The UAD-2 SOLO/Laptop is a self-contained UAD-2 Solo device housed entirely within an Express-Card/34 expansion card for use with notebook systems. No external cables or power is required, for the ultimate in mobile DSP capability. UAD-2 SOLO/Laptop has special instructions for installation, connectivity, and use. See [Chapter 10, “UAD ExpressCard Products”](#) for complete details.



The UAD-2 SOLO/Laptop device (and UAD-Xpander) can be used with an optional 3rd-party PCIe-to-ExpressCard adapter card, which enables the UAD ExpressCard to be used in desktop computers that have PCIe expansion slots. This system provides a convenient way to switch the UAD-2 SOLO/Laptop between desktop and notebook computers.

UAD-2 Satellite

The UAD-2 Satellite is available in Duo and Quad versions and is enclosed in an attractive housing that uses an external power supply. It connects via Firewire, enabling **Powered Plug-Ins** on Mac systems that don't have PCIe or ExpressCard slots. See **Chapter 11, "UAD-2 Satellite"** for complete details.



UAD-2 Bundles

Each UAD-2 device type is available in three different retail packages to best accommodate your budget and processing requirements. The packages have different device types (Solo/Duo/Quad) and UA online store vouchers of varying value. These flexible "good as cash" vouchers are used for purchasing optional UAD plug-ins.

UAD-1 Family



The UAD-1 card family includes UAD-1, UAD-1e, and UAD-Xpander. All are functionally identical and have the same processing power.

The UAD-1 family includes products for use with PCI/PCI-X, PCIe, and ExpressCard expansion slots. Up to four UAD-1 cards can be run concurrently in one system.

Note: *All products in the UAD-1 family are discontinued.*

UAD-1

The UAD-1 was the first UAD product. It uses PCI connectivity and can only be used in PCI or PCI-X slots.

UAD-1e

The UAD-1e uses PCI-Express connectivity. It can only be used in PCIe slots. UAD-1e cards are "x1" PCIe cards.

UAD-Xpander

The UAD-Xpander is a UAD-1e card housed in an external chassis that interfaces to the computer using an ExpressCard expansion slot.

UAD-Xpander has special instructions for installation, connectivity, and use. See [Chapter 10, “UAD ExpressCard Products”](#) for complete details.




UAD-Xtenda

The UAD-Xtenda is an optional ExpressCard-to-PCIe adapter card that enables the UAD-Xpander (and UAD-2 SOLO/Laptop) to be used in desktop computers that have PCIe expansion slots. The UAD/Xtenda system provides a convenient way to switch the same UAD ExpressCard unit between desktop and notebook computers.

Note: *UAD-Xpander and UAD-Xtenda are discontinued products.*

Mackie UAD-1

The Mackie card is a UAD-1. Mackie was the worldwide distributor of UAD Powered Plug-Ins for its first two years on the market. Universal Audio has been the developer and manufacturer of UAD Powered Plug-Ins hardware and software since its inception.

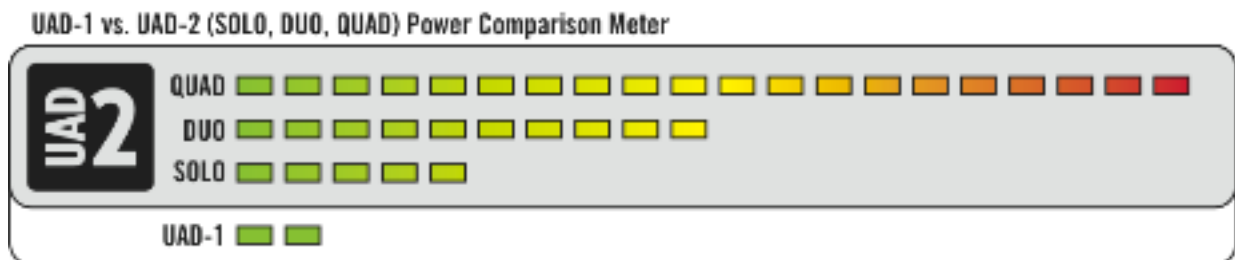

The UAD Software

The UAD Powered Plug-Ins software consists of the UAD installer, the UAD plug-ins, the UAD Meter & Control Panel application, the UAD device drivers, and the user documentation.

Installer



The UAD Powered Plug-Ins software installer contains all the UAD software components (plug-ins, drivers, and documentation) and copies them to disk during installation. There is one UAD software installer for each OS platform (Windows and Mac). The UAD software installer supports all variations of UAD hardware devices.

Powered Plug-Ins



Powered Plug-ins are the VST, RTAS, and Audio Units plug-in files that are loaded within the host application. The plug-ins are where the graphical user interface (GUI) is seen (Figure 18 on page 86) and where the various control parameters can be manipulated to achieve the desired result.

The UAD software installer always installs the complete suite of all available Powered Plug-Ins. All of the installed UAD plug-ins may not be licensed however. The included licenses depends on the retail package bundle (see “Bundled Plug-Ins” on page 48).

Optional Plug-Ins

Most UAD plug-ins require optional licenses to run without restrictions. Optional plug-in licenses are obtained at my.uaudio.com, the Universal Audio online store. Licenses can be purchased separately, or they can be purchased with “vouchers” that are bundled in most retail packages.

Demo Mode

UAD plug-ins that are unlicensed can be run in Demo Mode in a 14-day trial period without any functional restrictions. See [page 51](#) for details.

Vouchers and Licenses

Your account at the my.uaudio.com online store is where bundled Powered Plug-In vouchers are redeemed and where additional licenses can be purchased. See [Chapter 4, “My.uaudio.com”](#) for details.

Note: When you purchase an optional license, you don’t download that individual plug-in. Instead, you download a newer authorization, which enables the plug-in file that is already installed.

UAD Meter & Control Panel



The UAD Meter & Control Panel ([page 61](#)) is a utility application that is used to monitor and configure UAD device resources. It has two main windows: the UAD Meter, and the UAD Control Panel.

The UAD Meter window ([Figure 7 on page 61](#)) displays the current DSP, program, and memory status of the UAD hardware in realtime. The UAD Control Panel window ([page 64](#)) has multiple panels that display and modify various system, plug-in, and global configuration parameters.

UAD Drivers

The UAD device drivers are the low-level system software files that instruct the host computer system on how to communicate with the UAD device(s). The UAD drivers are loaded during system startup so the UAD devices are ready to be used when the plug-in host application is launched.

In addition to instructing the OS on how to control the UAD hardware, the driver acts as a software “middleman” between the host application and the UAD hardware. The host application uses the driver to route UAD signals in the DAW.

Each UAD device family (UAD-2 or UAD-1) has its own set of drivers. One or both are specified during UAD software installation, depending on which device type(s) you have installed.

UAD Buffers and Latency

The UAD drivers use “buffers” to shuttle audio signals to and from the device. This means the digital data is transferred in small batches instead of continuously. Buffering induces a very small audio latency (delay) that is inherent in most digital audio systems and can be detected in certain situations.

UAD latency is managed automatically by most host applications and can be reduced to undetectable levels in the UAD-2 (see “[LiveTrack Mode](#)” on [page 89](#)). Latency and buffers are discussed in greater detail in [Chapter 9, “UAD Delay Compensation.”](#)

User Documentation



Various instructional and technical resources are available for installing, using, and troubleshooting UAD Powered Plug-Ins. UAD documentation is available in written, video, and online formats. For details about user documentation, see “[Documentation Overview](#)” on [page 21](#).

The DAW Environment

The digital audio workstation (“DAW”) environment is an overall system where audio production takes place, either with or without UAD Powered Plug-Ins. The UAD system is an add-on to the computer-based DAW that can dramatically improve the sonic quality and performance of the DAW, while still working entirely from within the DAW.



A computer-based DAW consists of the host computer hardware and its operating system (“OS”) software, the plug-in host application (DAW software), and an audio input/output interface and its drivers.

Host Computer

The host computer is the system that the host DAW application software runs on and the UAD devices are installed into. The host computer must meet minimum technical requirements and have one or more compatible expansion slots to use with UAD hardware. See “[System Requirements](#)” on page 26 for complete details.

Operating System



The host computer runs an operating system, either Windows or Mac OS, that defines the OS “platform” of the system. UAD Powered Plug-Ins is a cross-platform product that is, for all practical purposes, functionally identical on Windows and Mac computers (except where otherwise noted).

Host Application

The plug-in host application is the software DAW environment where audio recording, playback, mixing, and other production functions are controlled. UAD plug-ins are accessed and operated from within the host software application.

Each host application has a unique feature set and different methods of operation, including how to use plug-ins. However, once UAD plug-ins are loaded, UAD plug-in operation is the same in all host applications.

Each host application has its own set of system requirements. In addition to the UAD-specific system requirements, the host computer must meet the host application system requirements.

Because the host application environment is integral to the UAD system but is completely out of our control, we cannot claim compatibility with all hosts that may support use of the UAD plug-in formats. See [“Supported Hosts” on page 26](#) for complete details.

Plug-In Formats

UAD Powered Plug-Ins includes support for VST, RTAS, and Audio Units plug-in formats. These formats define the software protocols that the host application uses for plug-in processing.

UAD Powered Plug-Ins operations are (for all practical purposes) functionally identical in all three plug-in formats. The format of the installed UAD plug-in files are specified during UAD software installation.

VST

The VST (“Virtual Studio Technology”) plug-in format is developed by Steinberg and is supported by various Windows and Mac host applications.



RTAS

The RTAS (“Real-Time AudioSuite”) plug-in format is developed by Avid and is supported by Pro Tools host applications on Windows and Mac platforms.



Audio Units

The Audio Units (“AU”) plug-in format protocol was developed by Apple and is supported by various host applications on the Mac platform only.



Audio Units

Audio Interface

The audio input/output (“I/O”) interface is how audio signals get into and out of the host computer. An audio interface is a hardware+driver device that can have analog or digital I/O, or both. The interface is usually where the analog-to-digital (“A/D”) and digital-to-analog (“D/A”) audio conversions take place.

I/O Drivers

The audio interface is a hardware device that requires a software device driver for the host computer OS. In addition to instructing the OS on how to control the interface hardware, the driver acts as a software “middleman” between the host application and the I/O ports. The host application uses the driver to access the I/O for signal routings.

I/O Buffers and Latency

Like the UAD device, audio interface driver also uses “buffers” to shuttle audio signals to and from the I/O (see [“UAD Buffers and Latency” on page 43](#)).

Smaller I/O buffer settings produce lower latencies which is useful when monitoring tracks while recording performances, but usually results in a higher host computer CPU load since the system has to work harder transferring data. Latency and buffers are discussed in greater detail in [Chapter 9, “UAD Delay Compensation.”](#)

My.uaudio.com

My.uaudio.com is the UA online store, where UAD devices are registered to your account and authorization files can be obtained. Bundled plug-in vouchers are redeemed at the store and optional plug-in licenses can be purchased there as well. For complete details about my.uaudio.com, including accounts, registration, purchasing plug-ins at the online store, and more, see [Chapter 4, “My.uaudio.com.”](#)

Authorization

Finally, all UAD plug-ins must be authorized before they can be used. Authorization is accomplished by simply clicking the “Authorize Plug-Ins” button ([page 68](#)) in the UAD Meter & Control Panel. For complete details about the authorization system, see [“Authorization Overview” on page 48](#).

CHAPTER 4

My.uaudio.com

My.uaudio.com is the Universal Audio online store where UAD devices are registered to your account and UAD plug-in authorizations are obtained. Bundled plug-in vouchers are redeemed at the store and optional plug-in licenses can be purchased at my.uaudio as well. This chapter provides details about UAD plug-in authorization and licensing, and the my.uaudio.com store.

Important: All UAD plug-ins must be authorized before they can be used. Authorization is accomplished by clicking the “Authorize Plug-Ins” button (page 68) in the UAD Meter & Control Panel. For instructions, see “Authorize Plug-Ins Procedure” on page 33. For complete details, see “Authorization Overview” on page 48.



Figure 5. Accessing my.uaudio.com from www.uaudio.com

Optional Plug-Ins

Most UAD Powered Plug-Ins require optional licenses to run without restrictions. Optional plug-in licenses are obtained at my.uaudio.com, the Universal Audio online store. Licenses can be purchased separately (page 53), or they can be purchased with “vouchers” that are bundled in most retail packages.

Retail Packages

The UAD devices are available in a variety of retail packages. The difference between each package (besides the UAD device itself) is the selection of plug-ins that are included. Each package includes a set of bundled plug-ins, and a voucher that can be redeemed at my.uaudio.com for UAD plug-in licenses.

Bundled Plug-Ins UAD plug-ins that are bundled with the UAD device are automatically licensed when the device is registered. After registration, the [Authorization File](#) must be loaded.

Note: *UAD devices must be authorized to run bundled (included) plug-ins. See [“Authorization Overview”](#) on page 48 for details.*

Vouchers Vouchers included in UAD retail packages have dollar values that are as “good as cash” for buying UAD plug-ins at my.uaudio.com. Vouchers are applied to your my.uaudio.com account automatically when you register your device by clicking the [Authorize Plug-ins](#) button. After registration, the voucher dollar amount is in your account as a credit, ready to be applied to your store purchase.

Coupons Like vouchers, coupons are as “good as cash” and are redeemed for UAD plug-ins at my.uaudio.com. Unlike vouchers however, coupons expire after a limited time period. Coupons are used for promotional offers only; they are not included in retail packages. Coupons can be used only once.

Tip: *Coupons are a great reason to subscribe to promotional announcements. Email subscription preferences are specified on your “My Profile” page at my.uaudio.com (see [“My Profile”](#) on page 53).*

Plug-Ins are already installed

The UAD software installer always installs the complete suite of available UAD plug-ins to the hard drive during installation. Therefore when you purchase an optional license, you don’t download that individual plug-in. Instead, you download a newer authorization file, which enables the plug-in file that is already installed.

Important: *Older versions of the UAD software may not include all the latest UAD plug-ins. To ensure all UAD plug-ins are installed, and for optimum performance, we recommend updating to the latest UAD version. See [“Check for Updates”](#) on page 65.*

Authorization Overview

All UAD plug-ins must be authorized before they can be used. Authorization is accomplished by clicking the [Authorize Plug-ins](#) button in the UAD Meter & Control Panel, then loading the downloaded authorization file.

Video Help	<p>Our support website contains many helpful videos that explain how to register and authorize the product, obtain optional plug-ins, and more:</p> <ul style="list-style-type: none"> • http://www.uaudio.com/support/uad/videos.html
Procedure	<p>This section is a detailed overview of the entire UAD authorization system. For the step-by-step authorization instructions, see “Authorize Plug-Ins Procedure” on page 33 in Chapter 2, “UAD Installation.”</p> <p>Note: <i>Without authorization, UAD plug-ins can be enabled to run for 14 days without functional limitations in a timed demo mode (see “Demo Mode” on page 51).</i></p> <p>Your UAD device must be registered at my.uaudio.com to download an authorization file, and you need a my.uaudio.com account to register the device.</p>
Authorize Plug-Ins	<p>The registration/account/authorization process isn’t as complicated as it may seem! The entire routine involves simply clicking the “Authorize Plug-Ins” button (page 68) in the UAD Meter & Control Panel. Clicking this button automatically registers the installed UAD devices, generates the authorization file, and downloads it to disk.</p> <p>Just double-click the downloaded authorization file to any UAD Meter & Control Panel icon and you’re ready to use UAD Powered Plug-Ins. When authorizing, you’ll be prompted to log into your account if you aren’t already, and if you don’t already have an account, you’ll be prompted create one.</p>
Authorization File	<p>The authorization file, which is obtained by clicking the “Authorize Plug-Ins” button (page 68), contains the license key(s) that enable UAD plug-ins to run on associated UAD devices. The authorization file is generated at my.uaudio.com then downloaded to the local hard drive automatically.</p>
.uad/.uad2	<p>The downloaded authorization files have either the uad or uad2 file extension. “.uad” files are for UAD-1-only systems, while “.uad2” files are for UAD-2-only and mixed UAD-1/UAD-2 systems. When mentioned in the documentation, “.uad” refers to both .uad and .uad2 files.</p>
Loading	<p>To load a downloaded authorization file, just double-click it, or drag-drop it onto any UAD Meter & Control Panel application icon/shortcut/alias (see Figure 3 on page 34).</p>



My Systems

The UAD devices and plug-ins that you own and can authorize can be found in your My Systems page at my.uaudio.com. My Systems keeps track of which UAD devices are in which computer, and the authorization status of each UAD plug-in.

My Systems is managed automatically by my.uaudio.com and the UAD software. When “Authorize Plug-Ins” is clicked, devices in the host system are added to My Systems. When an authorization file is downloaded, it reflects the current state of My Systems.

System

All the UAD devices installed in a single host computer system, and the UAD plug-in license status for those devices, is referred to as a “System” (formally known as “Group”) on the My Systems page at my.uaudio.com. When you click the “Authorize Plug-Ins” button, UAD devices in the host computer are automatically registered and added to a System.

The UAD hardware identification numbers for each UAD device in a single host computer are stored in the same System. Authorization files generated at my.uaudio.com are constrained to only authorize the licensed UAD plug-ins running on the UAD devices in the same System. The same authorization file authorizes all the devices and plug-ins in the host computer.

If you register a UAD device that is in a second host computer using the same [my.uaudio](http://my.uaudio.com) account, a second System is automatically created at My Systems. In accordance with the [“Plug-In License Policy” on page 55](#), you can’t have UAD devices from two separate computers in the same System. Each System generates a unique authorization file.

Authorization Notes

- UAD devices must be authorized to run bundled (included) plug-ins. See [“Authorization Overview” on page 48](#) for details.
- Without authorization, UAD plug-ins can be enabled to run for 14 days without functional limitations in a timed demo mode (see [“Demo Mode” on page 51](#)).
- Older versions of the UAD software may not include all the latest UAD plug-ins. To ensure all UAD plug-ins are installed, and for optimum performance, we recommend updating to the latest UAD version. See [“Check for Updates” on page 65](#).
- Optional plug-ins are contained within the UAD software installer, not the .uad authorization file. Download and install the latest UAD software version to ensure the optional plug-ins that you are authorizing are installed.

- The .uad/.uad2 authorization file contains plug-in license keys for the specific UAD devices in each computer group at [My Systems](#). The file will not authorize any other UAD devices.
- An authorization file is not associated to the host computer or the UAD installer in any way. Instead, it is associated with the UAD devices at [My Systems](#) (it's the UAD hardware that is authorized, not the UAD plug-ins or computer).
- (UAD-2 only) During authorization, the UAD plug-in license state is stored on the UAD-2 device. If the UAD-2 is moved to another computer, it is not necessary to reload an authorization file.
- (UAD-1 only) If a UAD-1 card is installed into a different system, an authorization file must be loaded on the different computer. The auth file can be one obtained on the other computer, or via the "Authorize Plug-Ins" button.

Demo Mode

All unlicensed UAD plug-ins include a free 14-day trial evaluation period. When the demonstration mode is activated, the plug-in will run without functional limitations for 14 days. Demo mode can be activated once only. After the demo trial period has expired, demo mode cannot be activated again on the same UAD device.

If an unlicensed plug-in is loaded and its demo has never been started, a dialog appears with instructions to start the demo and the option to visit the online store to purchase the license. If you don't start the demo or purchase a license, the plug-in interface appears and can be manipulated, but audio is not processed by the plug-in.

Important: *The 14 day demo period can only be activated once, and cannot be stopped or restarted during this period! We recommend you do not activate demo mode until you have the time to thoroughly check out its sound and functionality.*

Demo Activation

To activate demo mode:

1. Ensure UAD Powered Plug-Ins version 5.0 or higher is already installed and configured properly (see [Chapter 2, "UAD Installation"](#)).
2. Launch the UAD Meter & Control Panel application ([page 62](#)).
3. Select "Plug-Ins..." from the Control Panel Menu ([page 64](#)). The UAD Plug-Ins panel ([Figure 11 on page 70](#)) appears.

4. Click the [Start Demo](#) button for the desired UAD plug-in. A confirmation window appears and the timed demo can be activated or demo activation can be cancelled.

The timed demo is activated for 14 days.

Demo Notes

- (UAD-2 only) In addition to the Plug-Ins panel, Demo mode can also be activated directly from the UAD Toolbar (see [page 87](#)).
- (UAD-1 only) Demos cannot be started if any UAD-1 plug-ins are running. If they are, a message instructing you to quit the host application is displayed.
- Manipulating the computer's system date and time will result in a decreased demo period.

UA Online Store

The UA online store at my.uaudio.com ([Figure 6](#)) is where optional UAD plug-in licenses and other UA products can be purchased. Vouchers and promotional coupons are also redeemed here. All UAD device registrations and plug-in authorizations are managed here.

[My.uaudio.com](http://my.uaudio.com) can be accessed from most pages at www.uaudio.com by clicking the link in at the upper left of a webpage. The direct URL for the my.uaudio.com online store is: <http://my.uaudio.com>.

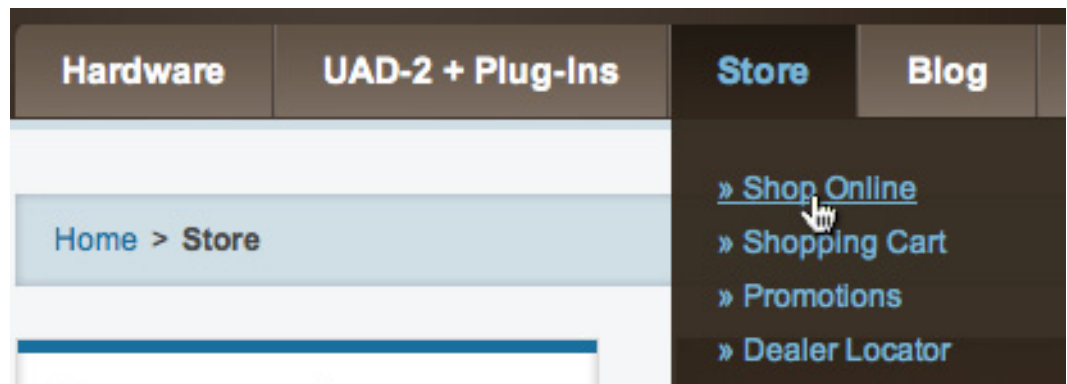


Figure 6. Accessing the UA online store from www.uaudio.com

Registration

Registration at my.uaudio.com is required for all UAD users to obtain UAD device authorizations, redeem vouchers, purchase optional UAD plug-in licenses, get software updates, and receive customer support. It is also an opportunity for you to inform us of your system details so we can serve you better, and for us to keep you informed about important updates and new product announcements.

Account

A my.uaudio.com account is required to use UAD- Powered Plug-Ins, because UAD plug-ins must be authorized for use, and authorization can only occur after the UAD device is registered to an account. UAD registration also entitles you to free UAD [Customer Support](#) and special promotional offers.

Creation

The first time you visit my.uaudio.com you are prompted to create your account. Your email address is your account login. You'll be prompted to enter your name, address, and password, and set your email notification preferences.

Login

When you revisit my.uaudio.com, you are prompted to login to your account. Your email address is your account login; the password was specified when the account was created. If you forget your password you can have the store email your password to you. You have the option to stay logged in (via a browser cookie) if desired so you don't have to keep entering the credentials.

My Profile

"My Profile" is where product registration details such as name and mailing address are stored and edited. Your email subscription preferences are also set here so you can choose whether or not to receive email announcements for our webzine and promotional offers.

Your email address is your my.uaudio.com account identifier and login. You can change the email address (and the my.uaudio.com login) on the My Profile page.

Buying Plug-Ins

To obtain optional UAD plug-in licenses, simply visit my.uaudio.com, browse the complete line of plug-ins at our secure online store, and complete your purchase with several payment options or use the voucher credit that was applied during device registration.

Lots of product information such as features, specifications, audio/video demos, and reviews are available on the plug-in product pages at the store to help you make your buying decisions.

Purchase Procedure

To purchase and authorize an optional UAD plug-in:

1. Login to your [Account](#) at my.uaudio.com. Your email address is your login.
2. Click the “Products” menu and browse the available plug-in selections.
3. Add the items you wish to purchase to your shopping cart.
4. Click the shopping cart icon when ready to proceed to checkout. The payment page appears.
5. Select payment method: credit card, Paypal, personal check, or voucher.
6. Add any promotional discount coupons, then click Continue. The order confirmation page appears.
7. Verify the order confirmation page, then click Confirm Order *once*. The transaction is processed, and the “order complete” page appears.
8. Purchased UAD plug-in licenses are issued immediately to [My Systems](#). Any authorization file downloaded after this point contains the new license.
9. Download a new [Authorization File](#) by clicking the [Authorize Plug-ins button](#) in the [UAD Meter & Control Panel](#).
10. Double-click the downloaded authorization file. The authorization is loaded onto the UAD device(s) and after a few seconds the “Authorizations Updated Successfully” window ([page 34](#)) appears.

The purchased UAD plug-in is now licensed and fully authorized.

Transferring UAD devices and licenses

Ownership of UAD devices and UAD plug-in licenses can be transferred from one my.uaudio.com account to another to accommodate the used equipment marketplace. Certain restrictions apply. Please visit the UAD transfer page for instructions, policies, and FAQ:

- <http://www.uaudio.com/my/systems/transfer>

Transfer Video

Our Videos page has a video about UAD device transfers:

- <http://www.uaudio.com/blog/cat/videos>

CHAPTER 5

Using Multiple UAD Devices

Overview

Multiple UAD devices can be used in a single host computer system for increased DSP capacity. The UAD devices in the multidevice system can be mixed and/or matched in any combination (see “The UAD Hardware” on page 38).

When multiple UAD devices are installed in the host computer, the DSP and memory load of the devices are automatically balanced dynamically as UAD plug-ins are loaded and unloaded. With multiple devices, there is no major difference in operating procedures, except that more Powered Plug-Ins can be loaded simultaneously in the session.

Mixed UAD System

The UAD drivers support up to four UAD-2 and four UAD-1 devices running in the same host computer system concurrently. The devices can be any combination of UAD-2 family and/or UAD-1 family devices, up to four of each, for a total of up to eight UAD devices in one computer.

See “If a UAD Powered Plug-In is loaded on a device then that device is subsequently disabled, an error message will be displayed. This occurs because a plug-in is assigned to a device when it is first instantiated. It stays assigned to the same device until it is de-instantiated (for example, removed from the insert slot).” on page 59 for additional details if combining these device types.

Plug-In License Policy

The Universal Audio End-User License Agreement (“EULA”) on page 3 grants you the non-exclusive right to use UAD Powered Plug-Ins on a single computer at a single location.

Since you can run up to four of each device type (UAD-2 and UAD-1) in the same computer, each individual UAD plug-in license will authorize all the devices in one computer (up to eight devices, four of each type).

However, as an example, if you have four UAD devices but run a dual-device system in two separate computers, you are required to purchase separate licenses for the second system. “UAD Link Licensing” on page 56 details the exception to this policy, where licenses for portable UAD devices can be linked to a desktop system.

UAD Link Licensing

If you have registered an existing UAD-2 system group and want to add a UAD-2 SOLO/Laptop or UAD-2 Satellite to the system, the registration process has a flexible licensing procedure that allows you to “link” the existing UAD Powered Plug-In licenses in your account to your UAD-2 SOLO/Laptop or UAD-2 Satellite. To take advantage of this offer, you must select the option during initial registration of the UAD-2 SOLO/Laptop or UAD-2 Satellite.

During UAD-2 SOLO/Laptop or UAD-2 Satellite registration, if an existing UAD system(s) is detected in your account, there will be two options available:

Option 1 (Link License Registration)

Use this option if you want to link your UAD-2 SOLO/Laptop and/or UAD-2 Satellite to the UAD plug-in licenses of an existing UAD system in your My.Uaudio account.

This option allows you to use the existing UAD plug-in licenses you already own with your new UAD-2 SOLO/Laptop and/or UAD-2 Satellite, even if the UAD devices are in different computers. If you click this option, you will need to use the other computer (the system with the existing UAD devices) to complete the linked registration process.

Option 2 (Standard Registration)

Use this option if you do NOT want to link your UAD-2 SOLO/Laptop and/or UAD-2 Satellite to the UAD plug-in licenses of an existing UAD system in your My.Uaudio account.


This option will create a new UAD system, even if you are an existing UAD user.

Important: *If you click this option, you will need to purchase new UAD plug-in licenses for the UAD-2 SOLO/Laptop and/or UAD-2 Satellite.*

Authorizing Multiple Devices


When you buy an optional plug-in, your purchased license is valid for all the UAD devices in the computer. The license is tied to the specific UAD devices in the *System* (see [page 50](#)) when the license was purchased. For example, if you have two devices when you purchase a plug-in, your authorization file will authorize both devices.

If you have one device during purchase then later acquire another device(s), you will need to download a new authorization file containing the licenses for the new device(s). However, there is no charge for the new authorization file containing the additional licenses. Your purchase buys licenses for all the devices in the same computer.



Each individual device must be authorized in order to run optional plug-ins, however multiple installed devices are authorized simultaneously. If one device is authorized then another device is added without downloading a new authorization, the optional plug-in will only load on the previously authorized device. To obtain a new authorization file for additional devices, use the “Authorize Plug-ins” button ([page 68](#)) in the UAD Meter & Control Panel.

UAD-1 with UAD-2

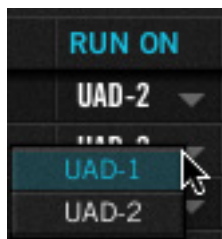

When using UAD-1 and UAD-2 devices together in the same system, the *Run On Menu* ([page 70](#)) in the UAD Meter & Control Panel’s *Plug-Ins Panel* ([page 68](#)) specifies which device (UAD-2 or UAD-1) each plug-in will load and run on. You can use this menu when both UAD-2 and UAD-1 are installed to help manage your DSP resources.

Note: *The Run On menu should not be used dynamically; it is designed to be “set and forget” because the value is not stored within sessions.*

Power Requirement

Each UAD card draws power from the expansion slot that it is installed in (PCI, PCI-X, or PCIe). The total power draw of all the installed cards must not exceed the power that can be adequately delivered by the host computer.

The UAD device power requirements are listed in [Table 2 on page 58](#). These figures are measurements of the actual power draw for these devices when running at full DSP load.

Note: UAD-2 Satellite cannot be powered by the Firewire bus; it requires the included external power supply adapter for operation.

Important: If insufficient power is available to UAD devices, unpredictable behavior may result.

Table 2. UAD Power Requirements by Device Type

UAD Device Type	Maximum Power Draw
UAD-1	15 Watts
UAD-1e	9 Watts
UAD-2 Solo	5 Watts
UAD-2 Duo	7 Watts
UAD-2 Quad	10 Watts
UAD-2 SOLO/Laptop	3.5 Watts
UAD-2 Satellite (Duo)*	4 Watts (*via external power supply)
UAD-2 Satellite (Quad)*	7 Watts (*via external power supply)

Windows



The PCI specification provides for up to 25W per device, however some host systems don't provide (or require) this much power. When designing a computer DAW system, a common rule of thumb is to provide an extra 50%–100% of headroom over the estimated maximum total power draw of all components in the system. Don't skimp on the power supply unit! When building a custom system a quality sufficiently-rated PSU is critical for system stability.


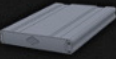

IRQ Conflicts

Under rare conditions running multiple UAD cards may cause an IRQ conflict which can cause system instability or freezes. If this occurs, try moving the UAD card(s) to different slots and/or contacting UA for technical assistance.

Multidevice DSP Loading

DSP loading in a multidevice system behaves the same as in a single UAD-2 Duo or Quad system (these devices have multiple DSPs), and is managed automatically by the UAD software. See ["DSP Loading Information" on page 93](#) for details.

Device Info Display

HARDWARE						
UAD-2 QUAD Card: 1 Status: OK Plug-ins: 20 	DSP	DSP 1	DSP 2	DSP 3	DSP 4	
	PGM	47.3%	71.2%	65.7%	84.9%	
	MEM	34.2%	44.6%	28.4%	28.5%	
	PLG	0.0%	0.0%	0.0%	0.0%	
		3	3	5	9	
UAD-2 Satellite QUAD Device: 2 Status: OK Plug-ins: 17 	DSP	DSP 1	DSP 2	DSP 3	DSP 4	
	PGM	37.8%	64.1%	98.9%	56.6%	
	MEM	33.6%	38.3%	38.5%	31.4%	
	PLG	4.2%	0.6%	0.0%	0.0%	
		5	5	5	2	
UAD-1e Card: 3 Status: OK Plug-ins: 3 	DSP	DSP 1				
	MEM	91.3%				
		75.4%				

UAD DSP and memory resources used for each installed device, and the ability to enable/disable individual devices, is displayed in the System Information window.

See “System Information Panel” on page 65 for complete details.

Disabling Devices

Individual UAD devices can be disabled using the Device Enabled function (see page 67). This can be useful, for example, if creating a session on a system with multiple devices that will be transferred to a system with fewer devices.



Devices are disabled only while the UAD Meter & Control Panel application is open. When the UAD Meter & Control Panel is quit, disabled devices are re-enabled.

Note: For optimum results, quit any applications using UAD plug-ins before disabling/enabling devices.

If a UAD Powered Plug-In is loaded on a device then that device is subsequently disabled, an error message will be displayed. This occurs because a plug-in is assigned to a device when it is first instantiated. It stays assigned to the same device until it is de-instantiated (for example, removed from the insert slot).

Host CPU

Using more than one device can cause a slight increase in host CPU requirements, so disabling unused devices can help you squeeze in a bit more host performance if you need it. Using additional devices on the PCI bus requires host resources, so running 15 UAD plug-ins on three devices at five plug-ins per device may require more host CPU than running the same 15 UAD plug-ins on one device.

For example, if you are trying to minimize latency during tracking by using a smaller buffer size (which will increase host CPU) and need a bit more host CPU, disabling one or more UAD devices during tracking may give the extra pinch of host CPU you need. The buffer size can then be increased and the UAD device(s) re-enabled for mixing.



CHAPTER 6

UAD Meter & Control Panel

Overview



The UAD Meter & Control Panel application is used to monitor UAD device resources, confirm the UAD system is operating properly, and configure the global UAD Powered Plug-Ins system parameters.

The UAD Meter window displays the current DSP, program, and memory status of the UAD hardware in real-time. Figure 7 shows how the UAD Meter appears on when UAD-1 and UAD-2 devices are installed together in the same system. When only one device type is installed, only that device type is displayed.

The UAD Control Panel Window (page 64) has multiple panels that display and modify various system, plug-in, and configuration parameters.

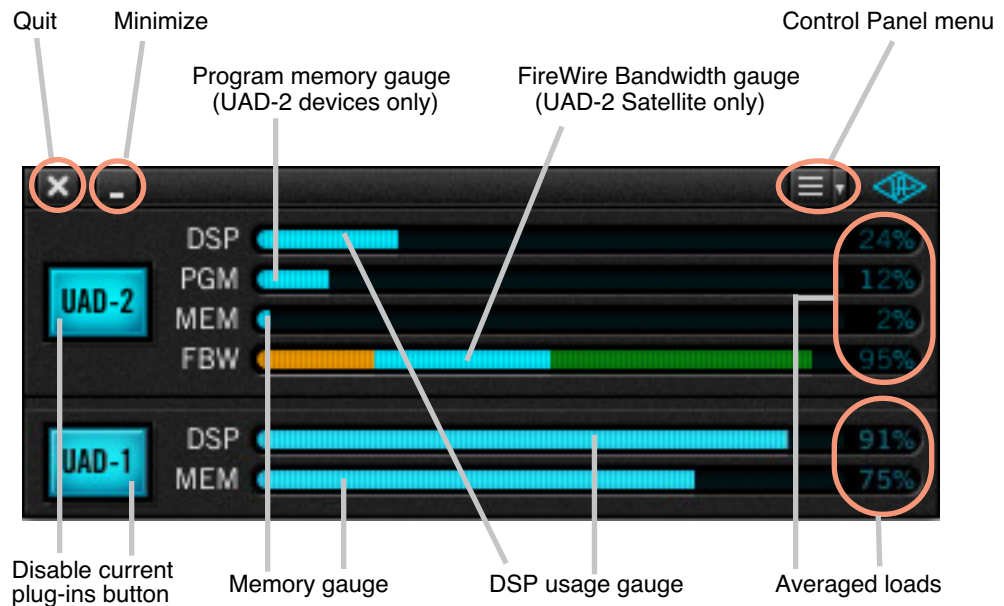


Figure 7. The UAD Meter window

Note: The Quit, Minimize, and Menu button positions shown in Figure 4 are as they appear on Mac systems. The button positions are reversed on Windows systems, reflecting the conventions for each OS platform.

Launching the UAD Meter & Control Panel Application

Windows



To launch the UAD Meter in Windows:

1. Double-click the UAD Meter & Control Panel shortcut that was placed on the Desktop during installation. OR,
2. Access the application from the Start Menu at Programs/UAD Powered Plug-Ins/UAD Meter & Control Panel. OR,
3. Double-click the executable file on the hard drive located at C:\Program Files\Universal Audio\Powered Plug-Ins\UADPerfMon.exe.

Mac



To launch the UAD Meter in Mac OS X:

1. Single-click the UAD Meter & Control Panel alias that was optionally placed in the Dock during installation. OR,
2. Double-click the UAD Meter & Control Panel application that was installed to Applications/Powered Plug-Ins Tools during installation.

Using the UAD Meter

The UAD Meter & Control Panel can be launched or quit at any time. It does not need to be open or active to use UAD Powered Plug-Ins. It is completely independent and does not require a host application. You can move the UAD Meter to a convenient location on your screen by dragging its window title bar.

Always On Top

The UAD Meter window can be set to normal or “Always on top” (floating) view mode. In normal mode, the window can be covered by windows of the foreground application. When in ‘Always on top’ mode, the Meter window always “floats” on top of other windows, even when other applications are in the foreground, so you can always see the meter and access the disable buttons (page 63). This setting is saved when the meter is quit.

To enable Always on top mode, click the control panel menu in the Meter window title bar (Figure 8 on page 65) and select “Always on top.” The mode is active when a checkbox appears next to the item in the menu.

Note: If “No Devices Found” appears in the UAD Meter window instead of the expected buttons and gauges, then the UAD drivers are not communicating with the UAD hardware. If this occurs, double-check hardware and software installations and/or contact customer support.

UAD Meter Elements

Refer to [Figure 7 on page 61](#) for these element descriptions.


Title Bar

The title bar at the top of the UAD Meter window contains buttons to quit the UAD Meter & Control panel application and minimize the UAD Meter window, and a drop-menu to access the Control Panel window functions.

Disable Current



The Disable Current button disables all UAD Powered Plug-Ins that are currently running. This enables you to add new UAD plug-ins for offline processing, or easily compare the sound of the processed and unprocessed audio.

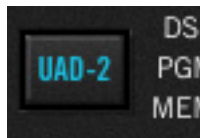

When the button glows blue, UAD plug-ins are active. Click the button to disable the active plug-ins; the button changes to black with blue lettering. New UAD plug-ins can then be added. Click the button again to re-activate all UAD plug-ins.

Note: *Disable Current stays active only while the UAD Meter & Control Panel application is open. When the UAD Meter & Control Panel is quit, Disable Current is deactivated.*

Resource Gauges

The UAD resource loads are displayed in the UAD Meter window, which are constantly updated in realtime even when the UAD Meter is not the foreground application. This allows you to monitor UAD loads as needed, for example when deciding which UAD plug-ins to load, based upon how much DSP is available.

The UAD resources are displayed as bar graphs and as percentages.

Averaged Loads

The load for each gauge represents the average for each device type. For example, if one UAD-2 Quad is installed, the UAD-2 DSP load is an average of the four DSP processors on the Quad. If two UAD-2 Quads are installed, then the eight processors are averaged. Similarly, if multiple UAD-1 devices are installed, then the UAD-1 loads represent the average of all UAD-1 devices.

Individual Loads

The loads of individual devices in a multidevice setup (or the individual DSP loads in a multi-DSP UAD-2 device) can be viewed in the UAD System Information panel (see [page 65](#)).

DSP The DSP gauges display the amount of digital signal processing resources that are being used by the UAD Powered Plug-Ins algorithms. DSP is the primary hardware “juice” that powers the UAD Powered Plug-Ins algorithms.

When UAD plug-ins are disabled, DSP requirements are decreased.

Program This resource shows how much “program memory” is in use by the UAD-2. Program memory is an on-chip memory that is specific to the UAD-2 DSP processor(s) and is used for certain UAD plug-in resources.

Each unique UAD-2 plug-in uses a bit of program memory. If many different UAD-2 plug-ins are loaded simultaneously, it is possible for this resource to run out before DSP overload occurs. This point is considered and factored in by the automatic UAD-2 load balancing routines.

Note: *The UAD-1 uses a different processor which does not have program memory. The PGM gauges are not displayed for UAD-1 devices.*

Memory The Memory gauges indicate the percentage of UAD RAM that is currently in use. It indicates the total available UAD memory available, regardless of the number of UAD processors that are installed.

Memory is used for echo, delay lines, reverb, and similar spatial processing. When UAD plug-ins are disabled, memory requirements are *not* decreased. In this case, memory remains loaded so that reverb tails and delay lines are not cut off when the plug-in is disabled (if supported by the host).

UAD Control Panel

The UAD Control Panel is where detailed system information is displayed and global UAD Powered Plug-Ins settings are modified. The UAD Control panel has four panels, organized into similar areas of functionality: System Information, Plug-Ins, Configuration, and Help & Support.

Accessing the Control Panels

The main UAD Control Panel window is accessed from the UAD Meter window. To open the Control Panel, click the menu button in the UAD Meter window title bar (Figure 8 on page 65). After clicking the menu button, the available functions are listed in the drop menu.

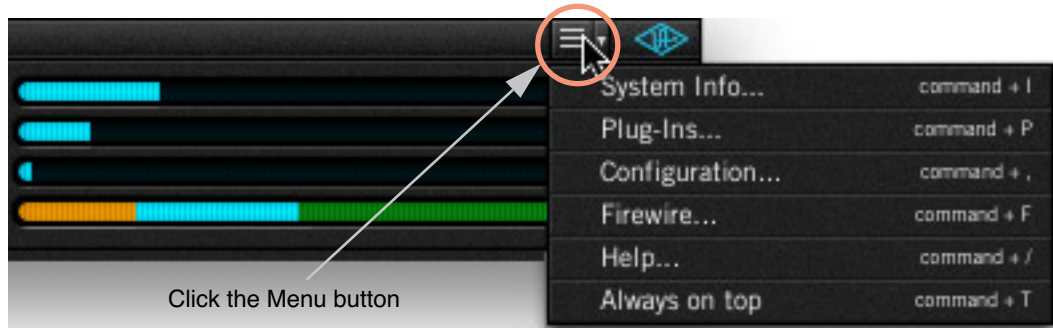


Figure 8. Accessing the UAD Control Panel

Once the main UAD Control Panel window is open, the individual window panels are accessed by clicking the title buttons (Figure 9).

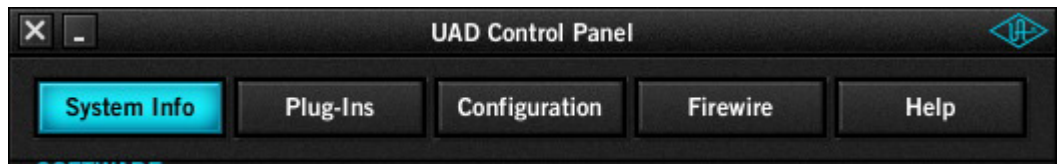


Figure 9. The Control Panel window panel buttons

Note: The FireWire button is only displayed if UAD-2 Satellite is connected.

System Information Panel

The System Information panel (Figure 10 on page 66) displays detailed UAD software and hardware information and contains several useful buttons.

Software Section

Version String

The currently installed UAD Powered Plug-Ins software version is displayed.

Important: The UAD driver and plug-in versions must match. If they don't, a "driver mismatch" error will occur when attempting to process audio. If this occurs, you must reinstall and/or reauthorize the UAD software.

Check for Updates

This button checks our web server to find out if a more recent version of the UAD software is available than is currently installed. We recommend running the latest version of UAD Powered Plug-Ins for maximum stability and the latest features, such as new plug-ins.

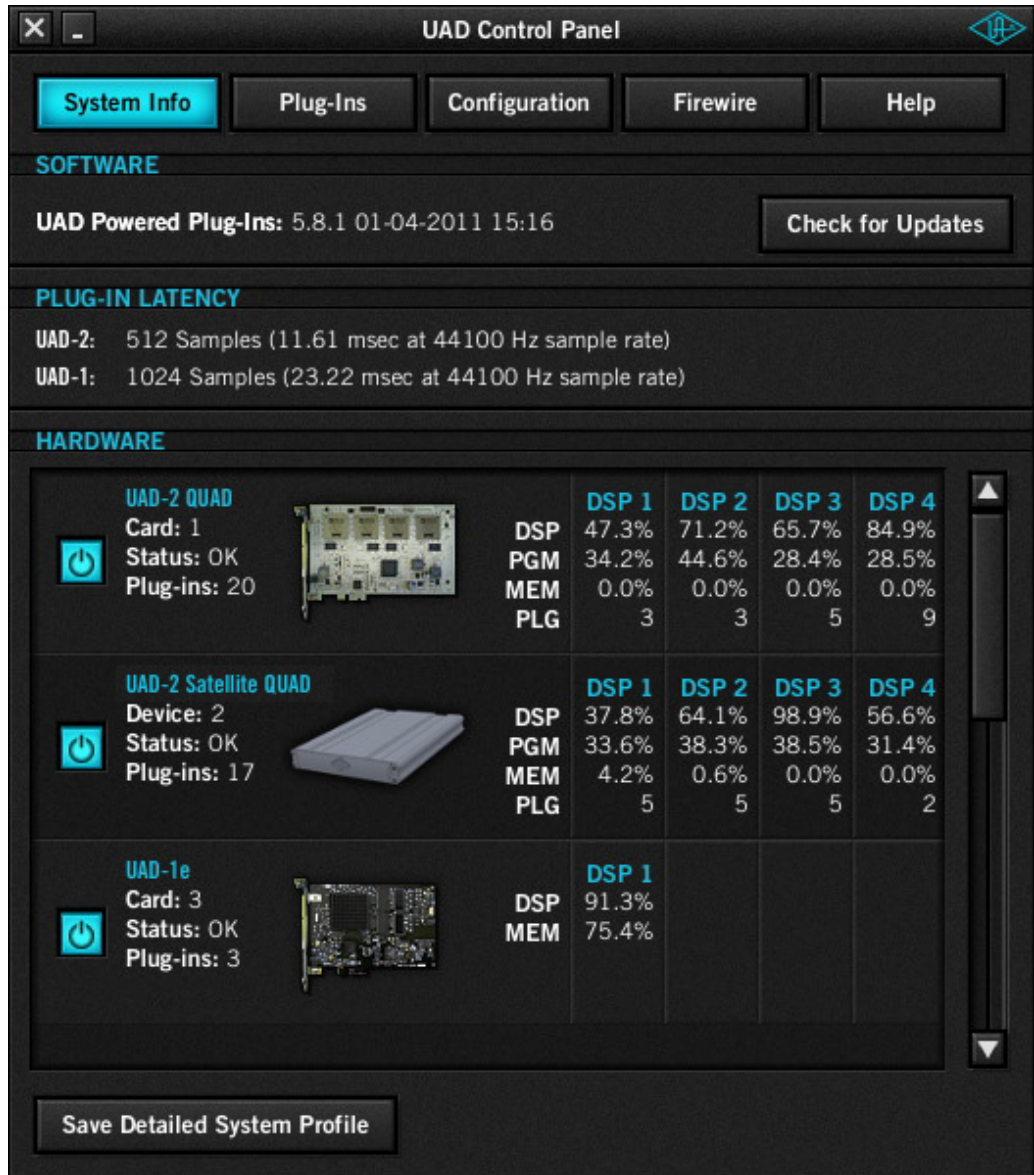


Figure 10. The UAD System Information panel

Plug-In Latency Section

UAD plug-in latency for each device type (UAD-2 and UAD-1) is displayed here. The calculation is based on the audio I/O interface buffer size and the sample rate. The window uses this information to calculate and display the resulting latency in samples and milliseconds.

The buffering methods used by UAD-2 and UAD-1 drivers are different for the two device types, which is why the latency differs between the devices.

Note: Displayed latency does not reflect the actual lowered latency value when LiveTrack mode (page 89) is active.

UAD-2: The displayed latency is the audio I/O interface buffer size when Extra Buffering (page 74) is off. When Extra Buffering is on, the displayed latency is the audio I/O interface buffer size plus 64 samples.

UAD-1: The displayed latency is twice the audio I/O interface buffer size.

Note: The displayed sample latency number does not include the extra samples produced by upsampled UAD plug-ins. For more detailed information about the extra samples and latency, see “Compensating Upsampled Plug-Ins” on page 108.

Hardware Section

Detailed information about each UAD device and its DSP is displayed in the Hardware area (Figure 10 on page 66). If you have several devices installed, use the scrollbar to see the other devices.

Device Status

For each installed device type (UAD-2 and UAD-1), a small picture of the hardware and its status is displayed. When the device displays Status: OK the hardware is operating properly. The total number of UAD plug-ins loaded on each device is also displayed here.

Device Enabled



Individual UAD devices can be disabled using the Device Enabled button. This can be useful, for example, if creating a session on a system with multiple devices that will be transferred to a system with fewer devices, to streamline the performance of the host system when multiple devices are not needed, or to manually balance loads on UAD-1-only multidevice systems.



Click the button to disable an individual device. The device is enabled when the button is blue. For additional information regarding multidevice use, see Chapter 5, “Using Multiple UAD Devices.”

Devices remain disabled only while the UAD Meter & Control Panel application is open. When the UAD Meter & Control Panel is quit, disabled devices are re-enabled.

Note: Disabling devices does not disable plug-ins already running on the device; it only prevents additional plug-ins from being loaded onto it.

Important: For optimum results, quit any host applications using UAD plug-ins before disabling/enabling devices.

DSP Load

If more than one UAD DSP is installed, information for each of the processors is displayed. DSP, Program (“PGM”), and Memory (“MEM”) loads are displayed as a percentage of total available load for that processor.

The number of UAD plug-ins (“PLG”) running on each individual processor is also displayed (not available for UAD-1).

Save Detailed System Profile

Clicking this button will generate a detailed system profile and prompt you for a location to save the text file to disk. This file contains an even greater level of detail than the System Information panel, which can be useful for troubleshooting or if UA Customer Support requests this document when providing assistance.

The profile lists the version strings of the individual UAD software components, installed device type(s) with serial and hardware ID numbers, host computer information, and detailed authorization status for all UAD plug-ins.

Plug-Ins Panel

The Plug-Ins panel (Figure 11 on page 70) displays the current authorization status of all UAD plug-ins. This is also where you can activate plug-in Demo Mode (“UA Online Store” on page 52) and configure UAD plug-ins to run on a specific device. Use the scrollbar to view plug-ins that are not visible in the list.

Authorize Plug-ins button



This important button links directly to your account at the UA online store to automatically generate and download an authorization file for your UAD plug-ins. If you do not already have an account, you are redirected to the registration page to create one.

Important: UAD plug-ins require authorization before they can be used. For detailed information, see “Authorization Overview” on page 48. Without authorization, UAD plug-ins can be enabled to run for 14 days without functional limitations in a timed demo mode (see “Demo Mode” on page 51).

The complete procedure for UAD device authorization is detailed in Chapter 2, “UAD Installation.” See “Authorize Plug-Ins Procedure” on page 33 for complete step-by-step instructions. If the UAD computer is not connected to the internet, see “” on page 34.

Plug-In Column All currently installed UAD Powered Plug-Ins are displayed in the Plug-In column. Use the scrollbar to view the entire list if necessary.

Status Column The Status column reflects the current state of each UAD plug-in. The status depends on which device (UAD-2 or UAD-1) the plug-in is running on; the status may change if the “Run On” device is changed ([page 71](#)). After the authorization file is loaded (“[Authorization Overview](#)” on [page 48](#)), the status will show one of the following:

Authorized for all devices

The plug-in is fully licensed and authorized to run on all devices in the system.

Start Demo

The demo period has not been started for the plug-in. Click the “START DEMO” button to begin the 14-day trial period.

Demo (days remaining)

If the 14-day trial period has been activated but is not yet expired, the number of days remaining is displayed here in green text.

Important: *The 14-day demo period can only be activated once, and cannot be stopped or restarted during this period! We recommend you do not activate demo mode until you have the time to thoroughly check out its sound and functionality. See “[Demo Mode](#)” on [page 51](#) for detailed information.*

Not available for UAD-2

The plug-in has not been ported to the UAD-2 and is available to run on UAD-1 devices only. In this case, the Run On menu is unavailable.

No UAD-1 devices found

This is displayed for non-ported UAD-1 plug-ins when both device types were selected during software installation, but only the UAD-2 is currently installed. In this case, the Run On menu is unavailable.




Figure 11. The UAD Plug-Ins panel

Run On Column

The Run On column indicates which device (UAD-2 or UAD-1) the specified plug-in will load onto. When both UAD-2 and UAD-1 are installed, you can select between them with the Run On menu in order to better manage your DSP resources.

For example, you could run low-DSP plug-ins such as the UAD CS-1 on the UAD-1, while specifying that resource-hungry plug-ins such as Neve 33609 run on the UAD-2.

Run On Menu

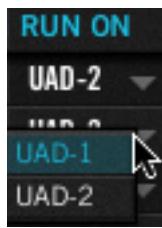

The Run On column contains a drop menu for each plug-in. Specify which device type (UAD-2 or UAD-1) the plug-in will load onto with the Run On drop menu. Click the disclosure triangle to see the menu, then drag and release on the desired device type.

Tip: Hold Shift when specifying a device to quickly change all plug-ins in the list to that device type.

If only one device type (UAD-2 or UAD-1) is installed, the disclosure triangle is not displayed and the drop menu is unavailable.

Note: The Run On menu should not be used dynamically; it is designed to be “set and forget” because the value is not stored within sessions.

Help Column



Click the Help button (“?”) to open the UADManual.pdf (the file you are reading now).

Buy Column



If the computer is connected to the internet, clicking Buy links to the plug-in product pages at the UA online store. See “[UA Online Store](#)” on [page 52](#) for purchasing details.

Configuration Panel

The UAD Configuration Panel is where most of the global UAD settings and preferences are specified for all UAD devices. Refer to [Figure 12 on page 72](#) for the parameter descriptions.

The parameters that are displayed in the Configuration Panel are dependent upon the UAD hardware that is currently installed and the OS platform (Windows or Mac). For example, if you have only UAD-2 devices installed in a Windows system, you will not see the UAD-1 or Mac parameters.

Note: All UAD-2 parameters apply to UAD-2 PCIe cards, UAD-2 SOLO/Laptop, and UAD-2 Satellite unless otherwise noted.

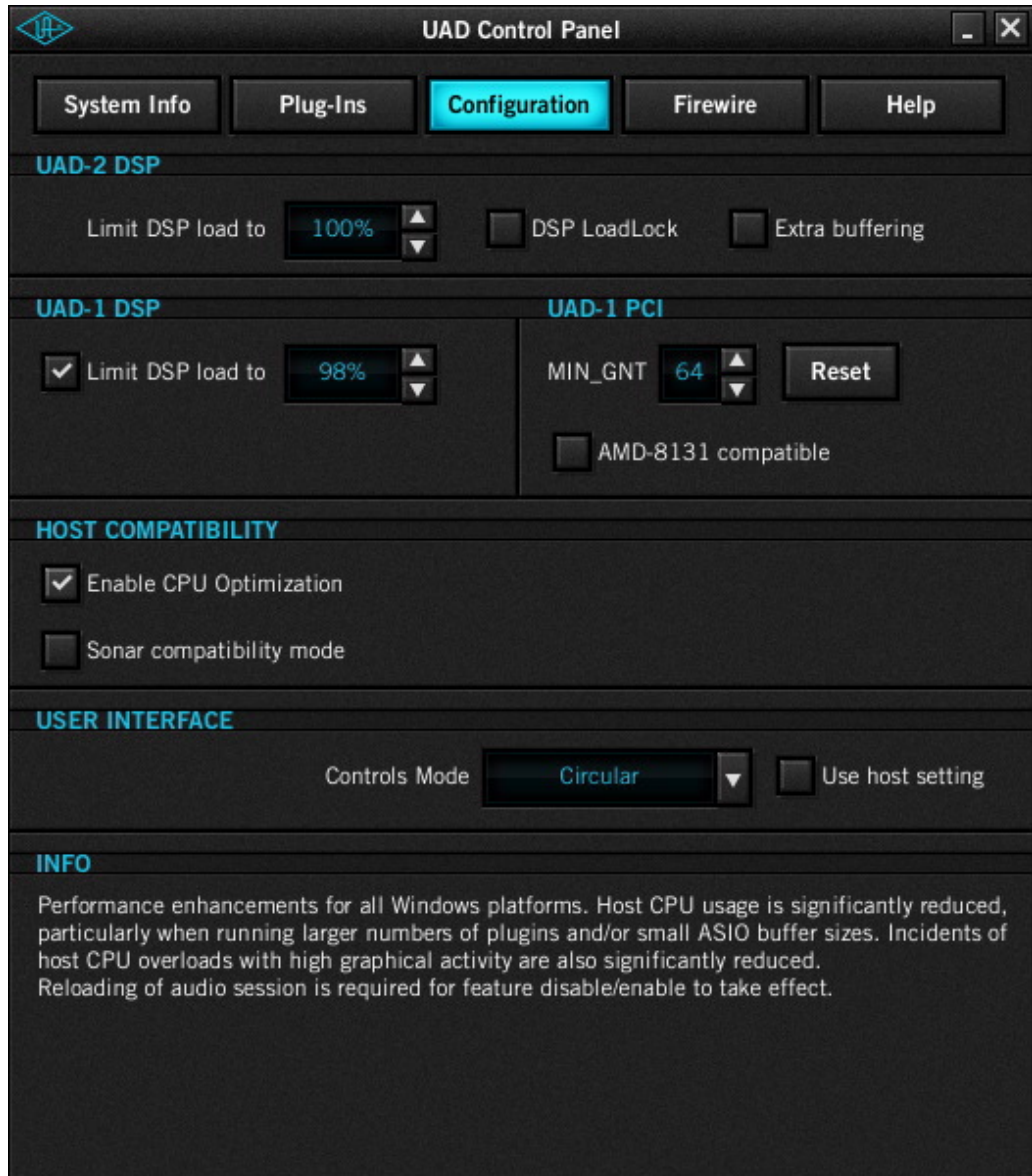


Figure 12. The UAD Configuration panel

DSP Load Limiting Overview

Without UAD Powered Plug-Ins installed, overloading the host system with native (host based) plug-ins can cause dropouts and possibly system lockup. Steinberg hosts, for example, provide a switch that allows you to trade latency for stability when the system is overloaded. Similarly, the UAD DSP load cannot exceed 100% without unpredictable behavior.

With the Limit DSP Load feature, the UAD DSP can also be limited so the load cannot exceed 100%, thereby increasing overall system stability in high load situations. With very heavy UAD loads, DSP load limiting may also improve host CPU performance.

There are many variables that affect DSP load (sample rate, buffer size, parameter values, mono/stereo, automation, host system, etc). Although these variables are taken into account, the resulting measurement cannot be absolutely accurate. This is due to variations in system configurations, specifically PCI/PCIe bus loading which is impossible to predict. Systems that are heavily loaded due to the presence of other devices or suboptimal configuration may cause additional DSP loading that cannot be predicted by the UAD plug-in load calculator. The DSP load limit should be reduced in this case.

It is possible for certain (non-typical) conditions to be met where another UAD plug-in can't be added, even when the UAD Meter says you should have DSP available when compared to the DSP Load Limit value.

 
Note: *When Limit DSP Load is enabled and the DSP load limit is exceeded when instantiating a new UAD plug-in, an overload message will appear and the plug-in toolbar will display "DISABLED." Even though its interface will load, the plug-in will not process audio.*

UAD-2 DSP

Settings in this area apply to UAD-2 devices only. If no UAD-2 device(s) are installed, these settings are not displayed.

Note: *UAD-2 DSP parameters apply to UAD-2 PCIe cards, UAD-2 SOLO/Laptop, and UAD-2 Satellite unless otherwise noted.*

Limit DSP Load




This setting determines the maximum UAD DSP load. If performance issues such as overloads, dropouts, stuttering, and/or crackles persist, change the UAD DSP load value by clicking the triangles to the right of the percentage display.

UAD-2 DSP load limiting is always on; 100% is the maximum value.

Unlike the UAD-2, which has a different architecture, load limiting on UAD-1 can be disabled altogether by unticking the checkbox. However, enabling UAD-1 DSP load limiting is recommended for optimum performance.

 UAD-2 DSP LoadLock




DSP LoadLock (UAD-2 only) reserves the maximum UAD-2 DSP load required by each plug-in, even if certain plug-in features are disabled. This ensures there will always be enough DSP if those features are later enabled, or when automating parameters that affect the DSP load.

Disabling LoadLock increases available UAD-2 DSP by turning off unused features in certain plug-ins, but may cause problems with previously saved sessions that had all plug-in features enabled, or when automating parameters that affect the DSP load.

Enabling DSP LoadLock is recommended for optimum performance. Disable LoadLock when you need to squeeze in that extra bit of DSP resources.

Note: Changes to this setting do not take effect until all open sessions containing UAD plug-ins are reloaded.

UAD-2 Extra Buffering

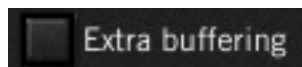

Extra Buffering adds an additional 64 samples of buffering for increased host application compatibility. Applications that are known to require Extra Buffering include Sony Vegas, Acid, and Soundforge, and Sonar Cakewalk.

In other hosts, you can disable this mode to reduce latency. If your application is incompatible with reduced latency when Extra Buffering is off, a dialog will be displayed indicating that Extra Buffering is required.

Note: Changes to this setting do not take effect until all open sessions containing UAD plug-ins are reloaded.

UAD-1 PCI

Settings in this area apply to UAD-1 devices only. If no UAD-1 device(s) are installed, these settings are not displayed.

MIN_GNT

MIN_GNT is a low-level system setting that affects PCI bandwidth. If you are experiencing crackles or dropouts, our technical support team may recommend a different value. Clicking the Reset button sets the value to 64, which is recommended for most systems.

Important: System performance can be adversely affected by changing this value. MIN_GNT does NOT affect audio latency in any way!

AMD-8131 Mode

If your computer uses the AMD-8131 PCI controller chipset, check the “AMD-8131 Compatible” box. This will improve UAD performance on these systems. For the new setting to take affect, you must reset the audio interface using one of the following methods:

- Close the re-open the session
- Stop then restart the audio engine
- Modify or reset the audio device settings

AMD-8131 Compatible Mode is only required when the device is attached directly to an AMD-8131 PCI bus. If the UAD is in an external PCI expansion chassis, this mode should be disabled (unchecked).

Important: *Do not enable AMD-8131 Mode unless your computer uses this PCI controller chipset, or performance may be compromised.*

Mac G5 Systems

The AMD-8131 chipset is used in most Mac G5 systems. The UAD software automatically determines when it is running on a G5 with AMD-8131 and sets the mode appropriately. If the UAD is in an external PCI expansion chassis, AMD-8131 mode should be unchecked.

Host Compatibility

Windows



Enable CPU Optimization

When this setting is enabled, host CPU usage is significantly reduced, particularly when running larger numbers of plug-ins and/or small buffer sizes. Incidents of host CPU overloads with high graphical activity are also significantly reduced.

The default value is ON. We recommend leaving this setting enabled on all Windows systems.

Important: *If UAD-2 plug-ins are already loaded when the setting is changed, the host application must be restarted for the change to take effect.*

Note: *Due to differing architectures, this mode is not available with UAD-1.*

Windows



Sonar Compatibility Mode

Tick the Sonar Compatibility Mode checkbox to improve UAD-1 plug-in performance when used with Cakewalk Sonar. This mode should be disabled when using different hosts, otherwise audio degradation could occur.

Mac



Release all DSP resources on Audio Unit bypass

Some Audio Unit hosts dynamically bypass plug-ins when they are not being used during playback, for example when no audio is present at the current playback position. During this dynamic bypassing, UAD plug-ins stay loaded on the device, which reduces glitches in playback.

This setting affects the Audio Units platform only. Checking the “Release all DSP resources on AudioUnit bypass” option will unload UAD plug-ins from the device during dynamic bypassing. When the option is checked, UAD DSP usage may be reduced during dynamic bypassing, but the possibility of glitching during playback is increased.

Note: Changes to this setting do not take effect until all open sessions containing UAD plug-ins are reloaded.

Mac



Force Logic to use “live mode” for tracks with UAD plug-ins

When UAD plug-ins and Logic 7.2.1 (and higher) are used together and this setting is checked, all Logic tracks with UAD plug-ins are forced into Logic's “live mode” and latency is reduced. Reduced latency is useful for tracking when Logic's Software Monitoring feature is active.

Note: Logic's “live mode” is unrelated to UAD-2's LiveTrack Mode.

When this setting is active, UAD-1 latency is twice the hardware I/O buffer and UAD-2 latency is the same as the hardware I/O buffer. In Logic versions prior to 7.2.1 (and later versions when live mode is disabled), UAD latency is determined by the larger of the audio interface hardware I/O buffer size and the Process Buffer Range setting within Logic.

When Logic's “live mode” is NOT active and this setting is NOT enabled, the minimum Process Buffer Range setting (“Small”) in Logic 7 corresponds to 512 samples, meaning the minimum possible UAD latency is 1024 samples for UAD-1 or 512 samples for UAD-2 (the current latency is displayed in the UAD Meter System Information panel). Latency can be further reduced by using [LiveTrack Mode](#) (UAD-2 only).

On multi-processor machines Live Mode forces all plug-ins on tracks with UAD plug-ins (and any aux/buses fed by those tracks) to run on one processor only. To allow host-based (native) plug-ins to run on all processors under these conditions, deactivate this setting.

Note: Changes to this setting do not take effect until all open sessions containing UAD plug-ins are reloaded.

User Interface Settings

Controls Mode

This setting determines how UAD Powered Plug-In parameter knobs respond to adjustment. Three control modes are offered: Circular, Relative Circular, and Linear. Select the desired mode from the drop menu.

Note: To increase resolution when in adjusting rotary controls in circular and relative circular modes, increase the radius of the mouse relative to the knob while dragging (i.e. move the mouse farther away from the knob while dragging in a circular motion).

Linear (slider)

In Linear mode, the knob is adjusted by dragging horizontally or vertically instead of by rotating. This behavior is similar to moving a physical fader.

Circular (jump)

In Circular mode, the software knobs behave similar to physical rotary knobs. Values are changed by clicking on the knob then rotating in a circular direction. When the edge of the knob is clicked, the parameter value jumps to the mouse position.

Relative Circular (grab)

Relative Circular mode operates similar to Circular mode, but the knob value does not jump to the mouse position when clicked. Instead, the knob value is modified relative to its original value.

In this mode you can click anywhere on the knob to make an adjustment originating at the original value. You don't have to click on the current knob position.

Use Host Mode

When Use Host Mode is checked, the control mode set within the host application preferences is used if this feature is supported by the host. This setting forces the host to override the control mode set in the UAD user interface settings.

Note: When Use Host Mode is checked, the UAD Meter user interface settings have no effect unless control mode is NOT supported by the host.

Mac



Toggle initial value modifier

Holding the specified modifier key while clicking a parameter control will toggle between the value of the control when the editor was opened and its last edited value. This feature is not supported under Windows.

This parameter also affects the “select + click” modifier. For a complete list of keyboard shortcuts, see “Shortcuts” on page 92.

Info Display

This area displays helpful text about parameters in the Configuration panel. Hover the mouse over a Configuration setting to view the informational text.

FireWire Panel

The UAD FireWire Panel (Figure 13 on page 79) is where settings specific to UAD-2 Satellite are configured (FireWire settings do not apply to UAD PCI/PCIe devices). The UAD-2 Satellite is an external UAD device that connects via FireWire as opposed to PCI/PCIe or ExpressCard (see Chapter 11, “UAD-2 Satellite” for details).

Note: The FireWire Panel is only displayed if UAD-2 Satellite is connected.

FireWire System

The FireWire System parameters pertain to the configuration of the FireWire bus. These settings affect UAD-2 Satellite performance and can also affect external FireWire audio interface and hard drive performance if they are connected to the same FireWire bus.

The primary function of the FireWire System settings is to reduce the UAD-2 Satellite FireWire bandwidth allocation and/or link speed when other FireWire devices are on the same bus, or if other performance issues arise.

Note: The FireWire System settings cannot be changed when UAD plug-ins are loaded. Quit all UAD plug-in host software to make changes to these settings.

Important: FireWire device connection methods can affect the FireWire bus speed. See “FireWire Bandwidth” on page 141 for details.

For more information about FireWire and using it with UAD-2 Satellite, see “FireWire Basics” on page 137, “FireWire Bandwidth vs. UAD DSP” on page 143, and “FireWire Bus Power” on page 144.

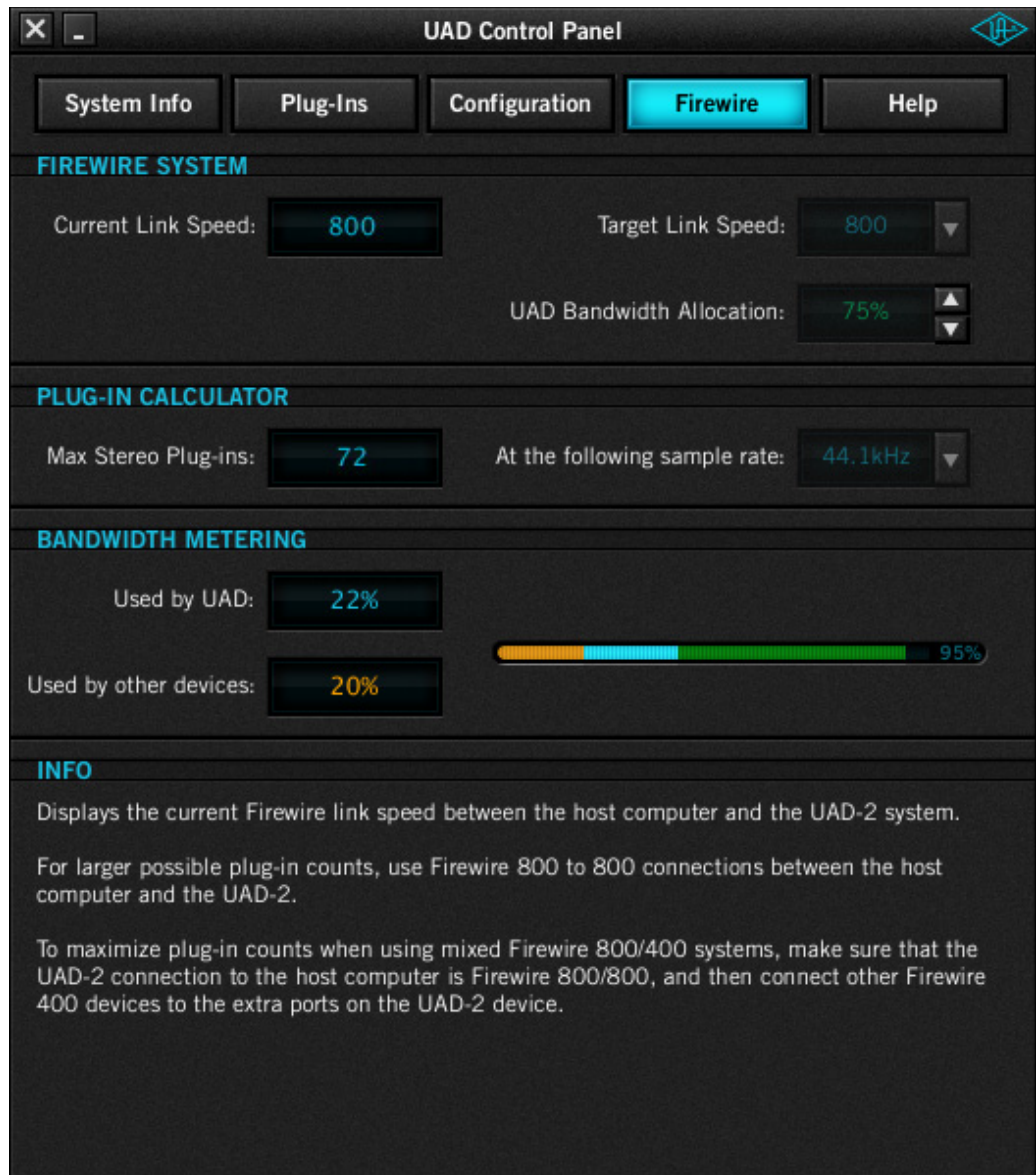


Figure 13. The UAD FireWire panel

Current Link Speed

The current speed of the FireWire link between the host computer and the UAD-2 Satellite is displayed here. The active link speed can be changed with the [Target Link Speed](#) control if FW400 and FW800 are both supported by the host system.

If the host computer has multiple FireWire buses (this is rare), up to two speeds will be displayed, with the values separated by a comma.

Note: *If the host computer supports FireWire 800 and the Target Link Speed is set to 800, but the Current Link Speed still displays 400, check the bus ordering of the FireWire devices. See “Mixing FireWire Speeds” on page 140 for information on how to properly combine FireWire 400 and FireWire 800 devices on the same bus.*

Target Link Speed

The desired speed of the FireWire link between the host computer and the UAD-2 Satellite is set here (the actual link speed is shown in the [Current Link Speed](#) display). To change the value, click the down arrow to display the drop menu, then select the desired value. The setting cannot be changed when UAD plug-ins are loaded.

Target Link Speed should be set to 800 when supported by the host computer. However, some FireWire devices may not always perform flawlessly. Changing the Target Link Speed to 400 may actually improve performance and/or stability on systems not optimized for FireWire 800 operation.

Tip: *Twice as many UAD-2 Satellite plug-ins can be run at 800 versus 400, so configure the FireWire system to run at 800 if supported by the computer.*

UAD Bandwidth Allocation

This parameter determines how much of the total available FireWire bus bandwidth will be reserved for UAD-2 Satellite plug-ins. Limiting the bandwidth used by UAD-2 Satellite ensures that other FireWire devices on the same bus will have enough bandwidth to function properly.

To change the value, click the increment/decrement arrows, click/hold the current target value to display a drop menu, or double-click the value for direct text entry. The maximum available value is 85%.

Note: *The value cannot be changed when UAD plug-ins are active.*

Although the amount of FireWire bandwidth reserved by UAD-2 Satellite depends on the UAD Bandwidth Allocation setting, the amount of DSP used by any UAD plug-in does not affect FireWire bandwidth (UAD plug-ins that use very little DSP require the same FireWire bandwidth as DSP-intensive UAD plug-ins). See “[FireWire Bandwidth vs. UAD DSP](#)” on page 143 for details.

It is important to note that all devices on the FireWire bus share the available data bandwidth of the bus, including hard drives and audio interfaces as well as UAD-2 Satellite. Therefore all of the bandwidth cannot be allocated for UAD use if FireWire hard drives and/or audio interfaces are on the same bus. See “FireWire Bandwidth” on page 141 for additional information.

To determine the proper value for the UAD Bandwidth Allocation:

1. Connect and power up all the FireWire devices (host computer, audio interfaces, hard drives, UAD-2 Satellite) on the FireWire bus.
2. If running an audio interface on the FireWire bus, ensure the audio interface drivers are installed and configured correctly (specifically, all the audio inputs and outputs that will be used should be enabled).
3. Run the UAD host (DAW) software but DO NOT run any UAD plug-ins, at the HIGHEST SAMPLE RATE that will be used in the session (the sample rate may be reduced after UAD Bandwidth Allocation is set).
4. View *FireWire Gauge* in the “Bandwidth Metering” section of the *FireWire Panel UAD-2 Satellite* (page 82) when UAD plug-ins are NOT running. The value indicated in orange is the percentage of FireWire bandwidth that is used by all the devices except UAD-2 Satellite.
5. Subtract the “Used by other devices” percentage from 100% and enter the difference as the UAD Bandwidth Allocation. Done!

UAD Bandwidth Allocation Example

If all the FireWire devices on the bus except UAD-2 Satellite use 20% of the available FireWire bandwidth (from steps 1 through 4 above), enter 80% as the UAD Bandwidth Allocation ($100\% - 20\% = 80\%$).

Tip: *If FireWire performance issues occur, try leaving a bit of unused FireWire bandwidth (headroom), so the total usage for all devices is less than 100%. To leave 5% of the bandwidth available for headroom in the example above, you’d enter 75% for UAD Bandwidth Allocation (20% bandwidth without UAD-2 Satellite + 75% for UAD-2 Satellite = 95% total FireWire bandwidth).*

Plug-In Calculator

The Plug-In Calculator displays the maximum number of stereo UAD plug-ins that can be run on UAD-2 Satellite with the current *FireWire System* settings at a given sample rate.

Note: *The Plug-In Calculator is for informational purposes only; it does not actually affect UAD FireWire or DSP performance in any way.*

When a UAD plug-in is loaded on UAD-2 Satellite by the host software, the Plug-In Calculator is automatically adjusted, using the session sample rate, [Current Link Speed](#), and [UAD Bandwidth Allocation](#) values.

Max Stereo Plug-Ins

The maximum number of stereo UAD plug-ins that can run on UAD-2 Satellite, based upon the [FireWire System](#) settings and a given session sample rate, is displayed here. The number changes if/when the [Target Link Speed](#), [UAD Bandwidth Allocation](#), or “[At the following sample rate](#)” parameters are modified.

The UAD instantiation count at the current settings could exceed this number if used in true mono configurations. Note that some host software uses stereo plug-in processing even when used on a mono track.

At the following sample rate

This parameter selects the sample rate used by the Plug-In Calculator. To change the value, click the down arrow to display the drop menu, then select the desired value.

When a UAD-2 Satellite plug-in is loaded by the host software, the session sample rate is entered automatically. In this scenario, the parameter cannot be modified until the host is quit.

Note: *The “At the following sample rate” parameter is only used by the Plug-in Calculator; it does not affect the actual sample rate of the UAD system or the host software.*

Bandwidth Metering

Bandwidth Metering pertains to the FireWire bus that the UAD-2 Satellite is attached to. The items displayed in this area are for informational purposes only; there are no settings here that can be changed.

If the host computer has multiple FireWire buses (this is rare), up to two bandwidth gauges will be displayed, one for each bus.

Used by UAD

This number displays the percentage of FireWire bus bandwidth that is used by UAD plug-ins running on the UAD-2 Satellite. The number cannot exceed the value set by the [UAD Bandwidth Allocation](#) parameter.

Used by other devices

This number displays the percentage of FireWire bus bandwidth that is used by all the FireWire devices connected to the bus EXCEPT for UAD-2 Satellite, such as hard drives and audio interfaces. The number is used to help determine an optimum value for the [UAD Bandwidth Allocation](#) parameter.

FireWire Gauge

The FireWire Gauge ([Figure 14](#)) reflects the FireWire bus bandwidth currently used by UAD-2 Satellite and all other FireWire peripheral devices (e.g., audio interfaces and hard drives). The gauge graphically displays the [UAD Bandwidth Allocation](#), the bandwidth used by active UAD-2 Satellite plug-ins, and bandwidth used by all other devices on the bus. The FireWire Gauge in the FireWire control panel is also displayed in the UAD Meter when UAD-2 Satellite is connected (see [Figure 7 on page 61](#)).

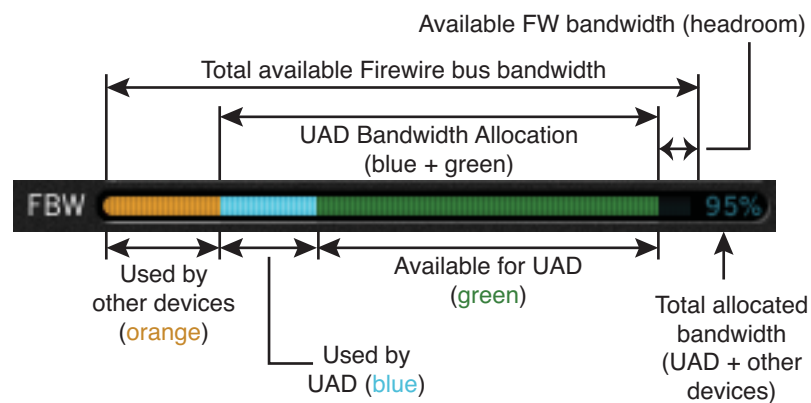


Figure 14. Elements of the UAD FireWire Gauge

The total range of the gauge is 100%, reflecting the total available bandwidth of the FireWire bus. The [UAD Bandwidth Allocation](#) is displayed in green, UAD usage is dynamically displayed in blue, and usage by all other devices is displayed in orange. The sum of UAD and peripheral usage is also displayed as a percentage of the total available bandwidth.

Important: FireWire bandwidth is unrelated to UAD DSP loads. See [“FireWire Bandwidth vs. UAD DSP” on page 143](#) for details.

Info Display

This area displays helpful text about parameters in the FireWire panel. Hover the mouse over a FireWire setting to view the informational text.

Help & Support Panel

The Help & Support panel (Figure 15) contains numerous helpful weblinks to help you get the most out your UAD Powered Plug-Ins experience.

The button names are self-explanatory. Click a button to launch the URL in your default web browser (you must be connected to the internet to launch the web pages). If the UAD computer isn't online, much of the information is in the manual you're reading now; find it in Table of Contents, Index, or search.

"View User Manual" is the only button that doesn't link to the internet. Instead, clicking this button opens the UAD User Manual (the file you're reading now).

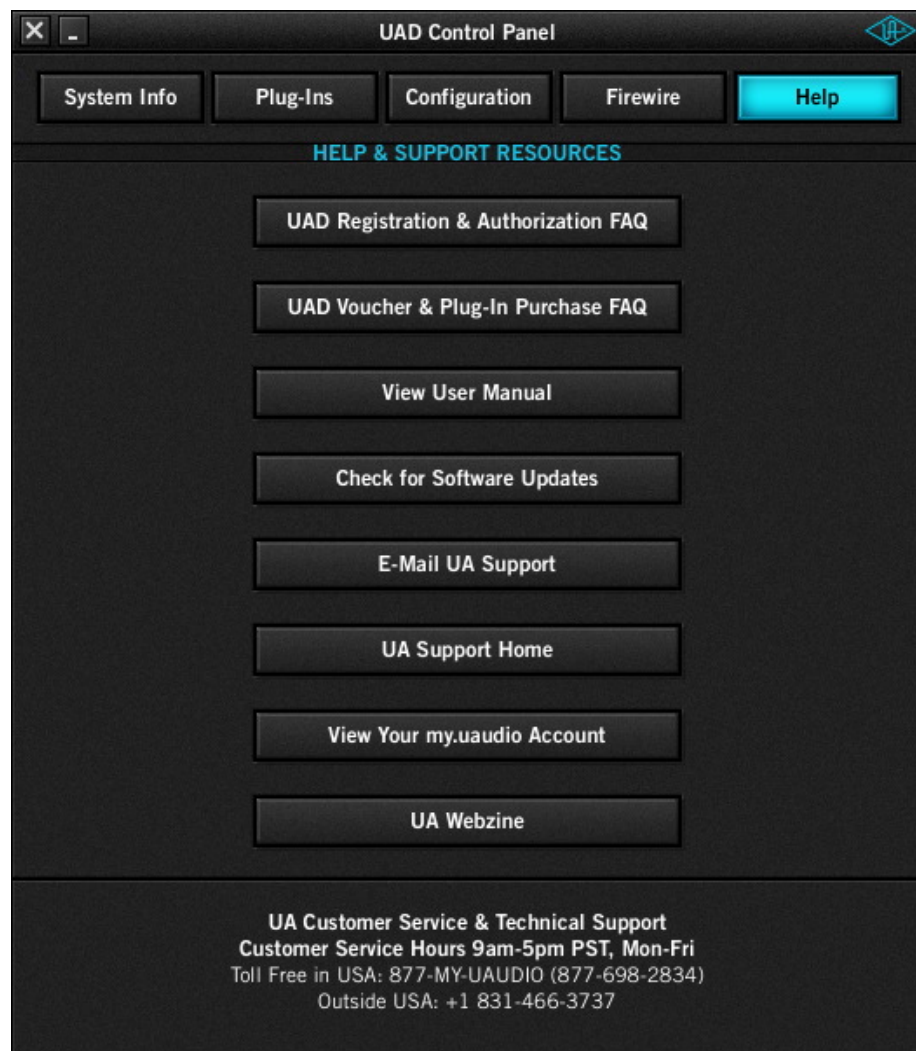


Figure 15. The UAD System Help & Support panel

CHAPTER 7

Using UAD Powered Plug-Ins

Overview

Once the UAD device(s) and Powered Plug-Ins have been properly installed, the UAD Powered Plug-Ins are accessed and used just like any host-based plug-in. All UAD Powered Plug-Ins can run concurrently with each other and with host-based plug-ins simultaneously, in any combination.

Most UAD Powered Plug-Ins support up to 32-bit, 192 kHz operation (exceptions: EMT 140, Precision Multiband, Nigel, Roland RE-201, Neve 1073SE/1081SE/33609, and Moog Multimode Filter cannot run at 176.4 kHz and above on UAD-1). Resolution is limited only by the resolution of the host application. Please note that Powered Plug-Ins running at 96 kHz use twice as much UAD DSP resources than those used at 48kHz, and so forth.

Launching a UAD Powered Plug-In

Each host application has its own particular methods for instantiating (launching) a plug-in. Consult the host application documentation for specific instructions on loading and using plug-ins with the application.

Cubase SX & Nuendo SX

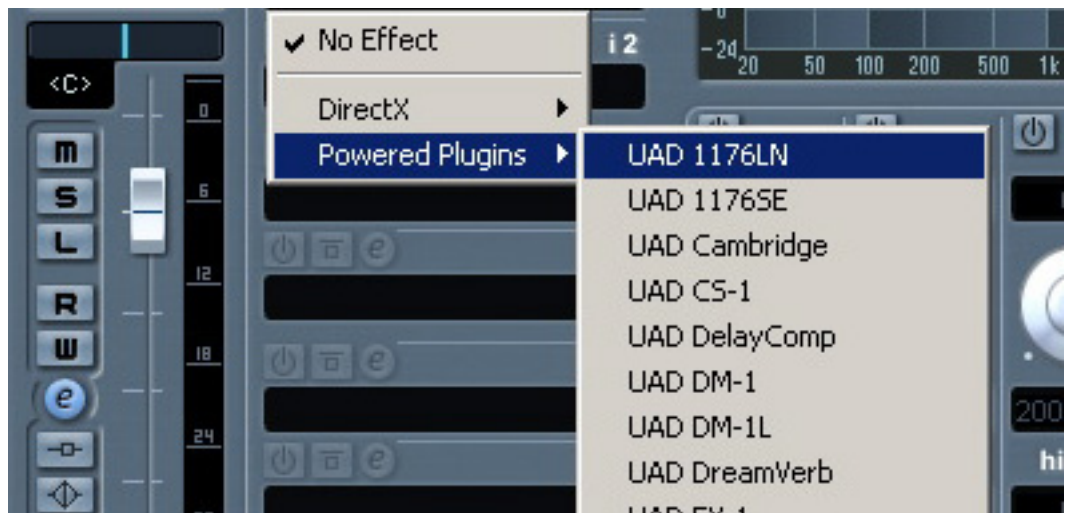


Figure 16. Launching a UAD Powered Plug-In in Steinberg Cubase and Nuendo

Logic Pro



Figure 17. Launching a UAD Powered Plug-In in Apple Logic Pro

The UAD Plug-In Window

A typical UAD Powered Plug-In window is shown in Figure 18. The graphical user interface (GUI) typically contains several control parameters, for modifying the behavior of the plug-in, and display elements such as meters, for visual feedback. The UAD Toolbar is also displayed.



Figure 18. A typical UAD plug-in window

Controls View

Some host applications have an alternate plug-in display mode feature called Controls View, Parameter Mode, or similar nomenclature. This mode typically displays the control parameters as a list with simple sliders, switches, and menus (the appearance is controlled by the host), which some users prefer. Consult the host documentation for how to display this view.



Figure 19. A UAD plug-in showing controls view

UAD Toolbar

Below every UAD Powered Plug-In (when displayed in normal GUI view) is the UAD Toolbar (Figure 20). The Toolbar has several useful features that make using UAD plug-ins more convenient.


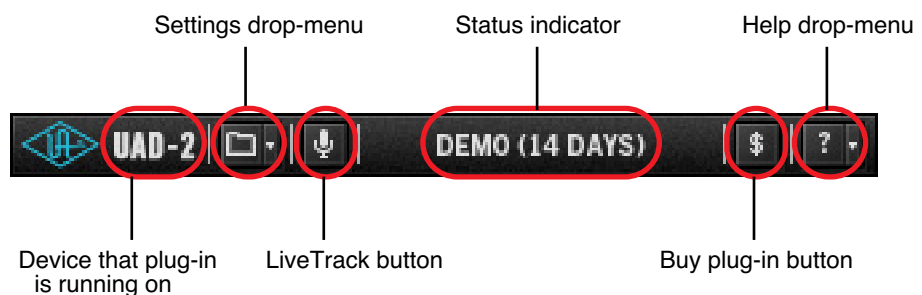


Figure 20. Anatomy of the UAD Toolbar

Device Indicator

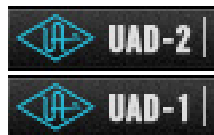

The text at the left of the Toolbar indicates which UAD device the plug-in is running on, either UAD-1 or UAD-2. If both devices are installed, you can specify which device the plug-in runs on (see [“Run On Menu”](#) on page 71).

Settings Menu



The Settings menu provides a convenient way to manage your UAD plug-in parameter settings. To select the functions, click the folder icon in the Toolbar, then select an action from the drop-menu that appears.

The Settings load/save feature supports presets but not banks. To load and save banks, use the host's bank management feature (if available).

Note: UAD plug-in settings are saved within a project session file by the host software, and settings are recalled when the project file is loaded. This occurs automatically without using the preset load/save feature.

Preset/Settings Compatibility

Load/save and copy/paste of parameter values between the same UAD plug-in type is supported. You can also load/save/copy/paste between "SE" and "full" plug-ins of the same type, for example between UAD Neve 33609 and UAD Neve 33609SE when you need to squeeze out a bit more DSP performance without losing your settings.

Preset Families

Functions in the menu are also supported between "family" based plug-ins. For example, preset load/save and settings copy/paste are all interchangeable within the UAD CS-1 family, which includes CS-1, DM-1, DM-1L, EX-1, and RS-1. The Nigel family can share presets and settings as well.

Load/Save Preset

When the Load Preset or Save Preset function is selected, the standard operating system load/save file dialogs are presented. Preset files can then be loaded (if the plug-in is the same type), or saved to any disk location.

Default Preset Locations

When the load/save functions are used, the OS load/save file dialogs default to the standard UAD preset location. Although UAD presets can be loaded from (and saved to) any disk location, using the default location is a convenient method to organize all your presets in one location.

When saving, the Presets folder is created if it doesn't already exist. A subfolder with the UAD plug-in name is also created, so presets for the same plug-in are all in the same folder. When loading presets, the open file dialog looks inside the subfolder for that plug-in.

Windows



The default preset location is inside the Presets folder, which is created within the folder specified during software installation. For example, if the default location was selected when running the installer, the location would be:

- C:\Program Files\Universal Audio\Powered Plugins\Presets

Note: This default location can be changed during installation; the new location will be remembered as the default.

Mac



On Mac OS X systems, the default preset location is:

- Startup Disk/Library/Application Support/Universal Audio/Presets

Copy/Paste Settings



Settings can be copied and pasted directly between UAD plug-ins (within the compatibility guidelines) without using the interim step of creating a preset file.

To copy/paste settings between UAD plug-ins, select Copy Settings from the drop-menu of the source plug-in, then select Paste Settings from the drop-menu of the destination plug-in.

Note: If the menu displays “Cannot Paste Settings” then settings were not copied first, or the paste destination is an incompatible plug-in.

LiveTrack Mode

Overview



LiveTrack Mode reduces latency on an active UAD-2 plug-in to the lowest possible amount. This feature is highly useful for monitoring processed audio when recording live performances.

Note: Due to differing architectures, LiveTrack mode is not available with UAD-1/UAD1e or UAD-2 Satellite.

Reduced latency in LiveTrack Mode is accomplished by circumventing the standard buffering processes. Normally, UAD-2 signal data is buffered at the audio interface I/O sample buffer size (such as 128, 512, or 1024 samples) which results in a processing delay.

In LiveTrack Mode, UAD-2 signal data is transferred and processed “immediately” instead of being buffered, resulting in reduced latency.

Increased Host Loading using LiveTrack

When LiveTrack is active, host CPU loading increases. The host load is directly proportional to the DSP load of the UAD plug-in(s) in LiveTrack mode, however host CPU is never used for Powered Plug-in processing.

Extra Latency using LiveTrack

When extra buffering is enabled (page 74) or when upsampled UAD plug-ins (page 108) are used with LiveTrack, latency is increased. Extra buffering adds 64 samples, and each upsampled plug-in using LiveTrack adds the value from Table 7 on page 110.

Note: For more detailed information about latency and buffers, see Chapter 9, “UAD Delay Compensation”.

LiveTrack Activation



To activate LiveTrack Mode, click the microphone icon in the UAD-2 Toolbar. The mode is active when the mic icon is red.

LiveTrack Mode can be activated simultaneously on multiple UAD-2 plug-ins. However, host system CPU loads will increase with each LiveTrack Mode instance.

Status Indicator

 
The Status indicator (see Figure 20 on page 87) displays information about the current state of the plug-in. Each state is described below.

Start Demo



When “START DEMO” is displayed, the 14-day trial period for the particular plug-in has never been activated. Clicking this button will start the demonstration period (you can also start the demo in the Control Panel’s Plug-In Status column (page 69)).

Demo Active



After starting the demo, and when the plug-in is still within the active 14-day trial period, the number of days remaining in demo mode is displayed here.

Important: The 14 day demo period can only be activated once, and cannot be stopped or restarted during this period! We recommend you do not activate demo mode until you have the opportunity to thoroughly check out its sound and functionality. See “Demo Mode” on page 51 for more information.

Disabled



When “DISABLED” is displayed in red, the plug-in will not process audio. This can occur in two situations; either the demo period has expired (click the Buy button!), or the UAD DSP is overloaded and there are not enough device resources to run the plug-in.

Status Blank

When no text is displayed in the Status area, the plug-in is fully authorized (licensed) and operating normally. In this state, the Buy button is not displayed.

Buy Button



When the plug-in is not fully licensed, the Buy button is displayed. If the computer is connected to the internet, clicking Buy links to the UA online store so you can purchase the license. See “[UA Online Store](#)” on [page 52](#) for purchasing details.

Help Menu



The Help drop-menu contains a couple handy shortcuts for your convenience. To select the shortcuts, click the “question” icon in the Toolbar, then a shortcut from the drop-menu that appears.

Select “Manual” to open the UADManual.pdf (the file you are reading now). Select “Web Info” to visit the product pages for the plug-in on our website (requires internet connection).

Adjusting Parameters

The parameter settings for each of the UAD Powered Plug-Ins can be adjusted to achieve a desired effect. Parameter values are easily modified by dragging sliders, rotating knobs, clicking switches and buttons, or by selecting values in a drop-menu. The functions of all parameters are detailed in later chapters.

The parameter adjustment style can be Circular, Relative Circular, or Linear. For more information, see “[User Interface Settings](#)” on [page 77](#).

Note: *To increase resolution when adjusting rotary controls in circular and relative circular modes, increase the radius of the mouse relative to the knob while dragging (i.e. move the mouse farther away from the knob while dragging).*

Text Entry

Parameter values can be modified directly with text entry. To enter a parameter value using text entry, single-click the parameter value text. The text value will highlight, indicating it is ready to receive a new value. Type in a new value, then press Return, Enter, or Tab, or click outside of the text box. Press Esc if you want to revert to the prior setting without entering the new value.

Values entered via text entry are rounded to the closest significant digit. If an entered value is out of range, it will be ignored.

To enter time values, the units must be specified. m = milliseconds, and s = seconds. Examples: 400 milliseconds = 0.400s or 400m; 1.5 seconds = 1.5s or 1500m.

Scroll Wheel

If your mouse has a scroll wheel, it can be used to adjust knob and slider controls if the host application supports this functionality. Place the mouse cursor over any knob or slider control to increment or decrement the parameter value with the scroll wheel.

Keyboard Control (Mac)



If you control-click a control it selects that control for keyboard control. This is useful for when you're in circular mode, and you want to fine-adjust a control. Normally, clicking on a control in this mode makes the value jump to where you clicked. Control-clicking will select the control so that you can use the keyboard to adjust it, without making its value jump first.

Shortcuts

Table 3 on page 93 lists the keyboard shortcuts that are available for modifying parameter values. When using keyboard shortcuts, the last edited control will be modified (or, on Mac, you can use control-click to select a different control as the target for keyboard shortcuts without changing the control's value).

Note: *Not all host applications support sending keystrokes to plug-ins.*

Table 3. Keyboard shortcuts

Keyboard Action:	Result:
Control + Click Parameter (Mac only)	Select parameter for keyboard control (without changing its value)
Shift + Drag	Fine Control
UpArrow RightArrow Shift + PageUp	Increment Fine
DownArrow LeftArrow Shift + PageDown	Decrement Fine
Shift + UpArrow Shift + RightArrow PageUp	Increment Coarse
Shift + DownArrow Shift + LeftArrow PageDown	Decrement Coarse
Control + Click parameter (Windows) Modifier* + Click parameter (Mac) (*Modifier key set in Configuration Window)	Toggle initial editor setting (the value when the editor window was last opened)
Control + Shift + Click parameter (Windows) Modifier* + Shift + Click parameter (Mac) (*Modifier key set in Configuration Window)	Revert to initial editor setting (the value when the editor window was last opened)

DSP Loading Information

The UAD devices feature either one (UAD-1 & UAD-2 Solo), two (UAD-2 Duo), or four (UAD-2 Quad) on-board DSP chips for processing Powered Plug-Ins.

In UAD-1-only systems, when there is more than one UAD-1 in the system, the UAD-1 device that has the lowest resource usage will receive the next Powered Plug-In load. Note that an individual UAD-1 plug-in cannot be split across two (or more) UAD-1 processors.

For example, let's say you have a two UAD-1 devices installed, the UAD Meter displays 90%, you load another UAD plug-in that requires 6% DSP, yet you get a "plug-in unable to load" message. This would occur if both devices are already at 95% (the meter shows the *total* available DSP, not the per-device DSP), so a 6% plug-in can't load.

Multi-DSP UAD-2 systems use significantly enhanced load balancing routines. UAD-2 plug-ins are always allocated as efficiently as possible, which is not necessarily on the DSP with the lowest resource usage.

UAD Devices with UAD-2 Satellite

Because Firewire has significantly less bandwidth than the PCIe protocol, if UAD-2 Satellite is running with UAD-2 PCIe card(s) in a multidevice system, UAD plug-ins will load on the UAD-2 card(s) before the Firewire device in order to maximize Firewire bandwidth. See “[FireWire Bandwidth vs. UAD DSP](#)” on [page 143](#) for more information UAD-2 Satellite loading.

More Loading Notes

- UAD DSP usage is proportional to the host application sample rate and system PCI/PCIe bus speed. Therefore, more plug-ins can be used simultaneously in a 44.1K session than in a 96K session, and likewise a higher speed bus will use less DSP load than a slower bus.
- Bypassing individual components will conserve DSP on some UAD plug-ins. For example, bypassing the compressor in the EX-1 when only the EQ is in use, and/or bypassing any of the unused bands of the EX-1 EQ will use less UAD DSP.
- The UAD DSP resources required by each successive UAD Powered Plug-In instance will slightly decrease.
- A chart showing expected plug-in counts can be found on our website: <http://www.uaudio.com/support/uad/charts.html>

Host CPU Loads

- The host system memory and CPU are never used for Powered Plug-Ins processing. However, there will always be a small amount of load on the host CPU induced by data transfers and user interface operations. This is unavoidable when using any DSP device.
- When LiveTrack Mode is active, host CPU load is increased. See “[LiveTrack Mode](#)” on [page 89](#) for details.

Automation

Every UAD Powered Plug-In parameter can be automated if this feature is supported by the host application. Each host application has its own particular methods for automation. Consult the host application documentation for specific instructions on using automation with the application.

UAD Powered Plug-Ins reduce their DSP load when bypassed or disabled, but not their memory load. This feature allows for automatable load balancing of DSP power, and keeps the track delay constant to avoid on/off clicks.

Note: *If there is not enough DSP available when automating, the plug-in may not turn on. When this occurs, “DISABLED” is displayed in the UAD Toolbar.*

External MIDI Control

UAD Powered Plug-In parameters can be controlled by an external MIDI controller, if this feature is supported by the host application. Each host application has its own particular methods for external MIDI control. Consult the host application documentation for specific instructions on using external MIDI control with the application.

analog ears | digital minds

CHAPTER 8

Tempo Sync

Overview

The time-based parameters of several UAD Powered Plug-Ins can be synchronized to the tempo of the host application using the Tempo Sync feature.

When Tempo Sync is activated, the time-based parameters that are available for synchronization are changed to note duration values, and will sync to the tempo of the host application using the displayed note value.



Figure 21. The Tempo Sync feature within UAD DM-1L

Note: Not all host applications support Tempo Sync. In such hosts, the tempo sync features will not function.

Tempo Sync Plug-Ins

Tempo Sync is supported in the UAD plug-ins listed in [Table 4](#).

Table 4. UAD Plug-Ins with Tempo Synchronization

UAD Roland RE-201	UAD Nigel
UAD CS-1	UAD Phasor
UAD DM-1	UAD ModFilter
UAD DM-1L	UAD TremModEcho
UAD RS-1	UAD Tremolo Fade
UAD Moog Filter	UAD Moog Filter SE
UAD Cooper Time Cube	UAD EP-34
UAD MXR Flanger/Doubler	

Sync Activation To activate Tempo Sync, click the “Sync” button within the plug-in interface. The Sync button “LED” will illuminate and the time parameters will change from a time-based display to a note value (see [Figure 21](#)).

Note: When Tempo Sync is activated, the plug-in will automatically switch the time or rate parameter(s) to the nearest available note value(s) given the range of the parameter in question and the current tempo.

Available Note Values

The note values that are available for selection are listed in [Table 5 on page 97](#). The values are listed in musical notation as a division of measures. For example 1/4 = one quarter note, 1/1 = one whole note, 4/1 = four whole notes, and so forth.

The available note values were chosen to allow syncing to tempo in odd time signatures as well the common 4/4 time signature.

LFO rate parameters have their note values listed from longest to shortest, since long note values correspond to slow LFO rates.

Table 5. Tempo Sync available note values

1/64D*	1/8	5/8	4/1	
1/64	5/32*	1/1T	5/1	
1/32T	1/4T	1/2D	6/1	D = Dotted
1/32	1/8D	1/1	8/1	
1/16T	1/4	5/4	9/1	T = Triplet
1/32D	5/16	1/1D	12/1	
1/16	1/2T	7/4	16/1	* = RE-201 only
1/8T	1/4D	2/1		
1/16D	1/2	3/1		

A quarter note is always a quarter note, independent of the time signature. In different time signatures a quarter note can represent different numbers of musical beats (e.g. 6/8) or different fractions of a bar (e.g. 5/4). For example, say the time signature is 6/8 and the delay time tempo sync note value is 1/4. If a sound occurs on beat one of the measure then its delay will occur on beat 3, which is 1/4 note (i.e. two 8th notes) later.

Note: The “beat” value in a sequencer’s BPM tempo setting always refers to a quarter note, independent of time signature.

Range Limits

Some parameters in Tempo Sync mode cannot access the entire note value range in Table 4, because their maximum values would always be out of range above certain note values (assuming a maximum usable tempo of 300 BPM; 250BPM for Roland RE-201). These parameter limits are:

- DM-1, RS-1 time – 300ms: maximum 1/4D
- DM-1L time – 2400ms: maximum 3/1
- Nigel Echo time – 1200ms: maximum 1/1D
- Nigel Tremolo fade in/onset – 4000ms: maximum 5/1
- Roland RE-201 Head 1 range: 5/32 – 1/64
- Roland RE-201 Head 2 range: 1/4 – 1/32
- Roland RE-201 Head 3 range: 1/2T – 1/32D

Entering Values

In addition to adjusting the parameter knob, the two following methods can be used for entering Tempo Sync values.

Arrow Keys

After clicking the parameter to select it, the arrow keys can be used to scroll through available note values.

Text Entry

Direct text entry is also available (see [“Text Entry” on page 92](#)). Any notation values can be entered (fraction or decimal), and the values are automatically converted to the nearest appropriate setting.

For example: If 3/4 or 6/8 is entered using text entry, 1/2D is displayed because a dotted half note equals three quarter notes, which is the duration of one measure in a time signature of 3/4 or 6/8. If 12/8 is entered with text entry, 1/1D is displayed because a dotted whole note equals six quarter notes, which is the duration of one measure in a time signature of 12/8 (or two measures in a time signature of 3/4 or 6/8).

This means you can create a tempo sync duration of one measure for any time signature by simply typing in the time signature (assuming there is a match in the beat table).

Similarly, if 1/12 is entered with text entry, 1/8T is displayed because an eighth note triplet is equivalent to one-twelfth of a measure (if in 4/4 time).

Out of range

When a parameter note value is out of range of the current tempo note value, the note value is displayed in parentheses on a red background (Figure 22).



Figure 22. Tempo Sync note value display

Modes with Tempo Sync

The UAD DM-1 and UAD DM-1L plug-ins (and DM-1 within CS-1) have a Mode menu (see “Mode Pop-up Menu” on page 195) that switches the plug-in operation between delay, chorus, and flanger mode. In these plug-ins, when the Mode is set to DualDelay and PingPong, the delay Time and modulation Rate parameters are simultaneously available for Tempo Sync.

However, when the plug-in is set to a Chorus or Flanger mode, only the Rate is available for Tempo Sync. This enables the more typical and musical chorus/flange effect by only syncing the modulation Rate to the tempo while the delay time remains constant.

In UAD Nigel (and the submodules within Nigel), there are several ModFilter modes that cannot be tempo-synchronized. Additionally, ModDelay does not sync to tempo when the LFO is set to one of the “Trem” types. In these cases, the Sync enable switch is greyed out and cannot be enabled.

Additionally, the UAD Nigel/TremFade Fade In and Onset parameters have a setting of “None” which allows you to set these parameters to the corresponding normal “None” value when in Tempo Sync mode. The Rate parameter has an “Off” setting which corresponds to a normal value of 0 Hz.

Roland RE-201 Sync



When the RE-201 is in Tempo Sync mode, note values can be imprecise due to the fixed tape head relationships. Values that are imprecise approximations (but are within the available delay time range) are displayed with a “+” or “-” symbol. The leading head in the current mode is accurately synced; the other values are based on the fixed tape head relationship. Note that when a parameter note value is out of range of the current tempo note value, the note value flashes (instead of in parentheses on a red background as in [Figure 22](#)).

CHAPTER 9

UAD Delay Compensation

Latency & Delay Compensation

When UAD Powered Plug-Ins are used, audio data to be processed by a Powered Plug-In is sent by the host application to the UAD device. The audio is then processed by the UAD device and sent back to the host application. This back-and-forth shuffling of audio data is called “buffering” and it produces a latency (delay) in the audio signal being processed.

Latency is inherent in digital audio systems and it can be detected in certain situations. Latency time in a DAW is usually determined by the sample rate and audio I/O interface device driver buffer size settings.

If this latency is not compensated, the processed audio will not be perfectly synchronized with unprocessed audio. Fortunately, most audio plug-in host applications automatically compensate for this latency when plug-ins are used on track inserts by simply turning on the “Plug-in Delay Compensation” (PDC) or similar Preferences setting. Many hosts even provide “Full Plug-in Delay Compensation” throughout the entire signal path, including sends, groups, and buses.

UAD latency and plug-in delay compensation is managed automatically by host applications that implement plug-in delay compensation. Additionally, latency can be reduced to undetectable levels in the UAD-2 by bypassing host buffering altogether (see “LiveTrack Mode” on page 89).

Host PDC Implementation

Table 6 on page 102 lists the current implementation of plug-in delay compensation in the officially supported UAD host applications. The displayed version number is the version in which PDC was implemented; higher versions also have PDC.

Important: *Delay compensation is fully automatic and requires no user intervention when UAD Powered Plug-Ins are used in hosts that support “Full plug-in Delay Compensation.”*

Table 6. Host Application plug-in delay compensation Implementations

Full PDC	Platform	Partial PDC	Platform
Steinberg Cubase SX 2	Win / Mac	Logic 5, 6, 7.0	Win / Mac
Steinberg Nuendo 2	Win / Mac		
Steinberg Wavelab 6	Windows	No PDC	
Sony Vegas 6	Windows	Digidesign Pro Tools LE	Win / Mac
Sony ACID Pro 5	Windows	Image-Line FL Studio	Windows
Sony Sound Forge 8	Windows	Celemony Melodyne	Win / Mac
Ableton Live 5	Win / Mac	Tascam GigaStudio 3	Windows
Cakewalk Sonar 5	Windows	MOTU Digital Performer 4.12	Mac
Magix Samplitude 7	Windows	BIAS Peak 4	Mac
Adobe Audition 2	Windows	Apple Waveburner	Mac
Apple Logic 7.1	Windows	Apple Garageband	Mac
MOTU Digital Performer 4.5	Mac	Apple Soundtrack	Mac
Pro Tools 9	Mac	Apple Final Cut Pro	Mac
Pro Tools TDM HD 6.7*	Mac		
BIAS Peak 5	Mac	*Limited PDC; maximum compensation is 4096 samples	
Spark XL 2.8	Mac		
Audiofile Wave Editor 1.3	Mac		

Important: The following sections about delay compensation apply only when using hosts that do NOT implement full plug-in delay compensation!

Depending on the host application implementation, the delay compensation feature may not provide automatic compensation when UAD Powered Plug-Ins are inserted on sends, groups, or buses. In this situation, the solution is to use the UAD-1 Delay Compensator plug-in (“UAD-1 Delay Compensator” on page 103).

UAD-1 Delay Compensator should not be used in situations where the host application provides delay compensation automatically, such as on track inserts. Some host applications provide fully automatic delay compensation throughout the entire signal path. UAD DelayComp is not needed at all in such hosts (see Table 6).

These explanations of delay compensation apply primarily to playback only. For more information about using UAD Powered Plug-Ins for live performance and during recording, see “Live Processing” on page 113.

For information about using UAD Powered Plug-Ins on audio tracks while simultaneously running MIDI tracks, see “Live Processing” on page 113.

Host Application Settings

For optimum results, the “Plug-in Delay Compensation” option setting should be enabled in the host application. This will provide automatic latency compensation when UAD plug-ins are used on track inserts (and sends/groups/buses if full compensation is supported), so the UAD Delay-Comp will not have to be used. This option is usually found in the audio or plug-in preferences window. The specific location of the setting for this option within some popular applications is as follows:

- Cubase 5.x: Options Menu>Audio Setup>System...
- Nuendo 1.x, Cubase SX 1.x: File Menu>Preferences>VST
- Cubase SX 2/3, Nuendo 2/3: Always on.
(Steinberg’s Constrain Delay Compensation feature can be used to disable delay compensation on individual plug-ins: Devices Menu>Plug-in Information)
- Emagic Logic Audio (PC): Options Menu>Preferences>Audio Preferences...
- Apple Logic Pro: Preferences>Audio...
- MOTU Digital Performer 4.5+: Setup menu>Configure Audio System>Configure Studio Settings...
- Cakewalk Sonar, Sony applications, Mackie Traktion: Automatic.
(No preference for enabling/disabling other than turning off or removing plug-ins that require delay compensation.)
- Samplitude: Options Menu>Project Properties>Mixer Setup...
(Project independent; session file must be open to configure)
- Ableton Live: Options>Delay Compensation
- Pro Tools: Options/Playback Engine>Delay Compensation Engine

UAD-1 Delay Compensator

The UAD-1 Delay Compensator (UAD DelayComp for short) is a simple UAD-1 plug-in which can be used to synchronize unprocessed tracks with those that are processed by UAD Powered Plug-Ins. It provides a mechanism of delay compensation for situations when the host application does not implement automatic plug-in latency compensation, such as on sends, groups, and buses (see [Table 6 on page 102](#)).

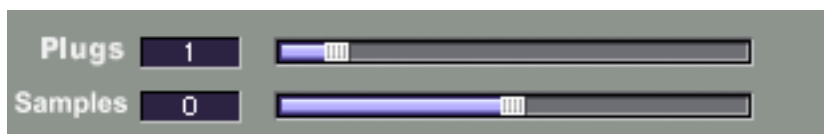


Figure 23. The UAD-1 Delay Compensator plug-in window

The UAD-1 Delay Compensator acts as a dummy UAD Powered Plug-In, automatically introducing the necessary amount of latency for tracks which are *NOT* processed by UAD Powered Plug-Ins. It requires no DSP from the UAD device and allows you specify the number of UAD Powered Plug-Ins instances you wish to compensate.

Note: *UAD DelayComp is available for UAD-1 only.*

When to use DelayComp

UAD DelayComp should be used whenever unprocessed audio tracks are played alongside audio tracks that are assigned to a send/group/bus that is using a UAD-1 plug-in(s). In this scenario, inserting a UAD DelayComp plug-in on the UNPROCESSED track(s) will automatically re-synchronize the audio.

Virtual Instruments

Cubase and Nuendo currently do not automatically compensate for latency on MIDI virtual instrument (VSTi) tracks. Therefore, UAD DelayComp should also be used on non-VSTi tracks when VSTi's are in use.

Note: *Check out our UAD DelayComp Examples on the UAD Powered Plug-Ins CD-ROM (or download them from our website) for "real-world" examples formatted for several popular host applications.*

Plugs Parameter

The DelayComp Plugs parameter value to be used on an unprocessed track or tracks is simply the number of UAD Powered Plug-Ins that are being used in sequence on the send, group, or bus.

For example, if three separate sends are used and each send has one instance of UAD plug-ins, the Delay Compensator Plugs value for the unprocessed tracks would be one. However, if one send/group/bus is used that has three instances of UAD Powered Plug-Ins stacked up, the Delay Compensator Plugs value for the dry tracks would be three.

Note: *The Delay Compensator "Plugs" value matches the total of UAD Powered Plug-Ins used serially (stacked one above another in series), NOT the total number of UAD Powered Plug-Ins used.*

Samples parameter

The Samples parameter shifts the audio with single-sample accuracy in either direction. It is provided mainly for compensation of the upsampled UAD plug-ins (see "[Compensating Upsampled Plug-Ins](#)" on page 108). However, it can be used anytime minute shifting of audio is desired. Audio can be shifted up to 128 samples in either direction.

The keyboard shortcuts PageUp/PageDown and Shift+Arrow automatically add shift the Samples value in 13-sample increments.

Grouping Tracks Requiring DelayComp

The UAD DelayComp plug-in is generally used on track inserts. However, when many tracks require delay compensation, instead of placing individual Delay Compensator plug-ins on each track you may find it easier to send the output of each unprocessed tracks to a bus or group. Then simply put one UAD-1 Delay Compensator on that bus or group.

DelayComp Examples

Important: *Delay compensation is fully automatic and requires no user intervention when UAD Powered Plug-Ins are used in hosts that support full plug-in delay compensation. See “Host PDC Implementation” on page 101.*

Insert

Situation: You have a song with bass, drums, and guitar. You want a room simulator on the guitar so you put an RS-1 on an insert of the guitar track. Result: All tracks are perfectly aligned.

Solution: None needed. Delay compensation on track inserts is handled automatically by most host applications.

Send

Situation: You have a song with bass, drums, guitar, and 2 vocal tracks. You want a fantastic reverb on the vocals so you send both vocal tracks to the UAD RealVerb Pro via an effect send. Result: The RealVerb Pro effect return plays late in relation to the dry tracks.

Solution: Send the output of all the tracks (including the dry vocal tracks but NOT the RealVerb Pro return) to a different send/group/bus and put one UAD DelayComp with a Plugs value of 1 on this send/group/bus that contains the dry tracks. Keep the Sample value at zero.

Group/Bus

Situation: You have a song with bass, drums, guitar, and 2 vocal tracks. You want a smoother vocal blend so you put both vocal tracks on a group/bus for compression with the infamous LA2A. Result: The vocal tracks play late in relation to the instrument tracks.

Solution: Send the output of the unprocessed instrument tracks (but not the vocal tracks or LA2A return) to a different group/bus and put one DelayComp with a Plugs value of 1 on this group/bus that contains the unprocessed tracks. Keep the Sample value at zero.

Note: *Check out our UAD DelayComp Examples on the UAD Powered Plug-Ins CD-ROM (or download them from our website) for “real-world” examples formatted for several popular host applications.*

UAD-1 Track Advance

Overview

The previous discussions on delay compensation (see “[Latency & Delay Compensation](#)” on page 101) apply mainly when using only audio tracks. When MIDI tracks are played simultaneously alongside audio tracks, a different (but related) synchronization issue can arise.

Let’s say you have a MIDI track and an audio track with a UAD-1 plug-in on the audio track insert. In this scenario, the host application will automatically compensate for latency and no use of the UAD DelayComp or UAD Track Advance is required.

However, if the audio track is sent to a send/group/bus and that send/group/bus has a UAD-1 plug-in on it, the audio track will be delayed in relation to the MIDI track because the host does not compensate for latency automatically on groups/buses (unless full-path latency compensation is implemented in the host). If the MIDI track was an audio track, you would use the UAD DelayComp on it to compensate for the latency. But you can’t put a UAD DelayComp on a MIDI track, so what to do?

Enter the UAD-1 Track Advance plug-in (TrackAdv for short). It operates just like the DelayComp plug-in, but backwards. Instead of delaying unprocessed tracks, it shifts them forward. It does this by reporting to the host application that a track has a UAD plug-in on it, so the host compensates for the latency. However, the track audio is not actually processed by the UAD so the net result is that the audio plays early.

Note: UAD TrackAdv is available for UAD-1 only.



Figure 24. The UAD Track Advance plug-in window

Note: The Track Advance plug-in only works in hosts that support partial (track inserts only) automatic delay compensation.

When to use TrackAdv

UAD TrackAdv should be used whenever MIDI tracks are played alongside audio tracks that are assigned to a send/group/bus that is using UAD-1 plug-in(s).

Important: UAD TrackAdv should not be used in host applications that provide full PDC throughout the entire signal path. TrackAdv or DelayComp is not needed at all in such hosts. See “Host PDC Implementation” on page 101.

How to use TrackAdv

UAD TrackAdv is designed to be used on audio track inserts of tracks that are assigned to a send/group/bus that has one or more UAD plug-ins applied. By first advancing the audio with TrackAdv on the track insert then processing the same track on a send/group/bus that has a UAD plug-in, the “net latency result” is zero and the audio will be perfectly aligned with the MIDI tracks.

Plugs parameter

The TrackAdv Plugs parameter value to be used on a track insert is simply the number of UAD plug-ins that are being used in sequence on the send, group, or bus that the track is assigned to.

For example, if three separate sends are used and each send return has one instance of UAD plug-ins, the TrackAdv plug-in value for the audio tracks insert would be one. However, if one send/group/bus is used that has three instances of UAD Powered Plug-Ins stacked up, the TrackAdv Plugs value for the tracks inserts would be three.

Note: The TrackAdv “Plugs” value on the track insert matches the total of UAD Powered Plug-Ins used serially (stacked one above another in series) on the send/group/bus that the track is assigned to, NOT the total number of UAD Powered Plug-Ins used.

Samples parameter

The Samples parameter shifts the audio with single-sample accuracy in either direction. It is provided mainly for compensation of the upsampled UAD plug-ins (“Compensating Upsampled Plug-Ins” on page 108). However, it can be used anytime minute shifting of audio is desired. Audio can be shifted up to 128 samples in either direction.

Note: The keyboard shortcuts PageUp/PageDown and Shift+Arrow automatically add the 13-sample Pultec value for your convenience.

TrackAdv Examples

Below are some examples of how to use the TrackAdv plug-in.

Insert

Situation: You have one track with MIDI and one track with audio. You put a UAD plug-in on the audio track. Result: All tracks are perfectly aligned.

Solution: None needed. Delay compensation on track inserts is handled automatically by most host applications.

Send

Situation: You have a song with drums and guitar on audio tracks, and a MIDI bass line. You want a cohesive room reverb on the audio tracks so you send them to the UAD RealVerb Pro via an effect send. Result: The RealVerb Pro effect return plays late in relation to the MIDI track.

Solution: Put a TrackAdv plug-in on the track insert of the audio tracks with a Plugs value of 1. If you had an 1176LN and a RealVerb Pro on the send return, the TrackAdv Plugs value would be 2. Keep the Sample value at zero.

Group/Bus

Situation: You have a song with 2 vocals on audio tracks, and a MIDI piano. You want a smoother vocal blend so you put both vocal tracks on a group/bus for compression with the infamous LA2A. Result: The vocal tracks play late in relation to the MIDI track.

Solution: Put a TrackAdv with a plug-in value of 1 on the track inserts of the vocal tracks. Keep the Sample value at zero.

Situation: You have a song with drums, guitar, and 2 separate vocals on audio tracks, and a MIDI bass line. You want a smoother vocal blend so you put both vocal tracks on a group/bus for compression with the 1176LN. Result: The vocal tracks play late in relation to the instrument tracks.

Solution: Put a TrackAdv with a plug-in value of 1 on the track inserts of the vocal tracks. Keep the Sample value at zero. Note that the DelayComp plug-in is not needed at all in this situation.

Compensating Upsampled Plug-Ins

Some UAD plug-ins use an internal sample rate of 192kHz to achieve their sonic quality. This upsampling results in a larger latency than other UAD plug-ins. Therefore, they require more compensation to remain perfectly synchronized with other tracks.

When using the DelayComp or TrackAdv plug-in to manually compensate for an upsampled UAD plug-in, the latency value from [Table 7 on page 110](#) must be entered as the “Samples” value in addition to the appropriate “Plugs” value for each instance of the upsampled plug-in. Note that the compensation value to use depends on the session sample rate.

Upsampled Compensation Notes

- Compensating for upsampled UAD plug-ins is not required if the host application supports full plug-in delay compensation throughout the signal path.

- Compensating for upsampled UAD plug-ins is not required when these plug-ins are used for program material on the output bus, where latency is not a consideration.
- If only one latency value is shown in [Table 7 on page 110](#), the value applies to both UAD-1 and UAD-2. N/A means that sample rate is not supported.
- UAD Pultec-Pro only requires one compensation per instance. For example, if using both MEQ-5 and EQP-1A within a single Pultec-Pro, only one instance compensation is required.
- Since the maximum Samples value in one DelayComp instance is 128, more than one DelayComp instance will be required (in series) if the compensation value from [Table 7 on page 110](#) exceeds 128.
- Latency compensation techniques for upsampled plug-ins apply to UAD Track Advance ([page 113](#)) as well.
- The latency in [Table 7 on page 110](#) is also produced when LiveTrack mode ([page 89](#)) is used with upsampled plug-ins.
- Upsampled plug-in latency cannot be displayed in the “[Plug-In Latency Section](#)” on [page 66](#) due to technical limitations.

Upsampling Values Table

Table 7 below lists the additional latency produced by upsampled UAD plug-ins. See the “Compensating Upsampled Plug-Ins” on page 108 for details.

Table 7. Upsampled UAD plug-ins with additional latencies

Upsampled Plug-In	Sample Rate (kHz)					
	44.1	48	88.2	96	176.4	192
Pultec EQ/Pultec-Pro	UAD-1: 13 UAD-2: 31	UAD-1: 13 UAD-2: 31	13	13	0	0
Precision Limiter	64	69	129	140	259	281
Neve 33609 FATSO Jr./Sr. Massive Passive Studer A800	UAD-1: 67 UAD-2: 55	UAD-1: 67 UAD-2: 55	UAD-1: 67 UAD-2: 55	UAD-1: 67 UAD-2: 55	UAD-1: 42 UAD-2: 88	UAD-1: 42 UAD-2: 88
Precision Maximizer	67	67	67	67	42	42
Helios Type 69 Harrison 32C Neve 1073, 1081, 31102 Precision EQ SSL E Channel Strip Trident A-Range	31	31	13	13	0	0
Precision Multiband	15,360	16,896	30,720	33,792	UAD-1: N/A UAD-2: 61,440	UAD-1: N/A UAD-2: 66,048
Moog Filter	55	55	55	55	N/A	N/A
Little Labs IBP	32	32	14	14	1	1
Lexicon 224	84	79	90	97	107	116
EMT 250* (see note)	75	11	85	24	107	50
Ampex ATR-102	2262	2455	4408	4798	8818	9598
MXR Flanger/Doubler	31	31	0	0	0	0

***EMT 250 Note** The EMT 250's anti-aliasing filters for its A/D and D/A conversion are not linear-phase filters; therefore our emulation does not have a latency that is the same at all frequencies. Thus, we cannot report to the delay compensation engines a delay that is correct for all frequencies. The value we report is good at low frequencies, but becomes off at high frequencies.

For example, when the plug-in is in Delay program mode and set with zero delay time and pre-delay values, the plug-in output will not be completely cancelled when mixing with flipped phase against an unprocessed track; high frequencies will leak through. However, the latency through the dry side of the wet/dry mix, and the latency when the plugin is bypassed via the EMT 250 Power switch (page 252), do not have this issue and will be fully compensated by the DAW.

Upsampled Compensation Examples

Group/Bus Example

Situation: You have a session at 44.1 kHz with bass, drums, guitar, and 2 vocal tracks. You want a fat, warm vocal blend so you put both vocal tracks on a group/bus and apply one instance of UAD Helios 69 to the vocal bus. Result: The vocal tracks play late in relation to the instrument tracks.

- Solution: Send the output of the unprocessed instrument tracks (but not the vocal tracks or the Pultec return) to a different group/bus, and put one DelayComp with a Plugs value of 1 and a Samples value of 31 (the 44.1 kHz value for Helios 69 from [Table 7](#)) on this group/bus that contains the dry non-vocal tracks. If you put 2 Helios 69's stacked in series on the vocal bus, the unprocessed bus DelayComp plug-in value would be 2, and the Samples value would be 62.

Compensating Precision Multiband

The Precision Multiband (PMB) has a significantly larger latency than other upsampled plug-ins because of the linear reconstruction of the filter bank.

Because manually compensating for Precision Multiband latency in hosts that don't support full plug-in delay compensation can be complicated, to avoid timing errors in these hosts we generally recommend using Precision Multiband only on outputs, so no manual compensation is required.

The PMB Formula

To manually compensate for Precision Multiband latency when used on groups/buses in hosts that don't support full PDC, use the following formula:

$$L1 \div L2 = \text{UAD DelayComp(s) value}$$

Where "L1" is the Precision Multiband latency from [Table 7](#), and "L2" is the latency from the UAD Control Panel System Information window (note that at least one UAD plug-in must be running in the host to obtain a valid value).

This formula will arrive at the DelayComp Plugs parameter value (whole number result), or Plugs plus Samples value (non-whole number result) needed for compensation. Since the maximum Plugs/Samples value in one DelayComp instance is 10/128, more than one DelayComp instance will be required (in series) if the Plugs/Samples value exceeds 10/128, which can happen at lower buffer sizes and/or higher sample rates.

PMB Group/Bus Examples

Situation: You have a session with bass, drums, piano, and 2 vocal tracks. The session is running at 44.1kHz and your I/O buffer is set to 512 samples. You want to tighten up the rhythm section so you put the bass, drum, and piano tracks on a group/bus and apply one instance of Precision Multiband to the rhythm section group/bus. Result: The rhythm section plays late in relation to the vocal tracks.

Solution: Send the output of the vocal tracks (but not the rhythm tracks or the Precision Multiband return) to a different group/bus. Then enter the numbers into the formula:

$$15,360 \div 1,024 = 15$$

Now put one DelayComp with a Plugs value of 10, and another DelayComp with a Plugs value of 5 on the group/bus that contains the vocal tracks. The latency of both groups/buses is now the same, so the playback timing is correctly aligned.

Here's another example with the same track setup, but with a session sample rate of 48kHz and an I/O buffer size of 1024 samples. Use the formula to arrive:

$$16,896 \div 2048 = 8.25$$

When a non-whole number results from the formula, the Samples parameter must be used in addition to the Plugs parameter. The Samples value to use is the fraction (in this case 0.25) times the UAD latency (from the UAD System Info window, in this case 2048). Therefore in this example, the total Samples value is 512. To finish the example:

Insert one DelayComp with a Plugs value of 8 and a Samples value of 128, and three more DelayComps with a Plugs value of 0 and a Samples value of 128 each on the group/bus that contains the vocal tracks. The four Samples values sum to 512 samples, which is 0.25 of one Plugs value ($2048 \times 0.25 = 512$). The latency of both groups/buses is now the same, so the playback timing is correctly aligned.

Note: *You can keep it simple: Use the Precision Multiband only on outputs (as its design was intended), or only in hosts that have full plug-in delay compensation!*

Live Processing

The previous discussions of delay compensation applies primarily to playback and mixing of existing tracks. During recording (tracking), the primary concern usually centers around getting the absolute lowest possible latency out of your hardware and software combination. The lower the latency is, the closer you can get to a realtime, “ears match the fingers” performance situation in the digital environment where some latency is unavoidable.

Realtime latency is displayed in the System Information panel ([page 65](#)) within the UAD Meter & Control Panel application.

UAD-1 Minimizing realtime latency is simply a matter of setting the audio I/O interface device driver buffer setting as low as possible before system overloads or diminished audio quality (such as distortion) occurs. The manufacturer of the sound output device in use may offer additional tips for optimizing latency on systems that use their hardware.

UAD-2 The UAD-2 has an advanced buffering architecture that delivers no additional latency when tracking by using LiveTrack Mode. See “[LiveTrack Mode](#)” on [page 89](#) for details.

CHAPTER 10

UAD ExpressCard Products

Overview

ExpressCard™ is a computer expansion slot typically used in notebook computers. Utilizing a 2.5Gbps differential serial link, ExpressCard conveniently leaves slower USB and Firewire connections free for dongles, Audio I/O, and hard drives, while operating at full PCI Express bandwidth.

Universal Audio has three ExpressCard products: UAD-2 SOLO/Laptop™, UAD-Xpander™, and UAD-Xtenda™. Once installed and configured, these products are functionally identical to their UAD card counterparts (see “[The UAD Hardware](#)” on page 38 for a UAD hardware overview).

UAD-2 SOLO/Laptop

UAD-2 SOLO/Laptop is a compact ExpressCard version of the UAD-2 Solo card. The UAD-2 SOLO/Laptop brings all the power of the UAD-2 to portable digital audio workstation users. The UAD-2 SOLO/Laptop enables large, professional mixes on notebook DAWs without the need for external cabling or a power supply. See “[UAD-2 SOLO/Laptop Details](#)” on page 116.

UAD-Xpander

The UAD-Xpander is the world's first ExpressCard audio DSP expansion system for Mac OS X and Windows Vista notebook computers. The UAD-Xpander has identical DSP power as the UAD-1 series of desktop products, and is fully compatible with all UAD-1 Powered Plug-Ins. See “[UAD-Xpander Details](#)” on page 121.

UAD-Xtenda

UAD-Xtenda is a PCIe-to-ExpressCard adapter card offered by Universal Audio. It enables UAD ExpressCard products to be used in a desktop computer that has PCIe expansion slots. The UAD-Xtenda provides a convenient way to switch the same UAD ExpressCard between desktop and notebook computers. See “[UAD-Xtenda](#)” on page 120.

Note: *UAD-Xpander and UAD-Xtenda are discontinued products.*

Documentation

UAD ExpressCard products are hardware systems designed for use with UAD Powered Plug-ins, which is the companion software package that includes the drivers, plug-ins, and software documentation.

Instructions in this chapter are specific to the UAD ExpressCard products only, and apply in addition to the other chapters. To get the most from your UAD ExpressCard products, please review the following additional information:

Important Information

Important user information is presented on a printed document within the UAD ExpressCard product retail package. It provides details that may not be included in this manual. Please review the information carefully.

Technical Updates

Updated UAD technical information is regularly posted to the UA website. Please visit the UAD support pages for the latest bulletins:

- <http://www.uaudio.com/support/uad/>

ExpressCard Videos

Our support website contains many helpful videos that explain how to install the hardware and software, register and authorize the product, obtain optional plug-ins, and more:

- <http://www.uaudio.com/support/uad/videos.html>

UAD-2 SOLO/Laptop Instructions

All instructions that apply specifically to UAD-2 SOLO/Laptop are in the “UAD-2 SOLO/Laptop Details” section, beginning on [page 116](#).

UAD-Xpander Instructions

Because UAD-Xpander is based on the prior UAD-1 platform (and is now a discontinued product), it has different instructions than UAD-2 SOLO/Laptop. For UAD-Xpander instructions, skip ahead to “UAD-Xpander Details” on [page 121](#)).

UAD-Xtenda Instructions

UAD-Xtenda information can be found on [page 120](#).

UAD-2 SOLO/Laptop Details

Important: The information in these sections apply to UAD-2 SOLO/Laptop ONLY. For UAD-Xpander instructions, see “UAD-Xpander Details” on page 121.

Features

- UAD-2 Solo in a self-contained, compact ExpressCard/34 package (can be used in ExpressCard/54 slots with included adapter)
- 44.1-192k DSP Audio Accelerator for notebook computers
- Ultra-fast (2.5Gbps) ExpressCard/34 interface
- No external cables or power supply necessary
- Same potent DSP power as UAD-2 Solo

Package Contents

The UAD-2 SOLO/Laptop package should contain the following items:

- UAD-2 SOLO/Laptop ExpressCard
- ExpressCard/34 to ExpressCard/54 Adapter
- UAD DSP Family Quickstart Guide DVD
- UAD Powered Plug-Ins software CD-ROM
- Important Information Sheet
- Universal Audio Full Line Catalog

SOLO/Laptop System Requirements

To use the UAD-2 SOLO/Laptop, your system must meet the minimum system requirements for UAD Powered Plug-Ins (see “System Requirements” on page 26) in addition to the UAD ExpressCard product-specific requirements.

UAD-2 SOLO/Laptop requires the following hardware and software:

- UAD Powered Plug-ins software v5.3.1 or higher (included)
- Available ExpressCard/34 or ExpressCard/54 expansion slot
- UAD version 5.5.0 or higher is recommended for best performance

Software Installation

Install Software First

Software installation for UAD ExpressCard products is the exact same procedure as those for UAD cards. Install the software before the hardware. Please refer to “UAD Software Installation” on page 28 for detailed procedures.

Software Updates

The CD-ROM in the retail package may not contain the latest UAD software. Please check our website for software updates:

- <http://www.uaudio.com/support/uad/downloads/>
- If the UAD software is already installed, the UAD Meter & Control Panel has a convenient button that links to the updates page (“Check for Updates” on page 65).


ExpressCard/34 to ExpressCard/54 Adapter

The UAD-2 SOLO/Laptop device uses the ExpressCard/34 form factor. When the device is installed in systems with the wider ExpressCard/54 slot, the enclosed ExpressCard/34 to ExpressCard/54 adapter should be used for the most reliable connection.

The adapter has two tabs on the bottom and one in the middle that snap into place on the SOLO/Laptop device.

To install the ExpressCard/34 to ExpressCard/54 Adapter:

1. Line up the bottom two tabs on the adapter with the corresponding holes on the SOLO/Laptop device. The wide end of the adapter aligns with the non-connector end of the ExpressCard.
2. Snap in the middle tab and the adapter will click into place. Done!

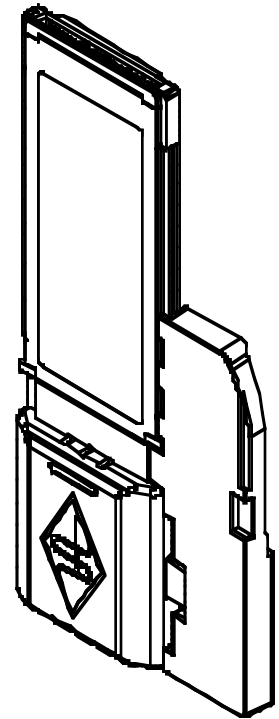

To remove the adapter, snap it off by holding the SOLO/Laptop device and gently bending the adapter down.

Inserting the SOLO/Laptop

Note: The UAD-2 SOLO/Laptop device may be inserted before or after the system is booted.

Important: Install the UAD software before inserting the device.

To install the UAD-2 SOLO/Laptop device:

1. Ensure that UAD v5.3.1 (or higher) software is already installed and that the system was restarted after software installation.
2. Ensure that all audio plug-in host software is quit.

3. Slide the UAD-2 SOLO/Laptop ExpressCard fully into the host computer's ExpressCard/34 expansion slot (or ExpressCard/54 expansion slot with the adapter) until it is firmly seated.
4. The LED on the SOLO/Laptop will initially flash red/green, indicating the hardware is powered by the computer but the UAD drivers are not yet loaded. Within a few seconds of inserting the device (or after startup is complete, if inserted when powered down), the LED should glow steady green, indicating the UAD drivers are loaded.

UAD-2 SOLO/Laptop is ready for use.

Removing the SOLO/Laptop

Important: *The proper sequence must be followed before removing the UAD-2 SOLO/Laptop device from the computer to avoid system instability and/or data loss.*

Note: *The UAD-2 SOLO/Laptop device may be removed when the system is active, as long as the steps below are followed.*

To remove the UAD-2 SOLO/Laptop device:

1. Save your sessions and quit all UAD host software (audio applications and the UAD Meter & Control Panel).
2. Remove the UAD ExpressCard from the expansion slot. Done!

Note: *It is not necessary to power down the device in software using the "Power Off Card" function (Mac Menu Bar) or "Safely Remove Hardware" (Windows Task Bar) before removing the device.*

SOLO/Laptop Authorization

After initial installation, the UAD-2 SOLO/Laptop should be registered and authorized (it can run in demo mode for 14 days without authorization). See ["Authorization" on page 32](#) for full explanation and procedures.

Existing UAD Licenses

If you already have UAD device(s) in a desktop system, you can share those UAD licenses with UAD-2 SOLO/Laptop. This option is presented during initial device registration; please consider your options carefully when registering.

Important SOLO/Laptop Notes

For maximum system stability and reduced possibility of data loss, please observe these operational requirements when operating UAD-2 SOLO/Laptop:

Sleep

Important: Close sessions and remove UAD-2 SOLO/Laptop before sleep!

Before putting the computer into system sleep/hibernate/standby mode, quit all UAD host software and remove the UAD-2 SOLO/Laptop device. Otherwise, unpredictable behavior and/or loss of session data could occur.

“Hot” Removal

Important: Do not remove UAD-2 SOLO/Laptop while UAD plug-ins are loaded!

Removing the device when it is active could cause the system to crash. Quit all UAD hosts before removing the device.

ExpressCard/54 adapter (Windows)



Use the ExpressCard/34 to ExpressCard/54 adapter with ExpressCard/54 slots

The UAD-2 SOLO/Laptop device uses the ExpressCard/34 form factor. When the device is installed in systems with the wider ExpressCard/54 slot, the enclosed ExpressCard/34 to ExpressCard/54 adapter should be used for the most reliable connection. See “[ExpressCard/34 to ExpressCard/54 Adapter](#)” on page 117 for details.

Red/Green LED (Windows)



Reinsert the UAD-2 SOLO/Laptop if the LED flashes red/green.

Occasionally the LED on the UAD-2 SOLO/Laptop device may flash red and green after booting is complete and/or when inserting the device after boot. If this occurs, simply remove then reinsert the device, which should cause the LED to remain steady green.

UAD–Xtenda

UAD–Xtenda is an optional package that enables UAD-2 SOLO/Laptop and UAD–Xpander to be used in a desktop computer that has PCIe expansion slots. The UAD–Xtenda provides a convenient way to switch the same UAD ExpressCard between desktop and notebook computers.

Note: *UAD-Xtenda is a discontinued product.*

Multicard Setup

If a computer system has both PCI/PCI-X and/or PCIe slots, the UAD–1, UAD–1e, and UAD ExpressCard products via UAD–Xtenda (or any combination thereof) can all be installed and used simultaneously as a multicard system (four cards maximum). The UAD drivers and plug-ins are the same for the UAD–1, UAD–1e, UAD-2 Solo/Duo/Quad, UAD-2 SOLO/Laptop, and UAD–Xpander. See [Chapter 5, “Using Multiple UAD Devices”](#) for detailed information.

Xtenda Package Contents

The UAD–Xtenda package should contain the following items:

- UAD–Xtenda PCIe expansion card
- UAD Link Cable

Xtenda Installation

Installing the UAD-Xtenda card uses the exact same procedures as UAD card installation. Please see [“UAD Hardware Installation” on page 30](#) for step-by-step procedures.

After the UAD software and UAD-Xtenda are installed, simply connect the UAD ExpressCard to UAD–Xtenda as if the expansion slot were in a notebook system. See the instructions for each product type in their respective sections ([“UAD-2 SOLO/Laptop Details” on page 116](#) and [“UAD–Xpander Details” on page 121](#)) for complete details.

UAD–Xpander Details

Important: The information in the remainder of this chapter apply to the discontinued UAD–Xpander ONLY. For UAD-2 SOLO/Laptop instructions, see “UAD-2 SOLO/Laptop Details” on page 116.

Features

- Noiseless, Fanless, Alumi-cool chassis design
- Ultra-fast (2.5Gbps) ExpressCard/34 interface (can be used in ExpressCard/54 slots)
- 44.1-192k DSP Audio Accelerator for notebook computers
- Same DSP power as UAD-1 & UAD-1e
- Optional UAD-Xtenda Kit: 3m cable & PCIe desktop ExpressCard adapter

Bundles

The UAD–Xpander comes in three bundles: Xpress, Xpert, and Xtreme. The difference is only in the bundled UAD vouchers. Each UAD–Xpander comes free with UA’s base set of 14 Mix Essential plug-ins, plus the UAD–Xpander Xpress includes a \$500 voucher, and the UAD–Xpander Xpert a \$1000 voucher which allows complete flexibility in choosing from UA’s premium collection of mixing and mastering plug-ins available 24/7 at my.uaudio.com. The UAD–Xpander Xtreme includes every Powered Plug-In up to and including those available in UAD software version 4.5.

Package Contents

The UAD–Xpander package should contain the following items:

- UAD–Xpander Carry Case
- UAD–Xpander Chassis
- UAD ExpressCard/34 (ExpressCard/54 compatible)
- 1-meter UAD Link Cable
- AC Power Supply Unit with international adapters
- UAD DSP Family Quickstart Guide DVD
- UAD Powered Plug-Ins software CD-ROM
- Important Information Sheet

Xpander System Requirements

To use the UAD–Xpander, your system must meet the minimum system requirements for UAD Powered Plug-Ins (see “System Requirements” on page 26) in addition to the UAD ExpressCard product-specific requirements.

UAD–Xpander requires the following hardware and software:

- UAD Powered Plug-ins software v4.7.1 or higher (included)
- Available ExpressCard/34 or ExpressCard/54 expansion slot
- Available PCI Express (PCIe) slot for each optional UAD–Xtenda card
- (Win) Windows notebooks are supported under Windows Vista only

**Software
Installation**

Install Software First

Software installation for UAD ExpressCard products is the exact same procedure as those for UAD cards. Install the software before the hardware. Please refer to “[UAD Software Installation](#)” on page 28 for detailed procedures.

Software Updates

The CD-ROM in the retail package may not contain the latest UAD software. Check our website for software updates:

- <http://www.uaudio.com/support/uad/downloads/>

If the UAD software is already installed, the UAD Meter & Control Panel has a convenient button that links to the updates page (“[Check for Updates](#)” on page 65).

**Xpander Install
Location**

When selecting a location to position the UAD–Xpander during installation and use, consider these points:

- The UAD–Xpander should be positioned on a secure, stable surface and not moved during operation. This will help prevent the disruption of signals from cables and/or connectors if they are accidentally bumped (or worse).
- For proper ventilation to prevent overheating, place the UAD–Xpander on a hard, flat surface and do not cover the unit. Allow air to circulate underneath the chassis.
- High levels of radio-frequency radiation could interfere with proper operation. If possible, avoid placement near unshielded monitors, radio transmitters, and similar equipment.

Note: Do not bend sharp angles into or otherwise kink the UAD link cable. The cable has a ferrite core and multiple conductors that could be damaged by improper handling.

UAD–Xpander Connections

This section describes how to set up the UAD–Xpander and connect it to the computer. Hardware installation is the same for all platforms.

Power Down!

Before connecting the UAD–Xpander to your computer, make sure both systems are completely powered down.

Important: *Because the Xpander drivers are loaded during startup, merely putting the system to hibernate or sleep is insufficient.*

To connect the UAD–Xpander components:

1. Power down the host computer, and make sure the UAD–Xpander power switch is in the Off position.
2. Connect one end of the UAD Link cable to the UAD ExpressCard (the connector is keyed so it cannot be incorrectly inserted).
3. Connect the other end of the UAD Link cable to the UAD–Xpander chassis (the connector is keyed so it cannot be incorrectly inserted).
4. Select a suitable location for the UAD–Xpander chassis (see “Xpander Install Location” on page 122).
5. Insert the UAD ExpressCard fully into the ExpressCard/34 or ExpressCard/54 expansion slot on the host computer until it is firmly seated.
6. Connect the AC end of the power supply unit to the AC wall socket. If you need a different AC connector for your country, remove the attached connector and replace it with one of the supplied alternate connectors.
7. Connect the DC end of the power supply to the UAD–Xpander chassis. You can loop the power cable through the hook on the chassis to reduce cable strain and the chance of accidental disconnection.

UAD–Xpander connections are now complete.

If the UAD Powered Plug-Ins software is already installed (“UAD Software Installation” on page 28), you are now ready to use the UAD–Xpander. Refer to “Using UAD–Xpander” on page 124.

Xpander Operation

After UAD Powered Plug-Ins software v4.7.1 (or higher) is installed and the UAD–Xpander is connected to the notebook computer or desktop computer via UAD–Xtenda, the system is ready to be powered up and used.

Note: All UAD–Xpander instructions apply regardless of whether the unit is attached to a notebook computer or a desktop computer via UAD–Xtenda.

Startup Sequence

For optimum results, specific steps must be followed when starting the UAD–Xpander and host computer system. Following this sequence ensures the Xpander electrical and UAD driver requirements are properly met.

UAD–Xpander Pre-Flight Check

1. Ensure UAD Powered Plug-Ins v4.7.1 (or higher) is already installed (see “UAD Software Installation” on page 28).
2. Ensure both the host computer and UAD–Xpander are powered off.
3. Ensure the UAD–Xpander is properly connected (see “UAD–Xpander Connections” on page 123).

UAD–Xpander Startup Sequence

1. Turn on the UAD–Xpander power switch on the rear of the unit. The UA logo glows red, indicating UAD–Xpander power is on but is not electrically connected to the computer.
2. Boot the computer. The UA logo glows blue, indicating an electrical connection has been established with the computer.
3. – (Windows) The UAD drivers are installed automatically by the New Hardware Wizard during the first boot following initial software installation.
– (Mac) The UAD drivers are loaded during boot.
4. You can confirm UAD driver communication is established by using the UAD Performance Meter. See “Using the UAD Performance Meter to Check Installation” in the QuickStart.pdf.

The UAD–Xpander startup sequence is complete.

Using UAD–Xpander

After the UAD–Xpander is installed and powered up properly with the computer system (see “Startup Sequence” on page 124), the UAD Powered Plug-Ins software is ready to be used. Refer to other chapters in this manual for software operating instructions.

Note: All UAD–Xpander operations (except for hardware setup and startup sequence) are identical to the UAD-1/UAD-1e/UAD-2 cards.

Power Indicator

When power is applied to the UAD–Xpander via the rear switch, the UA logo on the front panel glows. The color of the logo indicates the power state

- When UAD–Xpander power is on but there is no electrical connection to the computer (such as when the computer is off), the UA logo glows red.
- When power is on and there is an electrical connection to the computer, the UA logo glows blue (Figure 25).



Figure 25. UAD–Xpander Power Indicator

Note: The Power Indicator displays the state of the electrical connections only. It does not indicate when UAD driver communication is established (use the UAD Meter to check driver communication status).

“Hot” Swapping

Hot swapping is not supported. Hot swapping refers to the ability to disconnect the UAD ExpressCard while the notebook computer is active or sleeping, and reconnect it at a later time without rebooting.

Note: For proper functionality, you must reboot the computer with the Xpander connected every time the UAD ExpressCard has been removed.

Disconnect

The UAD-Xpander can be disconnected when the notebook computer is active or sleeping only if these two conditions are met:

1. No host applications (including UAD Meter & Control Panel) are running.
2. The ExpressCard is properly powered down by the operating system.

To disconnect the UAD-Xpander while the notebook is active:

1. Quit all UAD host applications, including the UAD Performance Meter. This ensures that all UAD Powered Plug-Ins are inactive.

2. Power down the ExpressCard, using the following method as defined by the operating system:
 - (Windows) In the Windows Task Bar, click the Safely Remove Hardware icon, and select “Safely remove Universal Audio UAD-1 DSP card” (Figure 26 on page 126).
 - (Mac) In the Menu Bar, click the ExpressCard status menu icon, and select “Power off Card” (Figure 27 on page 126)
3. Turn off the power switch on the back of the UAD-Xpander.
4. Remove the UAD ExpressCard from the expansion slot.

UAD-Xpander disconnection is complete.

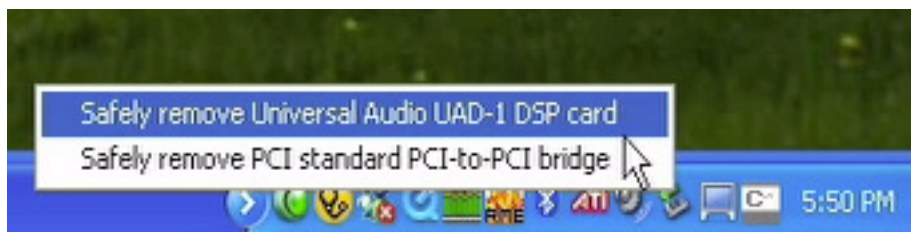


Figure 26. ExpressCard Power Down (Windows)

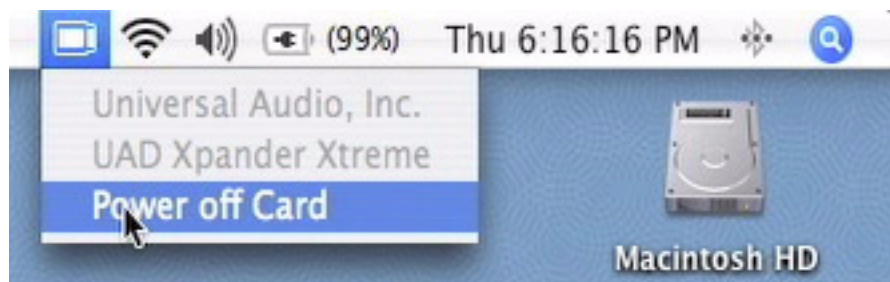


Figure 27. ExpressCard Power Down (Mac)

Reconnect

Once the UAD-Xpander has been disconnected for any reason, the computer must be rebooted with the UAD-Xpander connected. Follow the “Startup Sequence” on page 124 for reconnection instructions.

System Sleep

Windows



System Sleep (hibernate) is not supported when using UAD-Xpander under Windows. Sleep should be disabled while the UAD-Xpander is connected.

To disable Sleep in Windows:

1. In the Control Panel>Performance and Maintenance>Power Options>Power Scheme panel, set the Power Scheme to "Always On"
2. To disable Sleep in when notebook lid is closed: In Control Panel>Performance and Maintenance>Power Options: Click the "Change when the computer sleeps" option on the left side of the screen, then select "Never"

Mac



System Sleep is supported under Mac OS X. If the machine is put to sleep with the transport running, the UAD plug-ins will typically be disabled several seconds before audio stops. Therefore, a change in the audio may be noticed. Similarly, when the system is awakened, it may take several seconds for the UAD plug-ins to be reinitialized.

Important Xpander Notes

- Do not remove the UAD Link Cable or the UAD ExpressCard, or power down the UAD-Xpander while the Xpander is connected to the computer. Doing so could cause the computer to crash, unless the ExpressCard is properly powered down (see "Disconnect" on page 125).
- Disable system Sleep while the UAD-Xpander is connected under Windows (see "System Sleep" on page 126).
- The ExpressCard slot on notebook computers is non-latching, so it is possible to accidentally pull the device out.
- Select a suitable location for the unit. See "Xpander Install Location" on page 122.
- Do not bend sharp angles into or otherwise kink the UAD link cable. The cable has a ferrite core and multiple conductors that could be damaged by improper handling.
- The UAD ExpressCard/34 can be used in an ExpressCard/54 slot.
- The UAD-Xpander contains a UAD-1e card that looks similar to the UAD-1e model for desktop computers. However, the cards are not the same.

Important: Do not attempt to install a UAD-Xpander card into a computer slot, or put a UAD-1e into the Xpander chassis. Doing so will damage the cards and/or the computer logic board.

CHAPTER 11

UAD-2 Satellite

Overview

UAD Powered Plug-Ins via FireWire

UAD-2 Satellite is a UAD-2 DSP accelerator that connects to the host computer via FireWire 800 or FireWire 400 and hosts UAD-2 Powered Plug-Ins on Mac OS systems. Unlike previous UAD-2 PCIe products, UAD-2 Satellite is a completely external unit with power supply that does not require a PCI, PCIe or ExpressCard interface. This freedom from PCI/PCIe requirements enables the full UAD-2 Powered Plug-Ins library and DSP acceleration for select FireWire equipped Intel-based Apple computers – notably notebook and desktop-all-in-ones such as iMac, Mac Mini, and MacBook Pro.

Once installed and configured, UAD-2 Satellite is functionally similar to its UAD-2 PCIe card counterparts. The main difference between UAD-2 Satellite and UAD-2 PCIe cards is differing architectures (FireWire versus PCIe). See [“The UAD Hardware” on page 38](#) and [“UAD-2 Family” on page 39](#) for UAD hardware overviews.

Note: *“LiveTrack Mode” is unavailable when UAD-2 Satellite is connected.*

Duo and Quad Versions

UAD-2 Satellite is available in two versions: Duo and Quad. The only difference between these two models is the number of processors inside the device (and therefore the available DSP horsepower). The Duo or Quad designator is silk-screened on the bottom of the Satellite housing.

Documentation

UAD-2 Satellite is designed for use with UAD Powered Plug-ins, the companion software package that includes the drivers, plug-ins, and documentation.

Instructions in this chapter are specific to UAD-2 Satellite operations only, and apply in addition to the other chapters. To get the most from your UAD-2 Satellite, please review the following additional information:

Important Information

Important user information is presented on a printed document within the UAD-2 Satellite retail package. This sheet provides late-breaking details that are not included in this manual. Please review the information carefully.

Technical Updates

Updated technical information and the latest UAD software is regularly posted to the UA website. Please visit the UAD support pages for the latest UAD-2 Satellite support bulletins:

- <http://www.uaudio.com/support/uad/satellite-support>

UAD-2 Satellite Instructions

All instructions that apply specifically to UAD-2 Satellite are in the “UAD-2 Satellite Installation” section beginning on [page 130](#).

About FireWire

This chapter contains information about the FireWire protocol and how to use it with UAD-2 Satellite. For details, see “[FireWire Basics](#)” on [page 137](#), “[FireWire Bandwidth](#)” on [page 141](#), “[FireWire Bandwidth vs. UAD DSP](#)” on [page 143](#), and “[FireWire Bus Power](#)” on [page 144](#).

UAD-2 Satellite Details

Important: *The information in these sections apply to UAD-2 Satellite ONLY. For UAD-2 Solo/Laptop and UAD-Xpander instructions, see Chapter 10, “[UAD ExpressCard Products](#)”.*

Features

- UAD-2 Duo or Quad in an external housing chassis
- 44.1 – 192 kHz DSP Audio Accelerator for FireWire computers
- FireWire 800 & 400 interface
- Same potent DSP power as UAD-2 Duo or Quad
- Kensington Security Slot for anti-theft cables

Package Contents

The UAD-2 Satellite retail package should contain the following items:

- UAD-2 Satellite unit (Duo or Quad version)
- External power supply with international AC plug adapters
- FireWire 800 (9-pin) cable
- UAD Powered Plug-Ins software installer on CD-ROM
- Important Information Sheet
- Universal Audio Full Line Catalog

Satellite System Requirements

To use UAD-2 Satellite, your system must meet the minimum system requirements for UAD Powered Plug-Ins in addition to the UAD-2 Satellite product-specific requirements below.

UAD-2 Satellite requires the following hardware and software:

- Mac OS 10.6 Snow Leopard (Intel systems only)
- UAD Powered Plug-ins software v5.8.1 or higher (included)
- Available FireWire 800 or FireWire 400 interface port
- See “System Requirements” on page 26 for additional requirements

UAD-2 Satellite Installation

Install Software First

The software installation procedure for UAD-2 Satellite is the exact same procedure as those for UAD cards. Install the software before the hardware unless you are updating a previous installation. Refer to “UAD Software Installation” on page 28 for detailed procedures.

Software Updates

The CD-ROM in the retail package may not contain the latest UAD software. Please check our website for software updates:

- <http://www.uaudio.com/support/uad/downloads.html>

If the UAD software is already installed, the UAD Meter & Control Panel has a convenient button that links to the updates page (“Check for Updates” on page 65).

Satellite Install Location


When selecting a location to position UAD-2 Satellite during installation and use, consider these points:

- The unit should be positioned on a secure, stable surface and not moved during operation. This will help prevent the disruption of signals from cables and/or connectors if they are accidentally bumped (or worse).
- For proper ventilation to prevent overheating, place UAD-2 Satellite on a hard, flat surface and do not cover the unit. Allow air to circulate underneath the chassis. Multiple UAD-2 Satellite units may be safely stacked.
- High levels of radio-frequency radiation could interfere with proper operation. If possible, avoid placement near unshielded monitors, radio transmitters, and similar equipment.

Security Slot



The Kensington Security Slot is on the rear panel. This feature helps prevent theft when used with an optional locking cable such as the Kensington MicroSaver Security Cable. Refer to the instructions that come with the optional cable.

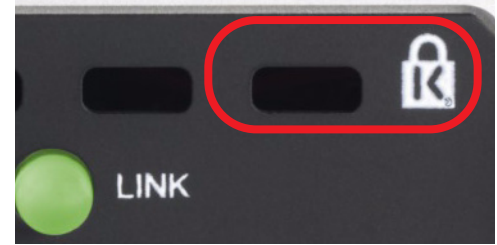

External Power Supply

UAD-2 Satellite includes an external international DC power supply with changeable AC connectors to match the AC socket in various countries (Figure 28).



Figure 28. UAD-2 Satellite external DC power supply and changeable AC connectors

To change the AC connector:

1. Press and hold the button on the AC connector marked "PUSH."
2. Rotate the AC prongs counter-clockwise to remove the connector.
3. Insert the desired connector and rotate clockwise until it snaps into place.

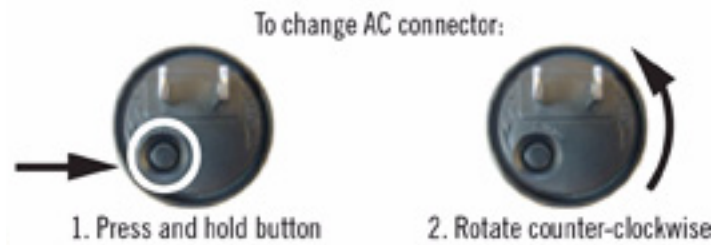


Figure 29. Changing the AC connector

Note: The removable connectors are keyed so they cannot be inserted incorrectly.

Connecting UAD-2 Satellite

Important: Install the UAD software before connecting UAD-2 Satellite (see “UAD Software Installation” on page 28). UAD-2 Satellite may be connected before or after the system is booted.

To connect UAD-2 Satellite:

1. Ensure that UAD v5.8.1 (or higher) software is already installed and that the system was restarted after software installation. See “UAD Software Installation” on page 28 for specific instructions.
2. Ensure that all UAD plug-in host software is quit.
3. Select a suitable location for the UAD-2 Satellite chassis (see “Satellite Install Location” on page 130).
4. Connect the AC end of the External Power Supply to an AC outlet. If you need a different AC connector for your country, see page 131.
5. Connect external power supply output cable to the DC input on the rear panel of the UAD-2 Satellite chassis.
6. Connect one end of the FireWire cable to the FireWire port on the host computer.
7. Connect the other end of the FireWire cable to the UAD-2 Satellite chassis.
8. Turn on UAD-2 Satellite using the power switch on the rear panel. The unit may be powered on before connecting without consequence.

UAD-2 Satellite connections are complete.

You are now ready to use UAD-2 Satellite. See “UAD-2 Satellite Operation” on page 133. Additional connection methods are detailed later in this chapter.

Disconnecting UAD-2 Satellite

Important: The proper sequence must be followed before disconnecting UAD-2 Satellite from the computer to avoid unpredictable behavior and/or data loss.

To disconnect UAD-2 Satellite:

1. Save your sessions and quit all UAD host software (audio applications and the UAD Meter & Control Panel).
2. Disconnect UAD-2 Satellite from the FireWire port. Done!

Note: UAD-2 Satellite may be disconnected when it and/or the computer is powered, as long as the steps above are followed.

UAD-2 Satellite Operation

After UAD Powered Plug-Ins software v5.8.1 (or higher) is installed ([page 28](#)) and UAD-2 Satellite is properly connected to the computer via FireWire ([page 130](#)), the system is ready for use. Refer to other chapters in this manual for software operating instructions.

All UAD-2 Satellite operations (except for hardware setup) are similar to the operation of other UAD-1/UAD-1e/UAD-2 devices. See “[Important UAD-2 Satellite Notes](#)” on [page 135](#) for exceptions specific to UAD-2 Satellite.

About FireWire

For general information about FireWire and how it is used with UAD-2 Satellite and other FireWire devices, see “[FireWire Basics](#)” on [page 137](#) and “[FireWire Bandwidth](#)” on [page 141](#).

It is important to note that available FireWire bandwidth is unrelated to UAD DSP loads. See “[FireWire Bandwidth vs. UAD DSP](#)” on [page 143](#) for details.

Power Indicator

When power is applied to UAD-2 Satellite via the rear switch, the UA logo on the front panel glows. This power indicator does not represent the state of the UAD drivers or their link to UAD-2 Satellite (the [Rear Panel LED](#) indicates the operational state).



Figure 30. UAD-2 Satellite Power Indicator

Rear Panel LED

UAD-2 Satellite has a UAD link indicator on the rear panel. This LED provides information about the operational state of the device and its drivers. For more details, see “[UAD-2 LED](#)” on [page 36](#).



Figure 31. UAD-2 LED on Satellite rear panel

UAD-2 Satellite Authorization

After initial setup and before first use, UAD-2 Satellite should be registered and authorized (it can run in demo mode for 14 days without authorization). See “[Authorization](#)” on [page 32](#) for full explanation and procedures.

Existing UAD Licenses

If you already have another UAD device, you can share those UAD licenses with UAD-2 Satellite. This option is presented during initial device registration; please consider your options carefully when registering.

Hot Plugging

Hot plugging refers to the ability to disconnect UAD-2 Satellite while the host computer is active or sleeping, and reconnect it at a later time without rebooting. UAD-2 supports hot plugging (hot plugging is part of the FireWire specification).

As long as the UAD drivers are properly installed, if UAD-2 Satellite is hot-plugged into an active FireWire bus, the UAD drivers will load automatically and be ready for use.

However, disconnecting UAD-2 Satellite when UAD plug-ins are loaded could cause session data loss and/or unpredictable behavior. Quit all UAD hosts and the UAD Meter & Control Panel before disconnecting the device.

Disconnect

UAD-2 Satellite can be disconnected when it and/or the host computer is active or sleeping as long as no UAD host applications (including UAD Meter & Control Panel) are running.

Important: *Do not disconnect UAD-2 Satellite while UAD plug-ins are loaded.*

Reconnect

UAD-2 Satellite can be reconnected when the device and/or the host computer is powered up. The device will be detected and the UAD drivers will automatically load upon connection.

Adding a device to the active bus

Connecting or disconnecting a FireWire device to an active FireWire bus causes a “bus reset” (as specified by the FireWire protocol). When a FireWire bus reset occurs, all active UAD plug-ins are disabled. The session must be reloaded to reactivate UAD plug-ins.

Note: *Connect all FireWire devices to the bus before activating UAD plug-ins.*

System Sleep

System sleep while UAD-2 Satellite is active is not supported. Before sleeping the system, quit all plug-in host applications (including the UAD Meter & Control Panel) and disconnect UAD-2 Satellite. After wake, UAD-2 Satellite may be reconnected.

Important: *Quit all hosts and disconnect UAD-2 Satellite before system sleep.*

Important UAD-2 Satellite Notes

For maximum system stability and reduced possibility of data loss, please observe these requirements when operating UAD-2 Satellite:

- Due to differing architectures, [“LiveTrack Mode” on page 89](#) is unavailable when UAD-2 Satellite is connected. LiveTrack Mode is also unavailable with UAD-2 PCIe cards when UAD-2 Satellite is connected to the same system as the card(s).
- UAD-2 Satellite has a minimum hardware buffer requirement of 256 samples. The hardware buffer setting for the host and audio interface can be adjusted when UAD-2 Satellite is connected, and the UAD-2 Satellite drivers dynamically adjust to allow for the lower buffer setting while still maintaining UAD-2 Satellite's minimum buffer requirement of 256 samples.

Note: *For the lowest latency while tracking, disable any plug-ins currently running on UAD-2 Satellite from the input tracks and the monitoring and/or master output paths.*

- All devices on the FireWire bus share the available data bandwidth of the bus, including external hard drives and audio interfaces as well as UAD plug-ins. The amount of UAD DSP that is available for UAD plug-in processing can exceed the available FireWire bandwidth. For these reasons, the value of the [“UAD Bandwidth Allocation” on page 80](#) setting is critical. See [“FireWire Bandwidth” on page 141](#) and [“FireWire Bandwidth vs. UAD DSP” on page 143](#) for more details.
- All three FireWire ports on UAD-2 Satellite may be used concurrently as a FireWire hub, however FireWire bus power is not supplied to downstream devices. See [“Bus Power” on page 137](#) for details.
- See [“Mixing FireWire Speeds” on page 140](#) for important information about using FireWire 800 and FireWire 400 devices on the same bus.

- Although “Hot Plugging” on page 134 is supported, disconnecting UAD-2 Satellite when UAD plug-ins are running could cause unpredictable behavior. Quit all UAD hosts and the UAD Meter & Control Panel before disconnecting or powering down UAD-2 Satellite.

Important: Do not disconnect UAD-2 Satellite while UAD plug-ins are loaded.

- Once the host software is quit, you may connect or disconnect the unit even if the host computer and/or UAD-2 Satellite is powered on (see “Hot Plugging” on page 134).
- Connect all FireWire devices to the bus before activating UAD plug-ins. See “Adding a device to the active bus” on page 134 for details.
- As of UAD v5.9.0 (and higher), two UAD-2 Satellites can be used together in a single system. See Chapter 5, “Using Multiple UAD Devices” for additional information.
- Select a suitable location for the unit. See “Satellite Install Location” on page 130. UAD-2 Satellite units may be safely stacked.
- Do not bend sharp angles into or otherwise kink the FireWire cable. The cable can be damaged by improper handling.
- UAD-2 Satellite contains no user serviceable parts. Opening the unit will void the warranty.

Power Supply

- UAD-2 Satellite requires external DC power. It ships with an external power supply adapter that converts AC power to 12VDC @ 1.25A. AC input into the adapter can be 100V–240V at 50–60 Hz; several AC plug adapters are provided for international use.
- The power supply DC output connector is ring=ground/negative and tip=hot/positive. UAD-2 Satellite is diode-protected; the unit will not be damaged if the wrong DC polarity (or AC input) is connected.
- The Quad Satellite draws a maximum of 7 watts; the Duo draws 4 watts.
- The acceptable range of power input for UAD-2 Satellite is 9VDC – 15VDC @ 1A (9 Watts minimum).

Note: UAD-2 Satellite requires the external power supply. It cannot be powered by the FireWire bus, nor can it supply bus power to other FireWire devices.

FireWire Basics

FireWire (also known as “IEEE 1394” and “i.Link”) is a high-speed serial data interconnection protocol that is used to transfer digital information between devices. FireWire is commonly used to interconnect computer systems to hard drives, audio interfaces, and digital camcorders.

A complete discussion of FireWire is beyond the scope of this manual, but some of the main points and how they apply to UAD-2 Satellite are covered below.

FireWire vs. USB FireWire is considered superior to USB for audio purposes because it does not rely on the host processor to manage low-level data housekeeping (among other reasons). FireWire typically outperforms USB at the same rated speeds.

FireWire Bus FireWire devices are connected to a FireWire “bus” which is comprised of all devices in the serial data stream (Figure 33, Figure 34, and Figure 35 on page 139). The FireWire specification supports up to 63 peripherals per FireWire bus.

Many FireWire devices and host computers have more than one FireWire connector, but these connectors almost always attach to the same FireWire bus (most computers do not have more than one FireWire bus). It is possible to add another FireWire bus to a computer, typically by adding a PCIe-to-FireWire or ExpressCard-to-FireWire adapter card.

Bus Power Some FireWire devices can be “bus powered” which means the device derives its operating electricity from the FireWire bus itself without a power supply of its own. See “FireWire Bus Power” on page 144 for details.

Important: UAD-2 Satellite cannot be bus powered and it does not supply bus power from its FireWire ports to other devices.

FireWire 400 vs. 800 The most common FireWire devices are available in two speeds: FireWire 400 (IEEE 1394a), which supports transfer speeds up to 400 megabits per second, and FireWire 800 (IEEE 1394b), which supports up to 800 megabits per second. It’s usually possible to determine the speed of the FireWire device by the type of FireWire connector it uses (see “FireWire Connectors” below).

Note: UAD-2 Satellite is a FireWire 800 device. See “Mixing FireWire Speeds” on page 140 for more information about using FW800 and FW400 devices on the same FireWire bus.

FireWire Connectors

FireWire 400 and FireWire 800 devices use different connectors (Figure 32 below). The connectors are not interchangeable; this helps to differentiate between the two device speeds.

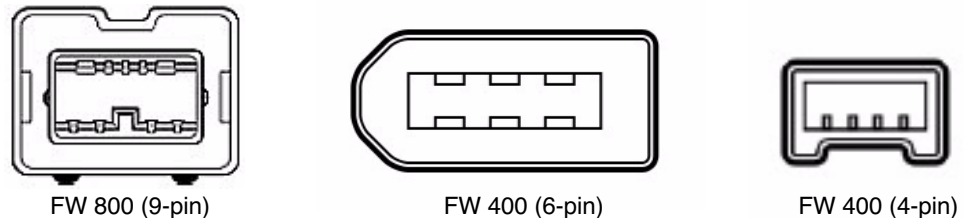


Figure 32. FireWire 800 and FireWire 400 (6-pin and 4-pin) connector types

FireWire 400 connectors

FireWire 400 devices typically have two types of connector: 4-pin and 6-pin. The small 4-pin FireWire 400 connector is common on digital camcorders and Windows notebook computers. The 6-pin connector is more common with hard drives and audio devices; the two extra pins allow the device to be bus powered (UAD-2 Satellite cannot be powered by the FireWire bus).

UAD-2 Satellite has one 6-pin FireWire 400 port.

FireWire 800 connector

FireWire 800 devices use a 9-pin connector. 9-pin to 6-pin FireWire adapter cables are available to connect FireWire 800 devices to a FireWire 400 bus (with reduced bandwidth). See “Mixing FireWire Speeds” on page 140 for more information.

UAD-2 Satellite has two FireWire 800 ports to facilitate easy daisy-chaining with other FireWire devices.

Hubs and Chains

FireWire devices can be connected to a central hub, such as a computer with multiple FireWire ports or a peripheral FireWire hub (Figure 33 on page 139), connected to each other serially in a “daisy-chain” (Figure 34 on page 139), or any combination of the two in a “tree-chain” topology (Figure 35 on page 139). Note the diagrams in these figures are only examples; devices may be connected in any order (see “Mixing FireWire Speeds” on page 140 for exceptions).

Additionally, UAD-2 Satellite can function as a FireWire hub, by using the unused ports on the unit to connect other FireWire devices as in [Figure 36](#). Note that UAD-2 Satellite does not supply FireWire bus power to downstream devices; see [“FireWire Bus Power”](#) on [page 144](#) for details.

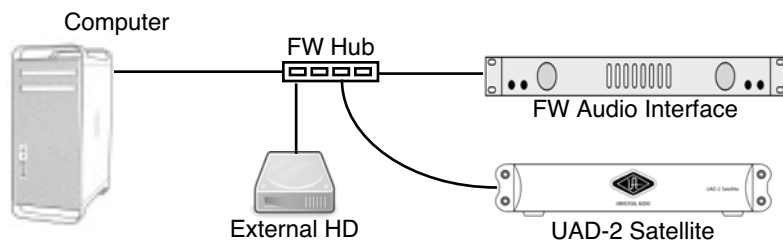


Figure 33. FireWire bus connections via a hub

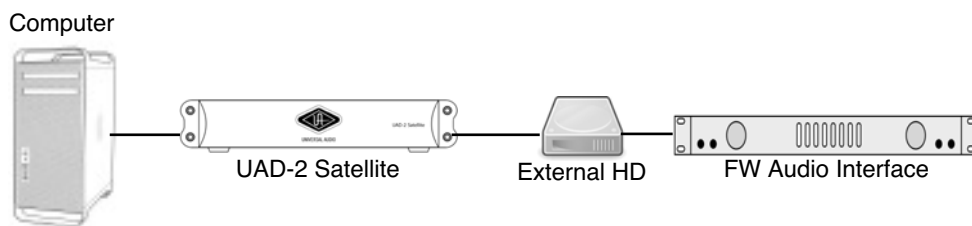


Figure 34. FireWire bus connection via daisy chain

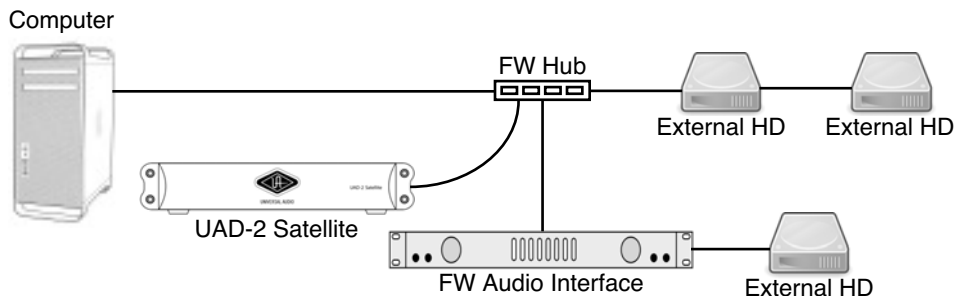


Figure 35. FireWire bus connections via hub and daisy chain

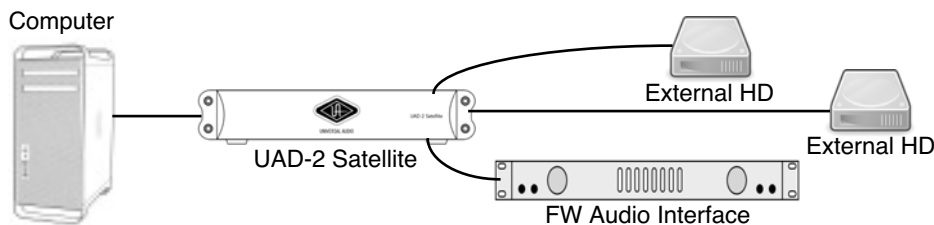


Figure 36. FireWire bus connections using UAD-2 Satellite as a hub

Connections

The ability to connect and disconnect FireWire devices while power is applied (or not) is part of the FireWire specification. Since UAD-2 Satellite is IEEE 1394 compliant, the device may be “hot plugged” while powered up.

Note: See “Hot Plugging” on page 134 for detailed information.

Mixing FireWire Speeds

Although FireWire 400 and FireWire 800 devices can be connected to the same FireWire bus via a hub or daisy-chain, special precautions must be observed to maximize bandwidth in these situations.

Note: See Figure 39 on page 141 for the recommended configuration when mixing FireWire bus speeds.

FireWire 800 devices on a FireWire 400 bus

FireWire 800 devices are backwards-compatible and can be connected to a FireWire 400 bus (using a 6-pin to 9-pin FireWire cable or adapter). However in this scenario (Figure 37) any 800 megabit-capable device on the bus (including UAD-2 Satellite) will operate at a maximum of 400 megabits because FireWire bandwidth cannot exceed the maximum bus speed of the host computer.

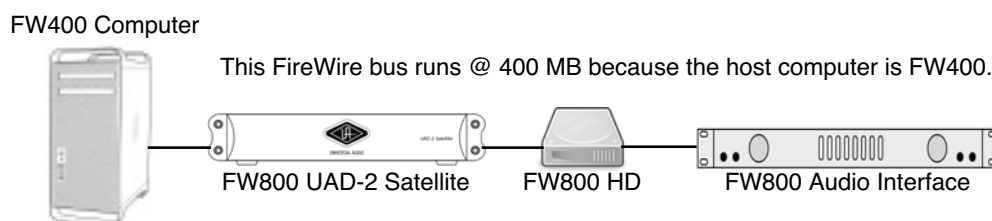


Figure 37. FireWire 400 bus – all devices run at 400 megabits

FireWire 400 devices on a FireWire 800 bus

FireWire 400 devices can be connected to a FireWire 800 bus (using a 6-pin to 9-pin FireWire cable or adapter). In Figure 38, all FireWire devices will operate at a maximum of 400 megabits because the FW400 device is located after the FW800 device in the daisy chain (the FW400 device forces all subsequent devices to run at FW400 speeds).

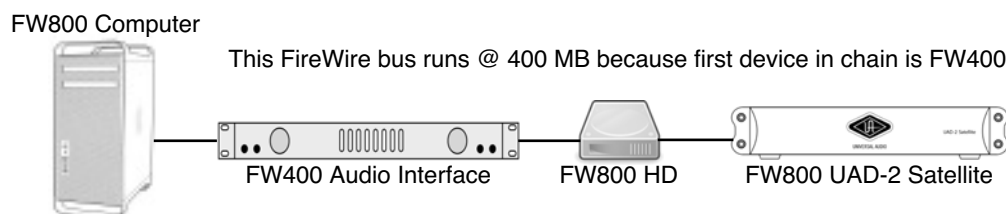


Figure 38. FireWire 800 bus – all devices run at 400 megabits (not a recommended setup)

It is possible to configure a FireWire bus to run at both FW400 and FW800 speeds simultaneously if the host computer bus is FW800, supporting maximum throughput for a mix of FW400+FW800 devices. This is accomplished by putting any/all FW400 devices AFTER any/all FW800 devices in a daisy chain (see [Figure 39 on page 141](#)).

Daisy-chain FireWire 400 devices AFTER the FireWire 800 devices in a FW800 bus

If (and only if) FireWire 400 devices are attached to a FireWire 800 bus after the end of all FireWire 800 devices in a daisy-chain ([Figure 39](#)), the FireWire 800 devices will operate at 800 megabits while the FireWire 400 device operates at 400 megabits.

Important: This is the recommended configuration when UAD-2 Satellite is sharing a FireWire 800 bus with FireWire 400 devices.

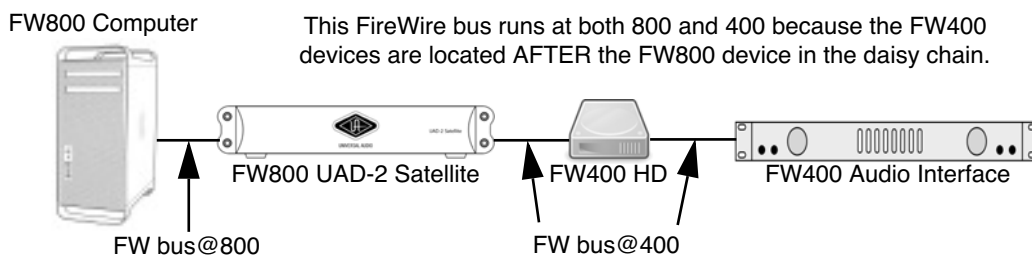


Figure 39. FireWire 800 bus – devices running at 800 and 400 megabits (recommended setup)

FireWire Bandwidth

All devices on a FireWire bus must share the available data bandwidth of the bus, including hard drives and audio interfaces as well as UAD-2 Satellite. If there is not enough FireWire bandwidth to handle all the data traffic on the bus, performance issues (such as audio clicks/pops/dropouts or UAD overloads) could occur.

Bandwidth Gauge

When UAD-2 Satellite is connected, the UAD Meter window displays the FireWire Bandwidth gauge ([Figure 40 on page 142](#)), showing the amount of FireWire bandwidth being used by UAD-2 Satellite and other FireWire devices on the bus. [Figure 41 on page 142](#) details all of the elements in the gauge.

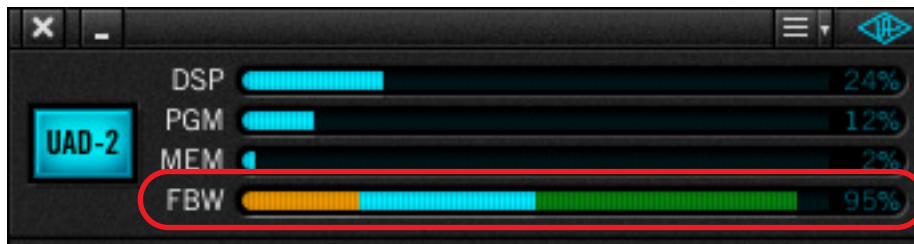


Figure 40. The UAD Meter with UAD-2 Satellite

Important: FireWire bandwidth is unrelated to UAD DSP loads. See “FireWire Bandwidth vs. UAD DSP” on page 143 for details.

Sharing Bandwidth

If UAD-2 Satellite is the only device on the FireWire bus, UAD processing traffic can use the entire bandwidth of the bus. However, if other FireWire devices are on the bus, the amount of bandwidth used for UAD traffic must be reduced so those devices will have enough bandwidth for their processes as well.

Bandwidth Control

The FireWire bandwidth used for UAD traffic is controlled using the “UAD Bandwidth Allocation” on page 80. By using the “FireWire Gauge” on page 83, it’s easy to determine how much bandwidth is being used by the non-UAD devices, so appropriate choices can be made when setting the UAD Bandwidth Allocation.

These settings, and all other UAD-2 Satellite FireWire parameters (Figure 42 on page 143), are made in the UAD Meter & Control Panel. See “FireWire Panel” on page 78 for detailed descriptions of the FireWire controls.

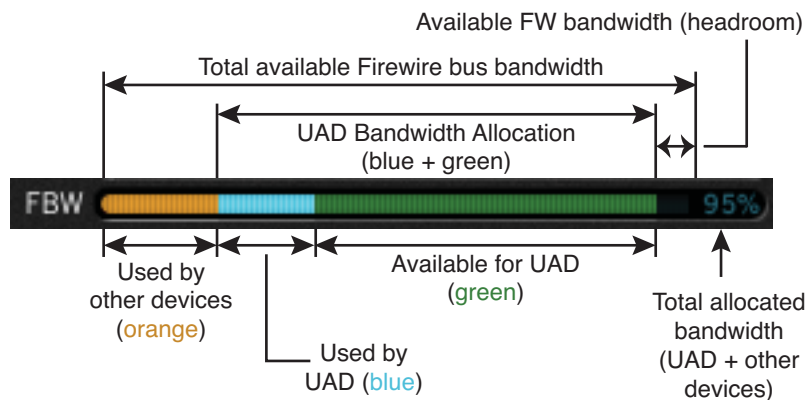


Figure 41. Elements of the UAD FireWire Gauge

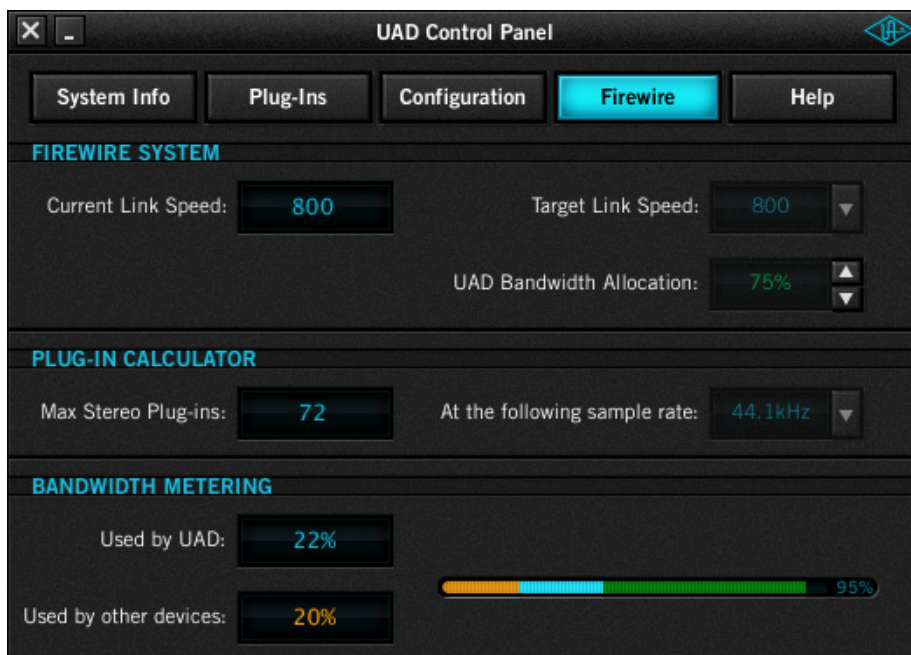


Figure 42. The UAD FireWire panel (control descriptions are in Chapter 6)

FireWire Bandwidth vs. UAD DSP

The amount of FireWire bandwidth used by UAD-2 Satellite depends on the number (the quantity) of UAD plug-ins that are loaded on the device; the amount of DSP used by a UAD plug-in (the quality) does not affect FireWire bandwidth at all.

In other words, each UAD-2 Satellite plug-in instance uses a fixed amount of FireWire bandwidth, regardless of how much DSP a given UAD plug-in uses. It is the audio data stream to and from a UAD plug-in that uses the FireWire bandwidth. The amount of digital signal processing occurring on the UAD device itself is unrelated to the FireWire traffic in and out of the device.

Therefore, with UAD-2 Satellite it is possible to run out of available FireWire bandwidth before running out of available UAD DSP. For example, running ten lightweight plug-ins such as UAD EX-1 on UAD-2 Satellite will use the same FireWire bandwidth as running ten DSP-intensive plug-ins such as UAD Moog Multi-Mode Filter. However, the EX-1s will use a fraction of the UAD DSP that UAD Moog Filter would require for the same instance count.

See “[DSP Loading Information](#)” on page 93 for additional notes.

Important: *FireWire bandwidth is unrelated to UAD DSP loads.*

FireWire vs. PCIe

The maximum possible data throughput even at FireWire 800 speeds is only a fraction of what is possible with PCIe. Therefore, if very high UAD plug-in counts are required, UAD-2 PCIe cards provide an alternate solution.

FireWire Bus Power

Some FireWire devices can be “bus powered” which means the device derives its operating electricity from the FireWire bus itself without a power supply of its own. This operating current, when available, is supplied via two conductors in FireWire cables and ports (4-pin FireWire 400 cables and ports cannot supply bus power).

Although bus powering is part of the FireWire specification, it is an optional feature. Not all FireWire devices are designed to use it nor are all devices designed to supply it, for a variety of reasons. For example, a device may require more current than can be supplied by bus power, or a device may be unable to provide enough current to its FireWire ports.

UAD-2 Satellite cannot be bus powered nor does it supply bus power from its FireWire ports to other devices. Therefore, when using a FireWire device that requires bus power, it is important to connect that device directly to a FireWire port that supplies bus power (such as the computer itself or an externally powered FireWire repeater that is specifically designed to supply bus power).

Important: *UAD-2 Satellite cannot be bus powered and it does not supply bus power from its FireWire ports to other devices.*

Bus Powering Example

Figure 43 on page 145 illustrates the proper method of connecting bus powered FireWire devices with UAD-2 Satellite. An externally powered FireWire repeater or hub that is specifically designed to provide bus power to connected devices must be used in this case.

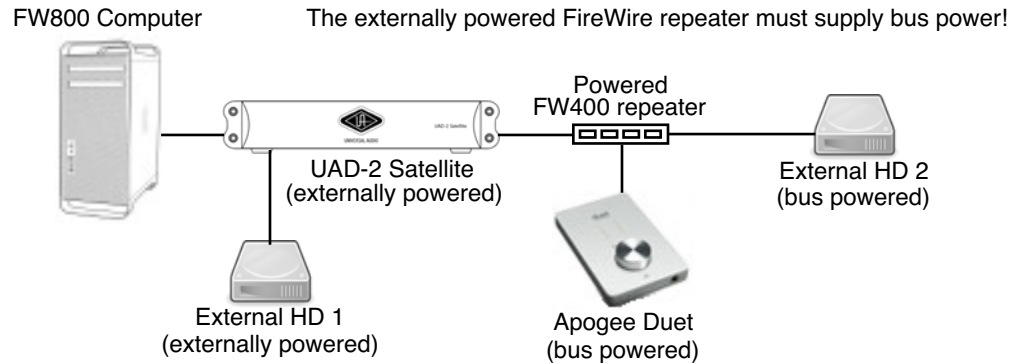


Figure 43. Proper connection of bus powered FireWire devices

This example uses the Apogee Duet, a popular audio interface with one FireWire port that can only be bus powered. If the Duet was connected directly to UAD-2 Satellite, it would not have power to operate because UAD-2 Satellite does not supply bus power. Therefore, the Duet must be connected to the externally powered FireWire repeater or hub that provides bus powering.

In this example, UAD-2 Satellite operates at FireWire 800 speeds because it is connected directly to a FireWire 800 computer. If external HD #1 is a FireWire 800 device and it is connected a FireWire 800 port on UAD-2 Satellite, it will also operate at FireWire 800 speeds. Because the FireWire repeater is a FireWire 400 device, all devices connected to it operate at FireWire 400 speeds. See ["Mixing FireWire Speeds" on page 140](#) for more about connecting devices of various speeds on the same FireWire bus.

Caveats

The quality and compatibility of powered FireWire repeaters and hubs can vary widely. Just because a FireWire repeater or hub is externally powered doesn't necessarily mean it provides bus power or that it is compatible with UAD-2 Satellite and other FireWire devices. For the latest compatibility information and specific repeater and hub recommendations, please visit the UAD-2 Satellite support page:

- <http://www.uaudio.com/support/uad/satellite-support>

Ampex ATR-102

Mastering Tape Recorder

It's Not a Record Until it's Mastered on an Ampex® Tape Machine.

For more than three decades, the two-channel Ampex ATR-102 Mastering Tape Recorder has turned music recordings into records. With its cohesive sound, punch, and ability to provide subtle-to-deep tape saturation and color, the Ampex ATR-102 is a fixture in major recording and mastering studios — and is considered by many engineers to be the best-sounding tape machine for final mixdown. The perfect complement to the workhorse [Studer A800](#) Multichannel Tape Recorder, the Ampex ATR-102 plug-in can provide the final “analog polish” on your music, turning songs into albums.

Impeccably modeled in the renowned UAD engineering tradition — and incorporating presets from noted Ampex ATR-102 users Chuck Ainlay, Richard Dodd, Buddy Miller, Mike Poole, and more — the Ampex ATR-102 Mastering Tape Recorder plug-in emulation for UAD-2 faithfully replicates the unique dynamics, frequency response, and saturation characteristics of the original hardware. Scrutinized and fully authenticated by the Ampex Corporation, the sound of the Ampex ATR-102 plug-in for UAD-2 is virtually indistinguishable from its analog cousin.

History

Introduced in 1976, the Ampex ATR-102 2-Track Tape Recorder was a near-instant hit, thanks to its revolutionary servo-controlled reel motors and capstan, which provided smooth, continuous tape tension and handling. The large capstan, and absence of pinch rollers, provided nearly non-existent speed drift and ultra-low flutter. The clever ATR-102 design allowed users to change out heads and guides in mere minutes, with a 1” head being a very popular “hot-rod” modification in more recent years — especially when running at 15 IPS (inches per second). The ATR’s role in modern recording history is so prevalent, that it would be easier to list classic albums that *weren’t* mixed down on this machine, rather than to try to list all those that were.

All visual and aural references to the Ampex Product and all use of Ampex’s trademarks are being made with written permission from Ampex Corporation. Any references to third party tape formulations are used solely for identification and do not imply any endorsement by, or affiliation with, any tape manufacturer.

Ampex ATR-102 Screenshots



Figure 44. The UAD Ampex ATR-102 plug-in window



Figure 45. Ampex ATR-102 secondary controls in "open" mode

Operational Overview

Famous Tape Sound	The UAD Ampex ATR-102 provides all of the original unit's desirable analog sweetness. Like magnetic tape, users can dial in a clean sound, or just the right amount of harmonic saturation.
Mixdown Tape Deck	The primary purpose of the UAD Ampex ATR-102 is to obtain tape mixdown sonics within the DAW environment. To obtain the classic tape mixdown sound, instantiate the plug-in as the last insert on the output bus, after other processing is applied (or possibly as the second-to-last insert, before a brick-wall processor such as the Precision Limiter). Of course, creative "non-standard" results can be obtained by placing the Ampex ATR-102 in any channel insert or on busses in a send/return configuration.
Multiple Tape Types	The UAD Ampex ATR-102 models seven popular magnetic tape formulas. Each type has its own subtle sonic variation, distortion onset, and tape compression characteristics. The tape types that can be selected depend on the active tape speed and head type; all tape types are not available for all tape speeds and head types. Lower fidelity types are included to facilitate more signal coloration options.
Multiple Tape Heads	The original hardware machine was manufactured with an interchangeable head block system which enabled the system to be quickly converted to use either 1/4" or 1/2" tape stock by simply swapping out the heads and recalibrating the electronics. As track width increases, subtle improvements to stability, fidelity, and noise become apparent. A popular custom aftermarket tape head is available which enables the use of 1" tape stock, enabling even higher fidelity with its greater track widths. All three tape head widths are accurately modeled and selectable in the UAD Ampex ATR-102.
Multiple Tape Speeds	All four tape speeds in the original hardware are modeled in the UAD Ampex ATR-102. Speeds of 3.75, 7.5, 15, and 30 inches per second (IPS) are available. Each speed provides distinct frequency shift, head bump, and distortion characteristics. Higher speeds have higher fidelity; 3.75 IPS has a distinctively "lo fi" character.
Multiple Calibration Levels	Tape machines can be setup with different calibration levels, which entails setting unity gain from input through output based on the magnetic flux (amount of magnetic field) of a given tape formulation. Different calibration levels provide different tape response characteristics for a given level into the recorder. Four selectable calibration levels are available in the UAD Ampex ATR-102.

Ancillary Noises	Tape recorders have inherent signal noises that are a by-product of the electro-mechanical nature of the machine. While “undesirable” tape system noise is historically considered a negative and was an attribute that pushed the technical envelope for better machine design and tape formulas (and ultimately, “noiseless” digital recorders), noise is still an ever-present characteristic of the sound of using tape and tape machines.
	The UAD Ampex ATR-102 models the hum, hiss, wow, flutter, and crosstalk characteristics of the original hardware. These noise components can be individually disabled, adjusted, and/or exaggerated for creative purposes (even though the servo-controlled, direct-drive capstan tape transport of the original hardware provides excellent wow and flutter specifications).
Modeled Transformer	The original hardware was manufactured with isolation transformers, which can color the signal. A common modification to the hardware tape machine eliminates the transformers from the signal path to produce a (subjectively) “cleaner” sound. UAD Ampex ATR-102 simulates the behavior of the transformers in the hardware circuit, and can be optionally disabled in the plug-in, providing both sonic options.
Tape Delay	A popular application of multi-head tape recorders is to employ them for slapback tape echo effects. If the machine is running in record mode but the recorded signal is monitored from the repro head (as opposed to the sync head), the physical space between these two heads results in a short delay between the signal sent to the recorder and the monitored signal. When these signals are combined with mixer routings, the classic slapback echo is manifest. The UAD Ampex ATR-102 implements the ability to reproduce this classic effect with a simple set of controls, and expands the capabilities by extending the available delay times beyond what is possible in the physical realm.
Automatic Calibration	The ability of a magnetic tape recorder, which has inherently non-linear response characteristics, to accurately reproduce an audio signal with a minimum of noise and distortion requires precise adjustments to the system electronics. The calibration settings are based on the current tape speed, formulation, emphasis EQ, and tape width. The hardware must be meticulously re-adjusted each time a different tape, speed, emphasis EQ, or head width is used (and for system wear and drift, even if these variables are not changed). UAD Ampex ATR-102 has an automatic calibration feature that tunes all calibration electronics with a single button.

Low Level Tuning	Even though automatic calibration is available, the individual controls that adjust calibration are exposed for sonic manipulation. Playback EQ, record (tape) EQ, and record bias can easily be altered for manual calibration and/or creative purposes.
Manual Calibration Tools	UAD Ampex ATR-102 includes the full suite of tools required to manually calibrate the recorder. Manual calibration tools are provided so expert users can calibrate the system to their preferred methods for obtaining desired results. The manual calibration tools consist of a tone generator (with multiple test tones and levels), a distortion meter with digital readouts, and a full suite of Magnetic Reference Laboratory (MRL) alignment tapes, which are used to calibrate playback electronics.
Mono/Stereo Operation	<p>While the UAD Ampex ATR-102 is a true stereo processor designed primarily for use in stereo-in/stereo-out configurations, it will also operate in mono-in/stereo-out and mono-in/mono-out modes.</p> <p>When used in a mono-in/stereo-out configuration, the mono input signal is sent to both channels of the processor, which can then be adjusted independently. When used in a mono-in/mono-out configuration, adjusting any left or right control will change both the left and right controls (the left/right controls are always linked in mono mode).</p>
Quick Setup	Set up the plug-in by first adjusting Tape Speed , Tape Type (tape formulation), and Emphasis EQ , or simply select a factory preset. Note that as you lower the tape speed, the tape “sound” becomes more audible. Once this basic setup is made, adjust the L/R Record (gain) levels, for more or less tape/circuit coloration/saturation.
Artist Presets	UAD Ampex ATR-102 includes artist presets from prominent ATR-102 users. Some of the artist presets are in the internal factory bank and are accessed via the host application’s preset menu. Additional artist presets are copied to disk by the UAD installer. The additional presets can be loaded using the Settings menu in the UAD Toolbar (see “Settings Menu” on page 88).
Primary & Secondary Controls	The graphical interface panel has two modes; open and closed. In closed mode, the primary controls (those that are typically most used) are available on the main panel interface and the tape reels are visible. Additional (typically less used) controls are available on the secondary panel in open mode. The secondary controls panel (Figure 47 on page 159) is accessed by clicking the OPEN button beneath the AMPEX label.

Primary Controls

Meters

The two Meters display signal levels of the plug-in for the left and right channels. Meter ballistics of the original hardware are modeled. The Meters can be switched to display input or output levels in peak or VU modes.



Figure 46. One side of the Ampex ATR-102 “penthouse” showing meter and I/O controls

The plug-in operates at an internal level of -12 dBFS. Therefore a digital signal with a level of -12 dB below full scale digital (0 dBFS) at the plug-in input will equate to 0 dB on the Meters when **Reproduce** is in its calibrated position, which is marked with the “red arrow sticker.”

When **Path Select** is set to **Thru**, the Meters indicate signal levels at the input of the plug-in prior to processing.

Note: *Although there are separate left/right Meter controls for VU/Peak and Input/Output, these controls are permanently linked and cannot be switched individually for the left and right channels.*

Input/Output

These switches change the Meter to display levels at the input or output of the plug-in. Input metering is a UAD-only feature which is unavailable in the original hardware.

Input

When in Input mode, the Meter reflects the signal level after the **Record** (input) gain when **Path Select** is set to **Sync** or **Repro**. In Input mode when **Path Select** is set to **Thru**, the Meter reflects the pre-processed (raw input) signal level.

Output

When in Output mode, the meter reflects the signal level at the output of the plug-in, which is just after the **Reproduce** (output) gain.

Peak/VU

This switch is used to change Meter behavior between Peak or VU modes.

Clip LED

The left and right channels each have a Clip LED, just above the Meter. The Clip LED is not in the original hardware; it is a UAD-only feature.



The Clip LED illuminates only when the machine's audio electronics clip. The Clip LED is not affected by the recorded tape signal, even if the tape is overloaded and distorting.

Reproduce



Reproduce adjusts the signal level coming off the virtual tape before the signal is sent to the [Meters](#). There are two Reproduce controls, one each for the left and right channels. The left/right Reproduce controls can be adjusted individually, or simultaneously adjusted when Link mode ([page 153](#)) is active.

The available range is $-\infty$ dB (off) to +9.48 dB. The default value of 0 dB is the "calibrated position" which is marked with a "red arrow sticker." Reproduce is not affected by [Auto Cal](#).

Tip: Click the "REPRODUCE" label text to return Reproduce to 0 dB.

The Meters accurately reflect the output level (when set to [Output](#) mode) even if Reproduce is not in its calibrated position. However, if Reproduce is moved from the "cal" position, the Meters will no longer correspond to a particular level being recorded onto the virtual tape. In this case, the Meters will not reflect the actual "operating level" of the tape because Reproduce changes the signal level coming off the tape before it is sent to the Meters.

Note: The graphical interface panel values for Reproduce, which range from 0 – 10, are arbitrary and do not reflect a particular dB value.

Record



Record adjusts the signal level into the plug-in and the tape circuitry. There are two Record controls, one for the left channel and one for the right. These left/right Record controls can be adjusted individually, or simultaneously when Link mode ([page 153](#)) is active.

The available range is $-\infty$ dB (off) to +9.3 dB. The default value is 0 dB. The graphical interface panel values, which range from 0 – 10, are arbitrary and do not reflect a particular dB value.

Tip: Click the "RECORD" label text to return the Record value to 0 dB.

Record is a primary “color” control for the plug-in. Just like genuine magnetic tape, lower Record levels will have a cleaner sound, while higher levels result in more harmonic saturation and coloration. Higher Record levels will also increase the output level from the plug-in. The Reproduce control can be lowered to compensate if unity gain operation is desired.

Reproduce/Record Controls Arrangement

Note that the Reproduce control is to the left of the Record control, which is atypical of most signal flow designs, where inputs usually precede outputs (flowing from left to right). This quirky arrangement of the Ampex ATR-102 I/O controls, where the input control “follows” the output control, is true to the original hardware design. In Controls View (page 87), the Record (input) control precedes the Reproduce (output) control.

Open/Close

The secondary controls (Figure 47 on page 159) are accessed by clicking the OPEN button beneath the AMPEX label. Conversely, the panel is closed by clicking the CLOSE button.



Link/Unlink



Link mode is a software-only addition that enables controls that are identical for the left and right channels to be linked for ease of operation when both channels require the same values, or unlinked when independent left/right control is desired. In other words, left/right channel controls are ganged together in link mode.

The Link parameter is stored within presets and can be accessed via automation.

Note: Although there are separate left/right Meter controls for VU/Peak and Input/Output, these controls are permanently linked and cannot be switched individually for the left and right channels, even if Unlink mode is active.

Link

In Link mode, modifying any left or right channel control causes its adjacent stereo counterpart control to snap to the same position.

Important: When Unlink mode is active and Link is enabled, the left channel control values are copied to the right channel. Control offsets between channels are lost in this case.

When Link is active, automation data is written and read for the left channel only. In this case, the automation data for the left will control both channels. Additionally, changing the right channel parameters from a control surface or when in “controls only” (non-GUI) mode will have no effect.

Unlink

When Unlink is active, the controls for the left and right channels are independent. When unlinked, automation data is written and read by each channel separately.

Emphasis EQ

The Emphasis EQ buttons determine the active Emphasis EQ values and the frequency of the Hum noise. NAB or CCIR curves can be selected when the Tape Speed is 7.5 or 15 IPS. When the Tape Speed is 30 IPS, neither value is available (the LEDs are dimmed) because the EQ is fixed with the AES emphasis curve, per the original hardware. At 3.75 IPS, only NAB is available (as it is with the hardware).



When the value is set to NAB (traditionally the United States standard), the Hum Noise frequency is 60 Hz. When set to CCIR (traditionally the standard in Europe and other regions), the Hum Noise frequency is 50 Hz. See “Noise Enable” on page 161 and “Hum” on page 161 for more information about Hum.

Tape Speed and Emphasis EQ were originally practical controls for recording duration versus noise and local standards. Historically, the origin of the tape machine (US or European) dictated the built-in EQ emphasis, but later machines like the Ampex ATR-102 had both circuits available.

CCIR (also known as IEC1) is the EQ pre-emphasis made famous on British records and is considered the technically superior EQ; many say this EQ was part of the “British sound” during tape’s heyday. NAB (also known as IEC2) was the American standard with its own sound. AES is truly standardized at 30 IPS and is the sole EQ found on the Ampex ATR-102 at 30 IPS.

Power



Power is the plug-in bypass control. When set to OFF, emulation processing is disabled, the Meters and control LEDs are dimmed, the Bypass LED illuminates, and DSP usage is reduced. Power is useful for comparing the processed settings to the original signal.

OFF is similar to the [Thru](#) position in the [Path Select](#) control ([page 157](#)) except that the Meters are still active when the Thru control is used. However, in this state, the Meters indicate signal levels at the input of the plug-in prior to processing.

Note: DSP usage is reduced only when DSP LoadLock ([page 74](#)) is disabled. If DSP LoadLock is enabled (the default setting), activating OFF will not reduce DSP usage.

Tape Speed

The Tape Speed control determines the speed of the tape transport, in inches per second (IPS). Tape Speed affects the recorder's fidelity and associated "head bump" sonics. Head bump is bass frequency build-up that occurs with magnetic tape; the dominant frequencies shift according to transport speed.

 


To change the Tape Speed value, click the IPS text values, or drag the knob, or click the knob then use the mouse scroll wheel.

15 IPS is considered the favorite for rock and acoustic music due to its low frequency "head bump" (low frequency rise) and warmer sound, while 30 IPS is the norm for classical and jazz due to its lower noise floor, greater fidelity and flatter response. 7.5 and 3.75 IPS are also available for an even more colored experience, with even greater frequency shift and other artifacts.

Note: The available parameter ranges of Tape Type, Head Width, and Emphasis EQ are affected by Tape Speed. See [Table 13 on page 171](#) for details.

Tape Type



Tape Type selects the active tape stock formulation. Seven Tape Types are modeled in the UAD Ampex ATR-102. To select the Tape Type, click the TAPE button to cycle through the available types, or click directly on the Tape Type value label. The active Tape Type is highlighted in yellow.

Note: The available Tape Types and defaults are dependent on the current Tape Speed and Head values. The available Tape Types, and the associated Tape Speed and Head values, are shown in [Table 13 on page 171](#).

Each type has its own subtle sonic variation, distortion onset, and tape compression characteristics. Generally speaking, the lower the Cal Level for each formula, the higher the signal level required to reach saturation and distortion.

Cal Level

Cal Level automatically sets tape calibration/fluxivity. The Cal Level setting takes care of the setup one would need to make under equivalent hardware operation, and sets the reference tape/flux level without disturbing the (unity) gain of the plug-in.

To select the Cal Level, click the CAL button to cycle through the available levels, or click directly on the calibration value label. The active Cal Level is highlighted in yellow. The default value is +6 dB.



Because Cal Level affects the operating levels in the plug-in, it can be used to compensate for overly high (or low) levels at the input of the plug-in. For example, if the input is too hot, lowering the Cal Level will reduce the signal level without changing [Record](#), which can affect the tape saturation characteristics.

Note: *The noise floor is affected by the Cal Level when Noise Enable (page 161) is active.*

As tape formulas advanced, their output level increased, thus lowering relative noise floor. Under normal use, the machine would be calibrated to the tape's output level. However, sometimes the machine is under-calibrated to leave more headroom for a broader sweet spot or to prevent electronics from clipping. Therefore, one can "go traditional" and calibrate to the recommended levels ([Table 8](#)), or select a non-corresponding calibration setting.

As an example, if 456 is the selected Tape Type and when Cal is set at +6 (6 dB higher than the NAB tape standard), the reference flux level is 355 nWb/m (nanoweber per meter) and is 10 dB below the point where THD reaches 3% (referred to as the maximum operating level). Therefore, with a 1 kHz test tone at -12 dBFS sent to the plug-in, with Tape Type set to 456, Cal set to +6, and Auto Cal enabled, output levels of the plug-in will match the input level and fluxivity on the tape will be 355 nWb/m.

The tape manufacturer’s recommended calibration settings for each Tape Type are shown in [Table 8](#).

Table 8. Tape Manufacturer’s Recommended Calibration Levels

Tape Type	Calibration	Flux Level
111	+0 dB	177 nWb/m
35-90	+3 dB	251 nWb/m
250	+3 dB	251 nWb/m
456	+6 dB	355 nWb/m
468	+6 dB	355 nWb/m
900	+9 dB	502 nWb/m
ATR	+9 dB	502 nWb/m

Tip: The UAD Ampex ATR-102 default presets bank offers a variety of preset Tape Type, Tape Speed, CAL level, and EQ configurations that are commonly used for the recording of specific genres.

Head Width




This control specifies the active tape head model. Head Widths of 1/4," 1/2," or 1" can be selected.

To select the Head Width, click the HEAD button to cycle through the available values, or click directly on the value label. The active Head Width is highlighted in yellow.

Note: At tape speeds of 3.75" and 7.5" only the 1/4" head can be used. At these speeds, the 1/2" and 1" heads cannot be selected.

Path Select

The Path Select buttons specify which of the four possible signal paths is active in the Ampex ATR-102. The active mode is indicated by an illuminated LED above its associated button. The default value is Repr.

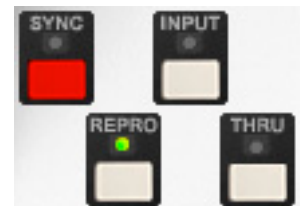

Sync

Sync mode models the sound of direct tape recording and playback via the sync/record head, plus all corresponding machine electronics.

Sync mode is generally not used for playback due to its poorer frequency response, but it is included for authenticity and creative purposes.

Repro

Repro mode models the sound of tape recording through the record head and playback through the reproduction head, plus all corresponding machine electronics.

Input

Input mode emulates the sound of the Ampex ATR-102 through the machine electronics only, without tape sonics. This is the scenario when the machine is in live monitoring mode but the tape transport is not running.

Thru

Thru is a processor bypass control. When Thru is enabled, all controls are inactive, emulation processing is disabled, and DSP usage is reduced.

Thru behavior is similar to that of the OFF position in the POWER control (page 154), except that the Meters are still active in Thru mode. In this state, the Meters indicate signal levels at the input of the plug-in prior to processing.

Note: DSP usage is reduced only when DSP LoadLock (page 74) is disabled. If DSP LoadLock is enabled (the default setting), activating Thru will not reduce DSP usage.

Tape Reels Animation

When the secondary controls panel is closed (Figure 44 on page 147), by default the graphical tape reels “spin” if the DAW transport is running. The tape reels animation can be disabled by clicking the capstan graphic. Re-clicking the capstan will re-start the animation.



The “spin state” is saved until it is changed again.

Note: Spinning reels automation is not supported in all hosts (e.g., Wavelab, Audition, Vegas). In Sonar, the plug-in must be configured as a “tempo-based effect” for reels animation.

Secondary Controls




The secondary controls (Figure 47 below) adjust the various calibration, ancillary noise, tone generator, and tape delay parameters. The secondary controls panel is accessed by clicking the OPEN button beneath the AMPEX label.



Figure 47. UAD Ampex ATR-102 secondary controls

Auto Cal

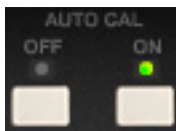

The Ampex ATR-102 has individual calibration controls for adjusting sync (record) EQ, reproduction (playback) EQ, and record bias, which are used to compensate for the inherent non-linearities of tape systems. On the hardware, these controls are typically adjusted to calibrate the system for optimum response compensation due to tape non-linearities whenever the tape type, tape speed, emphasis EQ, or head width are changed.

When the Auto Cal (Automatic Calibration) ON button is clicked, the calibration EQ and bias controls are automatically adjusted to their “flat” calibrated position for the currently active Tape Type, Tape Speed, Emphasis EQ, and Head Type. The Auto Cal ON LED illuminates green when the calibration parameters (Shelf EQ, HF EQ, Repro HF, Repro LF, and Bias) are in their calibrated position.

Auto Cal is enabled by default. When Auto Cal is ON, the calibration parameters (Shelf EQ, HF EQ, Repro HF, Repro LF, and Bias) change values whenever Tape Type, Tape Speed, Emphasis EQ, or Head Type is modified. When Auto Cal is OFF, the calibration parameters do not change values when Tape Type, Tape Speed, Emphasis EQ, or Head Type is modified.

Important: Any calibration settings made manually are lost when Auto Cal is activated. Consider saving manual settings as a preset before activating Auto Cal.



After Auto Calibration occurs, the automatically adjusted parameters can be modified to any other value if desired. If a calibration parameter is adjusted while Auto Cal is ON, the ON LED illuminates in red instead of green, indicating that the system is no longer in the calibrated state. If the moved controls are subsequently returned to their original position, the LED will return to its green state, indicating the unit is back in calibration.

Tip: To return any of the individual calibration controls to their “flat” (calibrated) position, click the label text adjacent to the control (or, simply re-click Auto Cal to return all calibration controls to their “flat” position).

The “Manual Calibration Procedure” on page 167 has instructions for performing system calibration manually.

Record EQ

The Record EQ controls (HF EQ and Shelf EQ) are applied in the tape recording circuit and affect tape saturation characteristics. They compensate for common residual HF loss due to bias optimization and system filtering, and affect HF content in the signal prior to the tape non-linearity.



HF EQ

HF EQ provides high frequency emphasis in the signal recorded to tape.

Shelf EQ

Shelf EQ is another control (in addition to HF EQ) provided to compensate for tape non-linearity. Although adjustment of this control is not part of the Ampex factory calibration procedure, it can be used for customized manual calibrations or creative purposes.

Repro EQ

The Repro EQ controls (Repro HF and Repro LF) are post-head controls for tape playback calibration. They affect the signal coming out of the tape circuitry in both Repro and Sync modes.



The Repro EQs are used as filters to shape the frequency response of the system in maintaining a flat response and enable compensation for any tape frequency loss or head wear.

Repro HF

Adjusts the tape playback high frequency content when **Path Select** is set to **Sync** or **Repro**.

Repro LF

Adjusts the tape playback low frequency content when **Path Select** is set to **Sync** or **Repro**.

Bias


This control adjusts the amount of bias in the record signal.

Bias is defined as an oscillator beyond the audible range applied to the audio at the record head, allowing for adjustment of the record behavior. Ideal bias voltage settings provide maximum record sensitivity and low distortion. Intentionally overbiasing is a common technique especially for “tape compression” which produces a warmer, gently saturated sound. Underbiasing can also be used to add distortion and other non-linear responses, similar to gate chatter or cold solder joints; extremely low voltages may even cause audio to drop out entirely.



Bias voltage, HF/Shelf EQ, and Emphasis EQ (CCIR, NAB, AES) all work together to provide a linear response to the recorded signal. The “flat” (calibrated position) is determined by tape speed, tape type, emphasis EQ, and head width.

Noise Enable

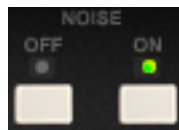

This is a global enable control for the **Hum** and **Hiss** effect.

When Noise is ON, the level of Hum and Hiss can be independently adjusted using the Hum and Hiss Level controls.

The default values of 0 dB for Hum and Hiss are the actual modeled level in the original hardware. Noise is not affected by automatic calibration.

Hum

Determines the amount of Hum in the signal. Hum is added after the tape circuitry. This control affects both the left and right channels.

Noise Enable must be ON for the Hum control to function.



The default value of 0 dB for Hum is the actual modeled level in the original hardware. This default value can be offset by ± 25 dB.

The Hum frequency is dependent on the Emphasis EQ control ([page 154](#)). The frequency is 60 Hz when set to NAB (US) and 50 Hz when set to CCIR (European).

When Tape Speed is set to 30 IPS, the green Emphasis EQ LEDs are not illuminated (and cannot be switched), indicating that the Emphasis EQ is set to AES. However, the Hum frequency can still be set for 30 IPS mode by setting Emphasis EQ to NAB (for 60 Hz) or CCIR (for 50 Hz) prior to setting Tape Speed to 30 IPS.

Note: When Tape Speed is 3.75 IPS, only 60 Hz is available.

Hiss

Hiss determines the amount of tape hiss in the tape playback signal. The default value is 0 dB and can be offset by -25 dB to +50 dB for creative purposes. Noise Enable must be ON for this control to function.



Like the hardware, the amount of hiss is dependent on settings of the various controls and may subtly change based on the values of Path Select, Tape Type, Emphasis EQ, Cal Level, Bias, Playback EQs, and Output Level.

Hiss Level is not affected by automatic calibration, so its level does not change with Tape Speed. When Hiss Level is at its default position (0 dB), the amount of hiss present in the signal is as if the Tape Speed is 15 IPS. To emulate the amount of hiss at the other tape speeds, enter the offsets from [Table 9](#).

Table 9. Hiss Level Offsets

Tape Speed	Hiss Level Setting
30 IPS	-8 dB
15 IPS	0 dB
7.5 IPS	12.5 dB
3.75 IPS	17 dB

Note: Because hiss noise is an element of tape playback, Hiss is disabled when Path Select is set to Input.

Wow & Flutter Enable



These buttons are global enable/disable controls for the Wow and Flutter effects. When Wow & Flutter is ON, the level of Wow and Flutter can be independently adjusted using the Wow and Flutter Level controls.

Wow and Flutter are “undesirable” pitch modulations induced by the mechanical components of the tape transport. Wow is a by-product of capstan irregularities, while flutter is a by-product of tape stretching and sticking. Both can be effectively used for creative purposes.

Wow usually refers to very low frequency fluctuations, while Flutter refers to faster fluctuations. Wow and flutter is measured as the percentage of deflection from the original pitch. Both are more pronounced at lower tape speeds.

Note: *Wow and Flutter levels change with Tape Speed, but they are not affected by automatic calibration.*

Wow Determines the amount of Wow in the signal. Wow & Flutter Enable must be ON for this control to function.



Flutter Determines the amount of Flutter in the signal. Wow & Flutter Enable must be ON for this control to function.



Crosstalk Enable



These buttons are global enable/disable controls for the Crosstalk Level (XTALK) parameter. When Crosstalk is ON, the amount of Crosstalk can be adjusted using the Crosstalk Level control.

Crosstalk is the amount of signal bleed between the left and right channels. Crosstalk sonics can vary based upon the [Tape Speed](#) and [Head Width](#) parameters, however the amount of crosstalk does not vary with these settings.

Crosstalk Level

This control determines the amount of signal crosstalk. Crosstalk Enable must be ON for the Crosstalk Level control to function. The default value of -45 dB is the actual modeled level in the original hardware. The available range is -50 dB to -10 dB. Crosstalk Level is not affected by automatic calibration.



Transformer Enable

These ON/OFF buttons enable and disable the transformer circuit of the Ampex ATR-102. For an overview of this feature, see [“Modeled Transformer”](#) on page 149.



Tape Delay



These parameters control the built-in Tape Delay, which creates tape echo effects. For an overview of this feature, see [“Tape Delay”](#) on page 149. The Tape Delay controls are not available in the original hardware.

Note: *Tape Delay is not available when Path Select is set to Input or Thru, nor when the Manual Calibration Tools are active.*

Tape Delay Enable

These buttons are global enable/disable controls for the Tape Delay effect. When Tape Delay is ON, its red numerical display is active, and other Tape Delay parameters can be adjusted.

Dry/Wet Mix

The Dry/Wet pushbuttons control the mix of the Tape Delay effect. The amount of dry and wet signals are displayed as percentages.

Click the Dry button to increase the dry signal level by 1%, or the Wet button to increase the delayed signal level by 1%.

Tip: Hold the Dry/Wet buttons down to rapidly change the mix values. For fine control in increments/decrements of 0.1%, hold down Shift while changing values.

Delay Time

The left and right channel delay times can be independently adjusted with these controls. Click the “+” or “-” buttons to change the delay times in increments of 10 milliseconds. The available range is 0 – 1000 milliseconds.

Tip: Hold the +/- buttons down to rapidly change the delay times. For fine control in increments/decrements of 1ms, hold down Shift while changing values.

The default Delay Time values depend on the current **Tape Speed**, and represent the actual delay time that would occur in the physical realm, reflecting the elapsed time between the signal put on tape at the record/sync head and its reproduction at the playback/repro head. These “physical” default times are shown at right.

Delay Time Defaults

- 30 IPS: 62 ms
- 15 IPS: 124 ms
- 7.5 IPS: 248 ms
- 3.75 IPS: 496 ms

Important: When the tape speed is changed, the current delay time is changed to reflect the new “physical time” between the sync and repro heads for the new tape speed, and previously set values are lost (see tip below).

Tip: To retain custom delay times when changing Tape Speed, hold Shift when changing Tape Speed.

Manual Calibration Tools



These controls are the suite of tools included to perform manual calibration of the recorder. These UAD-only tools are not in the original hardware. Manual calibration is entirely optional, as the [Auto Cal](#) feature can quickly and automatically calibrate the system.

The manual calibration tools consist of an “external” tone generator with multiple test tones and levels, a distortion meter with digital readouts, and a full suite of modeled Magnetic Reference Laboratory (MRL) alignment tapes.

Note: *The Manual Calibration Tools are operational only when [Path Select](#) is set to [Sync](#) or [Repro](#). Additionally, the tools may not operate in some hosts unless audio is present on the track containing the [plug-in](#) and the transport is running. Placing the [plug-in](#) on an [aux](#), [bus](#), or [master output](#) may eliminate this host limitation.*

This section describes the functions of the manual calibration tools. For instructions on how to use the tools to perform a manual system calibration, see the [“Manual Calibration Procedure”](#) on page 167.

About MRL Alignment Tapes

Alignment tapes are carefully recorded with accurate and consistent flux levels and test tone frequencies. They are constant companions to all well-maintained professional tape machines. Different alignment tapes are required for each tape speed, head width, equalization standard (CCIR/IEC or NAB), and fluxivity level.

Alignment tapes are required for system calibration and adjustment so that playback of previously-recorded session tapes will have correct and consistent equalization and levels, regardless of when, or where, the session tape was originally recorded.

After tape playback system EQ and levels are calibrated to match the known-to-be-correct values of the alignment tape(s), the record-side alignment is performed. The entire record/playback system will then have proper EQ and gain structuring.

Magnetic Reference Laboratory (“MRL”) is a company that produces alignment tapes. The MRL tapes used in the UAD Ampex ATR-102 are fringing compensated. In-depth discussions about fringing compensation and system alignment are beyond the scope of this manual; thorough resources are available from the MRL website at: <http://www.mrltapes.com>

Manual Cal Knob



The Manual Cal knob performs two functions: it sets the signal level of the “external” test tone generator for record calibration, and specifies when alignment tapes are to be used for playback calibration.

When set to -16 dB, -6 dB, or $+4$ dB, a generated sine wave test tone at the frequency specified by the Tones buttons is sent to the input of the record circuitry. This mode emulates sending external test tones into the system. The level of the test tone is set by the knob position and remains static regardless of other parameter values.

When set to MRL, a test tone from the “alignment tape” is sent into the playback circuitry. The MRL frequency is also specified by the Tones buttons, but the levels used are from the calibrated alignment tape. Therefore the MRL tone levels are dependent on other tape parameter values.

 
Tones

The Tones buttons set the frequency of the “external” test tone generator and the MRL tape test tones. Tone frequencies of 50 Hz, 100 Hz, 1 kHz, 2.5 kHz, 5 kHz, 10 kHz, 15 kHz, and 20 kHz are available.



Click a button to specify that frequency; the active frequency’s button is shaded gray as if in the “down” position.

Distortion Meter



The red numerical display, between the Manual Cal knob and the Tones buttons, represents the amount (displayed as a percentage) of third harmonic distortion present in each of the left and right channels. This feature can be useful for custom calibration techniques.

When the Manual Cal knob is set to -16 dB, -6 dB, or $+4$ dB, the value represents third harmonic distortion in the tape playback circuit. Generally speaking, increasing Record (input) will increase distortion while in this mode, as tape saturation increases. If Bias is set very low, distortion may increase at lower Cal Levels.

Note: When the Manual Cal knob is set to MRL, the Distortion Meter is inactive (there is no distortion display in this mode).

Manual Calibration Procedure

Manual calibration tools are provided so expert users can calibrate the system to their preferred methods for obtaining desired results. For example, some technicians may prefer adjustments for lowest distortion at a certain frequency; setting bias for maximum sensitivity (instead of overbiasing); or other non-standard techniques.

The calibration procedure described here is the most commonly used technique, and is the (albeit simplified) method recommended by the Ampex Operation and Service Manual.

Important: *Manual calibration is not required to use UAD Ampex ATR-102. Following this procedure will result in the same (or nearly the same) values obtained by simply using the [Auto Cal](#) feature.*

Tip: *When making manual calibration settings, consider disabling [Auto Cal](#) so the manually calibrated values are not accidentally lost if any of the controls that force automatic calibration ([Tape Type](#), [Tape Speed](#), [Emphasis EQ](#), and [Head Width](#)) are inadvertently modified.*

Preparation

- Reduce monitoring system volume to avoid loud sine wave [Tones](#).
- Insert UAD Ampex ATR-102 on the DAW output bus (see note below).
- Set [Path Select](#) to [Repro](#) mode (Sync mode is not supported for manual cal).
- Set left and right Meter [Input/Output](#) switches to the “OUTPUT” position.
- Set left and right Meter [Peak/VU](#) switches to the “VU” position.
- Set [Tape Speed](#), [Tape Type](#), [Cal Level](#), and [Head Width](#) to desired values.
- If [Tape Speed](#) is set to 3.75 IPS, set [Cal Level](#) to +3 dB.
- Disable [Noise Enable](#) (excessive [Hiss](#) may contribute to incorrect results).
- Do not change the above settings throughout the procedure.
- For related information, see the [Manual Calibration Notes](#) at the end of this chapter.

Note: *The [Manual Calibration Tools](#) are operational only when [Path Select](#) is set to [Sync](#) or [Repro](#). Additionally, the tools may not operate in some hosts unless audio is present on the track containing the plug-in and the transport is running. Placing the plug-in on an aux, bus, or master output may eliminate this host limitation.*

To manually calibrate UAD Ampex ATR-102:

Repro Level Calibration

1. Set the **Manual Cal Knob** to the “MRL” position. The built-in alignment tape tone will sound and its level can be viewed on the **Meters**.
2. Set the **Tones** frequency to 1 kHz.
3. Adjust **Reproduce** (output) so the **Meters** display 0 dB.

Repro EQ Calibration

4. Set the **Tones** frequency to 10 kHz.
5. Adjust **Repro HF** (not to be confused with **HF EQ**) so the **Meters** display 0 dB.
6. Set the **Tones** frequency to 100 Hz.
7. Adjust **Repro LF** so the **Meters** display 0 dB (or as close as possible).*



*Because the MRL alignment tapes we used have fringing compensation, it may not be possible to increase **Repro LF** enough to make the meter reach 0 dB at low frequencies. If a flat response is desired, you can switch the **Manual Cal** knob from MRL mode to the “external” tones then readjust **Repro LF** for flat response (0 dB) using the external tones instead of the MRL tones.

Note: If **Repro HF** and/or **Repro LF EQs** are adjusted by a large amount, it may be necessary to recalibrate the output level (steps 1–3).

Record Bias Calibration

8. Set the **Manual Cal Knob** to the tone level position in **Table 10** below (the tone level depends on tape speed).
9. Set the **Tones** frequency to the value in **Table 10** below (the frequency depends on tape speed).

Table 10. Record Bias Calibration Frequencies and Levels

Tape Speed	Tone Frequency	Tone Level
3.75 IPS	2.5 kHz	-16 dB
7.5 IPS	5 kHz	-6 dB
15 IPS	10 kHz	+4 dB
30 IPS	20 kHz	+4 dB

10. Adjust **Bias** throughout its range until the **Meters** reach the maximum level achievable with the **Bias** control.*

*If the meters reach their maximum “pinned” value, you may temporarily reduce the **Reproduce** level to lower the meters, so the maximum achievable level can be accurately viewed (the maximum achievable level may be higher than the pinned value of 3 dB).

11. Increase **Bias** (clockwise) until the meter level is reduced by -3.5 dB from its maximum (for 3.5 dB of overbias; see [Manual Calibration Notes](#)).*

*When calibrating at 3.75 or 7.5 IPS, the tone generator is at a lower level, therefore meter resolution is decreased. To increase meter precision when adjusting bias at the lower tape speeds, consider temporarily increasing the reproduce level.

Record Level Calibration

12. Set the **Tones** frequency to 1 kHz.

13. Adjust **Record** (input) so the **Meters** display the level in [Table 11](#) below (the level depends on tape speed).

Table 11. Meter Levels for Record and HF EQ Adjustments

Tape Speed	Meter Level
3.75 IPS	-20 dB
7.5 IPS	-10 dB
15 IPS	0 dB
30 IPS	0 dB

Record EQ Calibration

14. Set the **Tones** frequency to the value in [Table 12](#) below (the frequency depends on tape speed).

Table 12. Record HF EQ Calibration Frequencies and Levels

Tape Speed	Tone Frequency	Tone Level
3.75 IPS	5 kHz*	-16 dB
7.5 IPS	10 kHz	-6 dB
15 IPS	15 kHz	+4 dB
30 IPS	20 kHz	+4 dB

*Note: 7.5 kHz is specified in Ampex manual.

15. Adjust **Record HF EQ** (not to be confused with **Repro HF**) so the **Meters** display the level in [Table 11](#) above (the level depends on tape speed).



Note: If HF EQ is adjusted by a large amount, it may be necessary to recalibrate the record level (steps 12, 13).

The manual calibration procedure is complete.

For related information, see the [Manual Calibration Notes](#) in the next section.

Manual Calibration Notes

- 0 dB on the output meter represents +4 dBm (and –12 dBFS digital) when **Reproduce** is in its calibrated position, which is marked with the “red arrow sticker.”
- For proper calibration, follow the entire calibration procedure in order.
- This example uses 3.5 dB overbias. The amount of gain reduction in step 12 determines the amount of overbias. In some cases we used more than 3.5 dB of overbias to achieve a flatter response.
- Generally speaking, higher **Cal Level** values will have higher **Distortion Meter** values for a given reading on the **Meters**. If Bias is set very low, distortion may increase at lower Cal Levels.
- We recommend leaving the record SHELF EQ control in its default position.
- The Ampex ATR-102 hardware has an additional gain control via a set-screw (like Repró HF/LF, Bias, etc) which is usually used for manual gain calibrations. This control is not available in the plug-in because it would be redundant – the **Reproduce** control performs the same function.
- We chose to calibrate our reference machine using MRL fringing-compensated calibration tapes, without later adjusting the Repró LF EQ for unity gain using external test tones. Therefore the calibrated values in the plug-in reflect this alignment method. In-depth discussions about fringing compensation and system alignment are beyond the scope of this manual; thorough resources are available from the MRL website at: <http://www.mrltapes.com>
- Tape Type 111 uses a calibration level of 0 dB. This value is not available in the plug-in, but it can be emulated by setting the CAL level to +3 dB, then reducing the input level (Record knob) by –3 dB and increasing the output level (Reproduce knob) by +3 dB.
- The plug-in operates at an internal level of –12 dBFS. Therefore a digital signal with a level of –12 dB below full scale digital (0 dBFS) at the plug-in input will represent 0 dB on the plug-in meters (if the plug-in is calibrated).
- The included artist presets demonstrate how manual calibration can be used to obtain sonic variations (see “**Artist Presets**” on page 150).

Tip: For easy recall in future sessions, save unique calibrations as a preset.

Parameter Dependencies

Available Settings


Some ATR-102 parameter value ranges depend on the value of other parameters. These dependencies are listed in [Table 13](#) below.

Table 13. Ampex ATR-102 parameter dependencies

Tape Speed	Head Width	Tape 1	Tape 2	Tape 3	Tape 4	Emphasis EQ
30 IPS	1"	250	456	468	ATR	AES
30 IPS	1/2"	250	456	900	ATR	AES
30 IPS	1/4"	250	456	900	ATR	AES
15 IPS	1"	250	456	468	ATR	NAB
15 IPS	1"	250	456	468	ATR	CCIR
15 IPS	1/2"	250	456	900	ATR	NAB
15 IPS	1/2"	250	456	900	ATR	CCIR
15 IPS	1/4"	250	456	900	ATR	NAB
15 IPS	1/4"	250	456	900	ATR	CCIR
7.5 IPS	1/4"	250	456	35-90	111	NAB
7.5 IPS	1/4"	250	456	35-90	111	CCIR
3.75 IPS	1/4"	250	456	35-90	111	NAB
3.75 IPS	1/4"	250	456	35-90	111	CCIR

Ampex ATR-102 Latency

The Ampex ATR-102 uses an internal upsampling technique. This upsampling results in a larger latency than most other UAD plug-ins. See ["Compensating Upsampled Plug-Ins"](#) on page 108 for more information.

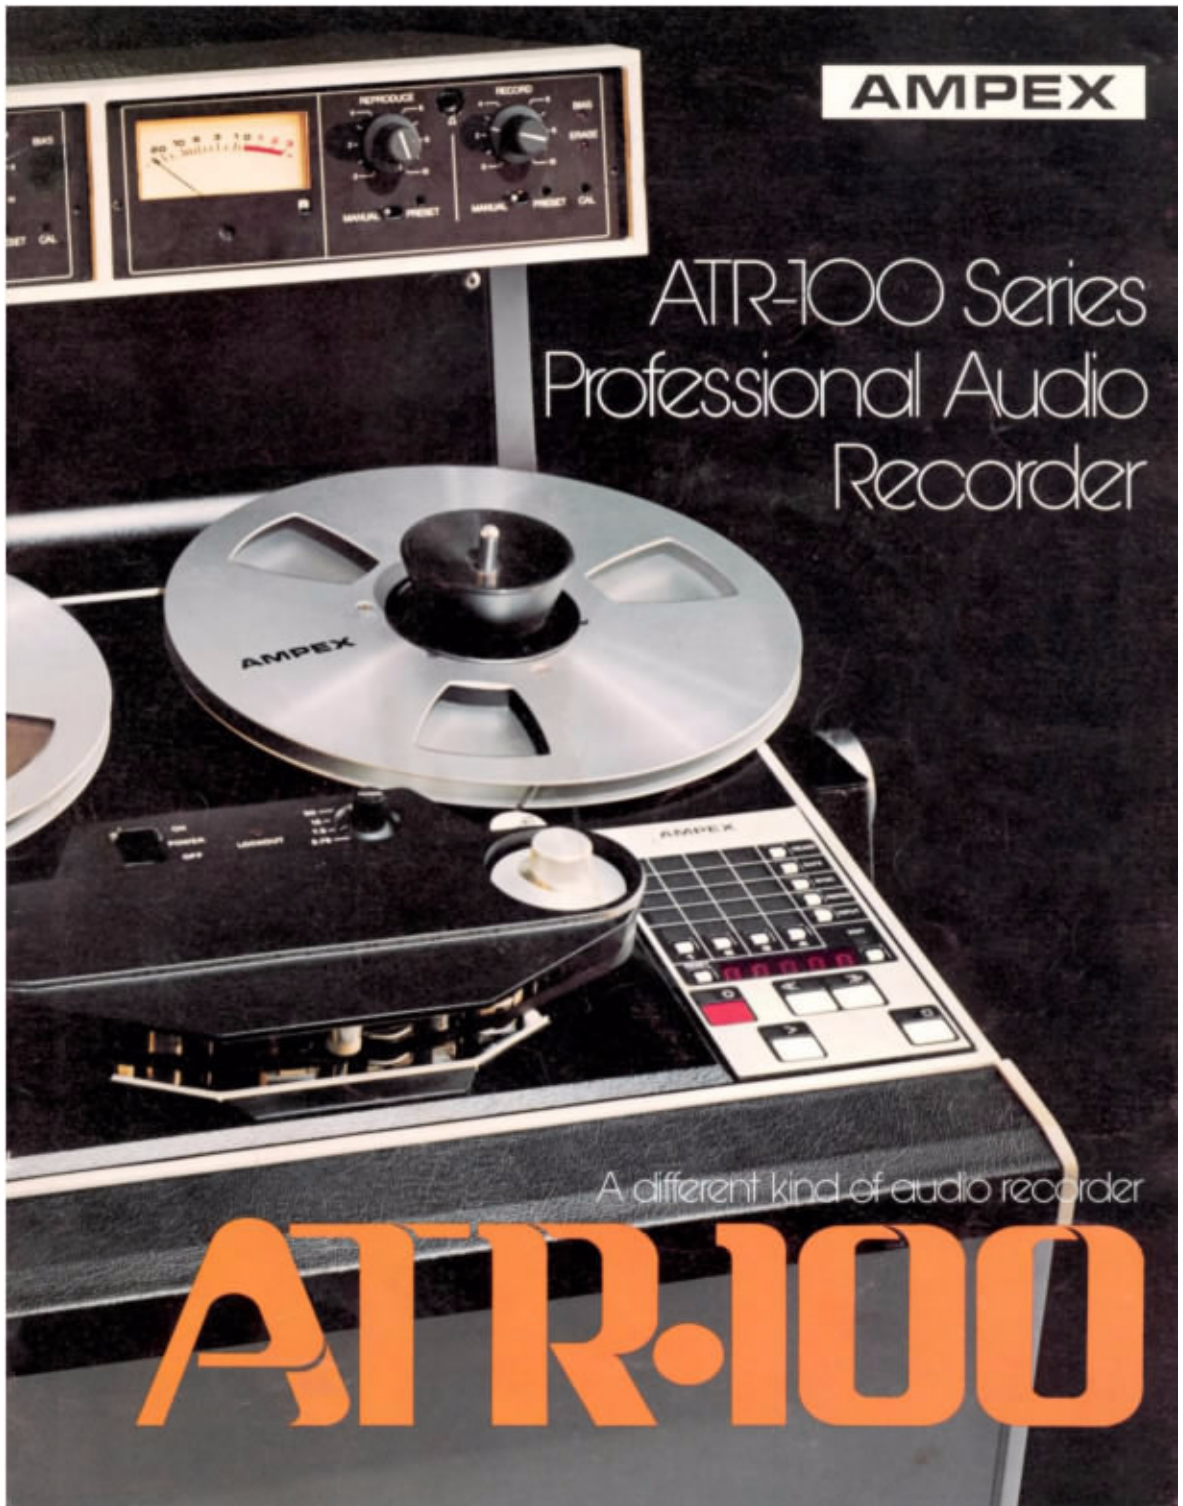

Original Ampex ATR-102 Mastering Recorder Brochure

CHAPTER 13

Cambridge EQ

Overview

The UAD Cambridge EQ plug-in is a mastering-quality, no-compromise equalizer that enables powerful tonal shaping of any audio source. Its algorithm was modeled from various high-end analog filters, providing a sonically rich foundation for timbral manipulation. Special attention was given to the handling of higher frequencies, resulting in a much smoother and more satisfying high-end response than is found in most digital filters.

Cambridge EQ is highly flexible, offering a broad spectrum of options facilitating surgical precision and delivering superior aural results in every application. This may be the most satisfying, full-featured equalizer in your arsenal of creative tools.

Cambridge EQ Screenshot

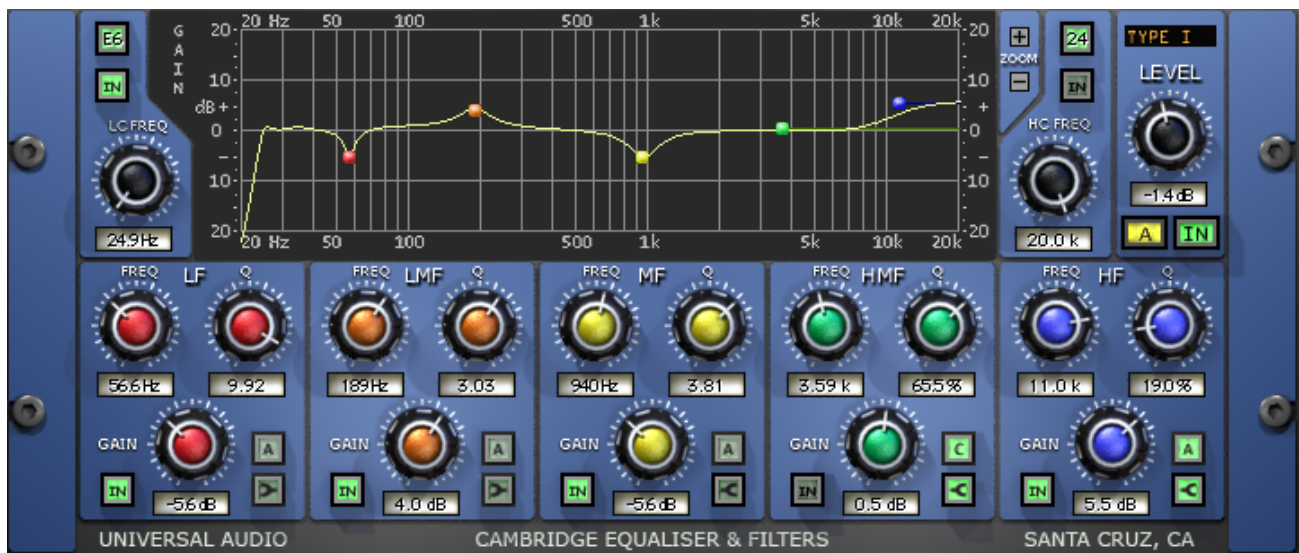


Figure 48. The UAD Cambridge EQ plug-in window

Cambridge EQ Controls

Each feature of the Cambridge EQ interface is detailed below.

Response Curve Display

The Response Curve Display plots the frequency response of the current Cambridge EQ settings. It provides instant visual feedback of how audio is being processed by the equalizer.

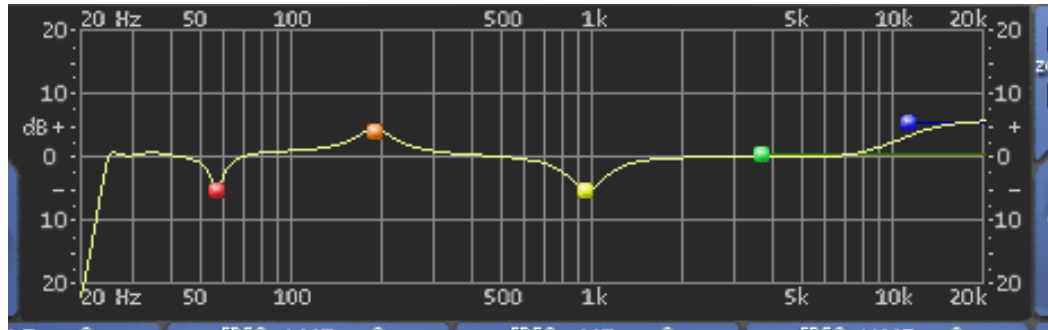


Figure 49. Cambridge EQ Response Curve display

The entire audio spectrum from 20 Hz to 20 kHz is displayed along the horizontal axis. Gain and attenuation of frequencies (up to ± 40 dB) are displayed along the vertical axis. The vertical resolution of this display can be modified with the Zoom buttons.

Response Curve Color

The color of the response curve depends on the value of the A/B Selector control. When A is active, the curve is yellow. When B is active, the curve is green (see “A/B Selector Button” on page 176). When Cambridge EQ is disabled, the response curve is grey.

Zoom Buttons

The vertical scale of the Curve Display can be increased or reduced with the Zoom buttons. This function allows the resolution of the Curve Display to be changed for enhanced visual feedback when very small or very large amounts of boost or cut are applied. Four vertical ranges can be selected with the Zoom buttons: ± 5 , ± 10 , ± 20 , and ± 40 dB.

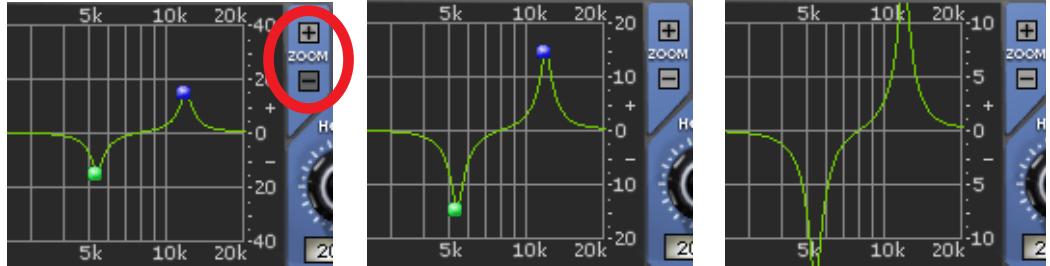


Figure 50. Vertical resolution of the Response Curve can be changed with the Zoom buttons

Curve Control Bats

There are five control “bats” on the curve display. Each bat is color coded and corresponds to each of the five EQ bands. The position of the bat on the curve display reflects the frequency and gain of its corresponding band, even if the band is disabled.

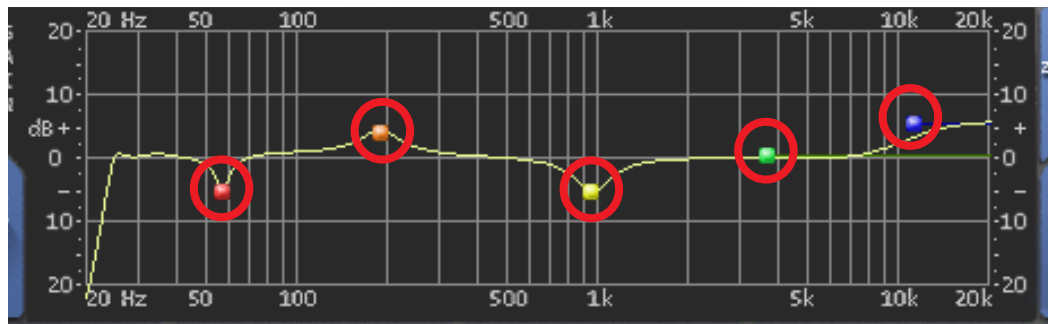



Figure 51. The Curve Control Bats can be used to control EQ band frequency, gain, and Q

The gain and frequency of an EQ band can be modified simultaneously by dragging its bat with the mouse. If a band is disabled when its bat is touched for the first time, the band is enabled.

Note: To modify the Q of a band with its bat, hold down the Control key while dragging vertically.

When a band is enabled, the EQ curve usually touches the bat. However, because the EQ curve always displays the actual frequency response of Cambridge EQ, if two bands are close together in frequency and/or at extreme gain values, the bat may not touch the curve itself.

Master Level Knob

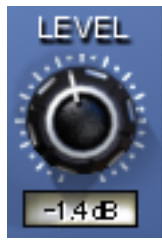

This control adjusts the signal output level of Cambridge EQ. This may be necessary if the signal is dramatically boosted or reduced by the EQ settings. The available range is ± 20 dB.

A/B Selector Button




The A/B Selector switches between two separate sets of Cambridge EQ plug-in values. This feature enables easy switching between two completely independent EQ curves which can be useful for comparison purposes or for automating radical timbre changes. Both the A and B curves reside within a single Cambridge EQ preset.

Click the A/B Selector button to switch between the two curves. When A is displayed, the button and the EQ response curve is yellow. When B is displayed, the button and the curve is green.

Note: To reset the A or B curve to a null (flat) response, control-click the A/B Selector button. The active curve will be nulled.

Note: To copy one curve to another, shift-click the button. The active curve will be copied to the inactive curve.

EQ Enable Button

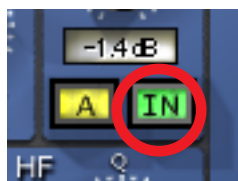

This button enables or disables the Cambridge EQ altogether. You can use this switch to compare the processed settings to that of the original signal, or to bypass the plug-in to reduce UAD DSP load (load is not reduced if "UAD-2 DSP LoadLock" on page 74 is enabled).

Low Cut / High Cut Filters




The Low Cut and High Cut filters are offered in addition to the five parametric/shelf bands. A wide range of filter types is provided to facilitate tonal creativity. Many filters that are available are represented.

Three controls are offered: Cut Type, Enable, and Frequency. Each control is detailed below.



Cut Type Menu

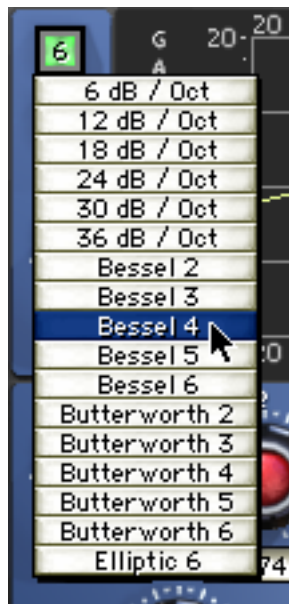

The Cut Type menu determines the sound of the low and high cut filters. To view the Cut Type menu, click and hold the green cut type button.

Four types of responses are provided: Coincident Pole, Bessel, Butterworth, and Elliptic. The numbers represent the filter order, i.e. Bessel 4 is a fourth-order filter. Each offers a different sound. To select a new cut response, drag to the desired response and release.

The responses are more gentle on filters with lower numbers, and get steeper and more aggressive as the numbers increase. The coincident-pole filters are first-order filters cascaded in series and offer gentle slopes. Bessel filters are popular because of their smooth phase characteristic with decent rejection. Butterworth filters offer even stronger rejection. The Elliptic setting is about as “brick wall” as you can get. Generally speaking, more phase shifting occurs as the response gets steeper.

Note: UAD DSP usage does increase some as the filters get stronger (unless “UAD-2 DSP LoadLock” on page 74 is enabled).

Cut Enable Button

This button activates the cut filters. The filters are enabled when the “In” button is green. UAD DSP usage is slightly reduced when the cut filters are disabled (unless “UAD-2 DSP LoadLock” on page 74 is enabled).

Cut Frequency Knob

This knob determines the cutoff frequency for the Cut filters. The available range is from 20 Hz – 5 kHz for the low cut filter, and 20 Hz – 20 kHz for the high cut filter.

EQ Bands

All five of the EQ bands can be used in parametric or shelf mode. Each band has identical controls, the only difference is the frequency range values.

The function of the controls is similar in both parametric and shelf modes. The two modes are described separately (see “Parametric EQ” on page 179 and “Shelf EQ” on page 182).



Figure 52. The EQ Band controls

Enable Button

Each band can be individually engaged with the Enable button. The button is green when the band is enabled. All bands default to disabled. To enable any band, click the Enable button.

You can use these buttons to compare the band settings to that of the original signal, or to bypass the individual band. UAD DSP usage is slightly decreased when a band is disabled (unless “UAD-2 DSP LoadLock” on page 74 is enabled).

Frequency Knob

This parameter determines the center frequency to be boosted or attenuated by the Gain setting. The available range for each of the five bands is the same for both parametric and shelf modes. The ranges are shown in Table 14 on page 179.

Table 14. Available ranges for the Band Frequency parameter

Low Frequencies (LF)	20-400 Hz
Low-Mid Frequencies (LMF)	30-600 Hz
Mid Frequencies (MF)	100-6 kHz
High-Mid Frequencies (HMF)	900-18 kHz
High Frequencies (HF)	2k-20 kHz

Note: When operating at sample rates less than 44.1 kHz, the maximum frequency will be limited.

Gain Knob

This parameter determines the amount by which the frequency setting for the band is boosted or attenuated. The available range is ± 20 dB.

Q (Bandwidth) Knob

The behavior of the Q parameter varies depending on the band mode and the gain. For this reason Q is detailed separately in the parametric and shelf mode sections (see “Parametric Q” on page 180 and “Shelf Q” on page 182).

Parametric EQ

A band is in parametric mode when shelf mode is disabled (see “Shelf Enable Button” on page 182). Three types of parametric EQ are available, as determined by the Parametric Type selector.

Parametric Type Selector



The Parametric Type selector changes the response of the band controls to reflect the behavior of various analog equalizers. It is a global control for all 5 bands, and has no effect on the low and high cut filters. Click the Parametric Type display to rotate between Types I, II, and III.

The filter algorithm is the same in all three parametric types. The difference is in the dependency between the gain and Q parameters. Each parametric type has its own response characteristics.

In Type I mode, the Q remains constant regardless of the gain setting. In Type II mode, the Q increases as gain is boosted, but remains constant as gain is attenuated. In Type III mode, the Q increases as gain is boosted and attenuated. See Figure 53, Figure 54, and Figure 55.

Parametric Q

The Q (bandwidth) knob sets the proportion of frequencies surrounding the center frequency to be affected by the gain control. The Q range is 0.25–16; higher values yield sharper slopes.

Note that the Q numeric value in relation to its knob position is warped (i.e. not linear) and varies according to the parametric type.

Type I

When set to Type I, the bandwidth remains at a fixed Q regardless of the gain setting for the band; there is no Q/Gain interdependency. In addition, there is a finer resolution of the Q knob in the middle of its range. This makes it easier to achieve subtle bandwidth changes. Note that the Q value and knob positions do not change as the gain is modified. See [Figure 53](#).

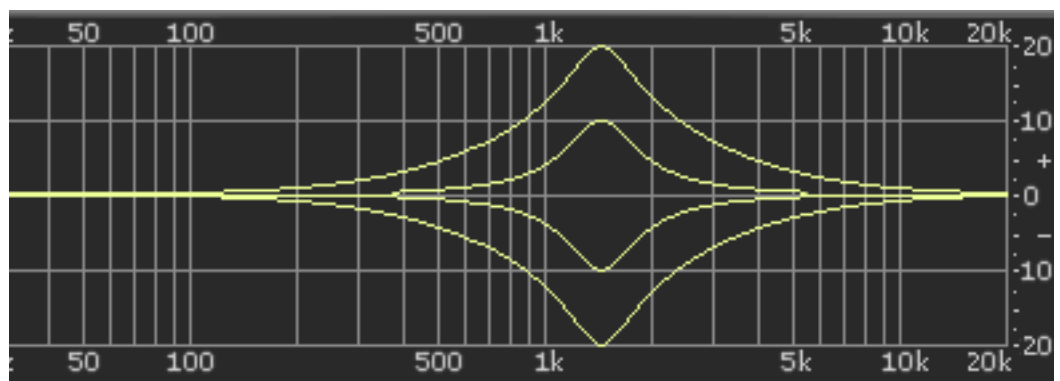


Figure 53. Parametric Type I response

Type II

When set to Type II, there is a Q/Gain dependency on boost. The bandwidth increases continuously as the gain is boosted, but not when attenuated. The Q knob position determines the maximum Q at full gain.

Filter bandwidth is broader at lower boost settings and narrower at higher boost settings. This can produce a smoother, more natural response when boosting filter gain.

Note that the Q value increases as gain is boosted but the knob position does not change. The Q value is approached as gain increases, and reaches the knob position at maximum gain. See [Figure 54](#).

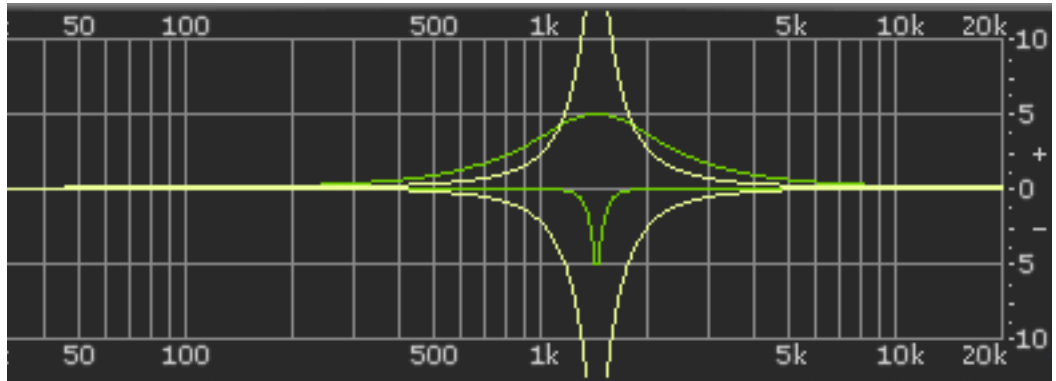


Figure 54. Parametric Type II response

Type III

When set to Type III, there is a Q/Gain dependency on boost and attenuation. The bandwidth increases continuously as the gain is boosted and attenuated. The Q knob position determines the maximum Q at full gain.

Filter bandwidth is broader at lower gain settings and narrower at higher gain settings. This can produce a smoother, more natural response when adjusting filter gain.

Note that the Q value increases as gain is increased but the knob position does not change. The Q value is approached as gain increases, and reaches the knob position at maximum gain. See [Figure 55](#).

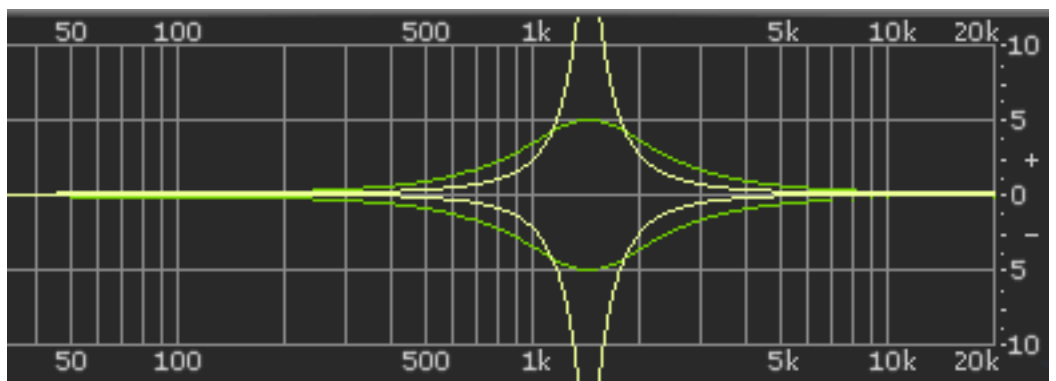


Figure 55. Parametric Type III response

Shelf EQ

Shelf Enable Button



Each band can be switched from parametric mode to shelf mode by clicking the shelf enable button. The button is off by default. To enable shelving on any band, click the shelf button.

The button is green when shelving is enabled. Additionally, the control bar associated with the band has a horizontal shelf indicator line in the response curve display (see [Figure 57 on page 183](#)) when shelf mode is active.

Shelf Type Button



When a band is in shelf mode and its Q is above the minimum value, a resonant peak occurs in the filter response. The Shelf Type button affects where this resonant peak occurs in relation to the shelf frequency.

Its purpose is to emulate the response curves of classic high-end analog mixing consoles. It's yet another tool to help you find the exact sound you are looking for.

The Shelf Type button places the resonant peak at (A) the edge of the stopband ([Figure 56 on page 183](#)), (B) the edge of the passband ([Figure 57](#)), or (C) at the edge of the stopband and the passband ([Figure 58](#)).

Shelf Q

When a band is in shelf mode, the Q knob sets the resonance of the band. The range of the Q knob is 0-100% when in shelf mode.

Note: When a band is in shelf mode, the Gain setting will affect the Q of the band.

When the Q is at its minimum value, there is no resonant peak. The resonance increases and becomes more prominent as the Q is increased. Therefore, for the shelf type to have any effect the Q must be above its minimum value.

Note: In order for this button to have any effect, the band must be in shelving mode, some gain must be applied, and the Q must be above its minimum value.

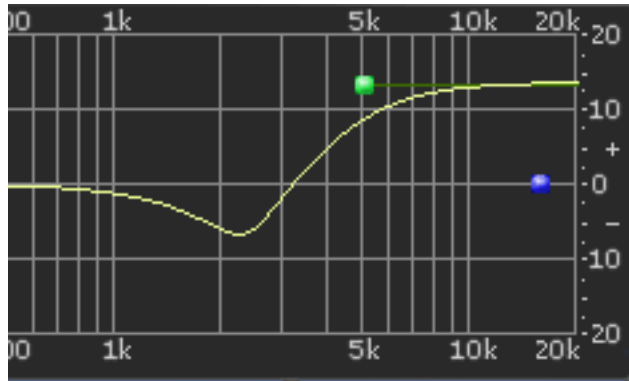


Figure 56. Shelf Type A

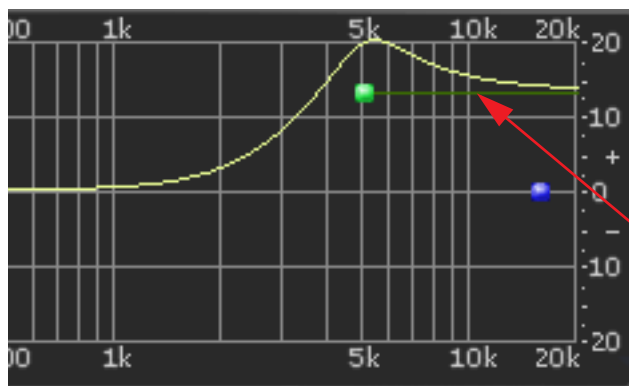


Figure 57. Shelf Type B

Shelf Mode
Indicator Line

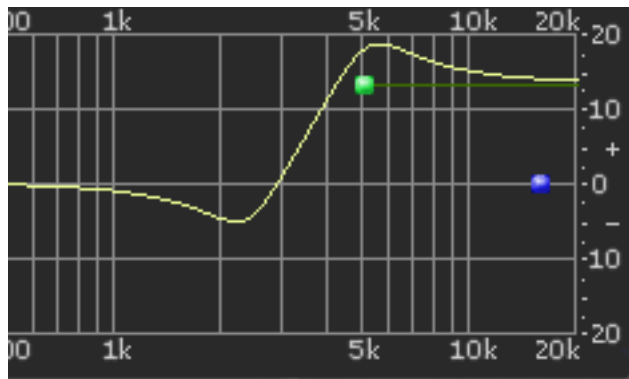


Figure 58. Shelf Type C

CHAPTER 14

Cooper Time Cube

Dual Mechanical Delay Line

The original Cooper Time Cube was a Duane H. Cooper and Bill Putnam collaborative design that brought a garden hose-based mechanical delay to the world in 1971 and has achieved cult status as the most unique delay ever made. The Cooper Time Cube is famous for its spectacular short delay and doubling effects and its uncanny ability to always sit perfectly in the mix. However, the CTC had limited practicality as a full-featured delay; only 14, 16 or 30 ms settings were available. Over the years this quirky device has grown a strong following and finds a home in the most prestigious studios in the world, such as Blackbird and Sunset Sound. Top producers and engineers such as Richard Dodd, Vance Powell and Joe Chicarelli still swear by the Cooper Time Cube for its unique character.

The Cooper Time Cube MkII has all the sound of the original delay system design and offers all the necessary features expected from a modern delay device. The distinct sound of the single or double hose Coil is preserved regardless of delay setting, and either sound is available at the flick of a switch. The Cooper time Cube MkII also incorporates other enhanced tone shifting features such as the Color switch that presents the user with the original (A) or “leveled” (B) frequency response, plus tone controls and a 2-Pole High Pass Filter. Lastly, a switch is presented for soloing the Wet signal, and the Send switch disables the signal being sent into the delay processor.

Cooper Time Cube Screenshot



Figure 59. The UAD Cooper Time Cube plug-in window

Design Overview

The original UREI/Universal Audio Model 920-16 Cooper Time Cube hardware (see “Cooper Time Cube Hardware” on page 189) has two audio channels, A and B. Each channel is transduced to/from a coiled length of plastic tubing which provides the acoustic “sound columns” that define its distinctive sonic character.

The coils for each channel are at fixed but different lengths, which define the available single delay times of 16ms for channel A and 14ms for channel B. The two channels can be cascaded in series via external routing, for a total available delay time of 30ms at reasonable fidelity for its era, which (according to the original product brochure) “brings complete respectability to the heretofore marginally feasible acoustical delay line.”

The UAD Cooper Time Cube plug-in has all the vibe of the original, with modern feature enhancements. It is a true stereo plug-in with two independent delay processors. Each channel has its own set of controls, and there are global controls that affect the plug-in overall.

Cooper Time Cube Controls

Global Controls The global controls affect both channels of the processor simultaneously.



Figure 60. The global controls (Wet Solo and Power, also global controls, are not shown here)

Gain Gain controls the signal input level to the plug-in for both A (left) and B (right) channels. Gain affects the combined wet and dry signals.

The available range is ± 15 dB and the 12 o'clock position is unity gain.

HP Filter

The 12 dB per octave high pass filter is used to reduce low frequencies at the input to the delays when desired. The high pass filter affects the delayed (wet) signals only. The available frequency range is from 20 Hz to 12 kHz.

Turn the knob clockwise to reduce low frequencies into the delay processors. Full processor bandwidth is obtained with the knob in the fully counter-clockwise position.

Echo A/B

These two “windows” display the current delay times of channels A and B. Displayed values are defined by the Delay parameter (“Delay A/B” on page 188). Delay values can be entered here directly using the text entry method (“Text Entry” on page 92).

When Sync mode is off, delay times are expressed in milliseconds. When Sync is on, delay times are expressed as a fractional bar value.

When the beat value is out of range, the value is displayed in parentheses. This occurs in Sync mode when the time of the note value exceeds 2500ms (as defined by the current tempo of the host application).

Sync

This switch engages Sync mode for both channels of the plug-in. In Sync mode, delay times are synchronized to (and therefore dependent upon) the master tempo of the host application. When Sync is toggled, parameter units are converted between milliseconds and beats to the closest matching value.

See Chapter 8, “Tempo Sync” for detailed information about tempo synchronization.


Send

Send determines whether or not signals are sent into the delay processors. When Send is ON, the input signals are delayed. When OFF, the delay inputs are muted.

Coils

When both coiled tubes of the original hardware are cascaded to increase the available delay time (when both channels are serially connected), the sonics are slightly different than when only one coil is used. The Coils switch toggles between these two sounds available on the hardware, regardless of the Delay value.

Tip: Longer decays are available when Coils value is set to 1.

- Color** The Color switch toggles between the original filter emphasis of the hardware in position A and the “leveled” filter in position B which allows for greater Decay ranges.
- Unlike the other parameters, the A and B labels for Color are for reference only. They do not represent the left and right channels.
- Note:** *Color can be subtle, and its affect can vary depending on the value of Coils and/or Decay.*
- Treble** Treble controls the high frequency response in the delayed portion of the signals. It does not affect the dry signal. Treble is a cut/boost control; it has no effect when in the 12 o’clock position.
- Bass** Bass controls the low frequency response in the delayed portion of the signals. It does not affect the dry signal. Bass is a cut/boost control; it has no effect when in the 12 o’clock position.
- Wet Solo**  The Wet Solo switch puts the Cooper Time Cube into “100% Wet” mode. When Wet Solo is on (in the “up” position), it mutes the dry unprocessed signal.
- Wet Solo is optimal when the plug-in is used on an effect group/bus that is configured for use with channel sends. When the plug-in is used on a channel insert, this control should be deactivated.
- Note:** *Wet Solo is a global (per plug-in instance) control. Its value is saved within the host project/session file, but not within individual preset files.*
- Power** The Power switch determines whether the plug-in is active. It's useful for comparing the processed sound to the original signal.
- Meter** The VU Meter provides a visual indication of the output level of the plug-in (the meter is not calibrated). The meter needle drops to minimum when the plug-in is disabled with the Power switch.

Channel Controls

The channel controls affect each channel of the processor independently. The control functionality is identical for each channel. “A” indicates the left channel and “B” is the right channel.



Figure 61. The channel controls

Delay A/B

Delay controls the delay time for each channel of the processor. The selected value is shown in the Echo display (“Echo A/B” on page 186).

The available delay range for each channel is 5 milliseconds to 2.5 seconds (2500ms). When Sync is active, beat values from 1/64 to 3/1 can be selected (Table 5 on page 97).

When the beat value is out of range, the value is displayed in parenthesis. This occurs in Sync mode when the time of the note value exceeds 2500ms (as defined by the current tempo of the host application). See Chapter 8, “Tempo Sync” for detailed information about tempo synchronization.

Tip: Click the knob then use the computer keyboard arrow keys to increment/decrement beat values in Sync mode.

Decay A/B

Decay sets the amount of processed signal fed back into its input (feedback). At the minimum value, one delayed repeat is heard. Higher values (clockwise) increase the number of repeats and intensity of the processed signal, with “near infinite” repeats available at the maximum setting.

Pan A/B

Pan sets the position of the delayed (wet) signal in the stereo field; it does not affect the unprocessed (dry) signal.

Tip: Click the “PAN” label text to return the control to center.

Note: When the plug-in is used in a mono-in/mono-out (“MIMO”) configuration, the Pan knobs do not function and cannot be adjusted.

Echo Volume A/B

This control determines the volume of the delayed signal. Rotate the control clockwise for louder echo. Up to +10 dB of gain is available at the maximum setting. Reducing the control to its minimum value will mute the delay.

Tip: Click the "ECHO VOL" label text to mute/unmute the delayed output.

Cooper Time Cube Hardware

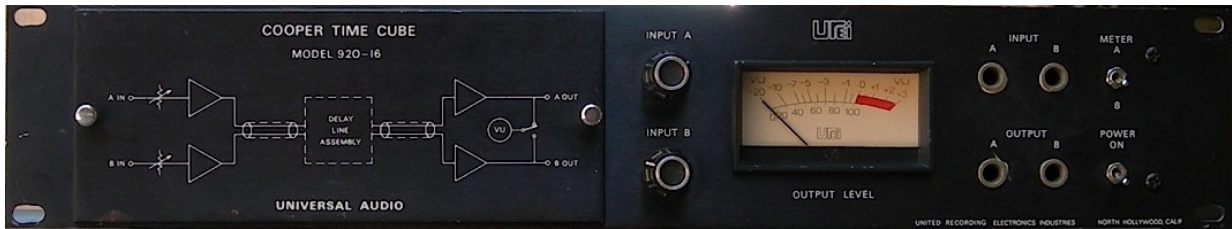


Figure 62. The original Cooper Time Cube hardware front panel

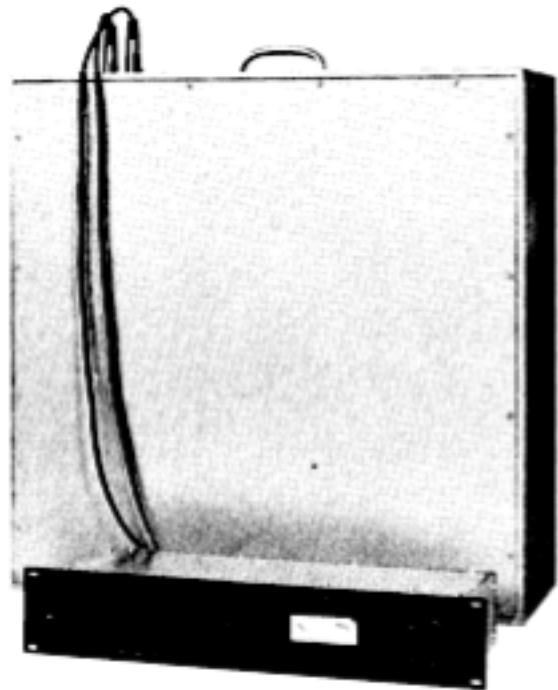
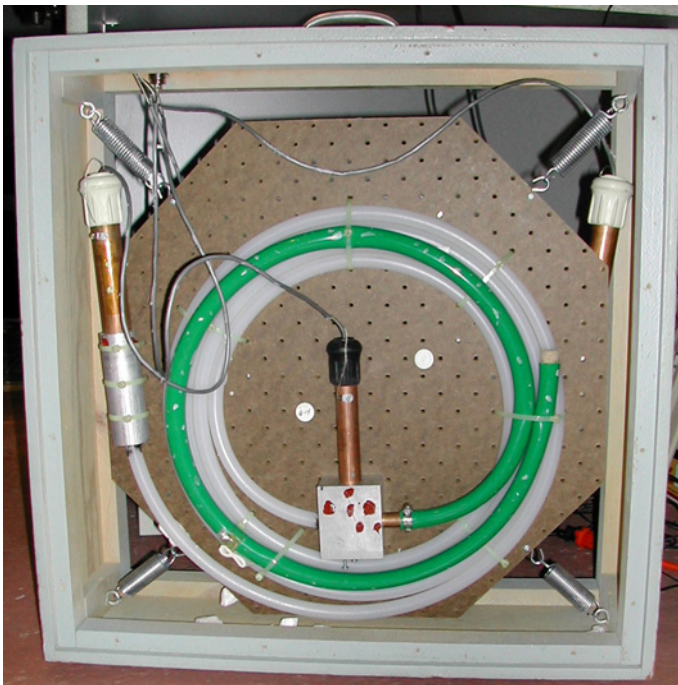


Figure 63. The opened acoustic module and the complete system

CHAPTER 15

CS-1 Channel Strip

Overview

The CS-1 Channel Strip provides the EX-1 Equalizer and Compressor, DM-1 Delay Modulator, and RS-1 Reflection Engine combined into one plug-in. Individual effects in the CS-1 Channel Strip can be bypassed when not in use to preserve UAD DSP use.

The CS-1 effects can also be accessed individually by using the individual plug-ins. This is useful if you want to use the plug-ins in a different order, or if you want to use multiple instances of the same plug-in (such as a flange routed to a ping-pong delay with the DM-1 plug-in).



Figure 64. The CS-1 Channel Strip plug-in window

EX-1 Equalizer and Compressor



Figure 65. The EX-1 EQ/Compressor plug-in window

The EX-1 plug-in consists of a five-band parametric EQ and compressor.

EX-1 Equalizer Controls

The Equalizer portion of the EX-1 is a five-band fully parametric EQ. Each band has its own set of controls. The first two bands can also be enabled to function as low-shelf or high-pass filter. Similarly, the last two bands can be enabled to function as either a high-shelf or low-pass filter.

Band Disable Button

Each band can be individually deactivated with the Band Disable button. All bands default to enabled (brighter blue). To disable any band, click the Disable button. The button is darker blue when the band is disabled.

You can use these buttons to compare the band settings to that of the original signal, or to bypass the individual band.

Gain (G) Knob	The Gain control determines the amount by which the frequency setting is boosted or attenuated. The available range is ± 18 dB.
Frequency (fc) Knob	Determines the center frequency to be boosted or attenuated by the Gain setting. The available range is 20 Hertz to 20 kiloHertz. When operating at sample rates less than 44.1 kHz, the maximum frequency will be limited.
Bandwidth (Q) Knob	<p>Sets the proportion of frequencies surrounding the center frequency to be affected. The Bandwidth range is 0.03–32; higher values yield sharper bands.</p> <p>In either of the first two bands, when the Bandwidth value is at minimum the band becomes a low-shelf filter, and at maximum the band becomes a high-pass filter.</p> <p>Similarly, in either of the last two bands, when the Bandwidth value is at minimum the band becomes a high-shelf filter, and at maximum the band becomes a low-pass filter.</p>
Enable/Bypass Switch	Globally enables or disables all bands of the Equalizer. You can use this switch to compare the EQ settings to the original signal or bypass the entire EQ section to reduce UAD DSP load (unless “UAD-2 DSP LoadLock” on page 74 is enabled).
Output Knob	Adjusts the signal output level of the plug-in. This may be necessary if the signal is dramatically boosted or reduced by the EQ and/or compressor settings.

EX-1 Compressor Controls

Attack Knob	Sets the amount of time that must elapse, once the input signal reaches the Threshold level, before compression will occur. The faster the Attack, the more rapidly compression is applied to signals above the Threshold. The range is 0.05 milliseconds to 100.00 milliseconds.
Release Knob	Sets the amount of time it takes for compression to cease once the input signal drops below the Threshold level. Slower release times can smooth the transition that occurs when the signal dips below the threshold, especially useful for material with frequent peaks. However, if you set too large of a Release time, compression for sections of audio with loud signals may extend to lengthy sections of audio with lower signals. The range is 25 milliseconds to 2500 milliseconds (2.5 seconds).

Ratio Knob	Determines the amount of gain reduction used by the compression. For example, a value of 2 (expressed as a 2:1 ratio) reduces the signal by half, with an input signal of 20 dB being reduced to 10 dB. A value of 1 yields no compression. Values beyond 10 yield a limiting effect. The range is 1 to Infinity.
Threshold Knob	<p>Sets the threshold level for the compression. Any signals that exceed this level are compressed. Signals below the level are unaffected. A Threshold of 0 dB yields no compression. The range is 0 dB to -60 dB.</p> <p>As the Threshold control is increased and more compression occurs, output level is typically reduced. However, the EX-1 provides an auto-makeup gain function to automatically compensate for reduced levels. Adjust the Output level control if more gain is desired.</p>
Meter Pop-up Menu	Determines whether the VU Meter monitors the Input Level, Output Level, Gain Reduction, or Meter Off. Click the menu above the meter display to select a different metering function.
Enable/Bypass Switch	Enables or disables the Compressor. You can use this switch to compare the compressor settings to that of the original signal or bypass the entire compressor section to reduce UAD DSP load (unless “UAD-2 DSP LoadLock” on page 74 is enabled).
Compressor Output Knob	Adjusts the signal output level of the plug-in.

EX-1M Overview

The EX-1M is a monophonic version of EX-1 that enables independent left and right EQ settings in master effects chains and allows Logic Audio users to conserve UAD DSP resources.

EX-1M requires half the processing power compared to that of EX-1 when used on a mono audio track within Logic Audio. Therefore, EX-1M should be used on monophonic audio tracks within Logic whenever possible to conserve UAD resources.

DM-1 Delay Modulator



Figure 66. The DM-1 Delay Modulator plug-in window

The DM-1 Delay Modulator provides stereo effects for delay, chorus, and flange.

DM-1 Controls

Sync Button

This button puts the plug-in into Tempo Sync mode. See [Chapter 8, “Tempo Sync”](#) for more information.

L-Delay Knob

Sets the delay time between the original signal and the delayed signal for the left channel. When the Mode is set to one of the delay settings, the maximum delay is 300 msec. When the Mode is set to one of the chorus or flange settings, the maximum delay is 125 msec.

R-Delay Knob

Sets the delay time between the original signal and the delayed signal for the right channel. When the Mode is set to one of the delay settings, the maximum delay is 300 msec. When the Mode is set to one of the chorus or flange settings, the maximum delay is 125 msec.

In the flanger modes, the L and R delay controls have slightly different functions than when in the chorus modes. The high peak of the flanger is controlled by the settings of the L and R delay controls. The low Peak of the flanger is determined by the setting of the Depth control.

When delay times longer than 300ms are desired, use the DM-1L plug-in instead. DM-1L has a maximum time of 2400ms per channel.

Mode Pop-up Menu

Determines the DM-1 effect mode. The available modes are: Chorus, Chorus180, QuadChorus, Flanger1, Flanger2, Dual Delay, and Ping Pong Delay. In addition to reconfiguring the DM-1's settings, the Mode also determines the available parameter ranges for L/R Delay and Depth.

In Chorus mode, both oscillators (or modulating signals) are in phase.

In Chorus 180 mode, both oscillators (the modulating signals) are 180 degrees out of phase (inverted).

In QuadChorus mode, both oscillators (the modulating signals) are 90 degrees out of phase.

In Ping Pong delay mode, you will only get a ping-pong effect if you have a mono source feeding the DM-1 on a stereo group track or send effect. On a mono disk track, it works exactly like Dual Delay.

Rate Knob

Sets the modulation rate for the delayed signal, expressed in Hertz.

Depth Knob

Sets the modulation depth for the delayed signal, expressed as a percentage.

In Dual Delay and Ping Pong Delay modes, adjusting the Depth and Rate controls can offer some very otherworldly sounds.

LFO Type Pop-up Menu

Determines the LFO (low frequency oscillator) waveshape and phase used to modulate the delayed signal. The waveshape can be set to triangle or sine, each with a phase value of 0, 90, or 180-degrees.

Recirculation (RECIR) Knob

Sets the amount of processed signal fed back into its input. Higher values increase the number of delays and intensity of the processed signal.

Recirculation allows both positive and negative values. The polarity refers to the phase of the delays as compared to the original signal. If Recirculation displays a positive value, all the delays will be in phase with the source. If it displays a negative value, then the phase of the delays flips back and forth between in phase and out of phase.

In the flanger mode, Recir has the potential to make some very interesting sounds. Try turning RECIR fully clockwise or counter-clockwise, and set the delay to very short but different values.

The RECIR units are expressed as a percentage in all Modes except Dual Delay and Ping Pong. In these modes, RECIR values are expressed as T60 time, or the time before the signal drops 60 decibels.

Damping Knob This low pass filter reduces the amount of high frequencies in the signal. Turn down this control to reduce the brightness. Higher values yield a brighter signal. Damping also mimics air absorption, or high frequency rolloff inherent in tape-based delay systems.

Wet/Dry Mix Knob This control determines the balance between the delayed and original signal. Values greater than 50% emphasize the wet signal, and values less than 50% emphasize the dry signal. A value of 50% delivers equal signals. A value of 0% is just the dry signal.

Wet/Dry Mix allows both positive and negative values. The polarity refers to the phase of the delays as compared to the original signal. If a positive value is displayed, then all the delays will be in phase with the source. With a negative value, the delayed signal is flipped 180 degrees out of phase with the source.

L-Pan Knob Sets the stereo position for the left channel, allowing you to adjust the width or balance of the stereo signal. For a mono signal, L-Pan behaves as the level control for the left delay tap.

R-Pan Knob Sets the stereo position for the right channel, allowing you to adjust the width or balance of the stereo signal. For a mono signal, R-Pan behaves as the level control for the right delay tap.

Enable/Bypass Switch Enables or disables the Delay Modulator. You can use this switch to compare the DM-1 settings to the original signal or bypass the entire DM-1 section to reduce UAD DSP load (load is not reduced if [“UAD-2 DSP LoadLock” on page 74](#) is enabled).

Output Knob Adjusts the signal output level of the plug-in.

DM-1L

DM-1L is identical to the DM-1 except that the maximum available delay time per channel is 2400 milliseconds. DM-1L requires significantly more memory resources of the UAD than the DM-1. Therefore, we recommend using the DM-1L only when very long delay times are needed.

Link Button

This button links the left and right delay knobs so that when you move one delay knob, the other follows. The ratio between the two knobs is maintained.



Figure 67. The DM-1L includes a Link button

RS-1 Reflection Engine



Figure 68. The RS-1 Reflection Engine plug-in window

Overview

The RS-1 Reflection Engine simulates a wide range of room shapes, and sizes, to drastically alter the pattern of reflections. While similar to that of the RealVerb Pro plug-in, the RS-1 does not offer the same breadth of features (such as room hybrids, room materials, morphing, and equalization). However, if you do not need the advanced capabilities that RealVerb Pro offers, you can use the RS-1 to achieve excellent room simulations, while also preserving DSP resources on the UAD device.

The Delay control sets the time between the direct signal and the first reflection. The Size parameter controls the spacing between the reflections. The Recir control affects the amount of reflections that are fed back to the input and controls how many repeats you hear.

RS-1 Controls

Sync Button This button puts the plug-in into Tempo Sync mode. See [Chapter 8, “Tempo Sync”](#) for more information.

Shape Pop-up Menu Determines the shape of the reverberant space, and the resulting reflective patterns.

Table 15. Available RS-1 Shapes

Cube	Square Plate
Box	Rectangular Plate
Corr	Triangular Plate
Cylinder	Circular Plate
Dome	Echo
Horseshoe	Ping Pong
Fan	Echo 2
Reverse Fan	Fractal
A-Frame	Gate 1
Spring	Gate 2
Dual Spring	Reverse Gate

Delay Knob Sets the delay time between the original signal and the onset of the reflections.

Size Knob Sets the size of the reverberant space (from 1–99 meters) and defines the spacing of the reflections.

Delay/Size Settings Interaction You may notice that when Delay is set to its maximum value (300 ms) and you move the Size control to its maximum value (99), the Delay value is decreased to 16.85. This occurs because the maximum delay time available to the plug-in has been reached. The available delay time is limited and it needs to be divided among the Delay and Size values. Therefore, if the value of the Delay or Size setting is increased towards maximum when the other control is already high, its complementary setting may be reduced.

Recirculation (RECIR) Knob Sets the amount of processed signal fed back into its input. Higher values increase the number of reverberations/delays and intensity of the processed signal.

Recirculation allows both positive and negative values. The polarity refers to the phase of the delays as compared to the original signal. If Recirculation displays a positive value, all the delays will be in phase with the source. If it displays a negative value, then the phase of the delays flips back and forth between in phase and out of phase.

Damping Knob

This low pass filter reduces the amount of high frequencies in the signal. Turn down this control to reduce the brightness. Higher values yield a brighter signal. Damping also mimics air absorption, or high frequency rolloff inherent in tape-based delay systems.

Wet/Dry Mix Knob

This control determines the balance between the delayed and original signal. Values greater than 50% emphasize the wet signal, and values less than 50% emphasize the dry signal.

Wet/Dry Mix allows both positive and negative values. The polarity refers to the phase of the delays as compared to the original signal. If a positive value is displayed, then all the delays will be in phase with the source. With a negative value, the delayed signal is flipped 180 degrees out of phase with the source.

L-Pan Knob

Sets the stereo position for the left channel, allowing you to adjust the width or balance of the stereo signal. For a mono signal, set both the L-Pan and R-Pan to the left.

R-Pan Knob

Sets the stereo position for the right channel, allowing you to adjust the width or balance of the stereo signal. For a mono signal, set both the L-Pan and R-Pan to the left.

Enable/Bypass Switch

Enables or disables the Reflection Engine. You can use this switch to compare the RS-1 settings to the original signal or bypass the entire RS-1 section to reduce UAD DSP load (load is not reduced if ["UAD-2 DSP LoadLock"](#) on [page 74](#) is enabled).

Output Knob

Adjusts the relative output of the plug-in.

CHAPTER 16

dbx 160 Compressor/Limiter

Overview

The dbx® 160 Compressor/Limiter is an officially licensed and faithful emulation of the legendary dbx 160 hardware compressor/limiter — still widely considered the best VCA compressor ever made. Originally designed and sold by David Blackmer in 1971, this solid-state design set the standard for performance and affordability. The dbx 160 (commonly referred to as the “VU”) is a highly regarded studio staple, famous for its simple control set and firm, distinct compression characteristics. Unlike later monolithic IC units, the “VU” uses a series of discrete components for gain reduction resulting in unique nonlinearities not found in other VCA compressors — a sonic distinction from later models. The UAD Powered Plug-In version of the dbx 160 captures all of the sonic nuances from our “golden” modeling unit, plus the simple control set of the original hardware, including Threshold, Compression (Ratio) and Output Gain. Just like with the hardware, LED threshold indicators are provided in the plug-in, as well the Input/Output/Gain Change VU meter for which the unit is famous.

dbx 160 Screenshot



Figure 69. The dbx 160 plug-in window

dbx 160 Controls

The minimal controls on the UAD dbx 160 make it very simple to operate.

Threshold

Knob

The Threshold knob defines the level at which the onset of compression occurs. Incoming signals that exceed the Threshold level are compressed. Signals below the Threshold are unaffected.



The available range is from -55 dB to 0 dB. The numbers on the graphical interface indicate volts, as on the original hardware.

As the Threshold control is decreased and more compression occurs, output level is typically reduced. Adjust the Output Gain control to increase the output to compensate if desired.

Below

When the input signal is below the compression threshold value, the Below LED illuminates. No compression is occurring when Below is lit.

Above

The Above LED illuminates when the input signal has exceeded the Threshold value, indicating that compression is occurring. The higher the signal is above the Threshold, the brighter the LED glows.

Compression



The Compression parameter determines the ratio for the compressor. Less compression occurs at lower values. The available range is continuous, from 1.00:1 to Infinity:1.

Note: For compression to occur, signals must exceed the Threshold value.

At values above approximately 10:1, the compressor behaves more like a peak-limiter. See [“Compressor Basics” on page 281](#) for more information about compressor/limiter theory of operation.


Output Gain



Output Gain controls the signal level that is output from the plug-in. The available range is ± 20 dB.

Generally speaking, adjust the Output control after the desired amount of compression is achieved with the Threshold and Compression controls. Output does not affect the amount of compression.

Meter Buttons

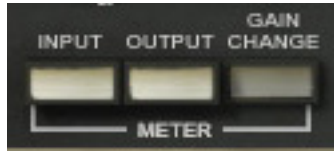

The Meter buttons define the mode of the VU Meter. The buttons do not change the sound of the signal processor. The active button has a darker appearance when compared to the inactive buttons.

VU Meter



When set to Input, the VU Meter indicates the plug-in input level in dB. When set to Output, the VU Meter indicates the plug-in output level in dB. When set to Gain Change, the VU Meter indicates the amount of Gain Reduction in dB.

Power



The Power switch determines whether the plug-in is active. Click the button to toggle the state. When the Power switch is in the Off (lighter) position, plug-in processing is disabled and UAD DSP usage is reduced (load is not reduced if "UAD-2 DSP LoadLock" on [page 74](#) is enabled).

WebZine Articles

Some interesting technical articles are available in our online Webzine at www.uaudio.com:

Ask the Doctors: Signal Detection in the dbx 160

• <http://www.uaudio.com/webzine/2008/march/index2.html>

Analog Obsession: David Blackmer and the dbx 160

• <http://www.uaudio.com/webzine/2008/march/index4.html>

Ask the Doctors: VCA Compressors

• <http://www.uaudio.com/webzine/2007/december/index2.html>

CHAPTER 17

DreamVerb

Overview

DreamVerb™, Universal Audio's flagship stereo reverb plug-in, draws on the unparalleled flexibility of RealVerb Pro. Its intuitive and powerful interface lets you create a room from a huge list of different materials and room shapes. These acoustic spaces can be customized further by blending the different room shapes and surfaces with one another, while the density of the air can be changed to simulate different ambient situations.

DreamVerb also features a flexible 5-band active EQ and unique level ramping for the early and late reflections for ultra-realistic dynamic room simulation. And with Universal Audio's proprietary smoothing algorithm, all parameters can be adjusted with automation or in real-time without distortion, pops, clicks, or zipper noise.

DreamVerb provides two graphic menus for selecting preset room shapes. The shapes can be blended according to the demands of your mix. Room materials are selected with two graphic menus containing preset Materials. A third menu specifies the air density for further spectral control. As with the room shapes, the materials and air can be blended as desired.

DreamVerb also includes intuitive graphic control over equalization, timing and diffusion patterns. To maximize the impact of your recording, we put independent control over the direct path, early reflections, and late-field reverberation in your hands.

Capitalizing on the psychoacoustic technology that went into the design of RealVerb Pro, we have incorporated some of these principles into DreamVerb. Our proprietary Stereo Soundfield Panning allows you to spread and control the signal between stereo speakers creating an impression of center and width. The ability to envelop your listener in a stereo recording is an entirely new approach to reverb design.

Screenshot

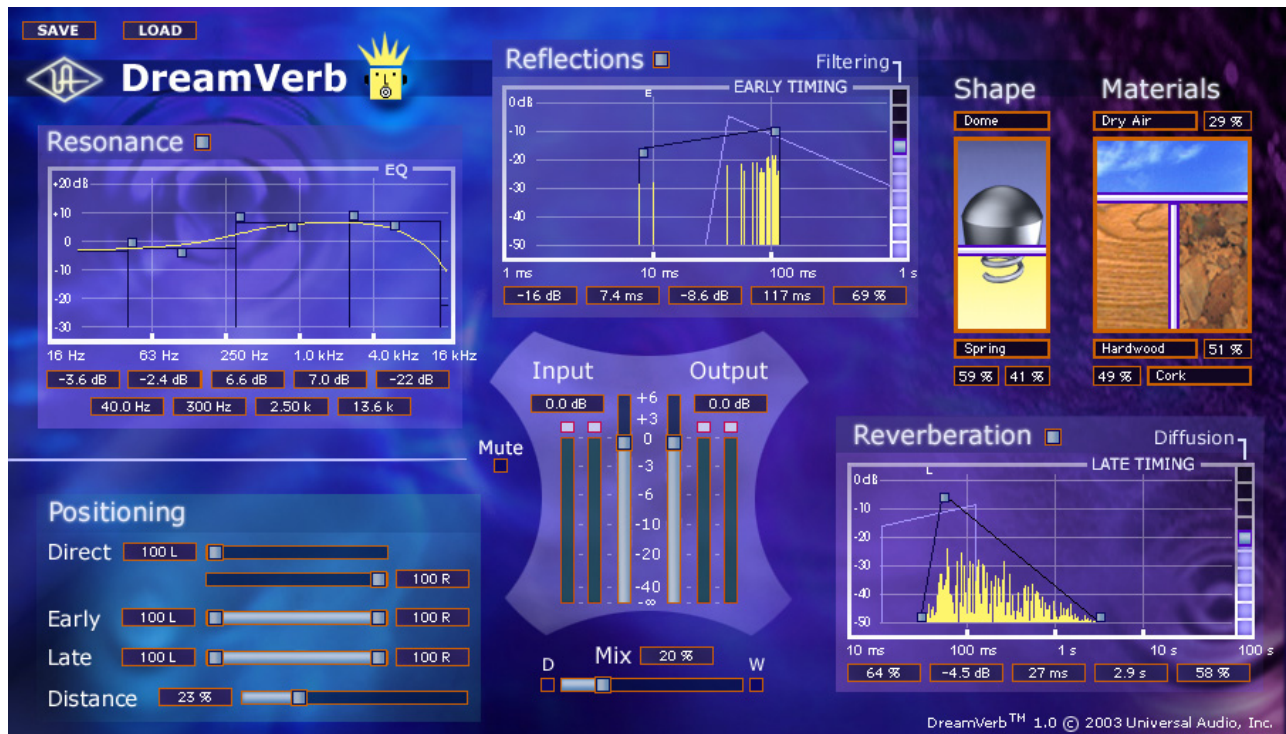


Figure 70. The DreamVerb plug-in window

Signal Flow

Figure 71 illustrates the signal flow for DreamVerb. The input signal is equalized then delay lines are applied to the early reflection and late field generators. The resulting direct path, early reflection, and late-field reverberation are then independently positioned in the soundfield.

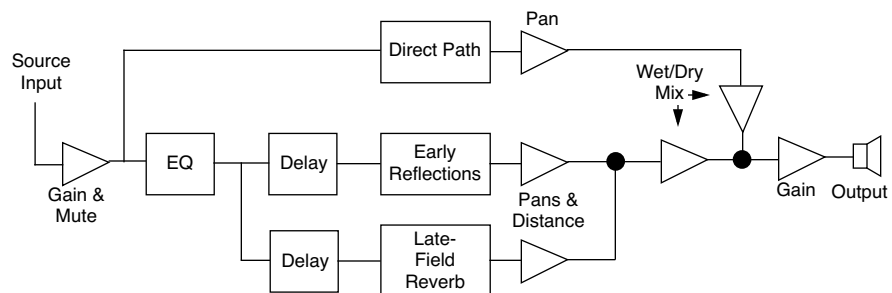


Figure 71. DreamVerb signal flow

The DreamVerb user interface (Figure 70 on page 204) is similarly organized. Reflected energy equalization is controlled with the Resonance panel. The pattern of early reflections (their relative timing and amplitudes) is determined by the room shapes in the Shape panel (Figure 74 on page 207). Early reflection pre-delay, slope, timing, and amplitude are specified in the Reflections panel (Figure 76 on page 212). The Materials panel (Figure 75 on page 209) is used to select relative late-field decay rates as a function of frequency. The late-field pre-delay, decay rate, room diffusion, slope, and level is specified in the Reverberation panel (Figure 77 on page 213). Finally, the Positioning panel (Figure 78 on page 215) contains controls for the placement of the source, early reflections, and late-field reverberation.

Resonance (Equalization) Panel

The Resonance panel (Figure 72 on page 206) is a five-band equalizer that can control the overall frequency response of the reverb, effecting its perceived brilliance and warmth. By adjusting its Amplitude and band Edge controls, the equalizer can be configured as shelving or parametric EQs, as well as hybrids between the two.

The EQ curve effects the signal feeding both the early reflections and the late field reverberations, but not the direct path.

Bands 1 and 5 are configured as shelving bands. Bands 2, 3, and 4 also have an Edge control for adjusting its bandwidth.

Generally speaking, a lot of high-frequency energy results in a brilliant reverberation, whereas a good amount of low-frequency content gives a warm reverberation.

Note: *The values for the EQ parameters are displayed in the text fields at the bottom of the Resonance panel. The values can also be entered directly using the text entry method.*

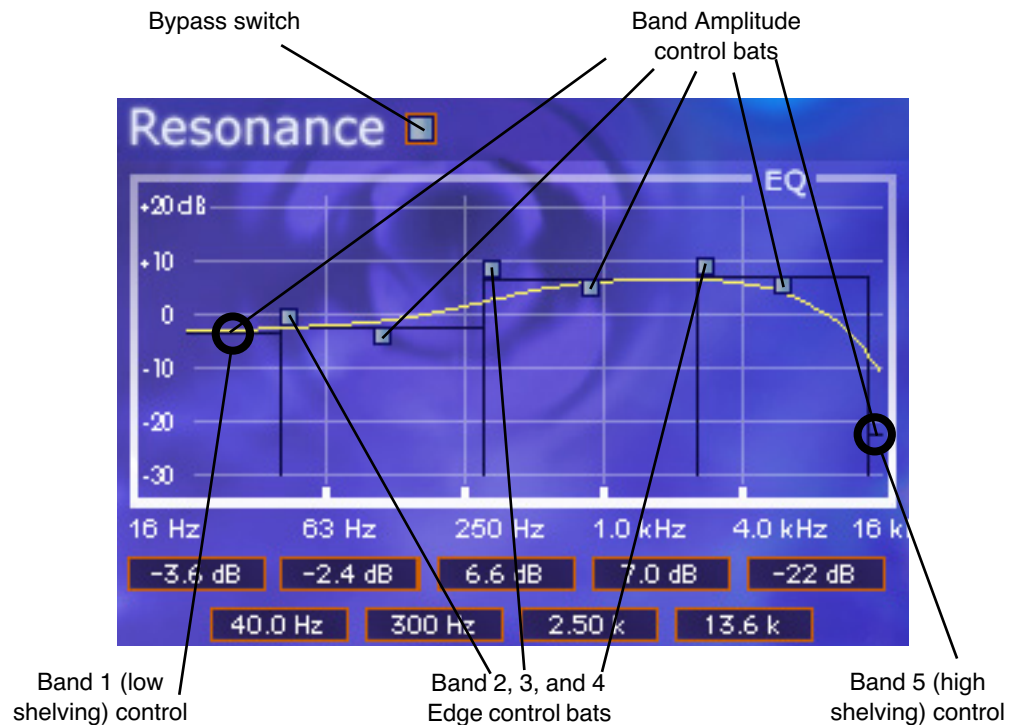


Figure 72. DreamVerb Resonance panel

Bypass

The equalizer can be disabled with this switch. When the switch is off (black instead of grey), the other resonance controls have no effect. This switch has no effect on the direct signal path.

Band Amplitude

Each of the five bands has its own amplitude (gain) control. The amplitude range of each band is -30 dB to +20 dB.

To adjust the amplitude of bands 2, 3, and 4, grab the control bat for the band and drag vertically or use the direct text entry method. For bands 1 and 5, drag the horizontal line (these do not have a control bat).

Band Edge

Bands 2, 3, and 4 have an Edge control. This parameter effects the bandwidth of the band. To adjust the band edge, grab its control bat and drag horizontally or use the direct text entry method.

The effect of the band edge on the filter sound can depend upon the settings of the adjacent bands. For example, the sonic effect of this parameter is more pronounced if the amplitude of adjacent bands is significantly different than that of the band whose edge is being adjusted.

Shelving

The simplest (and often most practical) use of the equalizer is for low and/or high frequency shelving. This is achieved by dragging the left-most or right-most horizontal line (the ones without control bats) up or down, which boosts or cuts the energy at these frequencies.

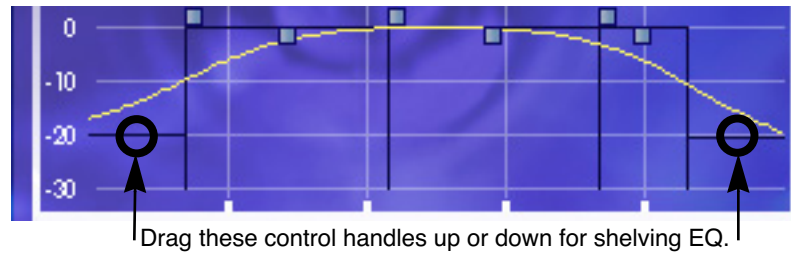


Figure 73. DreamVerb Resonance Shelving Bands

Shape Panel

The parameters in the Shape panel, in conjunction with the Materials panel (Figure 75 on page 209), effect the spatial characteristics of the reverb.

The pattern of early reflections in a reverb is determined by the room shape(s) and the ER start and end points. Two shapes can be blended from 0–100%. All parameters can be adjusted dynamically in real time without causing distortion or other artifacts in the audio. 21 shapes are available, including various plates, springs, rooms, and other acoustic spaces.

Note: The Shape parameters effect only the early reflections. They have no effect on the late field reverberation.


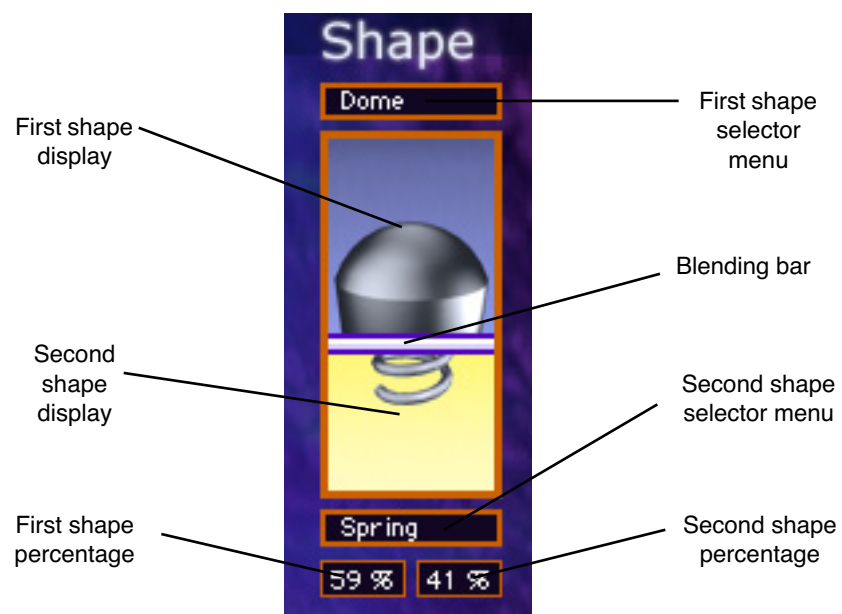


Figure 74. DreamVerb Shape panel

Shape Menus

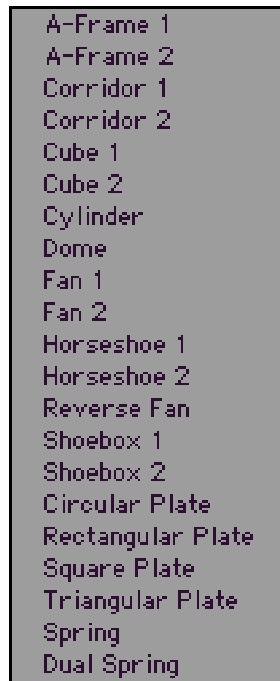

- A-Frame 1
- A-Frame 2
- Corridor 1
- Corridor 2
- Cube 1
- Cube 2
- Cylinder
- Dome
- Fan 1
- Fan 2
- Horseshoe 1
- Horseshoe 2
- Reverse Fan
- Shoebox 1
- Shoebox 2
- Circular Plate
- Rectangular Plate
- Square Plate
- Triangular Plate
- Spring
- Dual Spring

DreamVerb lets you specify two room shapes that can be blended to create a hybrid of early reflection patterns. The first and second shape each have their own menu. The available shapes are the same for each of the two shape menus.

The first shape is displayed in the upper area of the Shape panel, and the second shape is displayed in the lower area.

To select a first or second shape, click its shape pop-up selector menu to view the available shapes, then drag to the desired shape and release.

Shape Blending Bar

The Shape Blending Bar (see [Figure 74 on page 207](#)) is used to blend the two shapes together at any ratio. The two shapes are not just mixed together with this parameter; the early reflections algorithm itself is modified by blending.

Blend the early reflection patterns of the two rooms by dragging the Blending Bar. Drag the bar to the bottom to emphasize the first shape; drag to the top to emphasize the second shape.

The relative percentages of the two rooms appear at the bottom of the Shape panel. To use only one room shape, drag the Blending Bar so a shape is set to 100%.

The resulting early reflection pattern is displayed at the top of the Reflections panel ([Figure 76 on page 212](#)), where each reflection is represented by a yellow vertical line with a height indicating its arrival energy, and a location indicating its arrival time.

Materials Panel

The parameters in the Materials panel, in conjunction with the Shape panel (Figure 74 on page 207) and Reverberation panel (Figure 77 on page 213) effect the spatial characteristics of the reverb.

The material composition of an acoustical space effects how different frequency components decay over time. Materials are characterized by their absorption rates as a function of frequency—the more the material absorbs a certain frequency, the faster that frequency decays.

Note: While materials are used to control decay rates as a function of frequency, the overall decay rate of the late-field reverberation is controlled from the Reverberation panel (see Figure 77 on page 213).

24 real-world materials are provided, including such diverse materials as brick, marble, hardwood, water surface, and audience. Also included are 24 artificial materials with predefined decay rates, and seven air densities.

Note: The parameters in the Materials panel always effect the late-field reverberations. However, the materials parameters effect the early reflections ONLY if the “Filtering” parameter in the Reflections panel (Figure 76 on page 212) is set to a non-zero value.

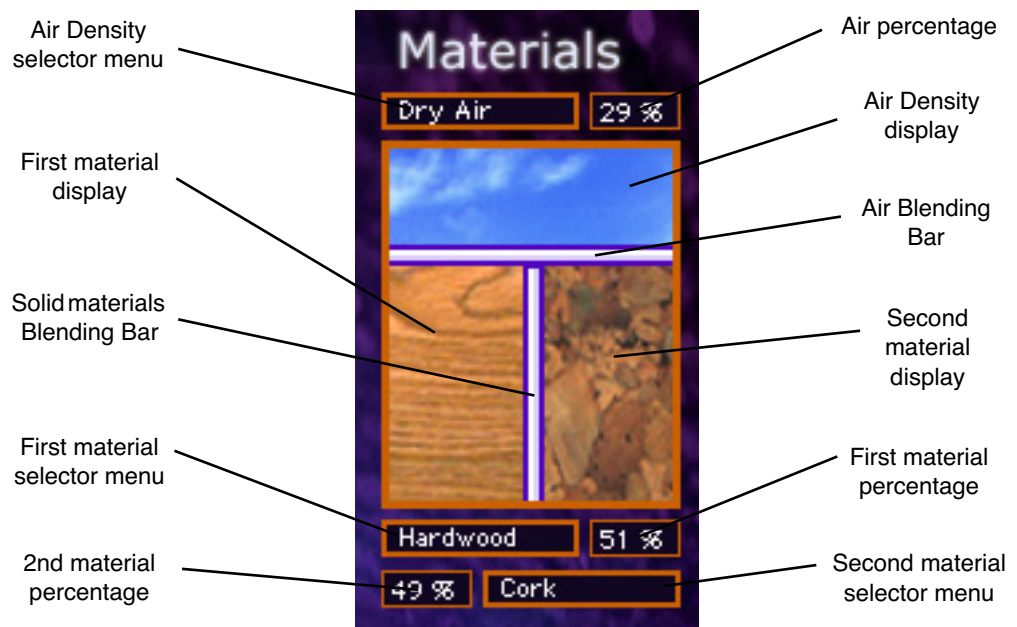


Figure 75. DreamVerb Materials panel

Materials Menus

DreamVerb lets you specify two room materials, which can be blended to create a hybrid of absorption and reflection properties. The first and second room material each has its own menu. The available materials are the same for each of the two materials menus.

The first material is displayed in the lower left area of the Materials panel, and the second material is displayed in the lower right area.

To select the first or second material, click its material pop-up selector menu to view the available materials, then drag to the desired material and release.

For a discussion of the various materials, see [“About the Materials” on page 489](#).

In addition to the “perfect” materials marked with a K, DreamVerb provides “J” materials that are not found in RealVerb Pro. These perform the inverse of the “K” materials. The materials marked with a J preferentially absorb low frequencies; they give the selected decay time at high frequencies, and a much shorter decay time at low frequencies.

Air Density Menu

DreamVerb allows you to specify the density of the air in the reverberant space with this menu, enabling another dimension of sonic control.

Ideal Gas
Dry Air
Humid Air
Smokey Club
Thick Fog
Inverse Air
Inverse Thick Fog

The more dense the air is, the more it absorbs high frequencies. At the top of the Air Density menu is Ideal Gas, where no frequencies are absorbed. The air quality increases in density with each selection as you go down the menu.

Inverse Air and Inverse Thick Fog absorb more low frequencies instead of high frequencies.

Air
Audience
Brick
Carpet
Cellulose
Concrete Block
Cork
Drapes
Fiberglass
Glass Window
Grass
Gravel
Hardwood
Linoleum
Marble
Painted Block
Plaster On Brick
Plaster On Concrete
Plate Glass
Plywood
Sand
Seats
Soil
Water Surface
K0175 Hz
K0250 Hz
K0350 Hz
K0500 Hz
K0700 Hz
K1.00 KHz
K1.40 KHz
K2.00 KHz
K2.80 KHz
K4.00 KHz
K5.60 KHz
K8.00 KHz
J0175 Hz
J0250 Hz
J0350 Hz
J0500 Hz
J0700 Hz
J1.00 KHz
J1.40 KHz
J2.00 KHz
J2.80 KHz
J4.00 KHz
J5.60 KHz
J8.00 KHz

Materials Blending Bars

The Materials Blending Bars (see [Figure 75 on page 209](#)) are used to blend the three materials together at any ratio. The materials are not just mixed together with the bars; the reverberation algorithm itself is modified by blending.

Materials Blending

Blend the two materials by dragging the vertical Blending Bar horizontally. Drag the bar to the right to emphasize the first material; drag to the left to emphasize the second material.

The relative percentages of the two materials appear next to each menu in the Materials panel. To use only one material, drag the Blending Bar so a material is set to 100%.

Air Blending

Blend the air density with the materials by dragging the horizontal Blending Bar vertically. Drag the bar to the top to emphasize the solid materials; drag to the bottom to emphasize the air.

The percentage of air used appears next to the Air Density menu. To use only solid materials, drag the horizontal Blending Bar to the top so air is set to 0%. To use only air, drag the horizontal Blending Bar to the bottom so air is set to 100%.

Reflections Panel

The Reflections panel ([Figure 76 on page 212](#)) offers control over the timing and relative energies of the reverb early reflections (ER). These parameters effect the reverb's perceived clarity and intimacy. Each early reflection is visually represented by a yellow vertical line with a height indicating its arrival energy and a location indicating its arrival time.

Unique to DreamVerb is independent control of the amplitude at the early reflection start and end points which facilitates envelope shaping of the reflections. This allows the ability to fade-in or fade-out the reflections to more accurately emulate acoustic environments or for special effects.

Note: *The values for the Start and End bats are displayed in the text fields at the bottom of the Reflections panel. These values can also be entered directly using the text entry method.*

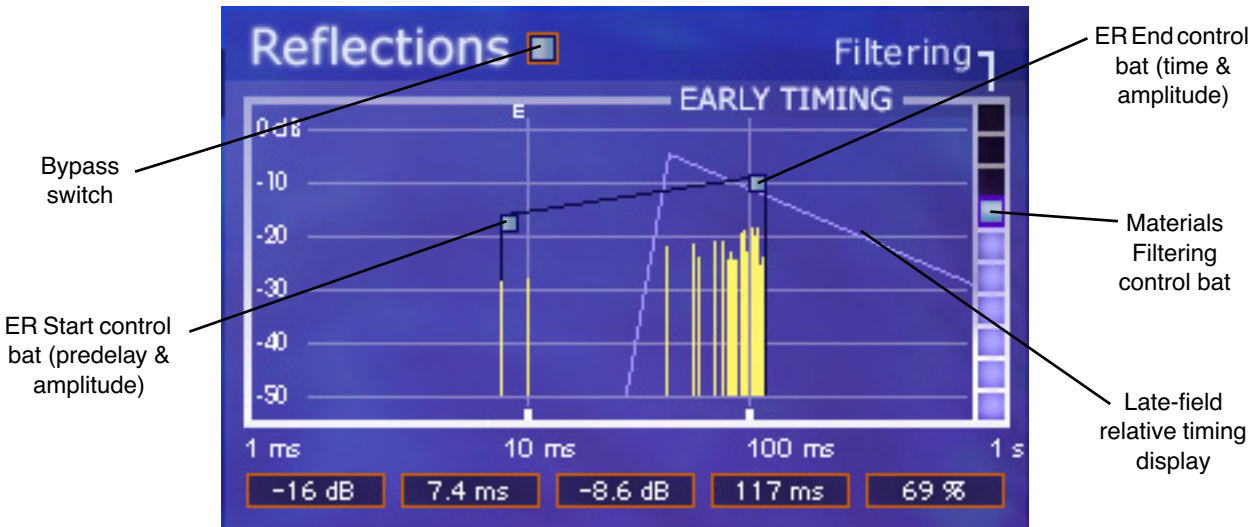


Figure 76. DreamVerb Reflections panel

- Bypass** The early reflections can be disabled with this switch. When the switch is off (black instead of grey), the other Reflections controls have no effect. This switch has no effect on the direct signal path.
- Reflections Start** This bat controls two early reflections start parameters. Dragging the bat horizontally controls the ER predelay (the delay between the dry signal and the onset of the ER). Dragging it vertically controls the amplitude of the reflections energy at the ER start time.
- Reflections End** This bat controls two ER end point parameters. Dragging the bat horizontally controls the ER end time (the time at which the ER is no longer heard). Dragging it vertically controls the amplitude of the reflections energy at the end point.
- Filtering** This parameter determines the amount of filtering from the Materials panel to be applied to the early reflections. The Materials effect upon the ER is most pronounced when Filtering is set to 100%.

Note: The parameters in the Materials panel have no effect on the early reflections unless this parameter value is above 0%.

Late-Field Relative Timing

To highlight the relative timing relationship between the early reflections and late-field reverberation components, the shape and timing of the late-field is represented as an outline in the Reflections panel. The shape of this outline is modified by parameters in the Reverberations panel, not the Reflections panel.

Reverberation Panel

The Reverberation panel (Figure 77) contains the parameters that control the late-field (LF) reverb tail for DreamVerb.

The primary spectral characteristics of the late-field reverberation are determined by the parameters in the Materials panel (page 209) in conjunction with the Reverberation panel settings.

Note: The values for the late-field controls are displayed in the text fields at the bottom of the Reverberations panel. These values can also be entered directly using the text entry method.

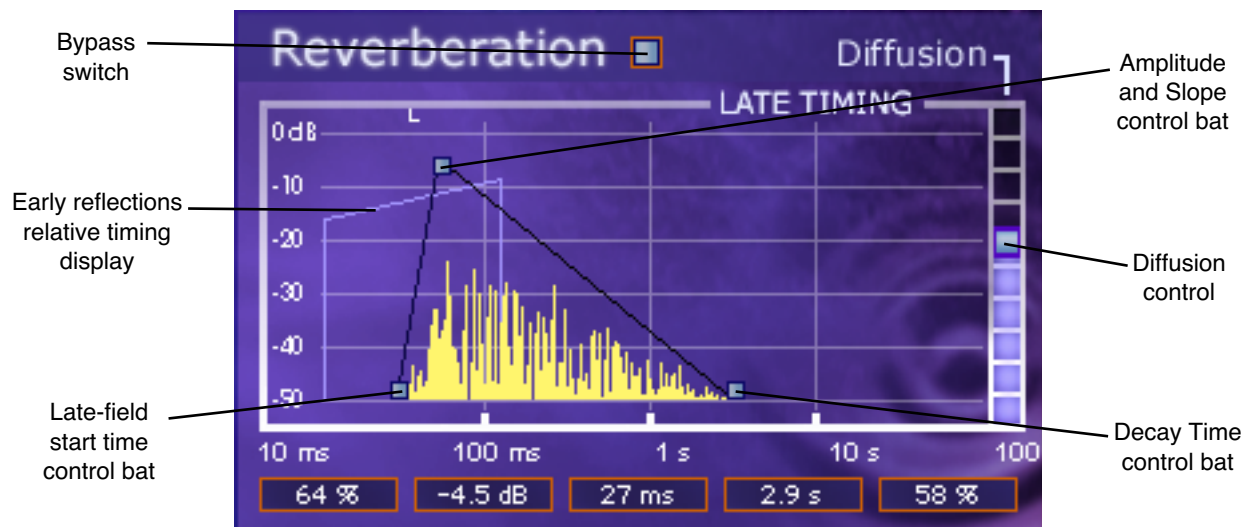


Figure 77. DreamVerb Reverberation panel

Bypass

The late-field reverberations can be disabled with this switch. When the switch is off (black instead of grey), the other Reflections controls have no effect. This switch has no effect on the direct signal path.

Late-Field Start	This parameter defines when the late-field reverb tail begins (the delay between the dry signal and the onset of the LF) in relation to the dry signal.
Amplitude & Slope	This bat controls two late-field parameters. Dragging the bat vertically controls the maximum amplitude of the LF reverb energy. Dragging it horizontally controls the LF slope (fade-in) time.
Decay Time	This control effects the length of the reverb tail. Drag the bat to the left for a short decay, or to the right for a long decay.
Diffusion	This slider effects how quickly the late-field reverberations become more dense. The higher the Diffusion value, the more rapidly a dense reverb tail evolves.
ER Relative Timing	To highlight the relative timing relationship between the early reflections and late-field reverberation components, the shape and timing of the early reflections is represented as an outline in the Reverberation panel. The shape of this outline is modified by parameters in the Reflections panel, not the Reverberation panel.

Positioning Panel

DreamVerb has the ability to separately position the direct path, early reflections, and late-field reverberation. The Positioning panel ([Figure 78 on page 215](#)) provides panning controls for each of these reverb components. In addition, a proprietary Distance control adjusts perceived source distance. These controls allow realistic synthesis of acoustic spaces—for instance listening at the entrance of an alley way, where all response components arrive from the same direction, or listening in the same alley next to the source, where the early reflections and reverberation surround the listener.

Note: *When DreamVerb is used in a mono-in/mono-out configuration, all Positioning controls except Distance are unavailable for adjustment.*

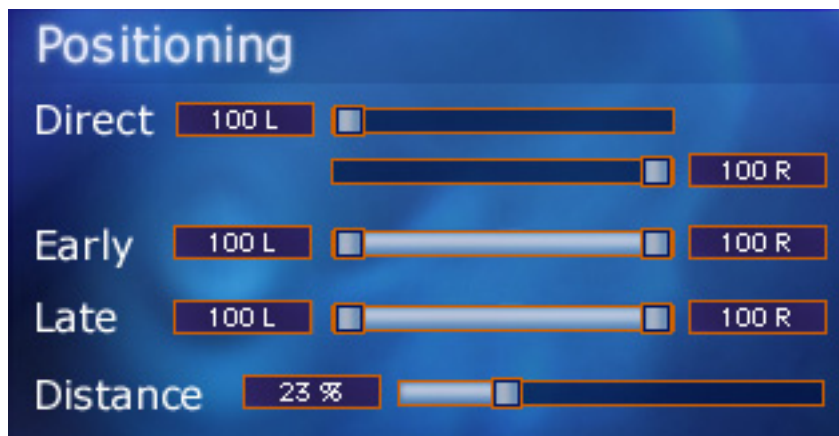


Figure 78. DreamVerb Positioning panel

Direct

These two sliders control the panning of the dry signal. The upper Direct slider controls the left audio channel, and the lower Direct slider controls the right audio channel.

A value of <100 pans the signal hard left; a value of 100> pans the signal hard right. A value of <0> places the signal in the center of the stereo field.

Note: If the DreamVerb “Mix” parameter (page 216) is set to 100% wet or the Wet button is active, these sliders have no effect.

Early

This slider, which contains two control handles, adjusts the stereo width of the early reflections.

Late

This slider, which contains two control handles, adjusts the stereo width of the late-field reverberations.

Early & Late Adjustment

The left and right slider handles are dragged to adjust the stereo width. For a full stereo spread, drag the left handle all the way to left and right handle all the way to the right. When the slider handles are not set to maximum width, the center of the slider can be dragged left or right to set the positioning of the signal.

To pan a mono signal hard left or right, drag the slider all the way to the left or right.

Distance

DreamVerb allows you to control the distance of the perceived source with this slider. In reverberant environments, sounds originating close to the listener have a different mix of direct and reflected energy than those originating further from the listener.

Larger percentages yield a source that is farther away from the listener. A value of 0% places the source as close as possible to the listener.

Levels Panel

This panel is where DreamVerb input/output levels, wet/dry mix, and reverb mute controls can be modified.

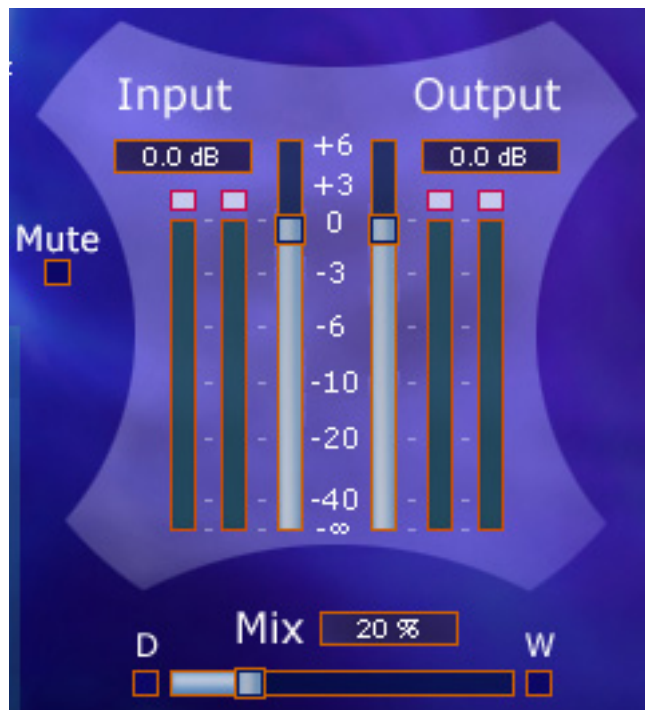


Figure 79. DreamVerb Levels panel

Input

Modifies the signal level at the input to DreamVerb. A value of zero is unity gain.

Output

Modifies the signal level at the output of DreamVerb. A value of zero is unity gain.


- Mute** This switch mutes the signal at the input to DreamVerb. This allows the reverb tail to play out after mute is applied, which is helpful for auditioning the sound of the reverb. Mute is on when the button is gray and off when the button is black.
- Mix** The wet and dry mix of DreamVerb is controlled with this slider. The two buttons above this slider labeled “D” and “W” represent Dry and Wet; clicking either will create a 100% dry or 100% wet mix.
- Dry** When this button (labeled “D”) is enabled, DreamVerb is 100% dry. It has the same effect as moving the Mix slider to 0%. Dry is on when the button is gray and off when the button is black.
- Wet** When this button (labeled “W”) is enabled, DreamVerb is 100% wet. It has the same effect as moving the Mix slider to 100%. Wet is on when the button is gray and off when the button is black.

DreamVerb Preset Management

- Factory Presets** In the preset menu there is a bank of 32 factory presets. Presets modified in the bank are saved when another preset within the bank is selected.
- Edits to any and all presets in the list are maintained separately within each instance of a plug-in within a session.

To return to the default factory bank settings, reload the factory bank.

Save/Load

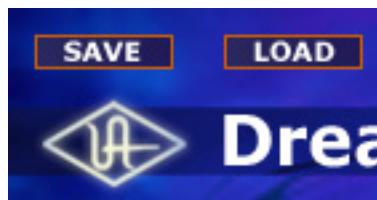

Not all plug-in hosts include a method for loading and saving plug-in settings. DreamVerb includes Save and Load buttons within the graphical interface itself to accommodate hosts that do not have this feature.

Note: Save/Load pre-dates the UAD plug-in Toolbar. We recommend using the Toolbar for consistency. See “UAD Toolbar” on page 87 for details.

The Save/Load feature in DreamVerb supports presets but not banks. To save and load banks, use the host’s bank management feature (if available).

Default Preset Location

When the Save and Load buttons are used within DreamVerb, the file open and save dialogs default to the same location each time.

Windows

On Windows systems, the default preset location is inside the Presets directory, which is created within the directory selected during software installation. For example, if the default location was specified when running the UAD Powered Plug-Ins Installer, the location would be:

```
C:\Program Files\Universal Audio\Powered Plug-ins\Presets
```

This default location can be changed during installation; the new location will be remembered as the default.

Mac

On OS X systems the default preset location is:

```
Library:Application Support:Universal Audio:Presets
```

Using Host Application Management

Most host applications include their own method of managing plug-in presets. For example, the currently selected preset is saved in Cubase/Nuendo when “Save Effect” is used. The solo/mute buttons (wet, dry, input) are not saved.

All presets and programs are saved when “Save Bank” is used in the host. They are also saved in the session file for each instance of the plug-in.

Editing the name modifies the current preset's name. The new name will appear in all preset selection lists and will be saved with the session, bank, or effect.

Spatial Characteristics

Size

The apparent size of a reverberant space is dependent on many factors. Most reverbs on the market have a “size” parameter, which usually modifies several facets of the reverb algorithm at once. You may notice DreamVerb does not have a “size” parameter. Instead, the elements that control the reverberant space are available to the user.

In DreamVerb, room size is determined by the interaction between all the parameters in the Reflections and Reverberation panels. To get a larger-sounding space, increase the T60 (reverberation time), use proportionally more air, increase the pre-delays, and slightly shift the Resonance transition frequencies to lower values.

Pre-Delay

Intimacy and remoteness are largely controlled by the pre-delays. Generally speaking, use shorter pre-delays for more intimate spaces. Clear spaces have most of their energy in the first eighty milliseconds or so; muddy spaces have a lot of late arriving energy.

Space

In some sense, Shape determines the spatial characteristics of the reverberator, whereas Materials effects the spectral characteristics.

Preset Design Tips

Here are some practical tips for creating useful reverbs with DreamVerb. These are not rules of course, but techniques that can be helpful in designing the perfect sonic environment.

ER = Early Reflections	Hf = High frequency
LF = Late-field Reverberation	Lf = Low frequency

General Tips (a tour):

- Start by setting a general timing on the ER and LF graphs to give a rough reverb size. This timing ordinarily needs to be tweaked several times along the way.
- The materials and air density define the frequency decay of the LF, and also the coloration of the ER if ER filtering is used (the slider on the right of the Reflections panel).
- Typically, materials should be blended. Try blending contrasting high frequency roll-off materials with high-frequency reflecting materials or inverse materials. This tends to add nice dimension to the LF tail. Start with one useful material and experiment with blending.
- Materials can have an extreme filtering effect if no air density is used. Most presets sound better with an air blending. If you don't want the additional coloration of air, blend with "Ideal Gas" which performs no filtering.
- The room shapes define the ER pattern; they do not effect the LF. Solo the ER and choose a shape that works well for your source or environment.
- Blending shapes does not always yield desirable results. Use shape blending with discretion, or to define a more complex room.
- Start with the EQ flat, set the approximate sound with the materials, then EQ the input to cut or boost specific frequencies.
- The EQ is often most useful for a simple Lf or Hf roll-off/boost, or to notch out bothersome frequencies for particular sources. For full mix ambience/mastering presets, use the EQ to cut most of all LF input, which yields added ambience without mucking up the mix. This is a powerful EQ, so experiment!

- Try different diffusion settings for your preset (the slider on the right of the Reverberation panel). Diffusion radically alters the reverberation sound and is source dependent. Higher diffusion values yield a fuller sound, good for percussive sounds; lower diffusion values yield a less dense sound, good for vocals, synths, etcetera.
- When monitoring your preset, try switching from Dry solo, Wet solo, and a useful mix. Solo the reflections and reverberation, and disable/enable EQ. Try different sources and mixes. Reach for the headphones every now and then. In general just keep things moving, as ear fatigue can be particularly deceiving with reverb sounds.
- The Positioning panel is generally only needed for automation. Ignore these settings for preset design unless going for a panning effect or monitoring real-world use.
- Often when you've got a really great preset designed, all it takes are a few subtle changes to make a number of other great presets.

Tips for designing a natural environment sound:

- Make timing proportional. As the size of the simulated environment increases, the length of the pre-delay for the EF, LF, and LF tail should increase proportionally. Typically, ER and LF pre-delay should be not too far apart, with LF starting shortly after ER.
- Place the ER timing preceding/leading into the LF
- ER amplitude naturally decays. Slope the amplitude down from left to right.
- Use ER filtering, as this improves the reverb sound in almost all situations.
- Try a gradual Lf or Hf roll-off (or boost) with the EQ section. The left and right-most EQ bands are shelf filters, which are perfect for this job. The adjacent bands can be used to shape the roll-off.
- Try natural materials and air densities before the unnatural custom or inverse materials and air densities.
- Try adding onset (slope) to the LF, as many environments naturally have an LF onset.

For additional info:

- Read [Chapter 48, "RealVerb Pro"](#) (page 484) of this manual.

CHAPTER 18

Empirical Labs EL7 FATSO

Introduction

FATSO Jr.

Endorsed and scrutinized for accuracy by designer Dave Derr of Empirical Labs (originator of the hugely popular Distressor), UA has painstakingly recreated the highly regarded FATSO Jr. as a plug-in, capturing the sonic nuances of the hardware. The FATSO (Full Analog Tape Simulator and Optimizer) is designed to musically integrate frequencies and transients and increase the apparent volume of your source material in the same way classic analog equipment does. It achieves this through an ingenious design and a creative feature set, giving users the ability to impart the wonderfully warm and pleasing sonic characteristics of magnetic recording tape and class A transformer and tube circuits. The Input control gives the ability to dial in harmonic generation/distortion while “Tranny” and “Warmth” allow the user to dial in just the right amount of tape and tube tone. The FATSO also operates as a highly versatile compressor—useful for mixing and stereo buss compression. From tame to trashed, the FATSO offers a wide palette of possibilities for adding character and cohesiveness to your DAW tracks.

FATSO Sr.

Dubbed the FATSO Sr., UA has also worked closely with Dave Derr to bring you his never-before-available original concept of the FATSO, bundled at no additional charge. Adding his own custom mods that turn the original FATSO into an unbelievable powerhouse of tonal-shaping possibilities, the FATSO Sr. offers a “Tranny” saturation control, sidechain filtering, and deeper compression parameters including Threshold, Attack and Release. These special FATSO Sr. mods are only available with Universal Audio’s plug-in version of this unique studio tool.

Note: *The additional controls in the FATSO Sr. do not add to the DSP functionality of the FATSO Jr. Therefore, both plug-ins use the same amount of UAD DSP.*

FATSO Screenshots



Figure 80. The FATSO Jr. plug-in window



Figure 81. The FATSO Sr. plug-in window

FATSO Functional Overview

Four Processing Types

The FATSO was essentially designed to integrate frequencies in a musical manner and provide some foolproof vintage sounding compression. Generally, it is difficult to make the unit sound unnatural due to its vintage topology. FATSO provides four types of processing.

Saturation and Distortion Processor

Harmonic Generation & Soft Clipper

Basically, this is a distortion generator associated with the Input knobs. Anytime you pass a signal through the FATSO, it passes through this part except in bypass. This processing is useful to softly but instantly clip peaks and transients, allowing a higher average level. Aggressive distortion can also be achieved through the same controls.

It is well known that the triode distortion in tube circuits produces lots of 2nd order and 3rd order harmonics, in somewhat varying ratios. Analog tape also saturates in this manner. The 3rd order harmonic is induced in the FATSO by increasing the level through two discrete distortion circuits and is usually the result of flattening the tops and bottoms of waveforms. Second order harmonics are also added especially while compressing in the FATSO. The FATSO's input clipping will give you the same result. These lower order harmonics form "the octave" and "the octave and a fifth" to the fundamental musical tones. They are actually "musical" distortion. Harmonics above the

2nd and 3rd get increasingly harsh and unmusical, and therefore should be lower in amplitude (<-60 dB) to keep within our line of thinking. Second harmonic is considered to be the warmest and most “consonant” harmonic distortion.

Warmth Processor

High Frequency Saturation

This circuit is meant to simulate the softening of the high frequencies that occurs with analog tape. Basically, as the Warmth is increased, overly bright signals and transients will be quickly attenuated. The time constants are very nearly instant, so the high frequencies return very quickly after a loud burst.

The Warmth circuit is by far the most complex part of the FATS0. Basically, it is a very strange high frequency (HF) gain control circuit or HF limiter. It is very unobtrusive in operation since it gets in and out of the way very quickly. The desired result is akin to the HF saturation that analog tape exhibits when the HF amplitude interacts with the tape recorder bias to produce “self erasure” of certain frequencies. The nature of the filter allows the corner frequency to move as attenuation occurs.

There is only one control for Warmth but there are other ways to control the overall action of this circuit. If you do decide to use the compressor, set it up first because it affects the operation of Warmth. There is heavy interaction between the compressor and Warmth settings. Perhaps the best way to think of the settings is as compressor threshold, with 7 having the lowest threshold and the most Warmth, responding quickly and often to high frequency content. Just remember that instead of controlling the overall level, the Warmth “compressor” threshold only affects the high frequencies.

The Tranny Processor

Transformer & Tape Head Emulation

The Tranny circuit (“Tranny” is short for transformer) is a simulation of the effect of input and output transformers of older devices and adds the low frequency harmonics that characterize analog tape. This is extremely useful on pure low frequency type tones that don't cut through small speakers. It adds upper “warm” harmonics to frequencies below 150 Hz, especially those even lower such as 40 Hz, the low string on a bass guitar, helping it to cut through on smaller speakers.

Transformer design and use is an art, and there are always trade-offs. However, it has been widely known that a good audio transformer circuit can do wonderful things to an audio signal. This was the goal of the Tranny circuit. The hardware designers tried to emulate the desirable characteristics of the good old input/output transformers in a consistent musical way, and in a selectable fashion. The addition of harmonics and peak saturation along with frequency and phase changes on the low frequencies occurs. They found that they could capture the low frequency effects of large and now expensive older output transformers in a weird, internally buffered switchable design.

To sum up the musical results of the Tranny circuit, there will be a little more edge in the midrange, and the super low frequencies will have been harmonically altered in a way that allows them to sound louder, even though the peaks are less than the original. Playback on small speakers will show an improved audibility of low end from the result of the psycho-acoustically-pleasing distortion the Tranny adds.

Compression Processor

Classic Knee Compression, Empirical Labs Style

These are your typical automatic leveling devices that you find used on just about every instrument and vocal track, as well as on the overall buss. Only it's Empirical Labs compression – smooth and sweet, but in your face!

There are essentially four discrete compressors in the FATSO: Buss, General Purpose (G.P.), Tracking, and Spank. Switching modes simultaneously sets the compressor threshold, ratio, attack, and decay. This was done to provide an easy-to-set, yet versatile group of curves. The release curve of all types is logarithmic, meaning it lets off quickly at first and then slows. This release curve is a big part of the FATSO's compressor sound.

Note: *Threshold, attack, and decay values can be modified in the FATSO Sr.*

Buss

Buss mode (green LED) is a very gentle 2:1 type ratio with slow attack, fast release, and very soft knee. One to four dB of gain reduction is typical for this compressor type. Five or more dB of Buss compression is hitting it hard!

G.P.

General Purpose mode (yellow LED) is medium attack slow release type that sounds pretty invisible while able to maintain a consistent RMS level. The slow release will not pull things into your face unnaturally.

Tracking

Tracking mode (green and yellow LED) is an 1176 type compressor that is great for tracking instruments and vocals during the recording process or during mixdown.

Spank

Spank mode (red LED) is a radical limiter type compressor that was specifically designed to emulate the nice squeeze of the older SSL talkback compressors from the 70's & 80's, but with quite a bit of higher fidelity. Note that Spank's aggressive nature will tend to dominate when combined with any of the other modes.

FATSO Controls

General notes about FATSO controls are below, followed by a detailed description of each channel-specific control, the global controls, and the FATSO SR. controls.

Mono/Stereo Operation

The FATSO is a two-channel device capable of running in stereo or dual-mono modes. Controls for both channels can be linked for ease of stereo operation when both channels require the same values (see [“Link Controls” on page 229](#)), or unlinked when dual-mono operation is desired.

Each of the channel functions has its own separate group of controls (one set each for channels 1 and 2). Since the controls for each of the two channels are identical, they are detailed only once.

Note: *When the FATSO is used in a mono-in/mono-out configuration, the channel 2 controls have no effect and the LINK parameters ([page 229](#)) are disabled.*

Pushbuttons

All FATSO pushbuttons are momentary. The value of the parameter increments by one step each time the button is clicked (holding the button down does not continue to increment the value). The value cycles to the beginning when the end of the range is reached. Clicking on the control LED indicators has no effect, with the exception of the LINK parameters ([page 229](#)).

Tip: *Shift+click any pushbutton to decrement its value by one.*

Channel Controls

Input

 


The Input knob defines the signal level going into the plug-in. Higher levels result in a more saturated signal. Levels above 0 VU provide dramatically higher distortion characteristics, especially when clipped (as indicated by the Pinned LED). See [THD Indicators](#) below.

When the compressor is active (see "[Compressor Mode](#)" below), higher input values also result in more compression, as indicated by the gain reduction meters ([page 227](#)).

Note: This control has no effect when [Bypass \(page 228\)](#) is active.

THD Indicators



The Total Harmonic Distortion (THD) LED's provide some reference operating levels. The yellow "0 VU" LED light indicates around 1% THD, and the red "Pinned" LED indicates 5% THD or more. These LED's are an excellent guide to where the user is in the "Grunge Department." You will find that the harmonic distortion is generally more obvious on overall mixes and complex programs. On individual instruments, sometimes 10% distortion sounds "fat" and "analog" and isn't heard as distortion at all.

Compressor Mode



The COMP button defines which compressor mode is active. See "[Compression Processor](#)" on [page 224](#) for a description of the modes.

Spank mode can be combined with any of the other three modes for a total of seven available compressor modes.

Note: Generally speaking, the Input and compressor Mode controls should be set before the other FATSO processor settings, because of the high degree of interaction between the compressor and the other processors.

Mode LED's

The three Mode LED's indicate the active mode. Refer to [Table 16 on page 227](#) for each specific value. The compressor is inactive when all Mode LED's are off.

Table 16. Compressor Mode LED States

Compressor Mode LED State	Active Compressor Mode(s)
All Unlit	Compressor inactive
Green	Buss
Yellow	General Purpose (G.P.)
Green + Yellow	Tracking (most versatile ratio)
Red	Spank
Red + Green	Spank + Buss
Red + Yellow	Spank + General Purpose
Red + Green + Yellow	Spank + Tracking

GR Meter

The Gain Reduction Meter displays the amount of gain reduction occurring within the FATSO compressor, expressed as negative dB values.



Note: At extreme settings, the GR Meter may indicate gain reduction is occurring even when the compressor is disabled. This behavior is identical to the hardware unit.

Warmth



This button defines the Warmth amount. Warmth simulates the softening of the high frequencies that occurs with analog tape saturation (see “Warmth Processor” on page 223 for detailed Warmth description). Higher values increase the Warmth, as indicated by the Warmth Meter.

Values of 1 to 7 are available. The current value is indicated by the arc of Warmth LED’s. Warmth is off when all LED’s are unlit.


Warmth Meter

The Warmth Meter is a very accurate display of the amount of high frequency attenuation, as defined by the Warmth button. The meter shows the amount of HF gain reduction occurring at 20 kHz.



Note: At extreme settings, the Warmth Meter may indicate activity even when Warmth is disabled. This behavior is identical to the hardware unit.

Bypass/Tranny

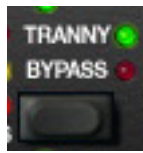

This black button is a multifunction control. Clicking the button repeatedly cycles through Tranny, Bypass, and Tranny Off modes. The currently active mode is indicated by the adjacent LED's.

Tranny (green LED)

The Tranny processor is active in this mode (see [“The Tranny Processor” on page 223](#) for a detailed description of this mode). The Tranny circuit adds frequency “rounding,” low order clipping, intermodular distortion and transient clipping. On FATS0 Sr., the Tranny amount can be set with the Tranny Level control ([page 233](#)).

Note: *Disabling Tranny will yield a significant reduction in UAD DSP usage when DSP LoadLock ([page 74](#)) is disabled. If DSP LoadLock is enabled (the default setting), disabling Tranny will not reduce DSP usage.*

Tranny Off (red and green LED's off)

In this mode, the Tranny processor is inactive but the other processors are active. This mode requires less UAD DSP than when Tranny is active.

Bypass (red LED)

All FATS0 controls and processing for the channel are inactive in this mode.

Note: *UAD DSP load is not reduced in Bypass mode. If you want to reduce UAD DSP usage when bypassing both channels of the FATS0, use the Power switch instead ([page 230](#)).*

Output



The Output knob controls the signal level that is output from the plug-in.

Note: *This control has no effect when Bypass (“Bypass/Tranny” on [page 228](#)) is active.*

Global Controls

The global controls are not channel-specific; they apply to both channels.

Link Compress



The control signal sidechains of the gain reduction processors for channels 1 and 2 can be linked using the Link Compress function.

To activate Link Compress, click the LINK COMPRESS text or LED on Ch1, on the left. The feature is active when the LED is illuminated.

In typical use on stereo signals, Link Compress should be active so the stereo imaging is maintained. If the compressor is inactive ([“Compressor Mode” on page 226](#)), or when FATS0 is used in a mono-in/mono-out configuration, this control has no effect.

Important: *Unlike the other controls for channels 1 and 2, which are identical on the left and right sides of the interface, the Link COMPRESS function is on the left side only (not to be confused with Link CONTROLS, which is on the right side only).*

Link Controls



The parameter controls for channels 1 and 2 can be linked using the Link Controls function.

To activate Link Controls, click on the LINK CONTROLS text or LED on Ch2, on the right. The feature is active when the LED is illuminated.

Note: *Although the left/right Warmth and Tranny controls are linked when Link Controls is active, the actual Warmth and Tranny processors are not stereo linked. This behavior is identical to the original hardware.*

Controls Linked

Link Controls is provided for stereo operation when both channels require the same values. When enabled, the right channel controls “snap” to match the left channel control values, and modifying any channel control causes its stereo counterpart control to move to the same position (channel 1 & 2 controls are ganged together in this mode).

Important: *Right channel parameter values are lost the moment Link Controls is enabled.*

Controls Unlinked

Unlink the controls when dual-mono operation is desired. Channel 1 and 2 controls are completely independent in this mode, and automation data is written and read by each channel separately. Link Controls is disabled when the FATSO is used in a mono-in/mono-out configuration.

Important: Unlike the other controls for channels 1 and 2, which are identical on the left and right sides of the interface, the Link CONTROLS function is on the right side only (not to be confused with Link COMPRESS, which is on the left side only).

Power




The Power toggle switch determines whether the plug-in is active. It is useful for comparing the processed settings to the original signal. When Power is in the Off (down) position, plug-in processing is disabled, UAD DSP usage is reduced, and all LED's are unlit.

Note: UAD-2 DSP usage is reduced only when DSP LoadLock (page 74) is disabled. If DSP LoadLock is enabled (the default setting), disabling Power will not reduce DSP usage.

Click the lower portion of the switch to disable the plug-in; click the upper portion to activate (or click+drag up/down on the switch).

FATSO Sr. Controls

These controls are unique to the FATSO Sr. However, because the additional controls in the FATSO Sr. do not add to the DSP functionality of the FATSO Jr., both plug-ins use the same amount of UAD DSP.

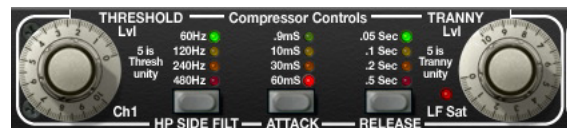


Threshold



This knob enables manual threshold control of the FATSO compressor. Higher values lower the threshold, and therefore increase the amount of compression. A value of 5 is the unity setting.

The Input control (page 226) also affects the compression threshold. Generally speaking, set the amount of desired signal saturation with Input first, then adjust Threshold as desired.

Filter (HP SIDE FILT)

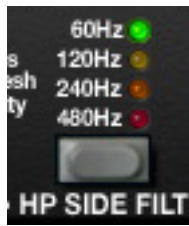

Filter regulates the cutoff frequency of the filter on the compressor's control signal sidechain. When active, frequencies below the filter value are not passed to the sidechain. Values of 60 Hz, 120 Hz, 240 Hz, 480 Hz, and Off are available. The filter slope is 6 dB per octave. When the compressor is disabled, Filter has no effect and its LED turns off. When the compressor is enabled, Filter returns to its original value.

Tip: Removing low frequency content from the sidechain can reduce excessive gain reduction and/or “pumping” on bass-heavy audio signals without reducing bass content of the audio signal itself.

Note: The Filter parameter affects the control signal (sidechain) of the compressor only. It does not filter the audio signal.

Attack



Attack sets the amount of time that must elapse once the input signal reaches the threshold level before compression is applied. The faster the attack, the more rapidly compression is applied to signals above the threshold.

The available attack time values are 0.9ms, 10ms, 30ms, 60ms, and Default (unlit). The unlit behavior depends upon whether or not the compressor is active. These behaviors are described below.

Note: Attack values are approximations. Actual attack and release times may vary depending on the compressor mode selected.

Attack LED's Unlit – Compressor Active

When the compressor is enabled and all Attack LED's are unlit, the attack characteristic of the active compressor mode in FATS0 Jr. is used. This “default” FATS0 Jr. behavior can then be manually overridden with the Attack button. However, when “pure” Spank mode is active, Attack cannot be modified. When Spank mode is combined with another compressor mode, Attack can be changed, but the results are typically very subtle.


Tip: After experimenting with other time constants, one can return to the default attack setting of the FATS0 Jr. if desired by cycling the attack control until NO LEDs are lit (which indicates the default FATS0 Jr. time constant).

Attack LED's Unlit – Compressor Inactive

When the compressor is disabled and all Attack LED's are unlit, the button is disabled.

Note: This control has no effect when the compressor is inactive, or when it is in "pure" Spank mode (see "Compressor Mode" on page 226).

Release

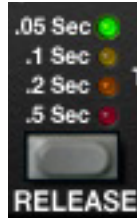

Release sets the amount of time it takes for compression to cease once the input signal drops below the threshold level. Slower release times can smooth the transition that occurs when the signal dips below the threshold, especially useful for material with frequent peaks. However, if you set too large of a Release time, compression for sections of audio with loud signals may extend to lengthy sections of audio with lower signals.

The available release time values are 0.05s, 0.1s, 0.s, 0.5s, and Default (unlit). The unlit behavior is depends upon whether or not the compressor is active. These behaviors are described below.

Note: Release values are approximations. Actual attack and release times may vary depending on the compressor mode selected.

Release LED's Unlit – Compressor Active

When the compressor is enabled and all Release LED's are unlit, the release characteristic of the active compressor mode in FATS0 Jr. is used. This "default" FATS0 Jr. behavior can then be manually overridden with the Release button. However, when "pure" Spank mode is active, Release cannot be modified. When Spank mode is combined with another compressor mode, Release can be changed, but the results are typically very subtle.

Tip: After experimenting with other time constants, one can return to the default release setting of the FATS0 Jr. if desired by cycling the release control until NO LEDs are lit (which indicates the default FATS0 Jr. time constant).

Release LED's Unlit – Compressor Inactive

When the compressor is disabled and all Release LED's are unlit, the button is disabled.

Note: This control has no effect when the compressor is inactive, or when it is in "pure" Spank mode (see "Compressor Mode" on page 226).

Tranny Level



This control determines the amount of Tranny processing (see “The Tranny Processor” on page 223 for a detailed description). Higher values make the Tranny effect more prominent. Increasing the Tranny level also increases the signal THD (see “THD Indicators” on page 226), and the sensitivity of the Warmth processor (page 227). A value of 5 is the unity setting.

Note: This control has no effect when the Tranny processor is inactive (see “Bypass/Tranny” on page 228).

LF Sat LED

The LF Sat (Low Frequency Saturation) LED indicates the amount of LF saturation in the Tranny processor. Higher Tranny Level values increase the LF saturation.

FATS0 Jr. Presets

When loading presets created on the FATS0 Jr. into the FATS0 Sr., the parameters that are unique to FATS0 Sr. are set to their default control values. The default values of the unique FATS0 Sr. parameters are: Threshold/Tranny knobs at 5, and Filter/Attack/Release buttons off.

WebZine Article

An in-depth article with practical applications of the FATS0 can be found in the “Analog Obsession” article of the Universal Audio July 2009 Webzine:

• <http://www.uaudio.com/webzine/2009/july/analog.html>



The Empirical Labs EL7 FATS0 Jr. hardware unit

All visual and aural references to the FATS0 and all use of EMPIRICAL LABS’s trademarks are being made with written permission from EMPIRICAL LABS. Special thanks to Dave Derr for assistance with this project.

CHAPTER 19

EMT 140 Plate Reverb

Overview

EMT's founder Wilhelm Franz made a breakthrough in 1957 with the release of the EMT 140, which utilized a resonating metal plate to create ambience. Nothing is quite like the wonderfully lush and distinctive tone of plate reverb that still endures as part of the fabric of modern music. However, plate reverb systems are large, expensive, require maintenance, and need to be isolated from external vibration; therefore plates are usually found only in commercial studios.

Universal Audio's uncanny representation of that unmistakable sound can be found in the EMT 140 plug-in. Measured and analyzed by UA's DSP circuit modeling experts and then tuned by ear over a four month period, the EMT 140 replicates the sonic signature of three uniquely different EMT 140s formerly installed at the Plant Studios in Sausalito, CA. That's nearly two thousand pounds of sound in one plug-in! Impractical or impossible for most before, Universal Audio brings this classic mix tool within the reach of everyone. Licensed and endorsed by EMT Studioteknik GmbH as the world's only authentic plate reverb emulation.

We thoughtfully combined the look of various elements from the EMT 140 system into one convenient panel, replicating the original damper controls for decay, and adding additional controls for the convenience of the modern DAW user.

EMT 140 Screenshot



Figure 82. The UAD EMT 140 plug-in window

EMT 140 Controls

The EMT 140 interface is an amalgam of controls found at the plate amplifier itself and the remote damper controls, plus a few DAW-friendly controls that we added for your convenience. The GUI incorporates the original look and feel of those controls, and utilizes that look for the DAW-only controls.

Note: When adjusting parameters, keyboard shortcuts are available for fine, coarse, and other control methods. See “Shortcuts” on page 92.

Input Filter

The Input Filter is a dedicated equalizer that is used to reduce low frequency content in the reverb. On hardware plate systems, this setting is rarely modified because it is found at the plate amplifier unit itself and is not easily accessed from the control room.


EMT 140 contains two types of filters: original EMT electronics and Martech electronics which was/is a common plate system retrofit.

In the modeled source units at The Plant, plates A and B use the EMT electronics while Plate C utilizes the Martech electronics. In EMT 140, you can use either filter type with any of the three available plates.

The original EMT filter (indicated by black text) is a cut filter centered at 80 Hz, with three available levels of attenuation: -4 dB, -10 dB, and -16 dB. In controls mode, these values are prefaced with an “E” to designate the original EMT electronics model.

The Martech filter (indicated by red text) is a shelf filter, therefore all frequencies below the frequency are reduced. Six shelving frequencies are available: 90 Hz, 125 Hz, 180 Hz, 250 Hz, 270 Hz, and 360 Hz. In controls mode, these values are prefaced with an “M” to designate the aftermarket Martech electronics model.

Note: There is one Input Filter per plug-in instance. Each plate model (A, B, C) within a preset cannot have a unique Input Filter value.

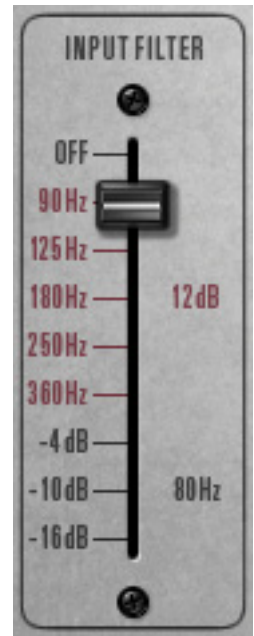

Reverb Controls

Plate reverb systems are extremely simple: A remote damper setting, and a high pass or shelf filter found at the plate itself. Additional manipulation is often used, including reverb return equalization, which is typically achieved at the console. Predelay is/was often achieved when necessary with tape delay, sending the return to a tape deck. Different tape speeds allowed different pre-delay amount.



The original damper controls are remote control devices, usually found somewhere near the control room for quick access. Our hybrid panel combines three remotes into the panel, with a switch to select each of the three available systems.

Note: The reverb controls (Plate Select and Reverb Time) are completely independent from all other plug-in controls.

Plate Select



Three plate models (algorithms) are available for reverb processing. This switch specifies which plate will be active.

Each setting is a model of a completely separate and unique plate system. Three 140's for the price of one!

Note: You can also switch the active plate by clicking the A, B, or C letters above the Plate Select switch and the Reverb Time meters.

Reverb Time Meters

The Reverb Time Meters display the reverb time of plates A, B, and C in seconds. The meter for the active plate model (as specified by the Plate Select switch) is illuminated.



Damper Controls (Reverb Time)



The Damper Controls (the buttons beneath the Reverb Time Meters) change the reverb time for each plate. The range is from 0.5 to 5.5 seconds, in intervals of 0.1 sec. Click the buttons to increment or decrement the reverb time.

Note: The reverb time can be changed by dragging a Reverb Time Meter "needle" in addition to its corresponding Damper controls.

Stereo Controls

Width



Width allows you to narrow the stereo image of EMT 140. The range is from 0 – 100%. At a value of zero, EMT 140 returns a monophonic reverb. At 100%, the stereo reverb field is as wide as possible.

Balance

This control balances the level between the left and right channels of the reverb return. Rotating the knob to the left attenuates the right channel, and vice versa (it is not a mono pan control).



EQ Controls



This group of parameters contains the controls for EMT 140's onboard utility equalizer. It is a two band (low and high) shelving EQ that uses analog-sounding algorithms for great tonal shaping options.

The EQ section is independent from the reverb algorithms and the Input Filter on the modeled plate systems. See [“Input Filter” on page 235](#).

The frequency parameters specify the center of the transition band, which is defined as the frequency at which the level in dB is the midpoint between DC and the band edge level.

Note: *There is one EQ per plug-in instance. Each plate model (A, B, C) within a preset cannot have unique EQ values.*

EQ Enable

The EMT 140 equalizer can be disabled with the EQ Enable switch. UAD DSP usage is not increased when EQ is enabled.

Low Frequency

This parameter specifies the low shelving band transition frequency to be boosted or attenuated by the low band Gain setting. The range is 20 Hz to 2 kHz.

Because this is a shelving EQ, all frequencies below this setting will be affected by the low band Gain value.

Low Gain This parameter determines the amount by which the transition frequency setting for the low band is boosted or attenuated. The available range is ± 12 dB, in increments of 0.5 dB (fine control) or 1.0 dB (coarse control).

High Frequency This parameter determines the high shelving band transition frequency to be boosted or attenuated by the high band Gain setting. The range is 200 Hz to 20 kHz.

Because this is a shelving EQ, all frequencies above this setting will be affected by the high band Gain value.

High Gain This parameter determines the amount by which the frequency setting for the high band is boosted or attenuated. The available range is ± 12 dB, in increments of 0.5 dB (fine control) or 1.0 dB (coarse control).

Modulation Controls

The EMT 140 reverb time can be modulated by a low frequency oscillator using rate and depth controls. The effect is subtle but it can increase dispersion and reduce ringing on some source material, such as loud signals with sudden endings and percussive content.

Mod Rate

Mod Rate controls the rate of reverb time modulation. The available range is from 0.01Hz to 1.0 Hz.

Mod Depth

This parameter controls the amount of reverb time modulation. The available range is from 0 – 10 cents.



Output Meter



The vintage-style VU Meter represents the plug-in output level. It is active when the Power switch is on, and slowly returns to zero when Power is switched off.

Blend Controls

Predelay

The amount of time between the dry signal and the onset of the reverb is controlled with this knob. The range is 0.0 to 250 milliseconds.

This control uses a logarithmic scale to provide increased resolution when selecting lower values. When the knob is in the 12 o'clock position, the value is 50 milliseconds.



Mix



The Mix control determines the balance between the original and the processed signal. The range is from Dry (0%, unprocessed) to Wet (100%, processed signal only).

This control uses a logarithmic scale to provide increased resolution when selecting lower values. When the knob is in the 12 o'clock position, the value is 15%.

Note: If Wet Solo is active, adjusting this knob will have no effect.

Wet Solo



The Wet Solo button puts EMT 140 into "100% Wet" mode. When Wet Solo is on, it is the equivalent of setting the Mix knob value to 100% wet (and the Mix value is ignored).

Wet Solo defaults to On, which is optimal when using EMT 140 in the "classic" reverb configuration (placed on an effect group/bus that is configured for use with channel sends). When EMT 140 is used on a channel insert, this control should be deactivated.

Note: Wet Solo is a global (per EMT 140 plug-in instance) control.

Power Switch



This toggle switch enables or disables EMT 140. You can use it to compare the processed settings to the original signal, or to bypass the plug-in which reduces (but not eliminates) the UAD DSP load (unless “UAD-2 DSP LoadLock” on page 74 is enabled). The red EMT power indicator glows brighter when the plug-in is enabled.



Note: The EMT 140 distills 1800+ pounds of classic vintage reverb into a single plug-in. Exercise caution when lifting.

CHAPTER 20

EMT 250 Electronic Reverberator

Introduction

Unveiled by EMT at the AES convention in 1976 and inducted into the TEC Hall of Fame in 2007, the EMT 250 was the first digital reverberation device to create ambience through a purely electronic system. With its single reverb program and iconic lever-driven control surface, the EMT 250 is still an indispensable tool within the record-making elite and is widely considered one of the best-sounding reverbs ever made. Although only around 250 were built, the EMT 250 has made an immeasurable impact on record making history in the hands of studio legends like George Massenburg, Bruce Swedien, Allen Sides and many others. Captured from Allen Sides' unit at Ocean Way Recording, endorsed by EMT Studioteknik GmbH in Germany, and re-engineered for plug-in use by EMT 250 creator Dr. Barry Blesser from his original documentation, the UAD version of the EMT 250 goes beyond emulation and is the very same algorithm found in the original units—for a fraction of its original \$25,000 price!

Besides the coveted reverb program, the EMT 250 for UAD provides the five additional effects (Delay, Phasing, Chorus, Echo and Space) also included in the original unit. Lighted pushbuttons select the desired program, while four click-stop levers provide the primary reverb parameters of delay time, pre-delay, and high and low Filtering. LED ladders provide additional visual reinforcement of program selection and parameter positioning. Like the hardware, the plug-in operates in “quad,” with two discrete stereo output pairs accessed through the added front/rear output switch. Additional “digital only” features include dry/wet mix, wet solo, reduced noise (if desired), and hard bypass via the EMT power icon.

EMT 250 Screenshot



Figure 83. The EMT 250 plug-in window

Functional Overview

Program Modes The EMT 250 offers six effect types: Reverb, Delay, Phase, Chorus, Echo, and Space. These effects are called “program modes” in the EMT 250. Only one mode can be active at a time.

Each program mode has up to five parameters that can be modified by the four main control “levers” plus the front/rear switch. The function of these controls varies per program mode (see below). Additionally, there are several global controls that have the same function in all modes.

Variable Control Functions The function of control levers 1, 2, 3, and the Front/Rear switch depends upon which program mode is active. This is a primary consideration to remember when operating the EMT 250. [Table 17 on page 245](#) details the varying functions of the control levers and the front/rear switch in each mode.

Important: *The function of the “levers” and the front/rear switch changes depending on the program mode.*

Each unique parameter in the plug-in retains a distinct value, but only the parameters that are active in the current program mode are visible in the graphical user interface. All parameters are always visible in Controls View (see “Controls View” on page 87), even when they are not active in the current program mode.

Important: *The value of lever parameters that are not active in the current program mode are not saved in sessions or presets. The unsaved parameters are marked with an asterisk in Table 17 on page 245.*

When switching between program modes that have different parameters mapped to the same control, parameter values are retained within each mode (controls jump back to the prior value that was set in each respective mode).

Lever 4 Predelay

In all program modes, lever 4 controls the predelay (the initial delay before other processing occurs) of both channels (left and right). Predelay times of 0ms, 20ms, 40ms, and 60ms are available in 4 steps. The green LEDs on the right side of lever 4 display the current predelay value.

Mono/Stereo Operation

The EMT 250 hardware unit has one (mono) input. For accurate emulation when the plug-in is used in a stereo-in/stereo-out configuration, stereo signals at the plug-in input are summed to mono before processing; the dry signal is passed in stereo.

Four channels of processed audio, selectable with the Front/Rear Outputs switch, are generated from this mono input in all modes (with the exception of Echo, which has mono output only).

Front/Rear Outputs

The EMT 250 hardware unit has four discrete outputs. Two outputs were designed to be used as the main stereo left/right outputs, or the “front” left/right outs in quadraphonic applications. The other two outputs were used for the “rear” left/right signals in quad (or other creative applications). The UAD EMT 250 fully models the individual sonics of all four outputs.

The name of the “Front/Rear Outputs” switch is derived from the original hardware design. This control (which is unique to the plug-in) enables access to the processed quadraphonic signal in pairs, at either the front L/R or rear L/R outputs. When a different sound is available at the front and rear outputs, the yellow “LED ring” around the control is illuminated. For program modes that do not offer quadraphonic processing (e.g., Delay), the switch is re-purposed to sum the processed outputs to mono. In Echo mode, it functions as an input mute.

In some program modes, the yellow “LED ring” around the control is illuminated to indicate that changing the switch position will change the sound. For program modes that do not offer quadraphonic processing (e.g., Delay), the switch is re-purposed to sum the processed outputs to mono. In Echo mode, it functions as an input mute.

Automation

Some EMT 250 control functions change depending on the active mode (see “Variable Control Functions” on page 242 and Table 17 below). To accommodate this design, all EMT 250 parameters are exposed for automation and external control surfaces even if the parameter is not active in the current program mode.

Important: *Parameters that are automated and/or externally controlled will have no effect if those parameters are not active in the current program mode.*

Modeled I/O

All input and output characteristics of the EMT 250 are fully emulated in the plug-in. This includes all of its idiosyncrasies, such as the A/D and D/A anti-aliasing filters (which are not linear-phase), system latency, input clipping, and limited frequency response. All these quirks embellish the unique sonic signature.

EMT 250 Latency

The EMT 250's anti-aliasing filters for its A/D and D/A conversion are not linear-phase filters; therefore our emulation does not have a latency that is the same at all frequencies. Thus, we cannot report to the delay compensation engines a delay that is correct for all frequencies. The value we report is good at low frequencies, but becomes off at high frequencies.

For example, when the plug-in is in Delay program mode and set with zero delay time and pre-delay values, the plug-in output will not be completely cancelled when mixing with flipped phase against an unprocessed track; high frequencies will leak through. However, the latency through the dry side of the wet/dry mix, and the latency when the plug-in is bypassed via the EMT 250 Power switch (page 252), do not have this issue and will be fully compensated by the DAW.

Program Mode Controls

The details of each unique program mode are below, followed by descriptions of the global controls, which affect all program modes.

Control Functions

Table 17 displays the parameter that each control is mapped to for each of the EMT 250 program modes. See “Variable Control Functions” on page 242 for details.

Table 17. The variable control functions of the EMT 250

Program Mode	Lever 1	Lever 2	Lever 3	Lever 4	Front/Rear
Reverb	Reverb Decay	LF Decay	HF Decay (damping)	Predelay	Output Pair
Delay	Coarse Delay Time	Fine Delay Time	Selects L/R channel for time adjustment*	Predelay	Stereo/Mono
Phase	Phase (curve)	(none)*	(none)*	Predelay	Output Pair
Chorus	(none)*	(none)*	Variation	Predelay	Stereo/Mono
Echo	Coarse Delay Time	Fine Delay Time	HF Decay (damping)	Predelay	Input Mute
Space	(none)*	(none)*	(none)*	Predelay	Output Pair

*Note: The parameter values of lever positions marked with an asterisk are not saved in sessions or presets.

Program Mode

The Program Mode buttons define which of the available program modes is active. The six program modes are: Reverb (REV), Delay (DEL), Phase (PHAS), Chorus (CHOR), Echo, and Space (SPC).



Click a Mode button to activate that program mode; the button is illuminated for the currently active mode (only one mode can be active at a time). Each program mode and its associated parameters are described in detail below.

Tip: See Table 17 on page 245 for a matrix of controls that are available in each program mode.

Reverb

Reverb program mode offers the same all-time classic reverb algorithm that made the EMT 250 famous.

Decay Time (Lever 1)

Lever 1 controls the main reverb tail decay time. The red LEDs on the left side of lever 1 indicate the current decay time; the green LEDs on the right side of lever 1 are inactive.

The decay time range (at 1 kHz) is 0.4s to 4.5s, selectable via 16 steps.

LF Decay (Lever 2)

Lever 2 controls the low frequency decay time (at 300 Hz). The red LEDs on the left side of lever 2 display the current value; the green LEDs on the right side of lever 2 are inactive.

Four multipliers are available: x 0.5, x 1.0, x 1.5, and x 2.0. The multiplier refers to a factor of the main decay time (lever 1). Higher values (upper lever positions) generally result in more low frequency content in the reverb tail.

HF Decay (Lever 3)

Lever 3 controls the high frequency decay time. The red LEDs on the left side of lever 3 display the current value; the green LEDs on the right side of lever 3 are inactive.

Four multipliers (at 6 kHz) are available: x 0.25, x 0.33, x 0.5, and max. At the max position, the HF decay factor is x 1.0 at approximately three seconds. The multiplier refers to a factor of the main decay time (lever 1). Higher values (upper lever positions) generally result in more high frequency content in the reverb tail.

Predelay (Lever 4)

Lever 4 is used as a typical reverb predelay parameter. See [“Lever 4 Predelay” on page 243](#) for more information.

Front/Rear

In Reverb mode, the Front/Rear Outputs switch is illuminated. Changing the switch setting will yield a slightly different effect. See [“Front/Rear Outputs” on page 243](#) for more information.

Delay

Delay program mode offers two independent delay processors, one each for the left and right output channels. Up to 375ms delay time is available for each channel. Delay repeats (feedback) are not available in Delay mode; use Echo mode if delay feedback is desired.

Note: *The maximum per-channel delay time of 375ms in Delay mode is obtained by setting the coarse, fine, and predelay times to their respective maximum values.*

Coarse Delay Time (Lever 1)

Lever 1 controls the coarse delay time for the currently selected channel (left or right). The currently selected channel is defined by lever 3.

The coarse delay time range is 0 to 300ms, selectable via 16 steps. The green LEDs on the right side of lever 1 display the current value; the red LEDs on the left side of lever 1 are inactive.

Fine Delay Time (Lever 2)

Lever 2 controls the fine delay time for the currently selected channel (left or right). The currently selected channel is defined by lever 3.

Fine delay times of 0ms, 5ms, 10ms, and 15ms are available. The green LEDs on the right side of lever 2 display the current value; the red LEDs on the left side of lever 2 are inactive.

Note: *Levers 1 and 2 both control the delay time, but these parameters are not individually exposed for external control surfaces and automation. Instead, a single delay time parameter is exposed for each channel, and levers 1 and 2 in the plug-in interface are both updated to match the value.*

Channel Select (Lever 3)

In Delay mode, lever 3 selects which channel (left or right) the delay time parameters (levers 1 and 2) will affect. When lever 3 is in position "L" the left channel delay time can be adjusted; when in position "R" the right channel delay time can be adjusted.

The green LEDs on the right side of lever 3 display the channel selected for delay time adjustment; the red LEDs on the left side of lever 3 are inactive.

Note: *Lever 3 position "I" is a duplicate of position "II – L" in Delay mode. Likewise, position "IV" is a duplicate of position "III – R." All positions can be used to select a channel for delay time adjustment.*

Important: In Delay mode, lever 3 does not control a “real” parameter; it is only used to select the active channel for other parameters in the graphical user interface. For this reason, the parameter is not exposed for external control surfaces or automation, nor is it saved in sessions or presets.

Predelay (Lever 4)

Lever 4 can be used as a common predelay to both channels (the predelay time is added to the delay times of both channels). See “Lever 4 Predelay” on page 243 for more information.

Front/Rear

In Delay mode, the Front/Rear Outputs switch is not illuminated (the sound is identical in both pairs of outputs). When moved to the Rear position, the plug-in output is summed to mono. See “Front/Rear Outputs” on page 243 for more information.

Phase

Phase program mode creates a comb filter curve that results from the addition and subtraction of two signals with a small time shift between them. The comb filter changes the amplitude of the source signal's harmonic overtones, resulting in interesting tonal variations.

Tip: Phasing is most apparent when the plug-in is set to 100% wet (or when Wet Solo (page 253) is active).

In the EMT 250, the input is fed to two delay processors; one with a fixed delay time of 15ms, and the other which is variable from 0–15ms, controlled by lever 1. By changing this variable “time shift” the phase (shape) of the comb filter, and therefore the timbre of the output signal, is changed.

Note: Unlike many “phasors,” the EMT 250 does not modulate the variable “time shift” with a low frequency oscillator (LFO), which results in the continuously varying “swooshing” effect that is often associated with the process name. This conventional “phasor effect” can be reproduced (with outstanding results) by moving lever 1 back and forth, either manually or with automation.

Phase (Lever 1)

In Phase program mode, lever 1 controls the delay time (the phase “time shift”) between the two signals that create the comb filter. Phase values of 0ms to 15ms are available, selectable via 16 steps.

In Phase mode the green LEDs to the of right lever 1 are active, but the panel markings (0–300ms) do not represent the actual phase delay time values. Instead, the LEDs indicate the relative value between 0–15ms.

Predelay (Lever 4)

Lever 4 can be used as a common predelay to both phase delays. See “Lever 4 Predelay” on page 243 for more information.

Note: *Levers 2 and 3 have no effect in Phase program mode.*

Front/Rear

The Front/Rear Outputs switch is illuminated in Phase program mode. Changing the switch setting will yield a different comb filter phase. Due to the nature of the effect in Phase mode, when the switch is in the Rear position and the Phase time (lever 1) is at minimum and maximum values, the signal is only output on one side (right-only at minimum, left-only at maximum). This behavior is identical to the original hardware. See “Front/Rear Outputs” on page 243 for more information.

For more information about phasing, see the “Flangers and Phasors” article in our December 2008 Webzine:

- <http://www.uaudio.com/webzine/2008/december/doctors.html>

Chorus

Chorus program mode creates an “ensemble” effect by simulating the impression of multiple imprecisions added to the original signal. In EMT 250, this is accomplished by routing the same signal to four delay processors, each having short delay times that are continuously and randomly modulated.

While it was necessary to combine the various physical outputs for variations of Chorus complexity, the EMT 250 plug-in is “pre-mixed” in four popular combinations.

Note: *Levers 1 and 2 have no effect in Chorus program mode.*

Chorus Mode (Lever 3)

Four subtle variations of the chorus effect are available (I, II, III, and IV). Lever 3 specifies the current variation.

Positions “I” and “II” are of a simpler nature, while “III” and “IV” are more complex. Position “I” duplicates the Left Front and Right Front outputs of the hardware. “II” duplicates Left Rear and Right Rear outputs of the hardware. “III” combines both the Left Front and Left Rear on the left side, and Right Front and Right Rear on the right. “IV” combines Left Front, Left Rear and Right Rear on the left side, and Left Rear, Right Front and a phase inverted Right Rear on the right. “IV” imparts a pseudo-quadraphonic sound.

Predelay (Lever 4)

Lever 4 is can be used as a common predelay to all four delays. See [“Lever 4 Predelay” on page 243](#) for more information.

Front/Rear

In Chorus mode, the Front/Rear Outputs switch is not illuminated (the sound is identical in both pairs of outputs). When moved to the Rear position, the plug-in output is summed to mono. See [“Front/Rear Outputs” on page 243](#) for more information.

Echo

Echo program mode produces a single monophonic delay effect, with feedback and adjustable delay time. Up to 375ms of delay is available.

The feedback (recirculation) circuit is always active in Echo mode. The feedback signal path is attenuated by approximately 10% per loop circulation, and includes an adjustable high frequency attenuator for damping.

Note: *The maximum delay time of 375ms in Echo mode is obtained by setting the coarse, fine, and predelay times to their respective maximum values.*

Coarse Echo Time (Lever 1)

Lever 1 controls the coarse delay time. The coarse delay time range is 0 to 300ms, selectable via 16 steps.

The green LEDs on right side of lever 1 display the current value; the red LEDs on the left side of lever 1 are inactive.

Fine Echo Time (Lever 2)

Lever 2 controls the fine delay time. Fine delay times of 0ms, 5ms, 10ms, and 15ms are available. The green LEDs on right side of lever 2 display the current value; the red LEDs on the left side of lever 2 are inactive.

Note: Levers 1 and 2 both control the echo time, but these parameters are not individually exposed for external control surfaces and automation. Instead, a single echo time parameter is exposed, and levers 1 and 2 in the plug-in interface are both updated to match the value.

HF Decay (Lever 3)

Lever 3 controls the high frequency damping in Echo mode. The red LEDs on left side of lever 3 display the current value; the green LEDs on the right side of lever 3 are inactive.

Four multipliers are available: x 0.25, x 0.33, x 0.5, and max. Higher values (upper lever positions) result in more feedback.

Predelay (Lever 4)

Lever 4 is used as a predelay to the echo processor in this mode. The predelay time is added to the echo times, but not to the HF decay feedback loop. See [“Lever 4 Predelay” on page 243](#) for more information.

Front/Rear

The Front/Rear Outputs switch is not illuminated in Echo mode (the same monophonic signal is generated at the front and rear outputs). However, the Front/Rear Outputs switch has a special function in Echo mode.

In the Front position, the program behaves normally. In the Rear position, the input to the echo processor is muted, while still allowing the echo output to be passed. This feature is useful for adding echo to specific passages only, by flipping the switch to Front when echo is desired. The behavior is identical to the popular “dub” switch on the Roland RE-201 ([“Echo/Normal” on page 510](#)). See [“Front/Rear Outputs” on page 243](#) for more information.

Space

Space mode is a special reverb program with an extremely long decay time and linear distribution of the reverberation time with frequency (all frequencies decay at the same rate). Because this condition doesn't exist in nature, and the program was originally intended for science fiction productions, the “reverberation in outer space” moniker was derived.

The reverb decay time is approximately 10 seconds in Space mode. Predelay and Front/Rear are the only adjustable parameters in this program mode.

Note: Levers 1, 2, and 3 have no effect in Space mode.

Predelay (Lever 4)

Lever 4 is used as a typical reverb predelay parameter. See “[Lever 4 Predelay](#)” on page 243 for more information.


Front/Rear

In Space mode, the Front/Rear Outputs switch is illuminated. Changing the switch setting will yield a slightly different effect. See “[Front/Rear Outputs](#)” on page 243 for more information.

Global Controls

The global controls are not program-specific; they apply to all program modes.

Power

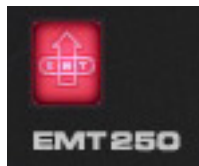


The Power button (the red EMT logo) determines whether the plug-in is active. It is useful for comparing the processed signal to the original signal. Click the button to disable the plug-in; click it again to enable it.

When Power is in the Off (unlit) position, plug-in processing is disabled, and UAD DSP usage is reduced.

Note: UAD-2 DSP usage is reduced only when DSP LoadLock ([page 74](#)) is disabled. If DSP LoadLock is enabled (the default setting), disabling Power will not reduce DSP usage.

Input Meter

The Input Meter indicates the level going into the plug-in. On the original hardware, the red “Register” LED illuminates when digital full code is reached, at 6 dB above 0 dB (i.e., there is 6 dB of headroom on the hardware, as the meaning of “0 dB digital” wasn't yet standardized in those days).

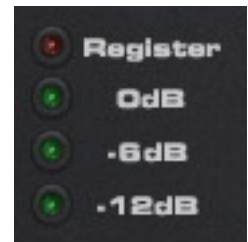

The distortion characteristics of the A/D converters are modeled, therefore “EMT 250-style” clipping can be heard when the EMT 250 input is overdriven.

Dry/Wet




The Dry/Wet slider control determines the balance between the original and the processed signal. The range is from 0% (dry, unprocessed) to 100% (wet, processed signal only).

This control uses a logarithmic scale to provide increased resolution when selecting lower values. When the slider is in the center position, the value is 15%.

Note: If Wet Solo is active, adjusting Dry/Wet will have no effect.

Wet Solo


The Wet Solo button puts the EMT 250 into “100% Wet” mode. When Wet Solo is on, it is the equivalent of setting the Dry/Wet control to 100% wet.

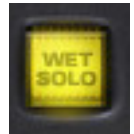

Wet Solo defaults to On, which is optimal when using the EMT 250 in the “classic” reverb configuration (placed on an effect group/buss that is configured for use with channel sends). When the EMT 250 is used on a channel insert, this control should be deactivated.

Note: Wet Solo is a global (per EMT 250 plug-in instance) control.

 Noise



When Noise is active, the noise characteristics of the original hardware unit are fully intact. Disabling Noise eliminates the modeled noise characteristics for quieter operation.


Noise is active when the yellow LED is illuminated; it is enabled by default. Click the LED to change the setting.

The Noise parameter is unique to the UAD EMT 250 plug-in. Noise is dynamic to the response of the effect processing, and the noise level differs from program to program. The noise floor of the hardware EMT 250 may seem a bit high when compared to modern digital processors, but it adds to the EMT 250's quirky character.

Webzine Article

An interesting article about the EMT 250 Electronic Reverberator that includes useful applications can be found in the “Analog Obsession” article of the Universal Audio June 2009 Webzine:

• <http://www.uaudio.com/webzine/2009/june/analog.html>

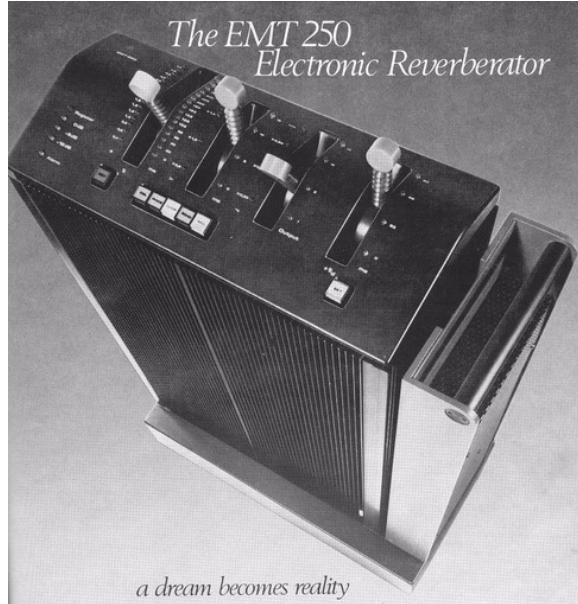

Original EMT 250 advertisement – “A dream becomes reality”



The EMT 250 Electronic Reverberator hardware unit

Special thanks to EMT Studioteknik GmbH, Dr. Barry Blesser, Allen Sides, and Ocean Way Recording for their assistance with this project.

CHAPTER 21

EP-34 Classic Tape Echo

EP-34 Overview

The EP-34 combines EP-3 and EP-4 sonics and features to achieve the best of the later solid-state Echoplex* designs. The Echoplex uses an infinite tape loop combined with a sliding record head that allows the user to achieve the desired delay length. EP-34 emulates the great idiosyncrasies of these tape-based echo units such as the unique Echo Delay record head slider that can be moved in real-time while used in conjunction with the Echoplex's Echo Repeats control to create echo and pitch chaos. The distinct and musical input clipping is captured in the units' Record Volume control making the EP-34 a tone box for distortion. Echo Volume allows the blending of the original and effected signal, however even the dry signal is affected by the unit. The Echoplex self-oscillation capabilities are captured as well, including the "squelch" effect (an interruption in self-oscillation) achieved at extreme settings when processing low-frequency material like drum loops with heavy kick drum. All this makes the EP-34 more than just a delay, but an instrument that can be played by manipulating the controls while in chaotic oscillation. Just like the hardware, faster-than-tape-path speeds can also be achieved, leading to 'sonic-boom/tape squeal' effects again adding to chaotic but musical attributes of the original hardware. The EP-34 also has other warts-and-all artifacts of tape such as self-chorusing due to speed variations caused by random friction in the tape path plus pinch roller wow and flutter. The EP-34 includes the metering and unusual but uniquely musical tone controls found on the EP-4, but removes its undesirable in-line noise reduction circuit that users often electronically disabled (Maestro removed this circuit soon after the product's release).

"Extras" not found on the original hardware include Tempo Sync, Input Select (allows for a cleaner sound [LO] or a dirtier sound [HI]), Tension (the Echoplex has an adjustable tension nut underneath the delay time slider for a snappy or sludgy response time), Echo Send (identical in function to RE-201 "dub switch"), Wet Solo, Pan (wet signal only), and Power (plug-in bypass).

*EP-34 Tape Echo is not affiliated with, sponsored nor endorsed by any companies currently using the Echoplex name. The EP-34 Tape Echo name, as well as the EP-3 and EP-4 model names, are used solely to identify the classic effects emulated by Universal Audio's product.

EP-34 Tape Echo Screenshot



Figure 84. The UAD EP-34 Tape Echo plug-in window

EP-34 Controls

Echo Delay

Echo Delay controls the delay time of the unit. The selected value is shown in the Echo display (page 257).

The parameter can be adjusted by using the metallic “slider handle” or the “slider nose” (both sliders control the same parameter; see Figure 85).

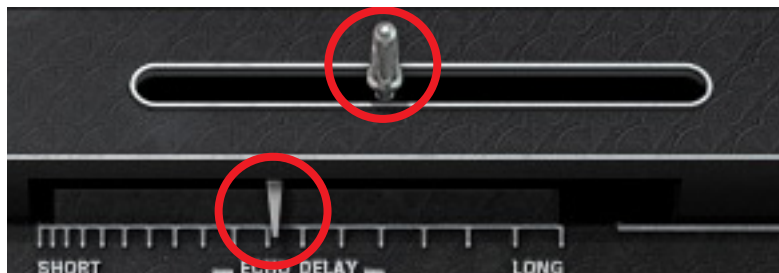



Figure 85. The Echo Delay sliders

The available delay range is 80 to 700 milliseconds. When Sync is active, beat values from 1/64 to 1/2 can be selected (see [Table 5 on page 97](#)).

When the beat value is out of range, the value is displayed in parenthesis. This occurs in Sync mode when the time of the note value exceeds 700ms (as defined by the current tempo of the host application). See [Chapter 8, “Tempo Sync”](#) for detailed information about tempo synchronization.


Tip: Click the control slider(s) then use the computer keyboard arrow keys to increment/decrement the sync value.

 Echo Display



This “window” displays the current delay time of the EP-34. Displayed values are defined by the Echo Delay parameter ([page 256](#)). Delay values can be entered here directly using the text entry method (see [“Text Entry” on page 92](#)).

 When [Sync](#) mode is off, delay times are expressed in milliseconds. When Sync is on, delay times are expressed as a fractional bar value.



When the beat value is out of range, the value is displayed in parentheses. This occurs in Sync mode when the time of the note value exceeds 700ms (as defined by the current tempo of the host application).

Echo Repeats



This knob controls the repeat level (feedback) of the echo signal. At the minimum (fully counter-clockwise) position, only one repeat is heard. Rotating the control clockwise increases the number of echoes. Higher values will cause self-oscillation.

The self-oscillation of the EP-34 is one of the magic features that really makes it more than a mixing tool, it's also an instrument to be played. The effect may be used subtly, sending the unit into gentle oscillation on held notes, or can be put into “over the top” oscillation with extreme settings.

The EP-34's oscillation qualities are heavily dependent upon program material and control settings. Different sources of audio, gain, tone, repeat rate and input settings will all effect “oscillation performance.” The EP-34 can also achieve oscillation with no signal, making the it a truly unique instrument.

Echo Volume



This knob determines the wet/dry mix of the delayed signal. In the minimum position, the “dry” signal is colored by the circuitry of the modeled emulation. Rotate the control clockwise for louder echo. Reducing the control to its minimum value will mute the delay.

The EP-34 models the unusual taper of this control that is found on the original hardware. It is normal operation to have the control in the 85–95% range to get a “50/50” wet/dry balance.

Note: When the Wet switch (page 260) is in the On position, Echo Volume has no effect.

Recording Volume

Recording Volume adjusts the input gain and clipping characteristics of the delayed tape signal. Increasing this control will increase the tape distortion and “grit” that is an important element of the famous hardware sound. The Recording Volume is indicated by the [Input Meter](#).



Input Meter



The Input Meter in the EP-34 is a three-segment horizontal LED array (two green, one red) that indicates the recording level at the input of the tape recorder.

The yellow LED indicates that the plug-in is active. When the Power switch (page 260) is enabled, the yellow LED is illuminated.

Echo Tone

The frequency response of the delayed (wet) signal can be modified with the Echo Tone controls. These knobs are cut/boost controls; they have no effect when in the 12 o’clock position. The available range is ± 10 dB of gain.



Note: The Echo Tone controls do not affect the dry signal.

Treble

Controls the high frequency response in the delayed signals.

Bass

Controls the low frequency response in the delayed signals.

Echo Pan



 
Pan sets the position of the delayed (wet) signal in the stereo field; it does not affect the unprocessed (dry) signal.

Tip: Click the “Echo” control text to return the knob to center.

Note: When the plug-in is used in a mono-in/mono-out (“MIMO”) configuration, the Pan knob does not function and cannot be adjusted.

Input

The original hardware unit had two inputs: Instrument and Microphone. The Input switch on the EP-34 toggles between the gain levels of these two inputs.



The “LO” position captures the gain structure of the Instrument input, while the “HI” position captures the gain structure of the Microphone input. This allows for a cleaner (LO) or dirtier (HI) sound depending on the switch position.

Important: Depending on the source material and gain structuring, switching between LO and HI may cause a significant jump in output levels.

Tension



The original hardware provides a tension adjustment screw on the bottom of the Echo Delay slider. Adjusting this tension screw varies the pitch shifting effects (technically, the slew rate) that are obtained when the Echo Delay parameter is manipulated in realtime.

The Tension switch emulates two different tension adjustments of this adjustment screw.

LO

The “LO” position emulates a loose tension adjustment. With this setting, realtime adjustments to the Echo Delay parameter have a faster slew rate, resulting in “snappier” pitch shifting effects.

HI

The “HI” position emulates a tight tension adjustment. With this setting, realtime adjustments to the Echo Delay parameter have a slower slew rate, resulting in “sluggish” pitch shifting effects.

Send

The Send switch disables the signal sent into the echo portion of the unit when set to OFF. This control is sometimes affectionately referred to as the “dub switch.”



Sync



This switch engages Sync mode for the plug-in. In Sync mode, delay times are synchronized to (and therefore dependent upon) the master tempo of the host application. When Sync is toggled, parameter units are converted between milliseconds and beats to the closest matching value.

See [Chapter 8, "Tempo Sync"](#) for detailed information about tempo synchronization.

Wet

The Wet switch puts the EP-34 into "100% Wet" mode. When Wet is on, it mutes the dry unprocessed signal.



Wet is optimal when the plug-in is used on an effect group/bus that is configured for use with channel sends. When the plug-in is used on a channel insert, this control should be deactivated.

Note: *Wet is a global (per plug-in instance) control. Its value is saved within the host project/session file, but not within individual preset files.*

Important: *Depending on the source material and gain structuring, engaging Wet may cause a significant jump in output levels.*

Power



Power determines whether the plug-in is active. This is useful for comparing the processed settings to the original signal, or to bypass the plug-in to reduce the UAD DSP load (load is not reduced if "[UAD-2 DSP LoadLock](#)" on [page 74](#) is enabled).

Note: *The yellow LED in the Input Meter ([page 258](#)) is illuminated when the plug-in is active.*

EP-34 Hardware History

Originally designed by Mike Battle in the late 50's as a portable echo device as an answer to the problem of tying up studio tape machines often employed for echo effects. Legendary artists such as Jimmy Page, Miles Davis, Brian May, Andy Summers, Eddie Van Halen among many others have used the hardware to add simple slap echo effects all the way to self-oscillation chaos to their sonic creations.

The EP-3 is the favored unit by guitarists, and EP-4 is the last unit that was released and has an improved feature set over its predecessors such as metering and tone controls making it even more useful as a mix tool. Some didn't like the EP-4 because of a noise reduction circuit that was added that was not implemented correctly. Unfortunately in a production mistake, the circuit was placed in across both the direct signal and the tape playback causing the dry source signal sustain to be cut off prematurely. Most modded their units to remove the noise compressor, and Maestro quickly removed the compressor design from the design.



The Echoplex EP-3 hardware unit

WebZine Article

An article about the Echoplex* can be found in the "Analog Obsession" article of the Universal Audio May 2009 Webzine at:

- <http://www.uaudio.com/webzine/2009/may/analog.html>

*EP-34 Tape Echo is not affiliated with, sponsored nor endorsed by any companies currently using the Echoplex name. The EP-34 Tape Echo name, as well as the EP-3 and EP-4 model names, are used solely to identify the classic effects emulated by Universal Audio's product.

CHAPTER 22

Fairchild 670

Overview

In the annals of compressor history, the products produced by Fairchild are some of the best built and most highly prized on the vintage market. The most famous Fairchild products produced were the 660 and 670 compressor/limiters, which are famous for their fantastic sound quality.

The stereo Fairchild 670 is probably the “Holy Grail” of compressors in studio gear esoterica, not only because of its price (known to fetch \$30,000 and beyond on the vintage market), but also its extreme rareness and the difficulties in maintaining such a unit. With its 14 transformers, 20 vacuum tubes, 6 rack-space encompassing girth and weighing in at 65 pounds, the Fairchild 670 is truly the heavyweight champion of compression.

Originating from the early 1950’s, the design of the 670 uses a single push-pull stage of amplification with an extremely high control voltage. The Fairchild 670 is a variable-mu tube limiter. Variable-mu limiters are unique in that they use tubes for gain reduction, and not just as amplifiers. The audio path is quite simple, and compression happens directly in the audio path, rather than sending out to a separate compression circuit.

The unit can be used as a limiter or compressor, depending upon personal taste and program material. It can go from a 2:1 ratio as a compressor to a peak limiter with a 30:1 ratio. The unit can also be adjusted to operate anywhere between these two extremes using the Threshold and DC Bias controls.

The UAD Fairchild was created by meticulously modeling (down to the component level as usual) a carefully selected hardware unit. Our “golden unit” was the Fairchild 670 (SN #505) at Ocean Way Recording in Hollywood. The Fairchild was advertised as “The World Accepted Standard for Level Control” back in the 1950’s when it was originally sold. It is still revered for its extremely smooth, artifact-free sound, and now Universal Audio has made it easily accessible to you. And you don’t have to let it warm up for 30 minutes before use!

Fairchild Screenshot



Figure 86. The Fairchild plug-in window

2 Compressors, 4 Modes

There are two compressors within the Fairchild 670. They can be used as dual L/R, dual mono/stereo, or they can be linked together and used on either the L/R or mono/stereo signals.

The mode in which the compressors operate is determined by the combination of the AGC switch and the Sidechain Link switch. See [“Fairchild Modes” on page 265](#) for detailed mode information.

Controls Overview

Most of the controls are associated with one or the other of the compressors, as opposed to being strictly associated with one channel of input/output (depends on active mode). These controls include Threshold, Time Constant, Bias Current Balance, and DC Bias.

There are two sets of controls that always work on the left and right signals: input level and output level. In Lat/Vert mode, left is the mono input, and right is the stereo input.

Controls on the main panel are all original Fairchild controls, except for the meter select switch which was used to calibrate bias currents on the original hardware. The hardware does not have provision for monitoring input/output or gain reduction levels. For the plug-in, the 'zero' screw-slot control has been disabled, since the meter cannot become uncalibrated on the plug-in.

Controls on the lower auxiliary panel are original controls, modifications, or additions as follows:

- The DC Bias controls are original controls, but were on the back of the hardware units.
- The sidechain link control is a common modification which had been performed on the unit we modeled.
- The Controls Link is a plug-in-only switch.
- The output level controls are an addition for the plug-in.



Parameter Labels

Some hosts use plug-in parameter names in place of the graphical interface, for example when viewing automation or using control surfaces. Some Fairchild parameters are named with "A" and "B" instead of "L" and "R" because that's how the plug-in operates; depending on the mode (i.e. lat/vert), the channel parameters are not always associated with the left and right channels.

Fairchild Modes

Dual Left/Right

In Dual L/R mode, the Fairchild operates as two monophonic compressors with completely independent controls for the left and right channels. There is no interaction between the left and right channels.

Lateral – Vertical

In Lat/Vert mode, the 670 acts on the lateral and vertical (the sum and difference) components of the two stereo channels. This is accomplished by first bringing the two stereo channels through a matrixing network which divides them into their respective lateral and vertical components, limiting these lateral and vertical components, then recombining them through a second matrixing network into the left and right channels again.

The L+R (mono) signal is sent to one compressor, and the L-R (stereo) signal is sent to the other. The two compressors work independently of each other, and after compression the L and R signals are recovered once again by sum and difference. This mode was created for use in mastering records, where the mono and stereo components of the signal are encoded in this way. It also has application for psychoacoustic processing, since the stereo panning will change dynamically in this mode.

Lat/Vert processing provides maximum usable level and efficient use of available groove space in phonograph mastering. This results in higher volume recordings with longer playing times.

Note: *The terms lateral (side-to-side) and vertical (up-and-down) refer to the mechanical modulations in a vinyl record groove that are transduced into electrical audio signals by the phonograph stylus and cartridge.*

Stereo, coupled left/right

In this mode, the left channel is fed to one compressor, and the right channel is fed to the other. The two compressors are constrained so that they both compress the same amount at any instant. This prevents transients which appear only on one channel from shifting the image of the output. Any big transient on either channel will cause both channels to compress. The amount of compression will be similar to the amount of compression for a transient which appears on both channels at the same time. Also, the attack and release times for the two compressors will be the same, and attack and release behavior will be the average of the settings for the two channels. Mono transients should have an effective attack time of about one half the attack time for transients on only one of the two channels.

Stereo, coupled mono/stereo

This mode, like stereo couple left/right, causes the two compressors to be linked together so that they always compress the same amount. But here, the inputs to the two compressors are fed with the mono and stereo components of the signal. This means that in general a transient which occurs in both channels will cause a bit more compression than a transient which only appears on left or right. The attack and release behavior is determined by the average of the settings for the two channels.

Modes Table

The mode in which the compressors operate is determined by the combination of the AGC switch and the Sidechain Link switch. The switch positions required for each mode is shown in [Table 18](#) below.

Table 18. Fairchild Operating Modes

AGC Switch	Sidechain Link	Operating Mode
Left – Right	Unlinked	Dual Left – Right (Dual Mono)
Lat – Vert	Unlinked	Lateral – Vertical (Dual mono – stereo)
Left – Right	Linked	Stereo, couple left – right
Lat – Vert	Linked	Stereo, couple mono – stereo

Gratuitous Question

Is there any reason I would want to link the two sidechains together and still have the settings for the two channels different?

Yes. Linking the sidechains simply prevents left-right image shifting. Threshold and input gains can be set independently to cause the compressor to be more sensitive to instruments which are panned to one side or the other. Output controls can be set separately in order to correct an overall image shift at the output.

Controls

Power Switch

This switch determines whether the plug-in is active. When the Power switch is in the Off position, plug-in processing is disabled and UAD DSP usage is reduced (unless “[UAD-2 DSP LoadLock](#)” on [page 74](#) is enabled).

Metering

VU Meters

There are two calibrated VU meters, one for each channel. What the Meter displays is determined by the Meter Switch.

Meter Select Switch

This switch determines what is displayed on the VU meters. If GR is selected, the meter will show gain reduction in dB for the corresponding compressor channel (which is not necessarily left or right; depends on the active mode).

If the AGC switch has been set to left/right, the GR shown will be for the left or right channel. If the AGC switch has been set to lat/vert, the GR shown will be for the mono or stereo channel. In GR mode, the upper labels show gain reduction in dB.

If the meter select switch is set to IN or OUT, then that meter will reflect the level of the right or left input or output signal (however, the meters are not calibrated).

Zero

On the hardware unit this screw adjusted the meter pointer to compensate voltage fluctuation and tube wear. Because the meter in the plug-in cannot go out of calibration, this control is permanently disabled.

AGC Mode

This control determines whether the two compression channels will receive L/R or mono/stereo as the inputs. When used in conjunction with the Sidechain Link switch, the operating mode of the compressor can be modified.

See the “Fairchild Modes” on page 265 and Table 18 on page 266 for detailed mode descriptions.

Left – Right

If Left – Right is selected and Sidechain Link is off, the compressor is in dual mono mode. If Sidechain Link is on, the mode is stereo, trigger left/right.

Lateral – Vertical

If Lat/Vert is selected and Sidechain Link is off, the compressor is in lateral/vertical mode and will receive mono/stereo as the inputs. If Sidechain Link is on, the mode is stereo, trigger mono/stereo.

Threshold

This continuously variable control determines the amount of compression to be applied. Turn clockwise for more compression. When fully counter-clockwise, the unit behaves as a simple unity gain line amplifier.

Time Constant

This 6-position switch provides fixed and variable time constants (attack and release times) to accommodate various types of program material. Positions 1-4 provide successively slower behavior, and 5 and 6 provide program dependent response. The values published by Fairchild for each position are in [Table 19](#) below. The actual measured times are a bit different, but the overall trend is the same.

Table 19. Fairchild Time Constants

Time Constant	Attack Time	Release Time
Position 1	200 microseconds	300 milliseconds
Position 2	200 microseconds	800 milliseconds
Position 3	400 microseconds	2 seconds
Position 4	800 microseconds	5 seconds
Position 5	200 microseconds	Program dependent: 2 seconds for transients 10 seconds for multiple peaks
Position 6	400 microseconds	Program dependent: 300 milliseconds for transients 10 seconds for multiple peaks 25 seconds for consistently high program level

Sidechain Link

When this control is set to Link, it causes the two channels of the compressor to compress equal amounts. This does not mean that the compressor will be equally sensitive to either channel however; that depends on the settings of the other controls. It simply means that the instantaneous amount of compression for the two channels will always be the same.

Balance

Balance controls the bias current balance, and always goes with one channel of the compressor, regardless of what the nearby 'metering' switch is set to. The point of perfectly calibrated bias currents is achieved when the "dot" in the screw slot is at 12 o'clock. At this setting, the amount of additive signal deflection ("thud") which happens due to an attack is minimized. Setting this control counter-clockwise from this position results in a thud of one polarity on transients, and going clockwise produces a thud of opposite sign.

DC Bias	<p>DC Bias controls the ratio of compression as well as the knee width. As the knob is turned clockwise, the ratio gets lower and the knee gets broader. The threshold also gets lower as the knob is turned clockwise. The 'factory cal' tick mark should be aligned with the screw slot "dot" for factory specification.</p> <p>It would probably be more technically accurate to say that this control simply changes the knee width, since no matter where it's set the ratio always approaches true limiting eventually. However, the knee becomes so broad that it becomes more practical to speak of the ratio changing, because for reasonable (<25 dB) amounts of compression, this is the case.</p>
Channel Input Gain	<p>This is a stepped attenuation control which always applies to left or right input, regardless of the AGC control setting. The steps are approximately 1 dB apart, with approximate unity gain coming at a value of 18, where the gain is -0.33 dB.</p>
Output Gain	<p>These controls always apply to the L and R channels, even when in Lat/Vert mode. The labels around the knobs are in dB and the controls are stepped, 49-position controls, with each step being separated by 0.5 dB.</p>
Controls Link	<p>This allows the two sets of controls for the interface to be linked. If the controls are given an offset while unlinked and the controls are subsequently linked, the offset is preserved up to the range of travel of the linked controls.</p>

CHAPTER 23

Harrison 32C EQ

Overview

The Harrison 32C is the EQ channel module from the prestigious Harrison 4032 console. Countless hit records have been made with Harrison consoles, with artists from Abba to Sade. Most notably, the 4032 is famous as the mixer from which many Michael Jackson records including *Thriller*—the best-selling album of all time—were made. An original 4032 still resides in Florida with *Thriller* engineer and Bill Putnam protégé Bruce Swedien, where he continues his love affair with the desk he calls “marvelous sounding.” Universal Audio’s plug-in version of the all-important 32C EQ module is measured from Mr. Swedien’s personal console. This colorful 4-band EQ with high and low cut filters will impart the same “warm and rich sound” from his Harrison, and will impart the same “impact, sonic clarity and creativity” as he experienced making some of the best-loved records of our time.

The Harrison 32C contains four overlapping parametric peaking bands. Each band has fully sweepable Frequency and Gain controls. Instead of traditional Q controls, the 32C has special circuitry that, according to the original hardware documentation, “automatically adjusts the effective bandwidth under all conditions.” This dynamic property, and the interplay between the overlapping bands, contribute to the device’s musicality and unique sonic signature.

The low EQ band can be switched from peak to shelf mode, and high/low pass filters are available. Additional “digital only” features not included on the original hardware include gain, phase invert, and a global power switch. An SE version is also provided for higher instance counts.

Harrison 32C EQ Screenshot



Figure 87. The Harrison 32C EQ plug-in window

Harrison 32C EQ and Harrison 32C SE Controls

Note: Knob settings, when compared to the graphical user interface silk-screen numbers, may not match the actual parameter values. This behavior is identical to the original hardware, which we modeled exactly. When the plug-in is viewed in parameter list mode (see “Controls View” on page 87), the actual parameter values are displayed.

Power



The Power switch determines whether the plug-in is active. Click the button to toggle the state. When the Power switch is in the Off (lighter) position, plug-in processing is disabled and UAD DSP usage is reduced (unless “UAD-2 DSP LoadLock” on page 74 is enabled).

Power LED

The Power LED is illuminated when the plug-in is active.

Phase



The Phase (Ø) button inverts the polarity of the signal. The signal is inverted when the button is engaged (darker). Leave the button inactive (lighter) for normal phase.

Cut Filters



In addition to the four-band EQ, the Harrison 32C offers two cut filters, one each for low and high frequencies. The slope of the cut filters is 12 dB per octave.

Cut Enable

The high and low pass filters are engaged with the Cut Enable switch. The Cut Filters are active when the “In” switch is engaged (darker). When the Cut Filters are engaged, circuit coloration is modeled even when set to “zero cut” frequency values (25 Hz and 20 kHz respectively).

The Cut Enable “In” switch is to the left of the EQ “In” switch on the graphical interface.

High Pass (low cut)

This control determines the cutoff frequency for the high pass filter. The available range is 25 Hz to 3.15 kHz.

Low Pass (high cut)

 
This control determines the cutoff frequency for the low pass filter. The available range is 1.6 kHz to 20 kHz.

Four EQ Bands



Each of the four EQ bands have similar controls. The band center frequency is controlled the top row of knobs, and the band gain is controlled by the bottom row.

Low Peak



The low EQ band can be operated in either peak or shelf mode. When the Low Peak switch is in the “out” position, the low EQ band operates in shelf mode. When the Low Peak switch is engaged (darker), the low EQ band operates in peak mode (the other bands always operate in peak mode).

Low Frequency

This control determines the low band center frequency (or the edge frequency when in shelf mode) to be boosted or attenuated by the band Gain setting. The available range is 40 Hz to 600 Hz.

Low Gain

This control determines the amount by which the frequency setting for the low band is boosted or attenuated. The available range is ± 10 dB.

Low Mid Frequency

This control determines the low midrange band center frequency to be boosted or attenuated by the band Gain setting. The available range is 200 Hz to 3.1 kHz.

Low Mid Gain

This control determines the amount by which the frequency setting for the low midrange band is boosted or attenuated. The available range is ± 10 dB.

High Mid Frequency

This control determines the low midrange band center frequency to be boosted or attenuated by the band Gain setting. The available range is 400 Hz to 6 kHz.

High Mid Gain

This control determines the amount by which the frequency setting for the high midrange band is boosted or attenuated. The available range is ± 10 dB.

Hi Frequency

This control determines the high band center frequency to be boosted or attenuated by the band Gain setting. The available range is 900 Hz to 13 kHz.

Hi Gain

This control determines the amount by which the frequency setting for the high band is boosted or attenuated. The available range is ± 10 dB.

Gain



The Gain knob controls the signal level that is output from the plug-in. The default value is 0 dB. The available range is ± 10 dB.

Harrison 32C SE



Figure 88. The Harrison 32C SE plug-in window

Overview

The UAD Harrison 32C SE is derived from the UAD Harrison 32C. Its algorithm has been revised in order to provide sonic characteristics very similar to the Harrison 32C but with significantly less DSP usage. It is provided to allow Harrison-like sound when DSP resources are limited. Nobody with “golden ears” will say it sounds exactly like the full version, but it still sounds great and is very usable in most situations.

The Harrison 32C SE interface can be differentiated from the Harrison 32C by knob color and the module name. The Harrison 32C SE has blue knobs instead of the Harrison 32C’s ivory knobs, and the module name on the upper right of the interface panel includes “SE.”

Harrison 32C SE Controls

The Harrison 32C SE controls are exactly the same as the Harrison 32C. Please refer to the Harrison 32C section for Harrison 32C SE control descriptions (see “Harrison 32C EQ and Harrison 32C SE Controls” on page 271).

Harrison 32C Latency

The Harrison 32C (but not the Harrison 32C SE) uses an internal upsampling technique to facilitate its amazing sonic accuracy. This upsampling results in a slightly larger latency than other UAD plug-ins. See “Compensating Upsampled Plug-Ins” on page 108 for more information.


The Harrison 32C SE does not require additional latency compensation because it is not upsampled.

Note: *Compensating for Harrison 32C is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used only on the outputs. See “Host PDC Implementation” on page 101.*

WebZine Article

An article about the Harrison 32C can be found in the “Plug-In Power” article of the Universal Audio January 2009 Webzine at:

- <http://www.uaudio.com/webzine/2009/january/power.html>

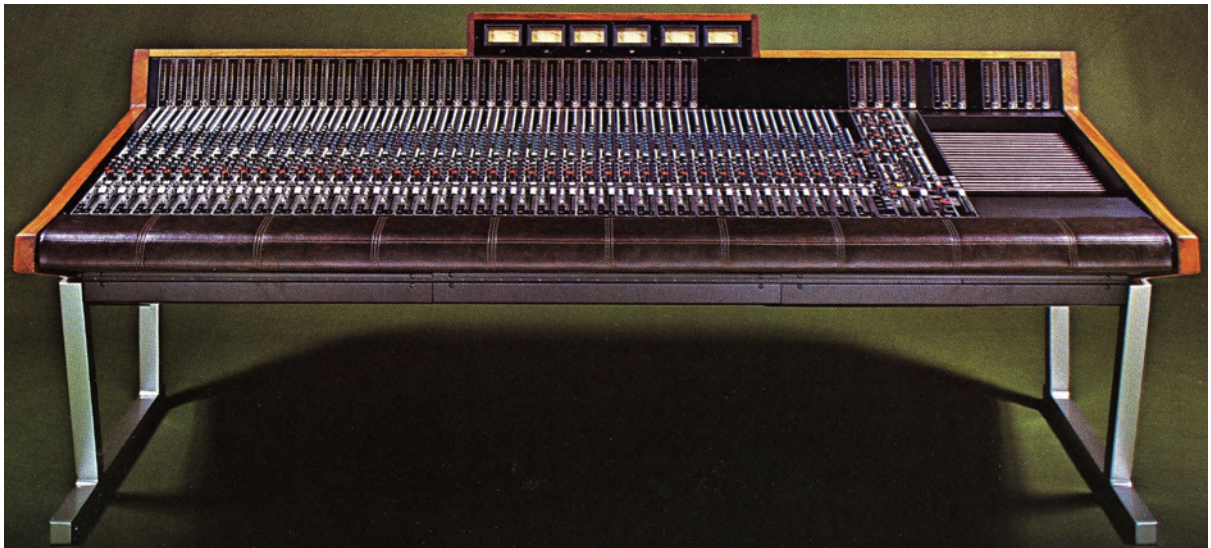

The Harrison 4032 Console, featuring the Harrison 32C EQ

Special thanks to Bruce Swedien for his gracious cooperation with the UAD Harrison 32C project.

Helios Type 69 Controls

Overview

The simple yet powerful Helios Type 69 Passive EQ adds a unique sonic texture to the music that passes through it. It can be pushed to its most extreme boost settings while retaining openness and clarity. The Type 69 Passive EQ replicates all the controls of the original hardware. The Treble band is a fixed 10 kHz shelf EQ, while the Bass band functions as a stepped 50 Hz shelf filter (-3,-6,-9,-12,-15 dB) or frequency selectable Peak EQ (60, 100, 200, 300 Hz). The Mid band operates as a frequency selectable Peak or Trough (Notch) EQ with eight frequencies (.7, 1, 1.4, 2, 2.8, 3.5, 4.5, 6 kHz). Other features include Level Adjust, EQ Cut (bypassing the EQ circuit while retaining the native sound of the unit), and Phase Reverse.

Band Layout

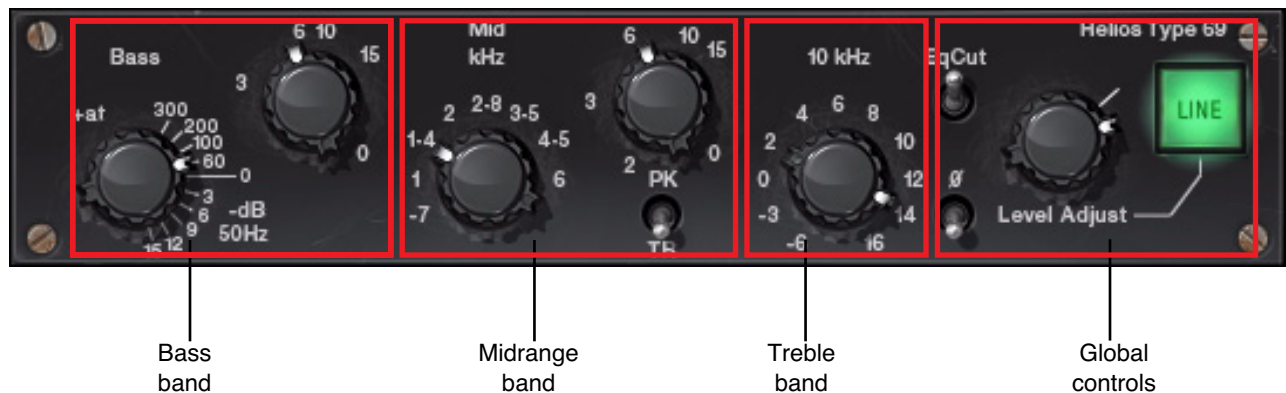


Figure 90. Helios 69 band control layout

The Helios Type 69 design works in such a way that (depending on the settings) entire EQ circuits are switched in and out. In the hardware that often meant audible popping. For the plug-in we use smoothing to reduce these audio spikes, but they may be more audible than with other UAD plug-ins. This is most audible when engaging the Bass or 10 kHz band from OFF to any other setting.

Each feature of the UAD Helios 69 interface is detailed below.

Bass



The Bass knob has a dual purpose. It specifies the amount of attenuation when the low band is in shelving mode, and specifies the frequency of the low frequency peak filter when the Bass Gain knob is not zero.

When Bass is set to one of the frequency values (60 Hz, 100 Hz, 200 Hz, or 300 Hz) the low band is in peak mode. In this mode, the amount of gain ("bass boost") applied to the specified frequency is determined by the Bass Gain knob.

When this knob is set to one of the decibel values (-3, -6, -9, -12, -15 dB) the low band is in "bass cut" shelving mode with a set frequency of 50 Hz.

Note: Like the original hardware, simply putting this control on any frequency will yield approximately 3.5 dB in gain increase even if the Bass Gain control is set to 0.

Bass Gain



The Bass Gain knob determines the amount of low band gain to be applied when the Bass knob is in one of the frequency positions. Up to +15 dB of boost is available.

Note: Bass Gain has no effect when the Bass knob is in shelving mode (when Bass set to one of the dB positions).

Mid Freq



This control determines the frequency of the midrange band. The following frequencies can be specified: 700 Hz, 1 kHz, 1.4 kHz, 2 kHz, 2.8 kHz, 3.5 kHz, 4.5 kHz, and 6 kHz.

Note: The gain for the mid band is determined by the Mid Gain control. MidFreq has no effect if the Mid Gain control is set to zero.

In the graphic interface of this control, what may appear to be a dash ("-") actually represents a decimal point. This anomaly mimics the original hardware.

Mid Gain



This control determines the amount of gain or attenuation to be applied to the mid band. Up to 15 dB of boost or cut is available.

The Q (bandwidth) on the midrange band is fairly wide and gentle at low settings, but gets progressively narrower as the gain value is increased.

Note: Whether gain or attenuation is applied is determined by the Mid Type control.

Mid Type



Mid Type specifies whether the midrange band is in Peak or Trough mode. When switched to Peak, the Mid Gain control will boost the midrange. When switched to Trough, Mid Gain will cut the midrange.

Note: When using Trough, a 1 dB loss occurs on the overall output of the plug-in. This is normal; the behavior is the same in the original hardware.

High Shelf Gain



The High Shelf Gain knob offers fixed frequency shelving equalization at 10 kHz. This stepped control can cut the treble by -3 dB or -6 dB, or boost it in 2 dB increments up to +16 dB.

EqCut



This switch is an EQ bypass control. It allows you to compare the processed and unprocessed signal. The EQ is active when in the "in" (up) position.

The EQ is bypassed when in the "out" (down) position. EqCut does not reduce UAD DSP load.

In the original Helios hardware, the audio is still slightly colored even when the EQ switch is in the Cut position. This is due to the fact that the signal is still passing through its circuitry. Because the plug-in emulates the hardware in every regard, the signal will be slightly processed when this switch is in the Cut position. If a true bypass is desired, use the Line switch instead.

Phase



The Phase (\emptyset) switch inverts the polarity of the signal. When the switch is in the "Inverted" (up) position, the phase is reversed. Leave the switch in the "Normal" (down) position for normal phase.

Level Adjust



This control adjusts the signal output level of Helios Type 69. This may be necessary if the signal is dramatically boosted or reduced by the EQ settings. The available range is -20 dB to +10 dB.

Line



The Line switch determines whether the plug-in is active. This is useful for comparing the processed settings to the original signal, or to bypass the plug-in to reduce the UAD DSP load (load is not re-

duced if “UAD-2 DSP LoadLock” on page 74 is enabled).

Click the switch to toggle the state; the switch is illuminated in green when the plug-in is active.

Helios 69 Latency

The Helios 69 uses an internal upsampling technique to facilitate its amazing sonic quality. This upsampling results in a slightly larger latency than other UAD plug-ins. See “Compensating Upsampled Plug-Ins” on page 108 for more information.

Note: *Compensating for Helios 69 is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used only on the outputs. See “Host PDC Implementation” on page 101.*

WebZine Article

An interesting anecdotal article about the Helios console and Type 69 EQ can be found in the “Analog Obsession” article of the Universal Audio March 2007 Webzine (Volume 5, Number 2), published on the internet at:

- <http://www.uaudio.com/webzine/2007/march/index4.html>



Basing Street—Home of the original Type 69 Helios desk



The same desk, now in Berkeley's Morningwood, nearly 40 years later

LA-2A and 1176LN

Overview

The LA-2A and 1176LN compressor/limiters long ago achieved classic status. They're a given in almost any studio in the world – relied upon daily by engineers whose styles range from rock to rap, classical to country and everything in between. With so many newer products on the market to choose from, it's worth looking at the reasons why these classics remain a necessary part of any professional studio's outboard equipment collection.

The basic concept of a compressor/limiter, is of course, relatively simple. It's a device in which the gain of a circuit is automatically adjusted using a predetermined ratio that acts in response to the input signal level. A compressor/limiter “rides gain” like a recording engineer does by hand with the fader of a console: it keeps the volume up during softer sections and brings it down when the signal gets louder. The dynamic processing that occurs at ratios below 10 or 12 to one is generally referred to as compression; above that it's known as limiting.

Modern day compressors offer a great degree of programmability and flexibility; older devices such as the 1176LN and the LA-2A are more straightforward in their design. Perhaps it is this fact that has contributed to their appealing sound and the longevity of their popularity.

Compressor Basics

Before discussing the LA-2A and 1176LN plug-ins, this section will cover some compressor basics. A *compressor* automatically adjusts the gain of a signal by a predetermined ratio. In a sense, a compressor “rides” gain—much like a recording engineer does (by hand) with a fader—keeping the volume up during softer sections and bringing it down when the signal gets louder.

Figure 91 depicts the input and output characteristics of a compressor and perfect amplifier. When operated within its specified range, an amplifier provides a constant amount of gain regardless of the input signal level. In Figure 91, the signal level of a perfect amplifier is represented with a constant output gain of 10 dB. In this example, a signal with an input level of -30 dB results in an output level of -20 dB, which is an increase of 10 dB. Similarly, an input level of 0 dB results in an output level of 10 dB (the gain stays fixed at 10 dB regardless of the input level).

In contrast to an amplifier, whose function is to present a constant gain, a compressor varies its gain in response to the level of the input signal. Large input signals result in less gain, thus reducing or *compressing* the dynamic range of the signal. In Figure 91, a compressed signal with an input level of -30 dB results in an output level of -20 dB, indicating a gain of 10 dB. However, with input levels of -20 dB and -10 dB, the compressor exhibits gains of 5 dB and 0 dB (respectively), thereby illustrating that the gain decreases as the input signal increases. This increase in output level by 5 dB for every 10 dB is defined as a compression ratio of 2:1 (reduced from 10:5).

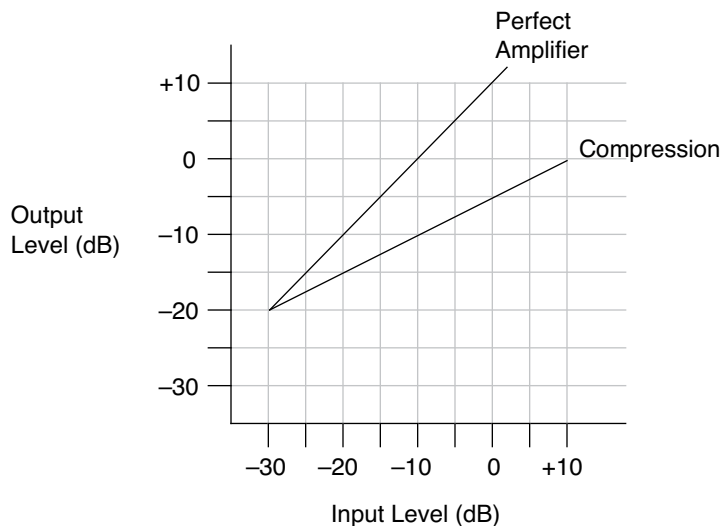


Figure 91. Input and output characteristics of a compressor and perfect amplifier

The amount of compression, or gain reduction, typically expressed in decibels (dB), is defined as the amount by which the signal level is reduced by the compressor. Graphically, this can be represented (see Figure 92) by the difference in output levels between the original signal (without compression) and the compressed signal. The LA-2A and 1176LN display this value when their VU Meters are set to Gain Reduction.

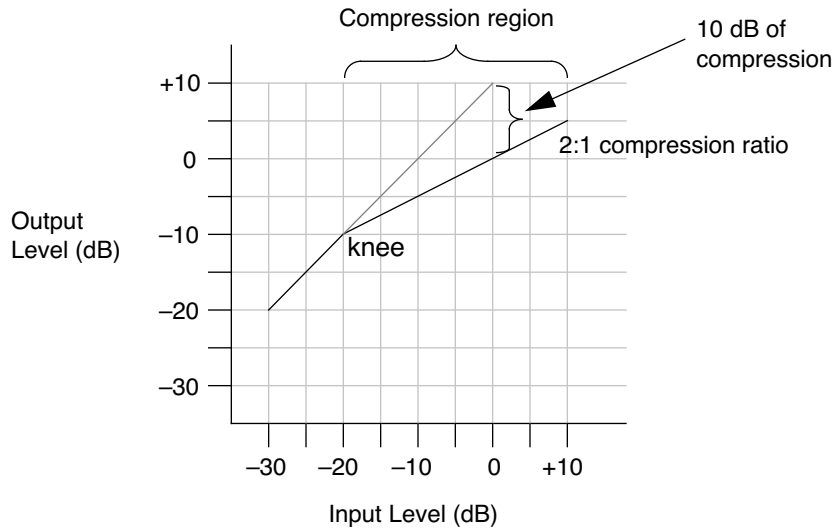


Figure 92. Input and output curve of compressor with 2:1 ratio and -20 dB threshold

As mentioned previously, the compression ratio is defined as the ratio of the increase of the level of the input signal to the increase in the level of the output signal. In [Figure 92](#), the input level is increased by 10 dB while the output level increases 5 dB. This is a compression ratio of 2:1. Lower compression ratios such as 2:1 result in mild compression. A compression ratio of 1:1 yields no compression.

Note: Compression ratios above 10:1 are commonly referred to as “limiting” or “peak-limiting,” where amplitude peaks are reduced.

Compressors often let you set a threshold, the point at which gain reduction starts to take place. When the level of an audio signal is below this threshold there is no gain reduction. As the level of the signal increases above the threshold level, gain reduction and compression occurs. The point at which a signal transitions into compression is commonly referred to as the *knee*. In practical compressors, this transition is more gentle than what is depicted in [Figure 92](#).

Most modern compressors provide a control that adjusts the threshold directly. In the case of the LA-2A, the Peak Reduction control adjusts both the threshold and the amount of gain reduction. Similarly, the 1176LN uses its Input control to adjust the threshold and amount of gain reduction.

Teletronix LA-2A Leveling Amplifier

Background

Audio professionals passionate about their compressors revere the LA-2A. The original was immediately acknowledged for its natural compression characteristics. A unique electro-optical attenuator system allows instantaneous gain reduction with no increase in harmonic distortion – an accomplishment at the time, still appreciated today.

The LA-2A is known for adding warmth (such as for vocals, guitar, or synths) and fatness (such as for drums or bass) to signals.

LA-2A Signal Flow

A functional block diagram of the LA-2A Leveling Amplifier is provided in [Figure 93](#). The input transformer provides isolation and impedance matching. After this the signal is fed into both the side-chain circuit and the gain reduction circuit. The side-chain is comprised of a voltage amplifier, a pre-emphasis filter, and a driver stage that provides the voltage necessary to drive the electro-luminescent panel. This signal controls the gain of the compressor. After the gain reduction circuit, the signal is sent through an Output Gain control and a two-stage output amplifier, followed by the output transformer.

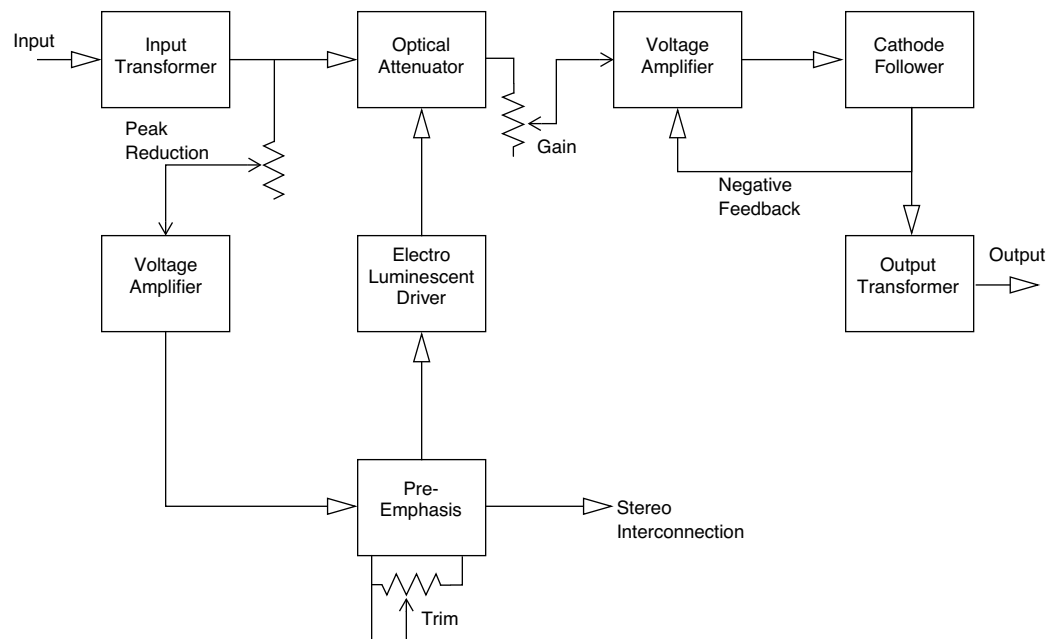


Figure 93. LA-2A signal flow

LA-2A Controls



Figure 94. The LA-2A plug-in window.

- Limit/Compress** Changes the characteristics of the compressor I/O curve. When set to Compress, the curve is more gentle, and presents a low compression ratio. When set to Limit, a higher compression ratio is used.
- Gain** Adjusts the output level (by up to 40 dB). Make sure to adjust the Gain control *after* the desired amount of compression is achieved with the Peak Reduction control. The Gain control does not affect the amount of compression.
- Peak Reduction** Adjusts the amount of gain reduction, as well as the relative threshold. A Peak Reduction value of 0 yields no compression. Rotate this control clockwise until the desired amount of compression is achieved (to monitor the Peak Reduction, set the VU Meter to Gain Reduction). The Peak Reduction should be adjusted independently of the Gain control.
- Meter** This knob (in the upper right) sets the mode of the VU Meter. When set to Gain Reduction, the VU Meter indicates the Gain Reduction level in dB. When set to +10 or +4, the VU Meter indicates the output level in dB.
- On/Power Switch** Determines whether the LA-2A plug-in is active. When the Power switch is in the Off position, the plug-in is disabled and UAD DSP usage is reduced (load is not reduced if [“UAD-2 DSP LoadLock”](#) on page 74 is enabled).
- Stereo Operation** Phase-coherent stereo imaging is maintained when the LA-2A plug-in is used on a stereo signal.

1176LN Solid-State Limiting Amplifier

The 1176LN is known for bringing out the presence and color of audio signals, adding brightness and clarity to vocals, and “bite” to drums and guitar.

1176LN Signal Flow

A functional block diagram of the 1176LN Limiting Amplifier is provided in [Figure 95](#). Signal limiting and compression is performed by the Gain Reduction section. Before the signal is applied to the Gain Reduction section, the audio signal is attenuated by the Input stage. The amount of attenuation is controlled by the input control potentiometer. The amount of gain reduction as well as the compressor Attack and Release times are controlled by the Gain Reduction Control circuit. After Gain Reduction a pre-amp is used to increase the signal level. The Output Control potentiometer is then used to control the amount of drive that is applied to the output amplifier. The 1176LN is a feedback style compressor since the signal level is sensed after the gain reduction is applied to the signal.

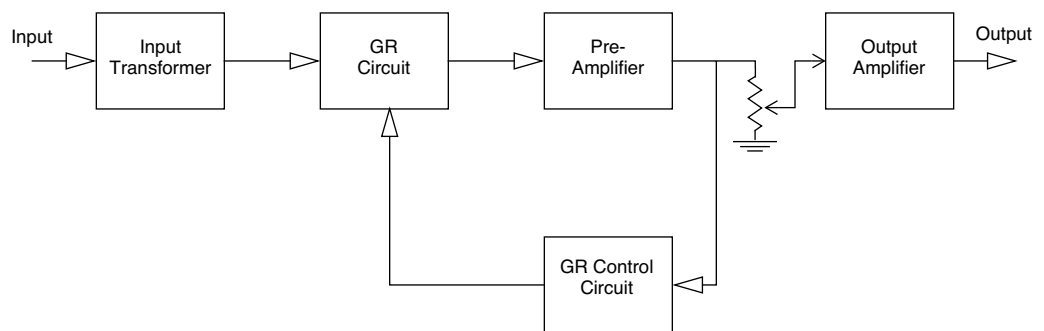


Figure 95. 1176LN signal flow

1176LN Controls



Figure 96. The 1176LN plug-in window

- Input** Adjusts the amount of gain reduction as well as the relative threshold. An Input value of ∞ (turned fully counterclockwise) yields no compression (and no signal level). Rotate this control clockwise to increase the amount of compression.
- Output** Adjusts the output level (by up to 45 dB). Make sure to adjust the Output control *after* the desired amount of compression is achieved with the Input and Attack controls. To monitor the Output level, set the VU Meter to +8 or +4. The Output control does not affect the amount of compression.
- Attack** Sets the amount of time (from 20–800 microseconds) that must elapse once the input signal reaches the Threshold level before compression is applied. Faster attack times are achieved by rotating the Attack control clockwise. The faster the Attack, the more rapidly compression is applied to signals above the threshold.
- Release** Sets the amount of time (from 50–1100 msec.) it takes for compression to cease once the input signal drops below the threshold level. Faster release times are achieved by rotating the Release control clockwise. Slower release times can smooth the transition that occurs when the signal dips below the threshold, especially useful for material with frequent peaks. However, if you set too large of a Release time, compression for sections of audio with loud signals may extend to lengthy sections of audio with lower signals.
- Ratio** These four pushbutton switches (to the left of the VU Meter) determine the compression ratio. Ratios of 20:1, 12:1, 8:1, and 4:1 are provided. The 20:1 and 12:1 settings are typically used when peak-limiting is desired, while the 4:1 and 8:1 settings are used for general dynamic range compression.

All Buttons mode Just like the hardware version of the 1176LN, it is possible to depress all the Ratio buttons simultaneously, a well-known studio trick.

In this mode, the ratio is around 12:1, and the release happens faster, and the shape of the release curve changes. With lower amounts of compression, the attack is delayed slightly, as there is a slight lag before the attack attenuated the signal. That attack value remains at whatever the value is on the Attack control.

To enter All Button Mode

Shift-click any of the Ratio buttons. All of the buttons will appear depressed.

To exit All Button Mode

Click any Ratio button without the shift key modifier.

Meter These four pushbutton switches (to the right of the VU Meter) determine the mode of the VU Meter, and whether the plug-in is enabled. When set to GR, the VU Meter indicates the Gain Reduction level in dB. When set to +8 or +4, the VU Meter indicates the output level in dB; when set to +4, a meter reading of 0 corresponds to an output level of +4 dB.

In gain reduction mode with all buttons depressed, the VU meter will appear to behave strangely. This is normal behavior in the hardware 1176LN, and is faithfully recreated in the plug-in.

When the Meter Off switch is selected, the 1176LN plug-in is disabled and UAD DSP usage is reduced (unless [“UAD-2 DSP LoadLock”](#) on page 74 is enabled).

Grit One trick you can do with the 1176 is turning the attack and release up all the way to their fastest setting. This has the audible effect of adding distortion to the audio source, and is especially pronounced in all-buttons mode. What happens here is the attack and release are happening so fast that minute level fluctuations sound like distortion. It can add a very useful, gritty compression effect.

This effect is useful on bass, where you might need compression and distortion at the same time, and the 1176 can provide both in a unique way. This trick also sounds great on screaming lead vocals. And yes, the hardware does this too!

Stereo Operation

Phase-coherent stereo imaging is maintained when the 1176LN plug-in is used on a stereo signal.

1176SE “Special Edition”

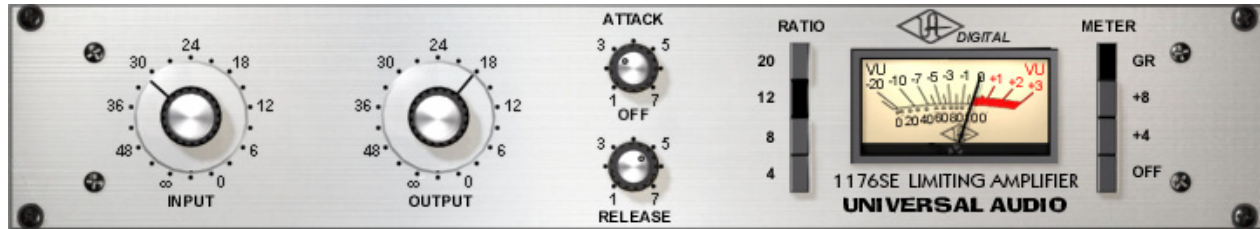


Figure 97. The 1176SE plug-in window

Overview

The 1176SE is derived from the 1176LN. Its algorithm has been revised in order to provide sonic characteristics similar to the 1176LN but with significantly less DSP usage. It is provided to allow “1176LN-like sound” when DSP resources are limited.

The 1176SE behavior is practically identical to the 1176LN. Its sound is nearly identical too, but certain compromises had to be made in order to squeeze the extra DSP performance that the 1176SE provides. At nominal settings the sonic difference is negligible. At extreme (cranked) settings, nobody with “golden ears” will say it sounds exactly like the 1176LN, but it still sounds great and is very usable in most situations.

1176SE Controls

The 1176SE controls are exactly the same as the 1176LN. Please refer to the the 1176LN section for 1176SE control descriptions (see [“1176LN Controls” on page 287.](#)).

CHAPTER 26-

LA-3A Compressor

Overview

The original Teletronix LA-3A Audio Leveler made its debut at the 1969 New York AES show. Marking a departure from the tube design of the LA-2A Leveling Amplifier, the solid-state LA-3A offered a new sound in optical gain reduction, with faster attack and release characteristics that were noticeably different from its predecessor. Immediately embraced as a studio workhorse, the LA-3A is still widely used today. Engineers and producers the world over favor the LA-3A for its unique compression characteristics and sonic signature. Modeled from a unit in UA's vintage collection, our digital emulation of the LA-3A faithfully captures the hardware's sound, working magic on vocals, guitars and drums.

LA-3A Screenshot



Figure 98. The LA-3A plug-in window

LA-3A Controls

- Background** For detailed information about compressors, see “Compressor Basics” on page 281.
- Comp/Lim** This switch changes the characteristics of the compressor I/O curve. When set to Compress, the curve is more gentle, and presents a low compression ratio. When set to Limit, a higher compression ratio is used.
- Gain** The Gain knob adjusts the output level (by up to 50 dB). Make sure to adjust the Gain control *after* the desired amount of compression is achieved with the Peak Reduction control. The Gain control does not affect the amount of compression.
- Peak Reduction** This control adjusts the amount of gain reduction, as well as the relative threshold. A Peak Reduction value of 0 yields no compression. Rotate this control clockwise until the desired amount of compression is achieved (to monitor the Peak Reduction, set the VU Meter to Gain Reduction). The Peak Reduction should be adjusted independently of the Gain control.
- Meter** This switch sets the mode of the VU Meter and also disables the plug-in. When set to Gain Reduction, the VU Meter indicates the Gain Reduction level in dB. When set to output, the VU Meter represents the output level (the output meter is not calibrated).
- When in the Off position, the plug-in is disabled and UAD DSP usage is reduced.
- Note:** (UAD-2 only) UAD-2 DSP usage is reduced only when DSP LoadLock (page 74) is disabled. If DSP LoadLock is enabled (the default setting), setting the switch to Off will not reduce DSP usage.
- Stereo Operation** Phase-coherent stereo imaging is maintained when the LA-3A plug-in is used on a stereo signal.

CHAPTER 27

Lexicon 224

Classic Digital Reverb

From the moment it was unleashed on the audio industry in 1978, the original Lexicon 224 Digital Reverb — with its tactile, slider-based controller and famously lush reverb tail — almost single-handedly defined the sound of an entire era. It served as a major player in the sound of highly influential classics such as Talking Heads' *Remain In Light*, Grandmaster Flash & The Furious Five's *The Message*, Vangelis' incredible *Blade Runner* soundtrack, U2's *Unforgettable Fire*, and Peter Gabriel's *So*. With such a refined legacy, it's no surprise that the Lexicon 224 remains one of the most popular digital reverb units of all time.

The result of using the very same algorithms and control processor code from the original hardware, the UAD-2 Lexicon 224 precisely captures all eight reverb programs and the chorus program — based on the Lexicon 224's final and hard-to-find firmware version 4.4. In UA's exhaustive modeling tradition, the Lexicon 224 plug-in also incorporates the original unit's input transformers and early AD/DA 12-bit gain stepping converters — nailing the entire analog and digital circuit paths right down to the last detail.

Additionally, the Lexicon 224 emulation for UAD-2 features direct input and presets from famous Lexicon 224 users, including Chuck Zwicky (Prince, Jeff Beck), Eli Janney (Jet, Ryan Adams), David Isaac (Eric Clapton, Luther Vandross), E.T. Thorngren (Talking Heads, Bob Marley), and Kevin Killen (U2, Peter Gabriel).

History

Developed by renowned physicist/engineer Dr. David Griesinger, the Lexicon 224 is the most ubiquitous and best-selling studio digital reverb ever made. The original 224 was a landmark achievement in digital reverb and served as the very product to put Lexicon on the studio map — and a remote control on every console. The 224's Concert Hall A program is considered to be one of the finest reverbs ever made, and its plate programs practically defined the 80's drum sound.

Parameters

Every tunable parameter from the original is present in the Lexicon 224 plug-in, and exposed as dedicated controls — inviting easy experimentation and sonic exploration. All seven algorithms/nine programs are available under the Program selection. Lexicon’s distinctive Bass/Mid “split decay” adjustments and Crossover control set the highly tunable reverb image, along with the Treble Decay for rolling off high frequencies. Depth sets the apparent distance between source and reverb, while Predelay produces a short delay between the sound source and the onset of reverberation. Diffusion affects how quickly the echo density in the reverb builds up over time.

For total authenticity, the UAD-2 only System Noise control enables or disables the inherent dynamic system noise of the original Lexicon 224 hardware. Specifically, disabling System Noise enables a more modern (i.e., cleaner) sound, removing the modeled gain stepping, parameter zippering, and quiescent noise. The unique Lexicon 224 Mode Enhancement and Decay Optimization controls improve reverb clarity. For insert use, the UAD-2 only Dry/Wet and Solo parameters control the effect mix within the plug-in.

Clicking the “OPEN” text to the right of the display panel exposes several hidden controls, including Input/Output gain and Pitch Shift, and even a selectable “Bug Fix” mode which enables/disables historical bug fixes from the Hall B and Chorus programs.

Taken together, the Lexicon 224 emulation for UAD-2 is the world’s most exhaustive and authentic model of a true studio classic.



The original Lexicon 224 Digital Reverberator hardware

All visual and aural references to Lexicon products and all use of Lexicon trademarks are being made with written permission from Harman International Industries, Inc.

Lexicon 224 Screenshot

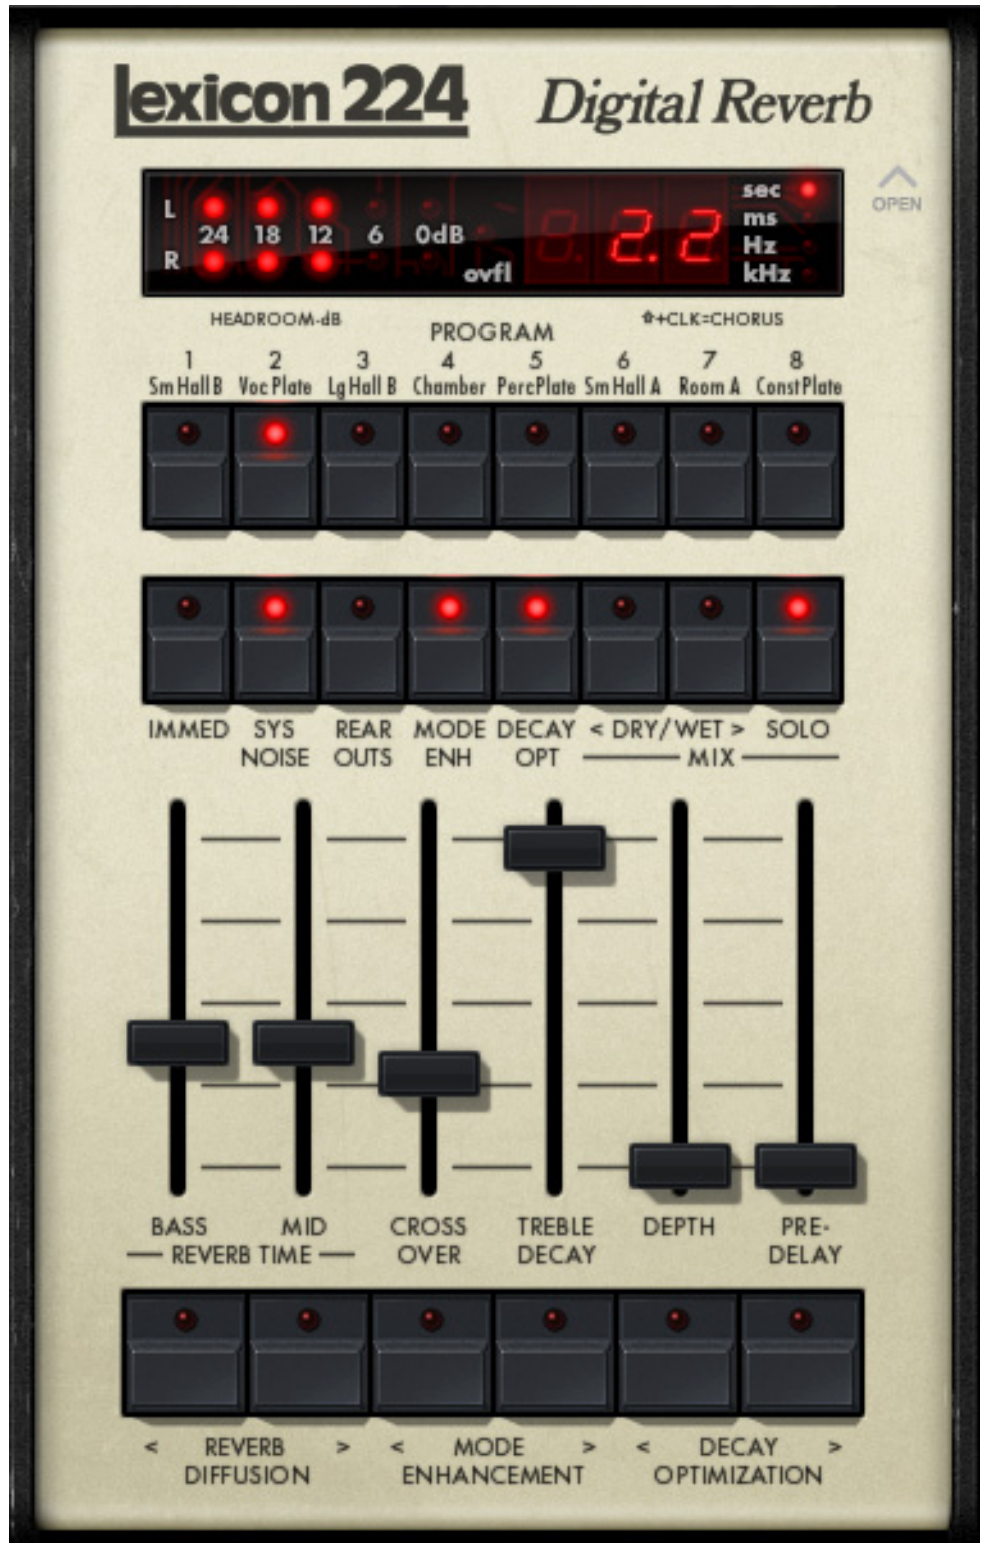


Figure 99. The Lexicon 224 plug-in window

Operational Overview

Graphical User Interface

The original Lexicon 224 consists of two hardware elements. The “main-frame” rack-mountable 4U chassis contains the power supply, circuitry, and audio input/output connectors. The remote control unit has a display, buttons, and sliders which control the 224 parameters and functionality. Some of these buttons and sliders have dual and even triple functionality, which makes using certain “buried” functions a tricky procedure.

The UAD Lexicon 224 interface resembles the appearance and functionality of the original hardware remote control. Operation has been simplified however by reassigning the buried “shift” functions to the buttons that are no longer necessary in a plug-in (such as managing saved programs). Additional parameters are exposed by opening a panel cover.

Lexicon 224 Programs

The original Lexicon 224 hardware has “programs” that are defined by the firmware ROM (“Read-Only Memory” chip) installed in the unit. A Lexicon 224 “program” is comprised of a unique DSP algorithm and an initial set of factory parameter values voiced by Lexicon. In modern terminology, these initial values would be called a “preset.”

In Lexicon 224 hardware-speak, a program is “called” (loaded) which selects the DSP algorithm and sets the default “recommended” factory parameter values. These settings can then be modified with the various controls and saved in a user “register” for later recall. The plug-in behaves the same way, except user “registers” are not implemented. Instead, user settings are stored within the session file or they can be saved as a preset for later recall (like all other UAD plug-ins).

Lexicon 224 version 4.4 firmware contains nine programs (the maximum available for the unit), consisting of eight reverb programs and one chorus program. Descriptions of the various programs can be found on [page 309](#).

Lexicon 224 Algorithms

The active algorithm determines the inherent sonic character of the current program. Algorithms are changed by selecting a different program; the algorithm cannot be changed within the same program.

Lexicon 224 v4.4 contains seven unique algorithms. All seven algorithms and the nine factory programs have been authentically modeled in the UAD Lexicon 224 plug-in. There are more programs than algorithms because some programs use the same algorithm. See “[Program Descriptions](#)” on [page 309](#) for details.

Lexicon 224 Buttons

Like the original hardware, UAD Lexicon 224 buttons are momentary-style and don't latch in a down position. When a function is unavailable within a particular program, the button's LED will not illuminate when clicked (the LEDs also don't illuminate for the increment/decrement buttons).

The first click of an increment/decrement button displays the current value of the parameter; the value is actually changed only with subsequent clicks. This feature enables viewing the current setting without changing it.

Tip: For the inc/dec buttons (e.g., *Reverb Diffusion*), the value can be continuously changed by holding the button down.

Lexicon 224 Sliders

The six sliders control the main reverb parameters within a program. These are the most obvious controls to reach for when fine-tuning a reverb program to best suit the material at hand.

In P9 Chorus A, the first four sliders don't control the labeled parameters. See ["P9 Chorus A" on page 310](#) for descriptions of the sliders in this program.

Tip: Clicking a slider "cap" will show its value in the Numerical Display. Clicking the text label of any slider will return that slider to the default value for the active program.

Inputs & Outputs

The Lexicon 224 hardware has two inputs (see Mono/Stereo below), and four discrete outputs, labeled as A, B, C, and D. Outputs A and C were designed to be used as the main stereo left/right outputs. The other two outputs, B and D, are implemented in some programs for use as quadraphonic reverb.

The UAD Lexicon 224 fully models the individual sonics of all four outputs when available in the program algorithm. The alternate B and D outputs are available via the [Rear Outs](#) control ([page 303](#)).

Note: The dry signal at the Lexicon 224 output is completely unprocessed.

Mono/Stereo Operation

The Lexicon 224 hardware has dual channel inputs (left and right) and is a true stereo processor. Like the hardware, when the UAD Lexicon 224 plug-in is used in a stereo-in/stereo out configuration, the left and right channel signals are both processed.

When used in a mono-in/stereo out configuration, the mono input is sent to both channels of the stereo processor.

When configured as mono-in/mono-out (“MIMO”), output A is used exclusively except in programs 2, 4, and 9, where outputs A and C are summed into one monophonic signal. This implementation is recommended in the original hardware manual. If Rear Outs is enabled in MIMO mode, outputs B and D are used instead of A and C. See [Table 21 on page 311](#) for a list of outputs used with each program in this configuration.

Primary & Hidden Controls

The primary controls (those that are most typically used) are on the main “remote control” panel interface. Additional (less typically used) controls are available in a hidden control panel. The hidden control panel ([Figure 102 on page 306](#)) is accessed by clicking the “OPEN” text label to the right of the Display Panel.

For detailed descriptions of all parameters, see “Primary Controls” on [page 299](#) and “Hidden Controls” on [page 306](#).

Parameter Ranges & Default Values

The parameter value ranges, default values, and availability of particular parameters within a given program may vary depending on which program is active. Parameter ranges are listed in the individual control descriptions. Default parameter values for each program are listed in [Table 22 on page 311](#).

Note: Extreme parameter settings can cause Lexicon 224 to self-oscillate or cause other unexpected sounds. This behavior is identical to the original hardware.

Display Panel

The Lexicon 224 display panel ([Figure 100](#) below) consists of four display elements: Numerical Value, LED Value, Stereo Level Meters, and Overflow indicator. Exactly what is displayed here is dependent on the parameter being edited (if any) and the state of the [Display Hold](#) switch ([page 308](#)).



Figure 100. The Lexicon 224 Display Panel

Numerical Value

The three-character Numerical Value Display shows the value of parameters as they are being edited. The value of the edited parameter is displayed for 1.5 seconds unless the [Display Hold](#) switch is set to infinite, in which case the last edited parameter value continues to be displayed.

If **Display Hold** is set to 1.5 (the default value), after parameters are edited, the value displayed here reverts after 1.5 seconds to a reverb time which is related to the combined Bass and Mid slider values. This relationship is based on approximations designed by the original Lexicon engineers; the actual decay times may not match the displayed value.

Value LED

The Value LED shows the units of the numerical value being displayed for a particular control. For parameters in the time domain, the “sec” (seconds) or “ms” (milliseconds) LED is lit. For parameters in the frequency domain, the “Hz” (Hertz) or “kHz” (kilohertz) LED is lit. For parameters that have no units value (e.g., Dry/Wet Mix), the value LED does not illuminate.

LED Meters

The six-segment LED meters display the left and right signal input levels at the Lexicon 224 analog-to-digital converters, which are fully modeled. The Meter LEDs indicate levels at -24 dB, -18 dB, -12 dB, -6 dB, and 0 dB. When the 0 dB LED illuminates, input clipping has occurred.

Overflow LED

The Overflow LED illuminates when an arithmetic processor overflow has occurred. Overflows can happen when loud signals are present at the input, when reverb decay times are long, and/or when self-oscillation occurs. Unexpected sonic artifacts and/or ringing can occur when the processor overflows.

Overflow behavior in the hardware is fully modeled in the plug-in. If processor overflows are causing undesirable sounds, overflow can usually be eliminated by reducing the levels with the Input controls, or by reducing the value of the Bass, Mid, and/or Treble Decay controls.

Primary Controls

Program

The Program buttons (Figure 101) are used to specify which of the nine default Lexicon programs, and its associated algorithm, is active. See “[Lexicon 224 Programs](#)” on page 295 for an overview.

Eight reverb programs and one chorus program are available. Click a reverb program button 1 – 8 to select that program. To select the chorus program, shift+click any program button, or click the CLK=CHORUS text label. The program button LED indicates which program is active except in chorus mode, when all eight program button LEDs are illuminated.



Figure 101. The Lexicon 224 Program Buttons

When a program is loaded, the original default Lexicon “recommended” factory settings for that algorithm are also loaded at the same time, overwriting previous settings (except when [Immediate](#) mode is active; see [page 302](#) for details). Program settings can then be adjusted to taste using any available controls.

“[Program Descriptions](#)” on [page 309](#) contains details about each program.

Important: *If the program is changed when Immediate mode is disabled, settings from the previously selected program are lost. To retain custom program settings for future use, save the settings as a plug-in preset by using the UAD Toolbar or host application preset management techniques.*

Reverb Time

Reverb Time is the duration of the decay of the reverberant sound (the “reverb tail”). The reverb tail time is separated into two frequency component bands, Bass and Mid. The separation frequency of the two bands is defined by the Crossover control.

Bass

The Bass slider defines the reverb decay time for the frequencies below the Crossover value. Higher Bass values result in longer bass frequency decay times (when Crossover is not set too low). The Bass reverb decay time value, in seconds, is shown in the Numerical Display. The available range is 0.6 seconds to 70 seconds.

This control works in conjunction with the Crossover parameter, which defines the range of the bass frequencies affected by the Bass control. Therefore adjusting Bass may have little audible effect if Crossover is set to a very low value.

Mid

The Mid slider defines the reverb decay time for the frequencies above the Crossover value. Higher Mid values result in longer high frequency decay times (when Crossover is not set too high). The Mid reverb decay value, in seconds, is shown in the Numerical Display. The available range is 0.6 seconds to 70 seconds.

Mid works in conjunction with the Crossover parameter, which defines the range of high frequencies affected by the Mid control. Therefore adjusting Mid may have little audible effect if Crossover is set to a very high value.

Mid is a slightly misleading label, because this control actually affects the reverb decay for all frequencies above the Crossover value (not just the midrange). However, because the “highs” in the reverb can be rolled off with the Treble Decay control (and usually are), the midrange frequencies are often more prominent than a full-range tail.

Crossover

This control defines the crossover frequency (the split point) between the bass and upper frequency bands in the reverb tail. Higher Crossover values make the Bass parameter control a wider range of frequencies. Conversely, lower values make the Mid parameter control a wider range of frequencies. The available range is 100 Hz to 10.9 kHz.

Crossover affects the reverb decay because it works in conjunction with the Bass and Mid reverb time parameters, which both define the length of the reverb tail (one control for each frequency band). If those parameters are set to very short times, the result of adjusting Crossover may be very subtle.

Note: *Crossover will have no apparent effect if Bass and Mid are set to the same value.*

Treble Decay

Treble Decay sets a frequency above which decay is very rapid. Lower values will produce a “darker” reverb with less high frequency content. If Treble Decay is set very low, then adjusting Bass, Mid, and Crossover may have little to no audible effect. The available range is 100 Hz to 10.9 kHz.

Tip: *Treble Decay adjusts the AMOUNT of reverb tail highs, while Mid adjusts the TIME.*

Depth

Depth sets the apparent distance between a source and its reverb, much like the positioning of microphones in an echo chamber. As the value is increased, the apparent distance from the source increases. The available range is 0 – 71, with zero being “close” and 71 being “far” (the numbers are arbitrary). The default value is program dependent.

Note: *Depth is not available in P9 Chorus A. In this program the display is not updated when the Depth slider is moved.*

Diffusion

In most programs, Diffusion affects how quickly the echo density in the reverb builds up over time. In the original hardware, this parameter was usually referred to as “Shift-Depth” (changing the diffusion value required holding down the shift button while adjusting the depth amount).



Click the left (“<”) decrement button to decrease the Diffusion value; click the right (“>”) increment button to increase the value. The available range is 0 – 63 (the numbers are arbitrary). The default value is program dependent; [Table 22 on page 311](#) lists the default values for each program.

Note: *Diffusion is unavailable in P4 Acoustic Chamber.*

Zero is the least dense setting. Density increases as the Diffusion value is increased, but setting Diffusion higher than 40 can actually sound less dense. The fastest density buildup is achieved with Diffusion values near the middle of the range (approximately 32-37).

Higher Diffusion values are frequently desirable when the material has a lot of percussion. Higher Diffusion can also contribute to a smoother-sounding reverb. With low Diffusion values the early reverb will be “grainy” and sparse, but will produce a clear, bright sound that is very useful with strings, horns, and vocals. Low Diffusion is also useful in classical music or in adding a sense of depth to an overall mix. Note that in Lexicon 224, lower frequencies are generally less diffuse.

Note: If Immediate mode is active, the Diffusion value is retained when changing programs.


Predelay

Predelay produces a short delay between the sound source and the onset of reverberation. Higher Predelay values increase the time before reverb onset. The range of this parameter varies depending on the active program; see [Table 20 on page 302](#) for the available values. The default value is program dependent.

Table 20. Lexicon 224 Predelay Ranges

Program	Predelay Range	Program	Predelay Range
1. Small Concert Hall B	24 - 152	6. Small Concert Hall A	24 - 152
2. Vocal Plate	0 - 107	7. Room A	24 - 255
3. Large Concert Hall B	24 - 152	8. Constant Density Plate A	5 - 185
4. Acoustic Chamber	25 - 255	9. Chorus A	0 - 253
5. Percussion Plate A	0 - 107	Note: Predelay values are in milliseconds.	

 Immediate



When Immediate (“IMMED”) is enabled, current parameter values are retained when a new program is selected. When Immediate is inactive and a program is selected, the Lexicon default factory preset parameter values for the program are loaded and the control sliders move to the preset values.

Enabling Immediate mode is convenient for quickly auditioning the various program algorithms using the same “persistent” parameter values. Disabling Immediate mode is convenient for quickly auditioning the various programs with the Lexicon factory default settings.

The default Immediate value is ON. Immediate affects the following parameters: Bass, Mid, Crossover, Treble Decay, Depth, Predelay, Diffusion, Mode Enhancement, Pitch Shift, Decay Optimization, and Rear Outs.

Important: When Immediate is off and a program is changed, previously modified parameter values are lost, unless the settings were saved as a preset or if the session file was previously saved so it can be recalled.

System Noise

This UAD-only control enables or disables the modeled inherent dynamic system noise of the original Lexicon 224 hardware. Disabling System Noise enables a more modern-sounding (i.e., cleaner) 224. Click the button to toggle the state; System Noise is active when the button LED is lit. The default state is ON.



The elements of the modeled System Noise include quantization effects (at input A/D, output D/A, and within the algorithm), zipper/stepping noise when adjusting parameters, transformer distortion, and the quiescent noise floor.

Zipper/stepping noise when adjusting parameters can be defeated by disabling System Noise. However, zipper/stepping noise in delay modulation (i.e., Mode Enhancement) can only be reduced, but not completely defeated, by disabling System Noise.

Note: System Noise is a global (per instance) parameter; its state does not change when different programs are selected.

Rear Outs

The Rear Outs control is available to select the alternate pair when the algorithm has alternate sonics at outputs B and D. See “Inputs & Outputs” on page 296 for an overview of the hardware implementation.



Rear Outs Notes

- The left/right outputs of the plug-in always reflect hardware outputs A and C respectively when Rear Outs is inactive, and outputs B and D respectively when Rear Outs is active.
- Outputs A and C are “recommended” for stereo use (the rear outs are generally not used in typical applications).
- Outputs A and C are identical to D and B respectively in the following programs: P2 Vocal Plate A, P5 Percussion Plate A, P8 Constant Density Plate A, and P9 Chorus A. Consequently, the Rear Outs control effectively swaps the left/right outputs in these programs.

Mode Enhancement

 
Mode Enhancement makes the sound of the Lexicon 224 programs more natural by preventing room modes from ringing in the reverb tail. Mode Enhancement works by continuously modulating certain delay lines (taps) within the program algorithms, which increases the effective density without thickening the reverb itself.

Mode Enhancement is factory-optimized for each program and should not require adjustment in typical use. For this reason, it was deliberately made difficult to access in the original hardware. However, creative use of the parameter is encouraged by making it easier to access in the plug-in.

Mode Enhancement has three control elements: Enable, Amount, and Pitch Shift. As in the original hardware, lower values of Mode Enhance Amount and higher values of Pitch Shift increase “movement” and make the result more prominent.

Note: *The Mode Enhance Amount and Pitch Shift controls have no effect unless the Mode Enhance Enable control is active.*

Mode Enhance Enable



This button enables or disables Mode Enhancement for the active program. Mode Enhancement is active when the button LED is lit. The default state is ON for all programs.

Tip: *This control, just as with the original hardware, resets the algorithm. Therefore Mode Enhance Enable can be used to quickly “kill” the reverb tail while staying in the same program.*

Mode Enhance Amount

These two adjacent buttons control the amount of Mode Enhancement, or technically speaking, the amount of time between delay line updates. Click the left (“<”) button to decrement the value; click the right (“>”) button to increment the value. The available range is 1 through 16. Lower values increase the effect.



Mode Enhance Pitch Shift



Pitch Shift is a secondary parameter of Mode Enhancement that controls the size of the delay line update steps. Lower values produce smaller steps, while higher values produce larger steps. Click the left (“<”) button to decrement the value; click the right (“>”) button to increment the value. The available range is 1 through 16. Higher values increase the effect.

The Pitch Shift controls are accessed in the [Hidden Controls](#) panel. See [page 306](#) for access details.

Decay Optimization

Decay Optimization improves the Lexicon 224 reverb clarity and naturalness by dynamically reducing reverb diffusion and coloration in response to input signal levels. However, if set too high, it can make the decay less even. Decay Optimization has two control elements: Enable and Amount.

Decay Optimization is factory-optimized for each program and should not require adjustment in typical use. For this reason, it was deliberately made difficult to access in the original hardware. However, creative use of the parameter is encouraged by making it easier to access in the plug-in.

Decay Optimize Enable



This button enables Decay Optimization for the active program. Decay Optimization is active when the button LED is lit. The default state is ON.

Note: Decay Optimization is unavailable for P8 Constant Density Plate A and P9 Chorus.

Decay Optimize Amount

These two adjacent buttons control the amount of Decay Optimization. Click the left (" $<$ ") button to decrement the value; click the right (" $>$ ") button to increment the value. The available range is 1 through 16. As in the original hardware, lower values make the result more prominent.



Note: The Decay Optimization Amount controls have no effect unless the Decay Optimization Enable control is active.

Mix Controls



The Dry, Wet, and Solo parameters control the effect mix in the plug-in. These controls are not available in the original hardware.

Note: The Mix controls are global parameters; their state does not change when different programs are selected.

Solo

When Solo is activated, the Dry/Wet mix is set to 100% wet and the Dry/Wet controls are deactivated. Solo mode is optimal when using Lexicon 224 in the “classic” reverb configuration (placed on an effect group/bus that is configured for use with channel sends). When Lexicon 224 is used on a channel insert, Solo should be deactivated. The default state is ON.

Note: Solo is a global (per Lexicon 224 plug-in instance) control.

Dry/Wet

These two buttons control the balance between the reverb processor and the source signal when Solo mode is inactive. Click the DRY button to reduce the reverb amount; click the WET button to increase the reverb amount.

The Dry/Wet mix is indicated in the Numerical Display as a percentage. A value of 50 produces an equal blend of the wet and dry signals. Values greater than 50 emphasize the wet signal, and values less than 50 emphasize the dry signal.

Clicking the DRY button once will decrement the value by one percent; clicking WET once will increment the value by one percent. To increase the fine resolution when adjusting these controls, hold SHIFT (on the computer keyboard) when clicking the controls. Shift+click will decrement (DRY) and increment (WET) by a value of 0.1 percent instead of one percent.

The Dry/Wet controls are typically used when Lexicon 224 is inserted on individual channels. When Lexicon 224 is used on a group/bus in a typical reverb send/return configuration, set to 100% WET or activate SOLO mode.

Hidden Controls

Additional UAD controls are available in a hidden control panel. Refer to [Figure 102](#) in parameter descriptions.



Figure 102. The Lexicon 224 Hidden Controls

Access

The hidden controls are exposed by clicking the “OPEN” text to the right of the Display Panel. Conversely, the exposed panel is closed by clicking the “CLOSE” text while the panel is open.



Note: The last-used state of the Hidden Controls panel (open or closed) is retained when a new Lexicon 224 plug-in is instantiated.

Pitch Shift

Pitch Shift is a component of Mode Enhancement. See “[Mode Enhance Pitch Shift](#)” on page 304 for parameter details.

Input Gain

The independent left (“L”) and right (“R”) Input Gain parameters control the signal levels at the input to the plug-in. The default value is 0 dB. The available range is ± 12 dB. The right channel control is unavailable when Lexicon 224 is used in a mono-in/mono-out configuration.

As signal levels into the Lexicon 224 increase, the analog and digital response of the device becomes increasingly nonlinear. If signals are too high, the Lexicon 224 A/D inputs and/or processor can overload, lighting the Overflow LED and causing sonic artifacts. See “[Overflow LED](#)” on page 298 for more information.

Tip: Click the text label (“Input Gain”) to return the value of both channels to zero.

Output Level

The independent left (“L”) and right (“R”) Output Level parameters control the signal levels at the output of the plug-in. The default value is 0 dB. The available range is $-\infty$ (infinite) dB to +12 dB. The right channel control is unavailable when Lexicon 224 is used in a mono-in/mono-out configuration.

Tip: Click the text label (“Output Level”) to return the value of both channels to zero.

Link




Link/unlink allows the left and right controls for Input Gain and Output Level to be unlinked (non-ganged) in order to apply a different value for each channel. Link is inactive when the LED is unlit. Click the Link LED to toggle the state. The default state is ON.

If the left and right controls have different values when link is inactive and Link is engaged, the left channel value is copied to the right channel (thereby overwriting the right channel value).

When Link is active, automation data is written and read for the left channel only. The automation for the left channel controls both channels in Link mode.

Note: When link is active, modifying the right channel parameters will have no effect when changed from a control surface or when in “controls only” (non-GUI) mode.

Bug Fixes

The original Lexicon 224 code contains programming errors in the Hall B and Chorus algorithms. These computer code bugs can cause  incorrect Bass decay times (Hall B programs) and undesirable “pops” and/or “thumps” in the right channel (Chorus program) with certain source signals and parameter configurations.

The bugs have been corrected in the UAD implementation of the plug-in, but we have provided the option of using the original code for the sake of pure authenticity.

The UA logo is actually a switch. When the UA logo is illuminated, the source code bugs are fixed. The default state is ON. Click the UA logo to disable the UA bug fixes and revert to the original hardware behavior.

Display Hold



The Display Hold switch alters the behavior of the Numerical Display ([page 297](#)). In the original hardware, the values of parameters that are being modified are displayed for 1.5 seconds before reverting back to displaying the average decay time.

The Hold switch changes this behavior. When set to infinite (“∞”), the Numerical Display will continue to show the last modified parameter value. When set to infinite and a program is changed, the average decay time is displayed until a parameter is modified.

Note: The last-used state of the Display Hold parameter is retained when a new Lexicon 224 plug-in is instantiated.

Power

The Power switch is a bypass control. Click the switch to change the Power state. When bypassed, plug-in processing is disabled, and the Display Panel and all button LEDs are dimmed.



Program Descriptions

- P1 Small Concert Hall B** This program emulates the sound of a small concert hall, with moderate initial density and moderately non-uniform decay. It is optimized for reverb times of 1.5 to 5 seconds (for longer decay times, P3 Large Concert Hall B is recommended instead). The most natural sound is obtained when Bass and Mid are relatively close to the same setting. This program uses the exact same algorithm as P3 Large Concert Hall B.
- P2 Vocal Plate** This is a plate reverb emulation optimized for voice. It has low initial density and coloration, resulting in a clear, bright sound. This program uses the exact same algorithm as P5 Percussion Plate A, but with slightly different inherent diffusion.
- P3 Large Concert Hall B** This program emulates the sound of a large concert hall, with low density and minimal coloration. It is optimized for long reverb times. With percussive sounds, increasing the diffusion value is recommended. This program uses the exact same algorithm as P1 Small Concert Hall B.
- P4 Acoustic Chamber** This program sounds like a chamber, but with less initial density. It tends to sound best with shorter reverb times (2 to 5 seconds). The most chamber-like sound is obtained with **Depth** at a value of zero. Diffusion is preset in this program and cannot be modified. Unlike all other Lexicon 224 programs, this algorithm has monophonic input.
- P5 Percussion Plate A** This is a plate reverb emulation optimized for percussive sounds. It has high initial density and coloration, and sounds best with shorter reverb times. This program uses the exact same algorithm as P2 Vocal Plate, but with slightly different inherent diffusion.
- P6 Small Concert Hall A** This program is similar to P1 Small Concert Hall B, except it is brighter overall and the **Treble Decay** control is more gentle. The original hardware manual recommends equalizing this reverb return about +3 dB below 200 Hz to “add to the richness and naturalness of the reverb.”
- P7 Room A** Program 7 is a room simulator with moderate to high initial density and low to moderate coloration. It sounds great on speech and many types of music. This program presents an especially wide output when used with a stereo input source.

P8 Constant Density Plate A

In naturally occurring reverb, new reflections are continuously added to the decaying sound over time. This sonic build-up increases density and coloration in the reverb tail. P8 Constant Density Plate A has high initial density and coloration (giving a “plate” type of sound), however the density does not increase over time and remains inherently constant. This can result in less “swoosh” in the reverb tail and provides another creative option. [Decay Optimization](#) and true stereo input are unavailable in this program (inputs are always summed to mono, even in stereo-in/stereo-out configurations).

P9 Chorus A

The Chorus A program is an eight-voice chorus with four voices on each stereo channel. Each voice has a time delay which varies randomly and independently, resulting in a thick, rich sound.

When Chorus is active, each of the first four sliders controls the gain level for a stereo pair of voices. The sliders are linear faders, not log faders, so the default positions of all four sliders (about 1/2 way up) correspond to gains 6 dB below maximum.

The first two voice pairs have overlapping delay ranges. Phasing/flanging effects can be achieved by setting their gains to similar levels. Phasing/flanging can also be achieved (with a mono or centered input) when the left and right channels are mixed together, such as when used in a mono-in/mono-out configuration.

The [Diffusion](#) control is active in this program. Diffusion acts upon the third and fourth pair of stereo voices, producing a cluster of tightly spaced echoes whose shape is governed by the Diffusion control. The Lexicon 224 is one of the few processors that has diffusion on chorus voices; this feature is a primary factor in its distinctive character.

Note: *The Bass, Mid, Crossover, and Treble Decay behaviors are unavailable in P9 Chorus A. Instead, each of these sliders controls the level of a stereo voice pair.*

MIMO Program Outputs

When Lexicon 224 is used in a mono-in/mono-out (“MIMO”) configuration, the hardware outputs that are used for the plug-in are listed in [Table 21 on page 311](#). These software assignments are per the guidelines in the original hardware manual and cannot be modified.

Table 21. Lexicon 224 Outputs Used With Monophonic Output

Program	Output(s)	Program	Output(s)
1. Small Concert Hall B	A	6. Small Concert Hall A	A
2. Vocal Plate	A + C	7. Room A	A
3. Large Concert Hall B	A	8. Constant Density Plate A	A
4. Acoustic Chamber	A + C	9. Chorus A	A + C
5. Percussion Plate A	A + C		

Default Parameter Values

Table 22 below lists the default values of all available parameters for each program.

Table 22. Lexicon 224 Default Parameter Values

Program	Bass	Mid	Crossover	Treble Decay	Depth	Diffusion	Pre-delay	Enhance	Pitch Shift	Decay Opt.
1. Small Concert Hall B	3.0	2.0	540Hz	4.40	23	21	024	02	01	05
2. Vocal Plate	2.2	2.2	1kHz	10.9	00	04	000	02	01	05
3. Large Concert Hall B	3.4	2.6	540Hz	4.00	21	01	024	02	01	05
4. Acoustic Chamber	2.8	2.2	1kHz	6.60	00	N/A	025	02	01	05
5. Percussion Plate A	2.2	2.2	1kHz	10.9	00	37	000	02	01	05
6. Small Concert Hall A	3.0	2.0	540Hz	6.60	23	28	024	02	01	05
7. Room A	1.8	1.8	540Hz	4.40	23	24	024	02	02	05
8. Constant Density Plate A	1.8	1.8	540Hz	10.9	23	37	005	07	01	N/A
9. Chorus A	N/A	N/A	N/A	N/A	N/A	22	012	02	02	N/A

Lexicon 224 Latency

The Lexicon 224 uses an internal resampling technique to facilitate its sonic quality. This resampling results in a slightly larger latency than other UAD plug-ins. See ["Compensating Upsampled Plug-Ins"](#) on page 108 for more information.

CHAPTER 28

Little Labs IBP



Overview

The Little Labs IBP Phase Alignment Tool easily eliminates the undesirable hollow comb-filtered sound when combining out-of-phase and partially out-of-phase audio signals. Designed as a phase problem-solving device, the award-winning Little Labs IBP (“In-Between Phase”) has established itself with audio engineers as not only a “fix it” tool, but as a device for manipulating audio phase as a creative, tonal color tool as well. Whether combining direct and microphone signals, acoustic guitar and vocal mics, drum kit mics, or multiple split-guitar amps, the recorded audio signal phase can be quickly and easily controlled with the Little Labs IBP Phase Alignment Tool.

Little Labs IBP Screenshot



Figure 103. The UAD Little Labs IBP plug-in window

Little Labs IBP Controls

All parameters are clearly labeled with control names. Please refer to [Figure 103 on page 312](#) for control descriptions.

Delay Adjust

The Delay Adjust parameter is unique to Universal Audio's "workstation" version of the Little Labs IBP. Delay Adjust is a continuously variable control that simply delays the input signal from 0.0 to 4.0 milliseconds.

Unlike the "analog" Phase Adjust parameter, which is frequency dependent, Delay Adjust is purely "digital" and shifts all frequencies equally. Delay Adjust accomplishes the same function as manually moving an audio region forwards in the timeline so it plays back a little later in relation to other regions.

Delay Adjust Bypass

This switch bypasses the Delay Adjust parameter. Delay Adjust is bypassed when the switch is engaged (darker).

Phase Adjust

Phase Adjust is the main parameter in the Little Labs IBP. It is a continuously variable control that shifts the phase of the input signal. The range of Phase Adjust is either 90° or 180°, dependent on the Phase Adjust 90°/180° switch.

The Little Labs IBP hardware is an all-analog device that uses analog allpass filters to produce phase shifting. Allpass filters displace signals in time as a function of frequency (they are frequency dependent). The modeled UAD version accurately models the hardware along with all its idiosyncrasies.

Therefore phase shifting using the Phase Adjust knob is not "perfect" like mathematically-manipulated signals in the digital domain. When Phase Adjust is set to 180° on one of two identical tracks side-by-side, the signals will not cancel as you may expect.

Note: If a "standard" 180° phase shift is desired, use the Phase Invert switch. If "digitally pure" frequency-independent phase shift is desired, use the Delay Adjust parameter.

Phase Adjust Bypass

This switch bypasses the Phase Adjust parameter. The signal phase is normal when the switch is engaged (darker).

Phase Invert

This switch inverts the polarity of the input signal, like the phase button on a mixing console. Phase is inverted when the switch is engaged (darker).

**Phase Adjust
90°/180°**

This switch determines the range of the Phase Adjust parameter. This is useful when finer Phase Adjust resolution is desired.

When the switch is disengaged, the Phase Adjust range is 180°. When the switch is engaged (darker), the Phase Adjust range is 90°.

**Phase Center
Lo/Hi**

This switch sets the range of frequency emphasis. When the switch is disengaged (lighter), the Phase Center range is Hi. When the switch is engaged (darker), the Phase Center range is Lo.

Note: Use of the 90°/180° and Lo/Hi parameters are typically used for individual tone signals such as a kick drum or toms as opposed to program material.

Power

This switch disables the plug-in. When the switch is disengaged, the plug-in is bypassed. When the switch is engaged (darker), the plug-in is active and the green LED is illuminated.

Little Labs IBP Latency

The Little Labs IBP uses an internal upsampling technique. This upsampling results in a slightly larger latency than other UAD plug-ins. See “Compensating Upsampled Plug-Ins” on page 108 for more information.

Note: Compensating for Little Labs IBP is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used only on the outputs. See “Host PDC Implementation” on page 101.

WebZine article

An interesting (and highly technical) article named “Allpass Filters” about phase shifting with allpass filters can be found in the November 2008 “Ask the Doctors” section of our online WebZine:

- <http://www.uaudio.com/webzine/2008/november/doctors.html>

Little Labs VOG

Bass Resonance Processor

For many top engineers, the Little Labs VOG (Voice Of God) is the ultimate bass resonance tool for mixing. Available for the first time as a plug-in, the Little Labs-authenticated VOG for the UAD-2 platform accurately models the sonic characteristics of this unique 500-series hardware audio processor in every detail. The VOG is used to accurately target and accentuate low frequency material, from vocals to bass guitar and drums — adding both heft and precision beyond a simple EQ. Put simply, it’s like a magnifying glass for the bottom end of your mixes.

One of the most important components of any good mix is blending the low frequencies together in such a way that they don’t conflict. No matter what style of music you make – from rock to reggae, to hip-hop to hardcore – few tools are as easy to use and effective as the popular Little Labs VOG.

History

Little Labs has a knack for creating problem-solving tools for the studio that perform equally well as creative coloration effects and tone-boxes. The original collaboration between UA and Little Labs saw the release of the UAD Little Labs IBP plug-in — widely recognized as one of the most versatile phase correction plug-ins available today. Continued collaboration between Universal Audio and Little Labs now provides another instant studio classic, the VOG.

Upon its introduction in 2009, owners of the hardware VOG quickly realized multiple units are a must have — one for bass, kick drum, toms, low frequency percussion, and especially vocals. Fortunately, with the Little Labs VOG plug-in for the UAD-2, customers can have as many instances as they need to make “the low end” come to life.

Little Labs VOG Screenshot



Figure 104. The UAD Little Labs VOG plug-in window

Operational Overview

Two simple knobs allow you to dial in the VOG's desired frequency and effect amplitude. The center of the sweepable frequency range is selected via two push-buttons of 40 Hz and 100 Hz, or you can set the center to 200 Hz by pressing both buttons simultaneously. Everything below the targeted frequency peak is rolled off in a smooth curve — up to -24 dB per octave — ensuring that the low end is always tight and out of the mud, while the frequen-

cies above remain intact. The higher the amplitude of the peak resonance frequency, the more you cut off the mud below, effectively performing two functions at once. A dedicated “flat” button allows you to quickly audition A/B comparisons.

In Use

The VOG is intended for mixing, mastering, post-production sweetening, sound design, and audio restoration. Use it to easily simulate proximity effect for adding chest resonance and “heft” to vocals. Simple adjustments will also yield enormous sounding drums — just like tweaking the tension of a drum-head. Or, completely transform the tonal characteristics of electric bass tracks — for example, go from a solid body sound to a chambered body sound in seconds. The VOG’s flexibility makes it the right choice on a wide range of musical sources; it’s the perfect way to tune the low end of any mix for incredible detail and punch.

Stereo Functionality

The original hardware is monophonic. When the plug-in is used in mono-in/stereo-out and stereo-in/stereo-out configurations, the controls affect both the left and right signals.

Little Labs VOG Parameters

Amplitude

Amplitude adjusts the amount of the effect. Increasing the control boosts the gain of the frequencies determined by the Frequency and Center controls.

Note: The control values for Amplitude, which range from 0 – 10, are arbitrary and do not reflect a particular dB value.



Frequency



This control adjusts the target frequency of the effect. Frequencies above the current setting are boosted by the amount set with the Amplitude control. Frequencies below the current setting are attenuated by -24 dB per octave.

The available frequency range is determined by the Center button settings, and are shown in [Table 23](#) on [page 318](#).

Like the original hardware, increasing the Frequency value (rotating clockwise) actually *lowers* the target frequency (by decreasing the center frequency). Changes to this setting are heard only if Amplitude is set above zero.

Note: The control values for Frequency, which range from 0 – 10, are arbitrary and do not reflect a particular frequency value.

Center

The two Center switches define the active center frequency of the effect, which in turn determines the available frequency range. The four available center frequencies, and resulting frequency ranges, are shown in Table 23 below.

A switch is “ON” when its LED is red. A green LED indicates the switch is “OFF.”

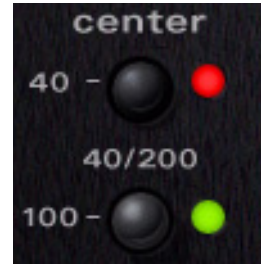


Table 23. Center Switch Frequency Values

“40” Button LED	“100” Button LED	Center Frequency (Hz)	Frequency Range (Hz)
Green	Green	40	18 – 60
Red	Green	42	20 – 62
Green	Red	100	50 – 180
Red	Red	200	100 – 305

Flat

The EQ circuitry is bypassed when Flat is enabled (red LED); the circuit is active when Flat is disabled (green LED). When Flat is on, the dry signal path of the hardware is still being modeled and DSP is used. For true bypass, use the Power switch.



Power



Power is the plug-in bypass control. When set to OFF, emulation processing is disabled, the LEDs are dimmed, and DSP usage is reduced (if “UAD-2 DSP LoadLock” on page 74 is disabled). Power is useful for comparing the processed settings to the original signal.

The Little Labs VOG hardware unit



CHAPTER 30

Manley Massive Passive EQ

Overview

Universal Audio's UAD Powered Plug-In versions of the Manley Massive Passive EQs represent UA's most ambitious and detailed EQ model to date. The two-channel, four-band Manley Massive Passive tube EQ utilizes design strengths from choice console, parametric, graphic, and Pultec EQs — delivering a fundamentally different sounding EQ that is beyond compare. The incredibly natural, organic results of the Manley design method — evidenced on albums such as Wilco's *Yankee Hotel Foxtrot*, Amon Tobin's *Foley Room* and Tori Amos' *A Piano: The Collection* — demonstrate how the Massive Passive's natural treatment of a signal lends itself to both radical tonal shaping as well as delicate vocal shading or subtle mastering enhancement.

Painstakingly modeled over a six-month period, and rigorously scrutinized for authenticity by Manley's engineering team, Universal Audio's standard and mastering versions of the Massive Passive EQ plug-in are included. Both capture the behavior of the original hardware; from the unusual filter curves, to the multiple band interdependencies, right down to the tube amplifier distortion, and all-important transformer/inductor hysteresis.

"Passive" refers specifically to the tone shaping elements of the equalizer, which use only resistors, inductors, and capacitors to create all frequency changes. The Massive Passive utilizes older parallel concepts rather than non-interactive series designs as defined by George Massenburg's original parametric EQ. The Frequency controls intentionally interact with one another, as do the Gain and Bandwidth controls. While this may result in the appearance of some unorthodox knob positions, it is specifically these band interdependencies between all bell, shelf and cut filters that allow for the Massive Passive's natural and organic sound.

Massive Passive Screenshots



Figure 105. The Massive Passive plug-in window



Figure 106. The Massive Passive Mastering plug-in window

Unusual EQ Conventions

The Massive Passive has design and operation characteristics that make it unique in the EQ world. Some of these factors mean the “Massivo” may not respond in a manner that you would expect from typical EQs. Keeping these points in mind may help you obtain more satisfactory results. See [“Notes from Manley Laboratories”](#) on page 329 for more tips.

Passive EQ

No active components are used in the EQ circuits, just like revered vintage EQs. This can make some adjustments respond in more subtle ways.

Parallel Topology

The EQ bands are routed in parallel instead of serially, so gain values for the bands don’t “add up” like most EQs. For example, if two bands in the same channel are boosted 20 dB at 2.7kHz, you’ll get much less than 40 dB of boost at 2.7kHz.

Unique Shelves	Most EQs offer a shelving mode for the edge bands only. Massive Passive offers the shelving option on all bands for expanded sonic possibilities, such as “staircase” EQ curves.
No negative feedback loops	One result of not using negative feedback loops in the design is that the gain control for a band cannot have a “bipolar” boost and cut control. Only band gain is available; how that band gain is applied, either as a boost or as a cut, is specified with a separate toggle switch.
Control Interaction	Due in large part to the above points, the Massive Passive controls are much more interactive with, and interdependent upon, each other. We encourage experimentation with an open mind, without expectations of what a visual interpretation of what control settings “should” do.

Massive Passive Mastering EQ

Manley Labs developed the Massive Passive Mastering EQ to better address the specific needs of mastering engineers. Your UAD Massive Passive license includes both the standard and mastering versions, available as two individual plug-ins.

The Massive Passive Mastering has nearly the same features and control set (plus all the musicality of) the standard version with a few tweaks that offer more practical functionality for program material. The Mastering version features include:

- Stepped channel gain, band gain, and bandwidth controls for repeatability.
- Channel gain and band gain ranges are reduced for finer resolution.
- Low/high pass filter frequencies and slopes are optimized for mastering.

The Mastering Massive Passive is identified by the all-black “flat top” band gain and bandwidth control knobs and the word “MASTERING” near the center of the interface (Figure 106 on page 320).

Standard vs. Mastering Versions

The layout and function of the Massive Passive controls are essentially identical for both the Standard and Mastering versions. The exact control differences between the controls are detailed in [Table 24](#) below.

Table 24. Control differences between Massive Passive versions

	Standard	Mastering
Channel Gain Range	-6 dB to +4 dB	±2.5 dB (0.5 dB steps)
Band Gain Range	±20 dB	±11dB (16 steps)
High Pass Filter Values (Hz)	22, 39, 68, 120, 220	12, 16, 23, 30, 39
Low Pass Filter Values (kHz)	6, 7.5, 9, 12, 18	15, 20, 27, 40, 52*
Low Pass Filter Slope	18 dB/oct (6K, 7K5, 9K) 30 dB/oct (12K) Modified Elliptical (18K)	18 dB per octave* (*30 dB/oct @ 52K)
Channel Gain, Band Gain, Bandwidth	Continuous	Stepped

Massive Passive Band Controls

Massive Passive has two identical channels (left and right). Each channel has four EQ bands, with five controls in each band.

Because both UAD Massive Passive plug-ins operate the same way (and the bands of each channel are identical), the control descriptions for each band are only detailed once.



Important: See “Standard vs. Mastering Versions” on page 322” for the exact differences between the Massive Passive parameters.

Boost/Cut/Out



This three-position toggle switch determines whether the frequency band will be boosted, cut, or disabled altogether. The amount of boost or cut to be applied to the band is determined by the [Band Gain](#) control.

When Boost or Cut is selected, its label illuminates (green for Boost, red for Cut). When the switch is in the OUT position, the band is disabled.

Note: When set to OUT, the other band controls have no effect.

Shelf/Bell

The Shelf/Bell toggle switch defines the shape of the filter band. A unique aspect of this control is that unlike other EQs where only the edge frequencies offer a shelving mode, with Massive Passive all bands can be used in either mode for expanded sonic possibilities.



Note: The Bandwidth control (page 324) affects the slope of the band filters in both Shelf and Bell modes.

Shelf

The two lowest (leftmost) bands can each be in Low Shelf mode; the two highest (rightmost) bands can each be in High Shelf mode. Shelf slopes generally boost or cut towards the highs or lows (thus the high shelves and low shelves). The two middle shelves are almost the same as the outer ones but just have other (interleaved) frequency choices.

Bell

Bell curves focus their boost and cut at a given frequency (the “Frequency” on page 326) and the further away the signal is from that frequency, the less boost or cut is applied.

Band Gain



This control determines the amount of EQ gain to be applied to the band. The range is from zero gain (flat) at the fully counter-clockwise position, to the maximum value at the fully clockwise position. Whether the gain is applied as a boost or cut is defined by the Boost/Cut/Out switch (page 322).

The range for the standard version is continuously variable at up to ± 20 dB; the range for the Mastering version is up to ± 11 dB in 16 steps (in both versions the maximum value depends on the Bandwidth control).

Important: When Gain for the band is set to zero, the other band controls have no effect.

Unlike most EQs, this control is not flat at the center position with the gain cut or boosted by moving the control to left or right of center. This design allows the band gain to operate at twice the knob resolution as that of a “conventional” dual-purposed control, as well as facilitating a quicker and more accurate return to zero.

Gain has a fair amount of interaction with the **Bandwidth** control. The maximum band gain is available in Shelf mode when Bandwidth is fully counter-clockwise; less band gain is available in Shelf mode as the Bandwidth is decreased (rotated clockwise). Conversely, the maximum gain is available in Bell mode when Bandwidth is fully clockwise; in Bell mode less band gain is available as Bandwidth is decreased (rotated counter-clockwise).

Due to the parallel EQ topology, the four band Gain controls also interact with each other unlike typical EQs. For example, if two bands in the same channel are boosted 20 dB at 2.7kHz, you'll get much less than 40 dB of boost at 2.7kHz. This also implies that if you first boost one band, that the next three will not seem to do anything if they are at similar frequencies and bandwidths.

Bandwidth



Bandwidth adjusts the slope or “Q” of the band filter in both Bell and Shelf modes. Bandwidth does not have a lot of range and it also affects the maximum boost and cut (like a Pultec).

The widest Q (which is obtained at maximum boost or cut) is approximately 1 for the 22–1K (leftmost) band, and 1.5 for the other three bands. The narrowest Q is approximately 2.5 to 3 for all of the bands.

Bell Mode

In Bell mode, rotating the control counter-clockwise increases the bandwidth (lowers the Q) of the band and a broader range of frequencies is affected. As Bandwidth is rotated clockwise, bandwidth is decreased (Q is increased) and a narrower range of frequencies is affected.

At the narrowest settings (Bandwidth fully clockwise), the maximum boost/cut gain of 20 dB is available. As Bandwidth is broadened, the available band gain is decreased, down to about 6 dB of boost/cut at the widest (fully counter-clockwise) settings. The effect of the Bandwidth control in Shelf mode is shown in [Figure 107 on page 325](#).

Shelf Mode

In Shelf mode, rotating Bandwidth counter-clockwise decreases the slope of the shelf and Gain adjustments are more gentle. As Bandwidth is rotated clockwise, the shelf slope steepens, and Gain changes will be more obvious.

As Bandwidth is increased in Shelf mode, a bell curve begins to be introduced in the opposite direction (i.e., overshoot). For example, if the Shelf is boosted, a dip is created at higher Bandwidth values. At maximum Bandwidth, this overshoot curve is pronounced. The effect of the Bandwidth control in Shelf mode is shown in Figure 108 below.

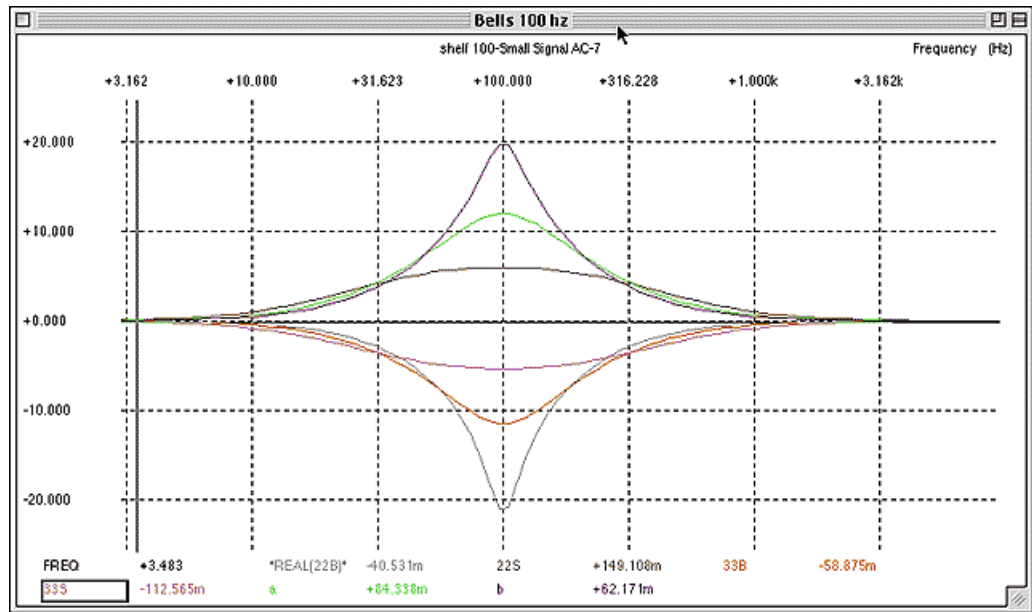


Figure 107. Effect of Bandwidth control on response curve in Bell mode

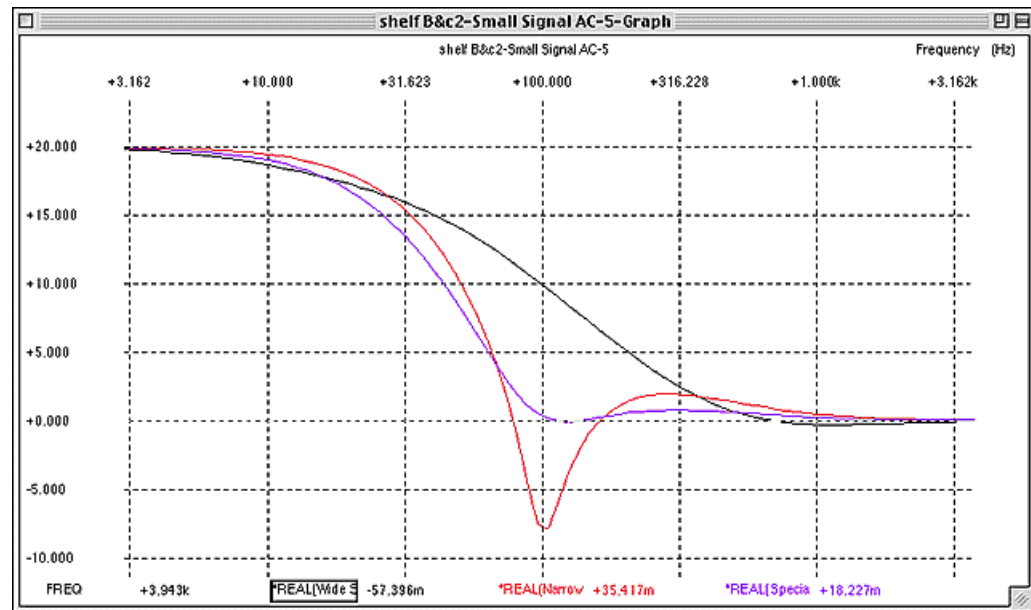


Figure 108. Effect of Bandwidth control on response curve in Shelf mode

Frequency



This control defines the center frequency (Bell mode) or edge frequency (Shelf mode) for the band. Each band provides a wide range of specially tuned overlapping and interleaving frequency choices. The available frequencies for each band are listed in [Table 25](#) below.

Available Frequencies

Table 25. Available band frequencies (standard and mastering)

Massive Passive Band	Selectable Frequencies (Hz)
Low	22, 33, 47, 68, 100, 150, 220, 330, 470, 680, 1K
Low Mid	82, 120, 180, 270, 390, 560, 820, 1.2K, 1.8K, 2.7K, 3.0K
High Mid	220, 330, 470, 680, 1K, 1.5K, 2.2K, 3.3K, 4.7K, 6.8K, 10K
High	560, 820, 1.2K, 1.8K, 2.7K, 3.9K, 5.6K, 8.2K, 12K, 16K, 27K

Channel Controls

The controls for the two identical channels (left and right) are detailed below. Because both UAD Massive Passive plug-ins operate the same way (and the controls for each channel are identical), the control descriptions for each channel are only detailed once.

Note: See [“Standard vs. Mastering Versions”](#) on [page 322](#) for the exact differences between the Massive Passive parameters.



EQ In



The EQ In pushbutton switch enables the channel. When the button illuminates in a brighter blue, the channel is active and the other channel controls will affect the signal. When this control is disabled, all the desirable low-level system filtering and coloration is retained in the channel, just like the original hardware.

Channel Gain



This knob sets the overall gain for the channel. The range for the standard version is continuously variable from -6 dB to $+4$ dB. The range for the Mastering version is ± 2.5 dB, in 0.5 dB steps.

The Channel Gain controls are intended to help match levels between “By-pass” and “EQ enabled” modes so that the EQ effect can be more accurately judged. With drastic EQ there may not be enough range to match levels, but with drastic EQ this kind of comparison is of little use. The range is small to allow easier and finer adjustments.

Filters

Low Pass and High Pass filters are available for both channels. The response curves of the filters are shown in [Figure 109](#) below. The available Filter values differ between the standard and mastering versions; see [Table 24](#) on [page 322](#) for the available values for each version.

Low Pass

The Low Pass filter allows the channel’s lower frequencies to pass while attenuating higher frequencies. The slope of the Low Pass filter depends on the value set for the filter. At 6K, 7K5, and 9K values, the filter slope is 18 dB/octave. At these values, a small (1.5 to 2 dB) bump occurs in the response before the curve drops off. At 12K, the slope is 30 dB/octave. At 18K, a modified elliptical filter is used.



In the mastering version, when Low Pass is set to 27kHz the frequency response is down by about 0.6 dB at 20kHz. When the control is set to 52kHz, there is actually a boost of about 0.4 dB at 20kHz; the filter is slightly resonant at this setting so there is a slight boost before the filter starts rolling off.

High Pass



The High Pass filter allows the channel’s higher frequencies to pass while attenuating lower frequencies. The slope of the High Pass filter is 18 dB/octave.

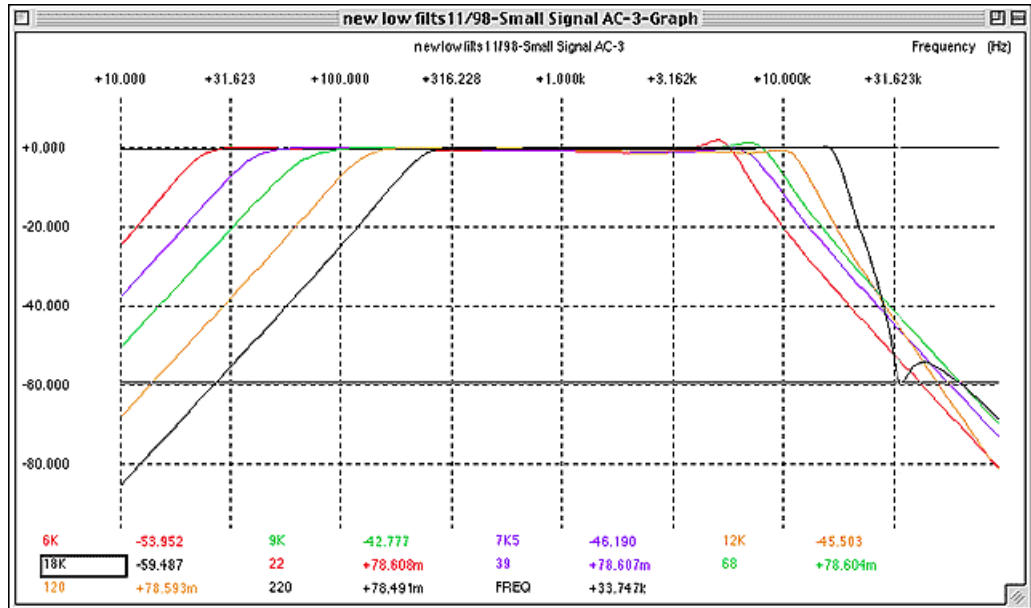


Figure 109. High Pass and Low Pass filter response curves (standard version)

Mastering Filters

The Low Pass/High Pass filter frequencies in the mastering version are tuned specifically for mastering, and the slopes are flatter until the knee. The slopes are 18 dB per octave on the mastering filters except for the highest value (52K) which is 30 dB/octave.

Other Controls

The Power and Link controls are global to both channels.

Power



Power is a two-state knob that determines whether the plug-in is active. When the knob is in the Off (counter-clockwise) position, all LED elements are unlit, plug-in processing is disabled, and UAD DSP usage is reduced (unless “UAD-2 DSP LoadLock” on page 74 is enabled).

Link

The Link switch is a software-only addition that allows the two sets of controls for each channel to be linked for ease of operation when both channels require the same values, or unlinked when dual-mono operation is desired. The Link parameter is stored within presets and can be accessed via automation.

Important: When unlink is switched to link, channel 1 controls are copied to channel 2. Control offsets between channels are lost in this case.

When set to Link (up position), modifying any channel one or channel two control causes its adjacent stereo counterpart control to snap to the same position (channel 1 & 2 controls are ganged together in Link mode).

When Link is active, automation data is written and read for channel one only. In this case, the automation data for channel one will control both channels.

Note: *When Link is active, changing channel two parameters from a control surface or when in “controls only” (non-GUI) mode will have no effect.*

When set to unlink (down position), the controls for channels one and two are completely independent. Unlink is generally used in mono mode. When unlinked, automation data is written and read by each channel separately.

Note: *If disparate values are set under the unlinked state, the left channel will override the right channel when Link is activated.*

Massive Passive Latency

The Massive Passive and Massive Passive Mastering EQs use an internal up-sampling technique to facilitate their amazing sonic accuracy. This up-sampling results in a slightly larger latency than other UAD plug-ins. See [“Compensating Upsampled Plug-Ins” on page 108](#) for more information.

Note: *Compensating for Massive Passive is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used only on the outputs. See [“Host PDC Implementation” on page 101](#).*

Notes from Manley Laboratories


- Do not assume the knob settings “mean” what you expect they should mean. Part of this is due to the interaction of the controls. Part is due to the new shelf slopes and part due to a lack of standards regarding shelf specification.
- You may find yourself leaning towards shelf frequencies closer to the mids than you are used to and the “action” seems closer to the edges of the spectrum than your other EQs. Same reasons as above.

- You may also find yourself getting away with what seems like massive amounts of boost. Where the knobs end up, may seem scary particularly for mastering. Keep in mind that, even at maximum boost, a wide bell might only max out at 6 dB of boost (less for the lowest band) and only reaches 20 dB at the narrowest bandwidth. On the other hand, because of how transparent this EQ is, you might actually be EQing more than you could with a different unit. Taste rules, test benches don't make hit records, believe your ears.
- Sometimes the shelves will sound pretty weird, especially (only) at the narrow bandwidth settings. They might seem to be having a complex effect and not only at the "dialed in" frequency. This is certainly possible. Try wider bandwidths at first.
- If you seem to be boosting all 4 bands at widely separated frequencies and not hearing much "EQ" as you might expect (except for level) this is a side-effect of a passive EQ and probably a good thing. To get drastic sounding EQ you should try boosting a few bands and cutting a few bands. In fact, it is usually best to start with cutting rather than boosting.
- A reasonable starting point for the Bandwidth for shelves is straight up or between 11:00 and 1:00. It was designed this way and is roughly where the maximum flatness around the "knee" is, combined with a well defined steep slope.
- The Massive Passive may sound remarkably different from other high end EQs and completely different from the console EQs. Yes, this is quite deliberate. Hopefully it sounds better, sweeter, more musical and it complements your console EQs. We saw little need for yet another variation of the standard parametric with only subtle sonic differences. We suggest using the Massive Passive before tape, for the bulk of the EQ tasks and then using the console EQs for some fine tweaking and where narrow Q touch-ups like notches are needed. The Massive Passive is equally at home doing big, powerful EQ tasks such as is sometimes required for tracking drums, bass and guitars, or for doing those demanding jobs where subtlety is required like vocals and mastering.

Additional Information

The original (and rather lengthy) user manual written by Manley Labs for the hardware unit contains a wealth of great information about the philosophy, design decisions, and use of the Massive Passive EQ. It is highly recommended reading for those interested in technical details. The manual can be found on their website, along with info about their other great products:

- <http://www.manleylabs.com/techpage/manuals.html>

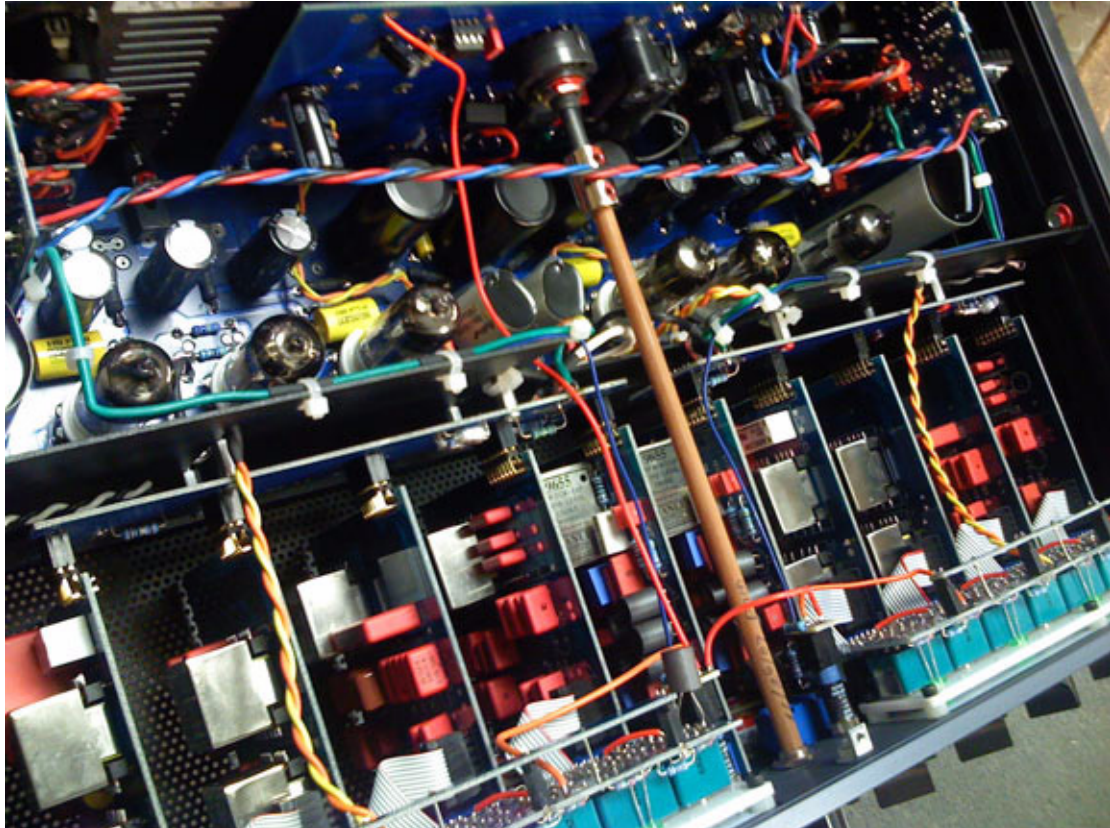

The Massive Passive EQ hardware interior



All visual and aural references to the Massive Passive EQ and all use of MANLEY's trademarks are being made with written permission from MANLEY LABORATORIES INCORPORATED. Special thanks to EveAnna Manley.

CHAPTER 31

Moog Multimode Filter

Overview

If UA were able to conceive a product with Moog, what would it be? The answer is revealed in the new UAD Moog Multimode Filter, which delivers the first truly analog-sounding VCF (voltage controlled filter) emulation made for mixing, performing, creating, or destroying. The Moog Multimode Filter is a 'digital-only' tabletop filter set that combines the best of Bob Moog's classic designs with select features from his final Voyager instrument. UA modeled the analog behavior of the historical 4-pole ladder filter conceived by the world's most recognizable electronic instrument maker right down to the self-oscillation, saturation and non-linearities of its analog counterpart. As the name suggests, the heart of the Moog Multimode Filter is the switchable Low-pass, Highpass and Bandpass filter that allows Moog's signature self-oscillation and extreme resonance in any of the three modes, bringing a new level of sophistication to Moog filter designs of the past.

The UAD Moog Filter algorithm uses a special filter structure that was created especially to eliminate "digital" artifacts for time-varying filters. An expensive DSP technique was used to calculate the response of the nonlinear feedback loop surrounding the saturation and filter elements.

Warning: *Like most resonant filters, UAD Moog Filter has the potential to create unpredictable sonic results that can result in unexpected jumps in output amplitude. Depending on the source material, input levels, and parameter values, the filter output can suddenly get extremely loud, with the potential to damage speakers and/or hearing. This condition is particularly susceptible when the simultaneous conditions of high gain, low filter cutoff, and high resonance values are applied, and/or when the LFO sweeps into these conditions. Use caution and/or low monitoring levels when dialing in extreme parameter values to avoid speaker and/or hearing damage!*

Note: *UAD Moog Filter does not support sample rates above 96 kHz on UAD-1 cards.*

Moog Filter Screenshot



Figure 110. The UAD Moog Filter plug-in window

Moog Filter Controls

The Moog Filter is true stereo, with separate filters for the left and right channels. The dual filters share the same controls. The only time the left and right filters diverge is when Filter Spacing or LFO Offset are not zero.

Drive



Drive controls the amount of saturation gain before the filter. Drive is where much of the sonic “juice” in the UAD Moog Filter originates. Drive can change the signal from clean to slightly overdriven to extremely distorted, particularly when used in conjunction with the Boost switch (see “Boost” on page 338).

Gain (SE only)

 


The non-linear modeling of Drive characteristics is extremely DSP-intensive. For this reason, Drive is not available on the SE version of UAD Moog Filter. In UAD Moog Filter SE, the parameter is named Gain instead of Drive, and is a straight (non-modeled) input gain control.

The range of Drive/Gain is 0 to +40 dB of gain. Drive/Gain affects both the wet and dry signals (the control is heard when Mix is zero and/or when Bypass is engaged). This gain range closely mimics the external input section of the Minimoog.

Warning: Due to these differences in input structure, cut and pasting of full-to-SE and SE-to-full presets may cause noticeable differences in gain. Keep hold of the master fader!

Drive/Gain LED



The Drive/Gain multicolor LED indicates the plug-in signal level just after the Drive/Gain control. The Drive/Gain LED operates when the plug-in is in Bypass mode, but not when Power is off.



Envelope

The Envelope controls (Envelope knob, Smooth/Fast switch) closely mimic the controls of the MF-101 Moogerfooger. However, UA has broadened the sonic palette with a negative range allowing unique negative envelope effects.

The cutoff frequency of UAD Moog Filter can be modulated by the amplitude of the signal coming into the plug-in. This function is typically called an “envelope follower” or “auto wah” because the cutoff frequency “follows” the signal input level. The amount and speed of the envelope response can be adjusted.

The envelope knob determines how much the filter cutoff frequency is affected by the signal input level. Positive and negative values are possible. Positive values increase the filter cutoff as the input amplitude increases (the filter opens as the signal gets louder). Negative values decrease the filter cutoff as input amplitude increases (the filter closes as the signal gets louder).

The greater the value (either positive or negative), the greater the amount of filter modulation (the cutoff frequency range is increased with greater values).

Tip: Click the knob label (“ENVELOPE”) to return the value to zero.

Envelope LED



This LED indicates the relative peaks of the control envelope. The envelope LED does not illuminate when the plug-in is in Bypass mode or when Power is off.

Smooth/Fast

This toggle switch determines the release time of the control envelope. In Smooth mode, the release time is 200 milliseconds. In Fast mode, the release time is 40 milliseconds. In both modes, the attack time is 25 milliseconds.

In typical applications, Fast mode is useful on percussive sounds, while Smooth mode is better suited to sounds with longer and/or uneven decays.

Cutoff

This parameter defines the cutoff frequency of both filter channels in all modes (lowpass, bandpass, highpass). UA has expanded the available frequency range of 20 Hz to 12 kHz on the MF-101 Moogerfooger to the broader available range of 12 Hz to 12 kHz on the Moog Multimode Filter.

In lowpass mode, frequencies above the cutoff are attenuated. In highpass mode, frequencies below the cutoff are attenuated. In bandpass mode, the cutoff value is the center frequency; attenuation occurs above and below the cutoff value in this mode.

***Tip:** The cutoff value can be adjusted in musical semitone (1/2 step) increments/decrements using coarse control shortcuts, and 1/4 semitone increment/decrement using fine control shortcuts. See “Shortcuts” on page 92 for more details.*

Resonance

Resonance determines the amount of filter feedback, which accentuates the harmonic content at the cutoff frequency. Higher values can produce a “whistling” quality to the filter, and at very high values the filter may self-oscillate.

Resonance works the same way in all three filter modes.

Pole (Slope)

The filter slope is determined by this switch. The slope defines how “steep” the frequencies above the cutoff in lowpass mode (or below the cutoff in highpass mode) are rolled off.

2-Pole

In 2-pole mode, the filter has a slope of 12 dB per octave. For example, in lowpass mode frequencies that are double the cutoff frequency (an octave) are attenuated by 12 dB. 2-pole filtering is less aggressive than 4-pole mode, but has its own unique sound that you may find is better suited for certain types of signals.

4-Pole

4-Pole mode has a steeper slope (24 dB per octave), so the filtering is more obvious. This is the “classic” (and luscious) Moog filter, in all its glory, that has been employed on just about every Moog product, from the Modular to the Minimoog to the Voyager.

Step/Track

This switch is a smoothing control for the filter cutoff frequency parameter. Smoothing is most obvious on continuous filter sweeps when varying the cutoff rapidly with the knob or automation. Step mode can be desirable when sudden cutoff changes are automated and other creative purposes.

Smoothing is on in the Track position, and off in the Step position.

Note: When set to Track, the plug-in does not “track” the input signal frequency like a synthesizer filter.

Mode

This control is the heart of the Moog Multimode filter, combining Moog’s classic lowpass filter with highpass and bandpass in one control. Unlike Moog highpass and bandpass filters of the past, UA’s design presents Moog’s signature self-oscillation in all three modes, bringing a new level of sophistication to Moog filter designs of the past. The knob switches between the available filter types.

Lowpass



Frequencies above the cutoff value are filtered.

Bandpass



Frequencies above and below the cutoff value are filtered.

Highpass



Frequencies below the cutoff value are filtered.


Spacing

Spacing inversely offsets the filter cutoff values for the left and right channels. In other words, positive Spacing values increase the right channel cutoff while lowering the left channel cutoff, and vice versa.

Spacing is borrowed from Bob Moog’s Voyager instrument, and separates the hard-panned filters by up to three octaves. Unlike the original however, both filters are moving away from each other in pitch, rather than one fixed filter plus one adjustable filter pitch. Positive or negative values enable positioning the de-tuned filters from left to right, low to high, or high to low.

Spacing can create great stereo spacial effects. When the filter is in Mono mode, both filters are still heard.

Tip: Click the knob label (“SPACING”) to return the value to zero.

- LFO** The LFO (low frequency oscillator) modulates the filter cutoff frequency. Several waveform shapes are available. The LFO can be synchronized to the tempo of the host (see [Free/Sync](#) below).
- Amount** Amount controls the depth of the LFO filter cutoff modulation. A higher value will have a broader filter sweep.
- Rate** Rate controls the speed of the LFO. The available range is from 0.03 Hz to 25 Hz in Free mode, or 16/1 to 1/64 to in Sync mode.
- Rate LED**  The LFO Rate LED illuminates in conjunction with the LFO rate, once per LFO cycle. Clicking this LED resets the LFO cycle (see [“LFO Reset”](#) below).
- LFO Reset** The LFO is reset to its zero crossing by clicking the LFO Rate LED. This parameter can be automated for mixing or bouncing.
- Normally the LFO is “free running” but this behavior is not always desirable. For example, if you are using LFO filter modulation, you may want playback to always sound exactly the same when bouncing or mixing. To accomplish this, the LFO must be started at the same place (zero crossing) of the LFO waveform. Reset enables this sonic consistency when using the LFO.
- Free/Sync** This switch defines whether the LFO is synchronized to the tempo of the host application (if this feature is supported by the host). See [Chapter 8, “Tempo Sync”](#) for more information.
- To ensure the LFO phase is consistent when in Sync mode, automate the Reset parameter (see [“LFO Reset”](#) on page 337).
- Value**  The Value display depends upon the setting of the  Free/Sync switch. Value displays the LFO frequency in Free mode, and the tempo sync note value in Sync mode. See [“Available Note Values”](#) on page 97 for more information.
- Wave** This control determines the waveform shape used by the LFO. Six waveshapes are available: Sine, Triangle, Sawtooth-Up, Sawtooth-Down, Square, and Random.
- Offset** Offset adjusts the polarity between LFO signals for the left and right channels. The available range is ± 180 degrees.

Offset can create great stereo spatial effects. When the filter is in Mono mode, both filters are still heard.


Tip: Click the knob label (“OFFSET”) to return the value to zero.

Mix Mix varies the amount of filtering that is occurring. It is not a true dry/wet control; it mimics the mix function on the MF-101 Moogerfooger. When Mix is at zero, the Drive/Gain control (and Boost on non-SE version) are still active and audible.

Setting Mix at zero is the same as setting the Effect/Bypass switch to Bypass.

Stereo/Mono The left and right channel filters are always independent in the UAD Moog Filter. However, when this switch is set to Mono, the left and right output channels are summed. In Stereo mode, the left/right separation is retained.

Output The Output control changes the gain at the output of the plug-in. The available range is ± 20 dB.

Output LED  This LED gives a visual indication of the plug-in output level. The Output LED is active when Bypass is enabled, but not when Power is off. When the LED is red, the output is 0 dBfs.

Effect/Bypass When Bypass is enabled, filter processing is inactive. Drive/Gain and Output still operate in Bypass mode. Enabling Bypass has the same effect as setting Mix to zero.

If the Free/Sync switch is set to Free, the LFO phase is reset to zero when Bypass is switched to Effect.

Boost Boost shifts the “Drive” gain range up a full 20 dB, while simultaneously shifting the Output range down -20 dB. This mimics the behavior of the external input on the Minimoog.

Note: This control is not available on the SE version.

Power Power disables the plug-in altogether and disables DSP processing. When off, the background will “dim” much in the same way the Voyager’s panel does when powered off.

Moog Filter SE

Overview

The UAD Moog Filter SE is derived from the UAD Moog Filter. Its algorithm has been revised (primarily the elimination of the Drive circuit) in order to provide sonic characteristics very similar to the Moog Filter but with significantly less DSP usage. It is provided to allow Moog Filter benefits when DSP resources are limited. The UAD Moog Filter SE sounds great even without Drive, and is very usable in many situations.

The Moog Filter SE interface can be differentiated from the full Moog Filter by color and the module name. The Moog Filter SE uses the “Luna” background and maple sides borrowed from the Voyager “Select Series.” The full version uses the Voyager's “electric blue” backlighting and mahogany sides.”



Figure 111. The UAD Moog Filter SE plug-in window

Moog Filter SE Controls

The Moog Filter SE controls are nearly the same as the Moog Filter. The exceptions are the Drive related controls (“Drive” and “Boost”) are unavailable on the SE model, and the “Drive” control is replaced with a straight (non-modeled) “Gain” control.

Please refer to the Moog Filter section for Moog Filter SE control descriptions (see “[Moog Filter Controls](#)” on page 333).

Note: When preset settings are copied from the full Moog Filter version to the SE version, the Boost (+20) switch value is retained, even though the parameter is not available for SE. If you subsequently copy from SE back to the full version, the original Boost value is pasted.

Moog Filter Latency

The Moog Filter (but not the Moog Filter SE) uses an internal upsampling technique to facilitate its amazing sonic quality. This upsampling results in a slightly larger latency than other UAD plug-ins. See “[Compensating Upsampled Plug-Ins](#)” on page 108 for more information.

The Moog Filter SE does not require additional latency compensation because it is not upsampled.

Note: *Compensating for Moog Filter is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used only on the outputs. See “[Host PDC Implementation](#)” on page 101.*

WebZine Articles

Several interesting articles related to the Moog Multimode Filter are available in the UA WebZine:

- <http://www.uaudio.com/webzine/2008/september/power.html>
- <http://www.uaudio.com/webzine/2008/september/analog.html>
- <http://www.uaudio.com/webzine/2008/august/index4.html>



The venerable Dr. Robert Arthur Moog

Moog® is a registered trademark of Moog Music, and is used under license with kind permission.

MXR Flanger/Doubler

Classic Electronic Flanging

For more than 30 years, musicians and engineers have relied upon the MXR Flanger/Doubler as one of best-sounding bucket-brigade flanging effects ever made. Through its signature flanging, doubling, and delay effects, the MXR Flanger/Doubler imprints a unique stamp on guitars, bass, keys, drums, or just about any source needing movement and depth. Developed in close collaboration with Dunlop Manufacturing, the MXR Flanger/Doubler plug-in for the UAD-2 platform replicates the legendary sound of this classic studio and stage effect with unparalleled accuracy.

The MXR Flanger/Doubler plug-in for UAD-2 is perfect for adding that “special something” to your tracks, and getting the creative juices and sound-shaping possibilities flowing. This plug-in models the original hardware unit in meticulous detail, and makes all its chewy analog goodness available for the first time in plug-in form. From guitars and basses to drum breaks, the MXR Flanger/Doubler plug-in will get your tracks moving.

History

Flanging originated as a tape effect where two tape machines are playing two identical and synchronized signals, and one is gradually delayed to create unique comb filtering effects. In the late 70’s, MXR introduced the famed Flanger/Doubler unit which, unlike tape flanging, recreated this effect electronically via “bucket brigade” design.

Bucket-Brigade Technology

A bucket-brigade device (“BBD”) is an analog circuit that produces a delay by storing the signal in a series of capacitors, passing the stored signal from one capacitor to the next with each clock cycle. Because the signal is degraded with each pass, audio delay lines using BBDs tend to significantly color the signal.

The name is derived from human bucket brigades, whereby a line of many people remain stationary while passing many buckets from one person to the next. Bucket brigades were commonly used by firefighters to deliver water to a fire more efficiently than would be possible if each person were to carry a single bucket from the water source to the destination.

MXR Flanger/Doubler Screenshot



Figure 112. The UAD MXR Flanger/Doubler plug-in window

Operational Overview

Model 126

The MXR “Model 126” Flanger/Doubler is an analog delay processor that uses “bucket-brigade” technology to create short signal delays. The delay time can be modulated manually, or automatically with a low frequency oscillator (LFO). The delayed signal can be mixed with itself in a feedback loop (“regenerated”), and its polarity can be inverted. The amount of processed signal relative to the original signal is adjustable.

All sonics and control behaviors are authentically modeled, including the inherent aliasing characteristics and dry signal path coloration.

Modes

Flanger

The flanging effect in MXR Flanger/Doubler is generated by using very short delay times whereby the delayed (wet) signal is not heard as separate from the original (dry) signal. When this delayed signal is combined with the dry signal, the comb filtering that is the essence of the flanging effect is generated. By modulating (“sweeping”) the delay time, the response of the comb filtering is modified, and the characteristic “swoosh” is produced. Additional sonic options are possible by increasing the delayed signal feedback (“regeneration”) to produce a deeper and more resonant effect, and/or reversing the polarity (“invert”) to give the sound a more “hollow” character.

Doubler

When in Doubler mode, all controls have the exact same functionality as Flanger mode; the only difference is that the available delay times are longer in this mode. The delayed signal produces a very short echo, hence a “double” of the original signal is heard.

Software-Only Features

The UAD MXR Flanger/Doubler plug-in has some features not included in the original hardware. The LFO rate can be synchronized to the tempo of the DAW session; the LFO can be reset; Stereo mode can apply processing to both sides of a stereo signal; and stereo output can be summed to mono.

Stereo Functionality

The original hardware is monophonic. To accommodate modern applications, the plug-in can be used in mono-in/stereo-out and stereo-in/stereo-out configurations. Two different stereo modes are available, and the stereo output can be summed to mono if desired. See [“Stereo Mode” on page 344](#) for details.

In Use

The MXR Flanger/Doubler is well suited for sound-shaping, recording, and mixing, and even for adding some post-production flavor. Flanging is particularly popular as an individual effect on a wide range of musical sources — including guitar, bass, drums, keyboards, full source material, and more. Another common use for the MXR Flanger/Doubler is as a group effect, where effecting more than one signal is desired. Try applying the MXR Flanger/Doubler to drum busses or even the entire mix, most often for a brief period in the song, such as a break or bridge. In addition to Flanging, the Flanger/Doubler excels as a short-range delay/doubler.

MXR Flanger/Doubler Controls

Buttons



The buttons on MXR Flanger/Doubler are two-state switches. The buttons are ON when they are in the “DOWN” position. When ON/DOWN, they are gray with a darker “shadow.” When OFF/UP, they are white.

Power

Power is the plug-in bypass control. Power is ON when the LED is red. When set to OFF, emulation processing is disabled, the LEDs are dimmed, and DSP usage is reduced (if DSP LoadLock is inactive; see [“UAD-2 DSP LoadLock” on page 74](#) for details).



Power is useful for comparing the processed settings to the original signal.

Effect



This button switches between Flanger and Doubler modes. It defines the range of signal delay available for the mode. The function of all the other controls is the same in both modes.

See [“Modes” on page 342](#) for additional details about the two effects.

Flanger


When in the “down” (gray) position, Flanger mode is active. This is the default setting.

Doubler

Doubler mode is active when the button is in the “up” (white) position.

Stereo Mode

This software-only switch modifies the processed signals at the outputs when used in a stereo-output configuration.

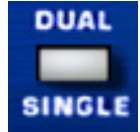

The control does not switch the processor between mono and stereo modes; both modes are true stereo (when configured for stereo output).

In both stereo modes (Single and Dual), stereo separation of the dry signals is maintained, and the stereo signal is not mixed to mono before processing is applied.

Note: *This function is only available when the plug-in is used in a mono-in/stereo-out or stereo-in/stereo-out configuration. When used in a mono-in/mono-out configuration, the switch has no effect.*

Single

When in the “up” (white) position, Single mode is active. This is the default setting.

In Single mode, the left and right signals are processed identically and the Sweep LFO for both channels are in phase.

Dual

When in the “down” (gray) position, Dual mode is active.

When Dual mode is enabled in a stereo-out configuration, the processing is applied to both the left and right channels. In this mode, the settings are the same for both processors, but a phase difference of 180° (antiphase) is applied between the Sweep LFO of the two channels. When Sweep Width is above 0% in Dual mode, this phase offset produces a swirling effect that pans back-and-forth.

Manual



This continuous control determines the delay time of the processor. The delay time is modulated by the Sweep LFO when the Width value is higher than 0%.

The available range of the control depends on the setting of the Effect button. In Flanger mode, the available delay time range is 4.9 milliseconds to 0.33 milliseconds. In Doubler mode, the available delay time range is 66 milliseconds to 18.5 milliseconds.

Sweep

The Sweep parameters (Width and Speed) control the LFO (Low Frequency Oscillator) that modulates the delay time of the processor.



Width

Sweep Width controls the amount of modulation applied to the delay time LFO. The available range is 0 – 100%.

At 0%, no modulation occurs and delay time is determined by the Manual setting. As Width is increased, the amount of modulation becomes “wider” (a broader sweep). At 100%, the delay time sweeps throughout its entire range, automatically creating the same sound as moving the Manual control repeatedly back and forth from minimum to maximum.

Speed

Sweep Speed controls the rate of modulation applied to the delay time LFO. The available range is 0.02 Hz to 15.96 Hz (this is the actual range of the original hardware; the knob text on the hardware panel doesn't match exactly). The current speed is indicated by the [Sweep LEDs](#) and also shown in the [Rate Display](#).

The Sweep Speed can be synchronized to the tempo of the host application by engaging the Sync function.

Mix



This continuous control adjusts the blend between the original dry signal and the processed wet signal(s). The available range is 0 – 100%.

When set to minimum, only the dry signal is heard.

When set to maximum, the signal is almost entirely wet, however a small amount of dry signal is present (like the original hardware).

When Mix is set to the minimum/dry position, the input signal is colored by the electronics of the unit (like the original hardware).

Regeneration

This is a feedback control for the delay processor. The available range is 0 – 100%.

When set above its minimum value, the output of the effect is routed back to its input. As the value increases, a more resonant signal is produced. Regeneration has a governor that prevents feedback “runaway” (overload) even when set to the maximum value of 100%.



Mono



This switch sums the stereo output of the dry and wet signals to mono when the plug-in used in a stereo-output configuration. This function is useful for creative purposes or checking phase relationships. The output is stereo when the switch is in the “up” (white) position, and mono when the switch in the “down” (gray) position.

Mono is only available when the plug-in is used in a mono-in/stereo-out or stereo-in/stereo-out configuration. When used in a mono-in/mono-out configuration, the switch is locked in the Mono position.

Note: See “Stereo Mode” on page 344 for additional details about stereo output.

Invert

This switch inverts the polarity (“phase”) of the processed signal. The wet signal polarity is normal when in the “up” (white) position, and inverted when in the “down” (gray) position.



When the processed signal is inverted and combined with the dry signal, the resultant comb filtering has a different timbre than when polarity is normal. This is particularly evident in Flanger mode, which often sounds more “hollow” when polarity is inverted.

Sync



The speed of the Sweep LFO can be synchronized to the tempo of the host application by engaging the Sync button. Tempo Sync is engaged when the button is in the “down” (gray) position and the LED above the button is illuminated.

See [Chapter 8, “Tempo Sync”](#) for complete details about this feature.

Rate Display

The rate of the Sweep LFO is displayed here. When Sync is inactive, the LFO speed is displayed in Hertz. When Sync is active, the LFO speed is shown as a beat division (or multiplier). The Rate Display is unique to the plug-in; the original hardware does not have this feature.



Sweep LEDs



The Sweep LEDs, located above the Manual knob, perform two functions: LFO rate indication and LFO reset.

Rate

The Sweep LEDs illuminate in tandem with the current Sweep Speed, providing a visual indication of the LFO rate. The Width amount must be higher than 0% for the LEDs to blink. As Width increases, the blinking is more obvious.

The manner in which the LED response manifests depends on the state of the Manual, Width, and Speed controls; their quirky behavior is the same as the original hardware.

Reset

The LEDs provide a mechanism to reset the Sweep LFO so the sweep cycle can be consistently controlled. The LFO cycle is reset to begin sweeping “downwards” in pitch (negative sweep) by clicking either LED. This function, which is not available on the hardware unit, can be automated for mixing or bouncing.

Normally the Sweep LFO is “free running” but this behavior is not always desirable. For example, you may want playback to always sound exactly the same when bouncing or mixing. To accomplish this sonic consistency, the Sweep LFO must be started at a specific place in the LFO cycle by using the Reset function.

MXR Flanger/Doubler Latency

This plug-in uses an internal upsampling technique. The upsampling results in a slightly larger latency than most other UAD plug-ins. See [“Compensating Upsampled Plug-Ins”](#) on page 108 for more information.

Note: *Compensating for additional latency is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used only on the outputs. See [“Host PDC Implementation”](#) on page 101 for more information.*



The MXR Model 126 Flanger/Doubler hardware unit

Neve 1073 Equalizer

Overview

Designed by the Rupert Neve company in 1970, perhaps no other studio tool is as ubiquitous or desirable as the Neve 1073 channel module. Without exaggeration, Neve consoles such as the 8014 (where the 1073 originated) have been used on a majority of popular recordings of the late 20th century, and the 1073 easily tops the short-list of audio design masterpieces.

The 1073 is famous for adding an unmistakable sheen and clarity of presence to elements in the mix that is deemed unattainable with any other unit. Modeling the 3-band EQ and high-pass filter in painstaking detail and thoroughness, Universal Audio's Neve 1073 EQ will deliver the same sonic experience expected from its analog cousin with exacting detail. Bundled together come two versions: The 1073 EQ with absolute sonic accuracy, and the 1073SE EQ for high instance counts.

Neve 1073 Screenshot



Figure 113. The Neve 1073 plug-in window

Neve 1073 and 1073SE Controls

Each feature of the UAD Neve 1073 and 1073SE interfaces are detailed below.

Input Gain



The Input Gain control sets the level at the input of the plug-in. The range is from -20 dB to $+10$ dB.

When the Input Gain knob “snaps” to the OFF position, plug-in processing is disabled and UAD DSP usage is reduced (unless “UAD-2 DSP LoadLock” on page 74 is enabled).

Note: Clicking the OFF screen label toggles between OFF and the previously set Input Gain value. You can also click the Neve logo to toggle between OFF and the previous state.

High Shelf



The High Shelf knob offers approximately ± 18 dB of smooth fixed frequency shelving equalization at 12 kHz.

Rotate the control clockwise to add the famous high-end Neve sheen, or counter-clockwise to reduce the treble response.

Midrange Band



The midrange band is controlled by dual-concentric knobs, delivering smooth semi-parametric midrange equalization.

The response for this band has a dependence on the bandwidth as the gain is adjusted. At higher center frequencies, the Q goes up, for a more focused peak.

The inner knob controls the band gain, and the outer ring selects the frequency or band disable. These two controls are detailed below.

Midrange Gain

The equalization gain for the midrange band is selected with the inner knob of the dual-concentric control. The available range is approximately ± 18 dB.

Midrange Frequency

The Mid frequency is selected with the outer ring of the dual-concentric knob controls. The ring control can be dragged with the mouse, or click directly on the “silkscreen” text to specify a frequency or disable the Mid band.

Note: You can also click the midrange symbol above the knob to cycle through the available values, or shift + click to step back one frequency.

The available midrange center frequencies are 360 Hz, 700 Hz, 1.6 kHz, 3.2 kHz, 4.8 kHz, 7.2 kHz, and OFF. When OFF is specified, the band is disabled. UAD CPU usage is not reduced when the band is OFF.

Low Band



The low frequency band is controlled by dual-concentric knobs, delivering smooth shelving equalization.

The inner knob controls the band gain, and the outer ring selects the frequency or band disable. These two controls are detailed below.

Low Gain

The equalization gain for the low band is selected with the inner knob of the dual-concentric control. The available range is approximately ± 15 dB.

Rotate the control clockwise to boost the selected low band frequency, or counter-clockwise to reduce the bass response.

Low Frequency

The Low frequency is selected with the outer ring of the dual-concentric knob controls. The ring control can be dragged with the mouse, or click directly on the “silkscreen” text to specify a frequency or disable the Low band.

Note: You can also click the low shelf symbol above the knob to cycle through the available values, or shift + click to step back one frequency.

The available low band center frequencies are 35 Hz, 60 Hz, 110 Hz, 220 Hz, and OFF. When OFF is specified, the band is disabled. UAD CPU usage is not reduced when OFF.

Low Cut



This knob specifies the fixed frequency of the Low Cut filter. This filter has an 18 dB per octave slope.

The available frequencies are 50 Hz, 80 Hz, 160 Hz, 300 Hz, and OFF. When OFF is specified, the low cut filter is disabled. UAD CPU usage is not reduced when OFF.

 
Note: You can also click the low cut symbol above the knob to cycle through the available values, or shift + click to step back one frequency.

Phase



The PHASE button inverts the polarity of the signal. When the switch is in the "In" (darker) position, the phase is inverted. Leave the switch "Out" (lighter) position for normal phase.

EQL



The equalizer is engaged when the EQL switch is in the "In" (darker) position. To disable the EQ, put the switch in the "Out" (lighter) position. Click the button to toggle the state.

In the hardware 1073, the audio is still slightly colored even when the EQL switch is in the Out position. This is due to the fact that the signal is still passing through its circuitry. Therefore, the signal will be slightly colored when this switch is in the Out position. UAD DSP usage is reduced when the EQ is bypassed with this control (unless "UAD-2 DSP LoadLock" on page 74 is enabled).

If a true bypass is desired, use the OFF position of the "Input Gain" on page 350 control.

Neve 1073SE



Figure 114. The Neve 1073SE plug-in window

Overview

The UAD Neve 1073SE is derived from the UAD Neve 1073. Its algorithm has been revised in order to provide sonic characteristics very similar to the 1073 but with significantly less DSP usage. It is provided to allow 1073-like sound when DSP resources are limited. Nobody with "golden ears" will say it sounds exactly like the 1073, but it still sounds great and is very usable in most situations.

The 1073SE interface can be differentiated from the 1073 by color and the module name. The 1073SE is black instead of the 1073's dark blue, and the module name on the lower right of the interface panel includes "SE".

Neve 1073SE Controls

The Neve 1073SE controls are exactly the same as the Neve 1073. Please refer to the Neve 1073 section for Neve 1073SE control descriptions (see [“Neve 1073 and 1073SE Controls”](#) on page 349).

Neve 1073 Latency

The Neve 1073 (but not the 1073SE) uses an internal upsampling technique to facilitate its amazing sonic quality. This upsampling results in a slightly larger latency than other UAD plug-ins. The latency, and its compensation, is identical to that of the UAD Precision Equalizer. See [“Compensating Upsampled Plug-Ins”](#) on page 108 for more information.

The Neve 1073SE does not require additional latency compensation because it is not upsampled.

Note: *Compensating for Neve 1073 is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used only on the outputs. See [“Host PDC Implementation”](#) on page 101.*



All visual and aural references to the Neve® 1073, 1081, 31102, 88RS, and 33609 products and all use of AMS-Neve’s trademarks are being made with written permission from AMS-Neve Limited.

CHAPTER 34

Neve 1081 Equalizer

Overview

The Neve 1081 channel module was first produced in 1972 by Neve, and was used to provide the mic/line amp and EQ sections in consoles such as the Neve 8048. Vintage 8048 consoles, with 1081 modules, are still in wide use today at classic facilities such as The Village in Los Angeles, and have been chosen by artists ranging from The Rolling Stones to The Red Hot Chili Peppers.

Universal Audio's Neve 1081 EQ delivers the same sonic experience as its analog cousin with exacting detail. The 1081 EQ also includes a DSP optimized 1081SE EQ for higher instance counts.

Neve 1081 Screenshot



Figure 115. The Neve 1081 plug-in window

Neve 1081 and 1081SE Controls

Overview

The Neve 1081 channel module is a four-band EQ with high and low cut filters. The 1081 features two parametric midrange bands, with “Hi-Q” selections for tighter boosts or cuts. Both the high and low shelf filters have selectable frequencies and may be switched to bell filters. Other features include a -20 to $+10$ dB input gain control, phase reverse, and EQ bypass.

The bands are arranged and grouped as in [Figure 116](#) below. The bands feature dual-concentric controls. For each of the main bands, the inner knob controls the gain while the outer ring controls the frequency. The low and high cut filters are grouped as one knob/ring set, but they are actually two independent filters.

Band Layout

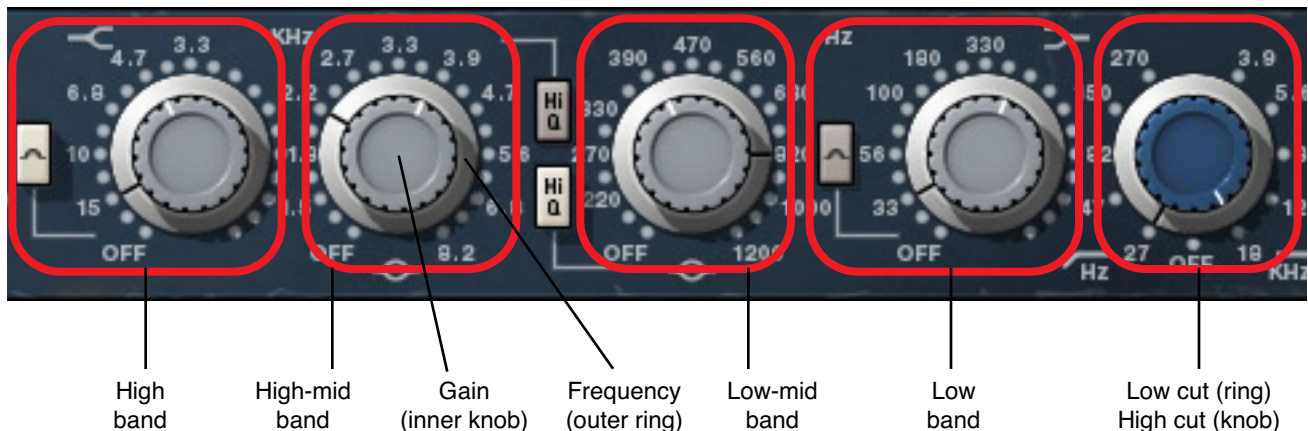


Figure 116. Neve 1081 band control layout

Input Gain



The Input Gain control sets the level at the input of the plug-in. The range is from -20 dB to $+10$ dB.

When the Input Gain knob “snaps” to the OFF position, plug-in processing is disabled and UAD DSP usage is reduced (unless “UAD-2 DSP LoadLock” on [page 74](#) is enabled).

Note: Clicking the OFF screen label toggles between OFF and the previously set Input Gain value. You can also click the Neve logo to toggle between OFF and the previous state.

High Band



The high band delivers smooth high frequency shelving or peak equalization. The inner knob controls the band gain, and the outer ring selects the frequency or band disable.

High Gain

The equalization gain for the high band is selected with the inner knob of the dual-concentric control. Rotate the control clockwise to add the famous high-end Neve sheen, or counter-clockwise to reduce the treble response. The available range is approximately ± 18 dB.

High Frequency

The high band frequency is selected with the outer ring of the dual-concentric knob controls. The ring control can be dragged with the mouse, or click directly on the “silkscreen” text to specify a frequency or disable the band.

***Note:** You can also click the shelving symbol above the knob to cycle through the available values, or shift + click to step back one frequency.*

The available high band center frequencies are 3.3 kHz, 4.7 kHz, 6.8 kHz, 10 kHz, 15 kHz, and OFF. When OFF is specified, the band is disabled. UAD DSP usage is not reduced when the band is OFF.

High Peak Select



The High Peak button switches the high band from a shelving EQ to a peaking EQ. The band is in shelf mode by default; it is in peak mode when the button is “down” (darker).

High-Mid Band



The high-midrange band delivers smooth high-mid frequency peak equalization with a choice of two bandwidths. The inner knob controls the band gain, and the outer ring selects the frequency or band disable.

High-Mid Gain

The equalization gain for the high-midrange band is selected with the inner knob of the dual-concentric control. The available range is approximately ± 18 dB.


High-Mid Frequency

The high-midrange band frequency is selected with the outer ring of the dual-concentric knob controls. The ring control can be dragged with the mouse, or click directly on the “silkscreen” text to specify a frequency or disable the band.

Note: You can also click the midrange symbol below the knob to cycle through the available values, or shift + click to step back one frequency.

The available high-mid band center frequencies are 1.5 kHz, 1.8 kHz, 2.2 kHz, 2.7 kHz, 3.3 kHz, 3.9 kHz, 4.7 kHz, 5.6 kHz, 6.8 kHz, 8.2 kHz, and OFF. When OFF is specified, the band is disabled. UAD DSP usage is not reduced when the band is OFF.

High-Mid Q Select

 The High Q button switches the response of the high-mid band from “normal” to a narrower bandwidth for a sharper EQ curve. The band is in normal mode by default; it’s in high Q mode when the button is “down” (darker).

Low-Mid Band



The low-midrange band delivers smooth low-mid frequency peak equalization with a choice of two bandwidths. The inner knob controls the band gain, and the outer ring selects the frequency or band disable.

Low-Mid Gain

The equalization gain for the low-midrange band is selected with the inner knob of the dual-concentric control. The available range is approximately ± 18 dB.

Low-Mid Frequency

The low-midrange band frequency is selected with the outer ring of the dual-concentric knob controls. The ring control can be dragged with the mouse, or click directly on the “silkscreen” text to specify a frequency or disable the band.

Note: You can also click the midrange symbol below the knob to cycle through the available values, or shift + click to step back one frequency.

The available low-mid band center frequencies are 220 Hz, 270 Hz, 330 Hz, 390 Hz, 470 Hz, 560 Hz, 680 Hz, 820 Hz, 1000 Hz, 1200 Hz, and OFF. When OFF is specified, the band is disabled. UAD CPU usage is not reduced when the band is OFF.

Low-Mid Q Select



The High Q button switches the response of the low-mid band from “normal” to a narrower bandwidth for a sharper EQ curve. The band is in normal mode by default; it’s in high Q mode when the button is “down” (darker).

Low Band



The low band delivers smooth low frequency shelving or peak equalization. The inner knob controls the band gain, and the outer ring selects the frequency or band disable.

Low Gain

The equalization gain for the low band is selected with the inner knob of the dual-concentric control. The available range is approximately ± 18 dB.

Low Frequency

The low band frequency is selected with the outer ring of the dual-concentric knob controls. The ring control can be dragged with the mouse, or click directly on the “silkscreen” text to specify a frequency or disable the band.

The available low band center frequencies are 33Hz, 56 Hz, 100 Hz, 180 Hz, 330 Hz, and OFF. When OFF is specified, the band is disabled. UAD CPU usage is not reduced when the band is OFF.

Note: You can also click the shelving symbol above the knob to cycle through the available values, or shift + click to step back one frequency.

Low Peak Select



The Low Peak button switches the low band from a shelving EQ to a peaking EQ. The band is in shelf mode by default; it is in peak mode when the button is “down” (darker).

Cut Filters



The independent low and high cut filters are controlled by the dual-concentric knobs to the right of the low band (see [Figure 116 on page 355](#)). The controls specify the fixed frequency of the cut filter. The cut filters have an 18 dB per octave slope.

Click+drag the control to change the value, or click the “silkscreen” frequency values.

Note: You can also click the high cut/low cut symbols below the knob to cycle through the available values, or shift + click to step back one frequency.

High Cut

The inner (blue) dual-concentric knob controls the high cut filter. The available frequencies for the high cut filter are 18 kHz, 12 kHz, 8.2 kHz, 5.6 kHz, 3.9 kHz, and OFF. When OFF is specified, the high cut filter is disabled. UAD CPU usage is not reduced when OFF.

Low Cut

The outer (silver) dual-concentric ring controls the low cut filter. The available frequencies for the low cut filter are 27 Hz, 47 Hz, 82 Hz, 150 Hz, 270 Hz, and OFF. When OFF is specified, the low cut filter is disabled. UAD CPU usage is not reduced when OFF.

Phase



The Phase (PH) button inverts the polarity of the signal. When the switch is in the “In” (lit) position, the phase is reversed. Leave the switch in the “Out” (unlit) position for normal phase.

EQ Enable



The equalizer is engaged when the EQ switch is in the “In” (lighted) position. To disable the EQ, put the switch in the “Out” (unlit) position. Click the button to toggle the state.

In the hardware 1081, the audio is still slightly colored even when the EQ switch is in the Out position. This is due to the fact that the signal is still passing through its circuitry. Therefore, the signal will be slightly colored when this switch is in the Out position. UAD DSP usage is reduced when the EQ is bypassed with this control (unless “[UAD-2 DSP LoadLock](#)” on [page 74](#) is enabled). If a true bypass is desired, use the OFF position of the “[Input Gain](#)” on [page 355](#) control.

Neve 1081SE



Figure 117. The Neve 1081SE plug-in window

Overview

The UAD Neve 1081SE is derived from the UAD Neve 1081. Its algorithm has been revised in order to provide sonic characteristics very similar to the 1081 but with significantly less DSP usage. It is provided to allow 1081-like sound when DSP resources are limited. Nobody with “golden ears” will say it sounds exactly like the 1081, but it still sounds great and is very usable in most situations.

The 1081SE interface can be differentiated from the 1081 by color and the module name. The 1081SE is black instead of the 1081’s dark blue, and the module name on the lower right of the interface panel includes “SE”.

Neve 1081SE Controls

The Neve 1081SE controls are exactly the same as the Neve 1081. Please refer to the Neve 1081 section for Neve 1081SE control descriptions (see [“Neve 1081 and 1081SE Controls” on page 355](#)).

Neve 1081 Latency

The Neve 1081 (but not the 1081SE) uses an internal upsampling technique to facilitate its amazing sonic quality. This upsampling results in a slightly larger latency than other UAD plug-ins. See [“Compensating Upsampled Plug-Ins” on page 108](#) for more information.

The Neve 1081SE does not require additional latency compensation because it is not upsampled.

Note: *Compensating for Neve 1081 is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used only on the outputs. See [“Host PDC Implementation” on page 101](#).*

All visual and aural references to the Neve® 1073, 1081, 31102, 88RS, and 33609 products and all use of AMS-Neve’s trademarks are being made with written permission from AMS-Neve Limited.

Neve 31102 Console EQ

Overview

The Neve 8068 console, featuring the 31102 EQ, was used to hand-mix one of the best selling debut albums of all time; Appetite For Destruction by Guns-N-Roses. Artists ranging from Primus and Metallica to My Morning Jacket and The Red Hot Chili Peppers have also called on the distinct tone of the Neve 8068 and 31102 EQ in the studio. Universal Audio's officially licensed and endorsed Neve 31102 EQ plug-in delivers the same sonic experience as its analog cousin with exacting detail. Complete with its own distinct filter shaping and unmistakable sheen and bite, the 31102 provides another step in the evolution of classic Neve EQs. 3-band active EQ and High/Low filters offer enhanced tone-shaping possibilities and a feature complexity that sits squarely between its cousins, the 1073 and the 1081.

The Neve 31102/SE EQ is a three band (10, 12 and 16 kHz) high shelving EQ, a six frequency (7.2, 4.8, 3.2, 1.6, 0.7 and 0.35 kHz) peaking EQ with two Q types, a four frequency (220, 110, 60 and 35 Hz) low shelving EQ, a four frequency high pass filter (45, 70, 160 and 360 Hz) and five frequency (6, 8, 10, 14 and 16 kHz) low pass filter. Other features include a 30 dB range of Gain Trim, plus phase reverse and EQ bypass. The UAD Neve 31102 license also includes a DSP-optimized 31102SE "Special Edition" EQ for higher instance counts.

Neve 31102 Screenshot



Figure 118. The Neve 31102 plug-in window

Neve 31102 and 31102SE Controls

Input Gain



The Input Gain control sets the level at the input of the plug-in, and doubles as a plug-in bypass control. The range is from -20 dB to +10 dB, and off.

When the Input Gain knob “snaps” to the off position, plug-in processing is disabled and UAD DSP usage is reduced.

Note: (UAD-2 only) UAD-2 DSP usage is reduced only when DSP LoadLock (page 74) is disabled. If DSP LoadLock is enabled (the default setting), setting Input Gain to off will not reduce DSP usage.

Tip: Clicking the “off” screen label toggles between off and the previously set Input Gain value. You can also click the Neve logo to toggle between off and the previous state.

High Shelf

The high shelf delivers smooth high frequency shelving equalization, controlled by dual-concentric knobs. The inner knob controls the band gain, and the outer ring selects the frequency or band disable.



High Shelving Gain

The gain for the high band is selected with the inner knob of the dual-concentric control. Rotate the control clockwise to add the famous high-end Neve sheen, or counter-clockwise to reduce the treble response.

The available range is approximately ± 15 dB. The gain value is zero when the knob position indicator is pointing straight down.

High Shelving Frequency

The high shelving frequency is specified with the outer ring of the dual-concentric knob. The ring knob pointer can be dragged with the mouse, or click the shelving symbol above the knob to cycle through the available frequencies (shift+click to step back one frequency).

The available high shelving frequencies are 16 kHz, 12 kHz, 10 kHz, and off. When off is specified, the high shelf band is disabled. UAD DSP usage is not reduced when the band is off.

Midrange Band



The midrange band is controlled by dual-concentric knobs, delivering smooth semi-parametric midrange equalization with a choice of two bandwidths. The inner knob controls the band gain, and the outer ring selects the frequency or band disable.

Midrange Gain

The equalization gain for the midrange band is selected with the inner knob of the dual-concentric control. The available range is approximately ± 15 dB. The gain value is zero when the knob position indicator is pointing straight down.

Midrange Frequency

The midrange frequency is specified with the outer ring of the dual-concentric knob controls. The ring knob pointer can be dragged with the mouse, or click the peak/dip symbol above the knob to cycle through the available frequencies (shift+click to step back one frequency).

The available midrange center frequencies are 7.2 kHz, 4.8 kHz, 3.2 kHz, 1.6 kHz, 0.7 kHz, 0.35 kHz, and off. When off is specified, the band is disabled. UAD DSP usage is not reduced when the band is off.

High Q Select



The High Q button switches the response of the midrange band from "normal" to a narrower bandwidth for a sharper EQ curve. The band is in normal mode by default; it's in high Q mode when the button is "down" (darker).

Low Shelf



The low band is controlled by dual-concentric knobs, delivering smooth shelving equalization. The inner knob controls the band gain, and the outer ring selects the frequency or band disable.

Low Gain

The equalization gain for the low band is selected with the inner knob of the dual-concentric control. The available range is approximately ± 15 dB. The gain value is zero when the knob position indicator is pointing straight down.

Rotate the control clockwise to boost the selected low band frequency, or counter-clockwise to reduce the bass response.

Low Frequency

The low frequency is selected with the outer ring of the dual-concentric knob controls. The ring knob pointer can be dragged with the mouse, or click the shelving symbol above the knob to cycle through the available frequencies (shift+click to step back one frequency).

The available low band center frequencies are 35 Hz, 60 Hz, 110 Hz, 220 Hz, and off. When off is specified, the band is disabled. UAD DSP usage is not reduced when off.

Cut Filters



The independent low and high cut filters are controlled by the dual-concentric knobs to the right of the low band. The controls specify the fixed frequency of each cut filter.

The knob pointers can be dragged with the mouse, or click the respective cut symbols above the knob (left symbol for low cut, right symbol for high cut) to cycle through the available frequencies (shift+click to step back one frequency).

High Cut

The inner (blue) dual-concentric knob controls the high cut filter. The available frequencies for the high cut filter are 18 kHz, 14 kHz, 10 kHz, 8 kHz, 6 kHz, and off. When off is specified, the high cut filter is disabled.

Low Cut

The outer dual-concentric ring controls the low cut filter. The available frequencies for the low cut filter are 45 Hz, 70 Hz, 160 Hz, 360 Hz, and off. When OFF is specified, the low cut filter is disabled.

 
Note: Each cut filter is disabled when its respective knob position indicator is pointing straight down. UAD DSP usage is not reduced when the cut filters are off.

Phase



The Phase (∅) button inverts the polarity of the signal. The signal is inverted when the button is engaged (darker). Leave the button inactive (lighter) for normal phase.

EQL



The equalizer is engaged when the EQL switch is in the “In” (darker) position. To disable the EQ, put the switch in the “Out” (lighter) position. Click the button to toggle the state.

In the hardware 31102, the audio is still slightly colored even when the EQL switch is in the Out position. This is due to the fact that the signal is still passing through its circuitry. Therefore, the signal will be slightly colored when this switch is in the Out position. UAD DSP usage is reduced when the EQ is bypassed with this control (unless “UAD-2 DSP LoadLock” on page 74 is enabled).

If a true bypass is desired, use the OFF position of the Input Gain control (“Input Gain” on page 362).

Neve 31102SE



Figure 119. The Neve 31102SE plug-in window

Overview

The UAD Neve 33102SE is derived from the UAD Neve 31102. Its algorithm has been revised in order to provide sonic characteristics very similar to the 31102 but with significantly less DSP usage. It is provided to allow 31102-like sound when DSP resources are limited. Nobody with “golden ears” will say it sounds exactly like the 31102, but it still sounds great and is very usable in most situations.

The 31102 interface can be differentiated from the 31102 by color and the module name. The 31102SE background is black instead of the 31102’s dark blue, and the module name on the lower right of the interface panel includes “SE”.

Neve 31102SE Controls


The Neve 31102SE controls are exactly the same as the Neve 31102. Please refer to “Neve 31102 and 31102SE Controls” on page 362 for Neve 31102SE control descriptions.

Neve 31102 Latency

The Neve 31102 (but not the 31102SE) uses an internal upsampling technique to facilitate its amazing sonic quality. This upsampling results in a slightly larger latency than other UAD plug-ins. The latency and its compensation is identical to that of the other UAD Neve EQ's. See ["Compensating Upsampled Plug-Ins"](#) on page 108 for more information.

The Neve 31102SE does not require additional latency compensation because it is not upsampled.

Note: *Compensating for Neve 31102 is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used only on the outputs. See ["Host PDC Implementation"](#) on page 101.*

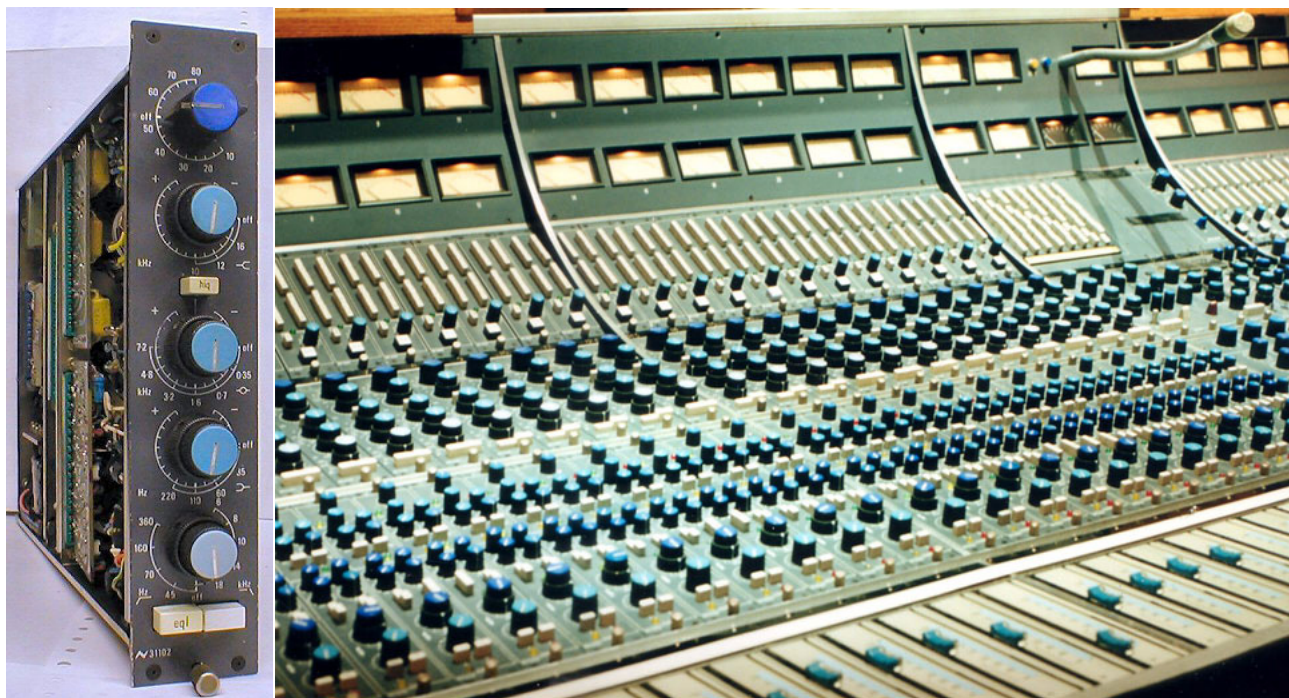

One Neve 31102 EQ hardware module and 31102s installed in a Neve 8068 console

All visual and aural references to the Neve® 1073, 1081, 31102, 88RS, and 33609 products and all use of AMS-NEVE's trademarks are being made with written permission from AMS-Neve Limited.

Neve 33609 Compressor

Overview

Derived from the original Neve 2254 compressor, circa 1969, the 33609 stereo bus compressor/limiter utilizes a bridged-diode gain reduction circuit and many custom transformers. The uniquely musical character of this circuit made the 33609 a studio standard since its release. The UAD Neve 33609 is the only Neve-sanctioned software recreation of the Neve 33609 (revision C). Every detail of the original unit is captured, and matches its hardware counterpart with absolute precision. The 33609 plug-in includes a DSP-optimized 33609SE which allows for higher instance counts.

The completely step-controlled 33609 is made up of separate compression and limiter sections, each with their own threshold, recovery and bypass controls. Two of the recovery selections for each section are dedicated to a program dependent auto release. The compressor section also offers five ratio selections and 20 dB make-up gain, while the limiter offers a fast or slow attack. The mono/stereo switch couples and decouples the left and right gain reduction elements.

The UAD Powered Plug-In version of the Neve 33609 adds a few control enhancements not found on the hardware: An additional stepped output control with 20 dB of gain, a link switch allowing ganged left/right control of all parameters, and a headroom switch, which allows the DAW user to take advantage of the full range of 33609 gain coloration.

Neve 33609 Screenshot



Figure 120. The Neve 33609 plug-in window

Operation

The UAD Neve 33609 is a two-channel device capable of running in stereo or dual-mono modes. The active mode is determined by the mono/stereo switch (see “[Mono/Stereo](#)” on page 372). When the 33609 is used in a mono-in/mono-out configuration, the channel 2 controls are disabled.

Each channel consists of a compressor and a limiter. Each of these functions has its own separate group of controls. Since the controls for each of the two channels are identical, they are detailed only once.

Note: For a detailed explanation on how compressors and limiters operate, see “[Compressor Basics](#)” on page 281.

Signal Flow

In the 33609, the output of the compressor is fed to the input of the limiter. Like the original hardware, the signal does not flow “from the left to the right” of the interface. Understanding this signal flow will help you obtain a more predictable result (see [Figure 121](#) below).

 


Figure 121. Signal flow within UAD Neve 33609

Modeling

The UAD Neve 33609 models all aspects of the original 33609 hardware, including the desirable harmonic distortion characteristics. These qualities are more prominent at higher input levels (see “[Headroom](#)” on page 373” for more info).

When the compressor and limiter are both disabled, some (good) coloration of the signal occurs, just like the hardware. If a true bypass is desired, use the power switch (“[Power](#)” on page 375) to disable the plug-in.

Technical Article The article “Ask the Doctors: Modeling of the Neve 33609 compressor/limiter” contains interesting technical details about the 33609. It is available at our online webzine:

- <http://www.uaudio.com/webzine/2006/august/index2.html>

Neve 33609 and 33609SE Controls

Limiter



Controls in this section only function when the limiter is enabled with the “limit In” switch (the Power switch must also be on).

Note: The compressor precedes the limiter (see “Signal Flow” on page 368).

Limiter Threshold

Threshold determines how much limiting will occur. When the input signal exceeds the threshold level, the signal above the threshold is limited. A smaller value results in more limiting. The available range is from +4 dB to +15 dB, in 0.5 dB increments.

If the compressor is enabled, the Gain control in the compressor section (“Compressor Gain” on page 370) will affect the input level into the limiter. In this case, the compressor gain can affect the limiter threshold response.

Limiter Recovery

Recovery (release) is the time it takes for the limiter to stop processing after the signal drops below the threshold value. The available values (in milliseconds) are 50, 100, 200, 800, a1, and a2.

The automatic settings (a1 and a2) are program dependant. The value for a1 can be as fast as 40ms, but after a sustained period of high signal level, the period is ≈ 1500 ms. The value for a2 can be as fast as 150ms, but after a sustained period of high signal level, the period is ≈ 3000 ms.

Limiter In

This toggle switch enables the limiter portion of the plug-in. The limiter has no effect unless this switch is in the “In” (down) position.

Attack

Attack determines how fast limiting will engage when the signal exceeds the limiter threshold. The Fast setting is 2 milliseconds, and the Slow setting is 4 milliseconds.

Compressor



Controls in this section only function when the compressor is enabled with the “compress In” switch (the Power switch must also be on).

Note: The compressor precedes the limiter (see “Signal Flow” on page 368).

Compressor Threshold

Threshold determines how much compression will occur. When the input signal exceeds the threshold level, the compressor engages. A smaller value results in more compression. The available range is from -20 dB to $+10$ dB, in 2 dB increments.

Compressor Recovery

Recovery (release) is the time it takes for the compressor to stop processing after the signal drops below the threshold value. The available values (in milliseconds) are 100, 400, 800, 1500, a1, and a2.

The automatic settings (a1 and a2) are program dependant. The value for a1 can be as fast as 40ms, but after a sustained period of high signal level, the period is ≈ 800 ms. The value for a2 can be as fast as 150ms, but after a sustained period of high signal level, the period is ≈ 1500 ms.

Compressor Gain

This makeup gain control increases the signal level out of the compressor to compensate for reduced levels as a result of compression. The available range is 0 to $+20$ dB, in 2 dB increments.

Make sure to adjust the Gain control *after* the desired amount of compression is achieved with the Threshold control. The Gain control does not affect the amount of compression.

Note: If the limiter is also enabled, this gain is applied before the limiter stage.

Ratio

This control determines the compressor ratio. The available values are 1.5:1, 2:1, 3:1, 4:1, and 6:1, selectable in discrete increments.

Compressor In

This toggle switch enables the compressor portion of the plug-in. The compressor has no effect unless this switch is in the “In” (down) position.

Other Controls



The interface elements that are not directly contained within the compressor or limiter are detailed below.

Output Gain

This control is a software-only addition not found on the original hardware. It is an overall makeup gain stage at the output of the plug-in to compensate for reduced levels as a result of compression and/or limiting. The available range is -2 to $+20$ in 1 dB increments.

Gain Reduction Meters

The Gain Reduction Meters indicate the amount of gain reduction that is occurring in dB. There is one meter for each channel. The gain reduction displayed is the total reduction of the limiter plus the compressor.

Note: The meter indicator moves farther to the right as more gain reduction is occurring. This meter behavior is opposite that of many compressors.

Link

This switch is a software-only addition that allows the two sets of controls for each channel to be linked for ease of operation when both channels require the same values, or unlinked when dual-mono operation is desired. The Link parameter is stored within presets and can be accessed via automation.

Unlink

When set to unlink (up position), the controls for channels one and two are completely independent. Unlink is generally used in mono mode. When unlinked, automation data is written and read by each channel separately.

Note: When unlink is switched to link, channel 1 controls are copied to channel 2. Control offsets between channels are lost in this case.

Link

When set to link (down position), modifying any channel one or channel two control causes its adjacent stereo counterpart control to snap to the same position (channel 1 & 2 controls are ganged together in link mode).

When link is active, automation data is written and read for channel one only. In this case, the automation data for channel one will control both channels.

***Note:** When link is active, changing channel two parameters from a control surface or when in “controls only” (non-GUI) mode will have no effect.*

Mono/Stereo

The Neve 33609 can operate in true stereo or dual-mono mode. This switch determines the active mode.

Mono

In mono mode, channels 1 and 2 are completely independent and the 33609 functions as a dual-mono device, each channel with its own compressor and limiter.

***Note:** To read and write automation data for both channels independently when in mono mode, link mode must be disabled.*

Stereo

In stereo mode, the left channel is fed to the channel one compressor, and the right channel is fed to the channel two compressor. The two compressors are constrained so that they both compress the same amount at any instant. This prevents transients which appear only on one channel from shifting the image of the output. Any big transient on either channel will cause both channels to compress. The amount of compression will be similar to the amount of compression for a transient which appears on both channels at the same time.

In stereo operation the controls for channels 1 and 2 are independent and can be set separately. Generally, the channel with the “most processing occurring” controls the processing for the other channel. For example, if the same signal is fed to both channels in stereo mode and channel 1 has a lower threshold setting than channel 2, the channel 1 threshold value is used for both channels. Similarly, if channel 1 were disabled (using “In” switches), channel 2 settings would be used because “more processing” occurs with the channel 2 settings. It's not always so simple though, as in the following cases:

- If you feed the same signal into both channels, you can have a lower threshold with a lower ratio on one channel, and a higher threshold with a higher ratio on the other channel. In this case, you will get a double knee, with the lower ratio being used between the knees, and the higher ratio above both knees.
- If you feed the same signal into both channels, you can have a lower threshold with a faster release on one channel, and a higher threshold with a slower release in the other channel. In this case, you will get a two-stage release after a transient, with the first channel releasing at the fast rate until you get down to where the other one is; then the release will continue at the slower rate.

Gratuitous Question

Is there any reason I would want to use stereo mode and still have the settings for the two channels different?

Yes. Linking the sidechains simply prevents left-right image shifting. Threshold, attack, and recovery can be set independently to cause the compressor to be more sensitive to instruments which are panned to one side or the other. Output controls can be set separately in order to correct an overall image shift at the output.

Headroom

Background

The hardware Neve 33609 can accept an analog signal level of approximately +26 dBu before undesirable signal clipping occurs. As the signal increases up to this point however, desirable audio-path nonlinearities and “good” harmonic distortion characteristics occur. This musically pleasing “warmth” at higher levels is what gives the unit much of its revered sonic character. Because analog mixing consoles can typically output high signal levels, audio engineers often take advantage of the ability to “push” the hardware 33609 into the colorful arena.

This complete pallet of sonic nuance, including the dynamic input response, is captured in the UAD Neve 33609 model. The plug-in is calibrated internally so that 0 dBFS at its input is equivalent to an input level of approximately +26 dBu on the 33609 hardware, where the coloring is more prominent. The result is that a typical signal within a DAW will drive the UAD Neve 33609 into these “virtual” higher levels, resulting in fairly high amounts gain reduction.

Headroom Switch

The Headroom switch is provided to accommodate applications where high amounts of gain reduction are not desired. Headroom simply lowers the internal operating level so that the plug-in is not “pushed” into gain reduction as much.

Headroom can be set to 22 dB, 18 dB, or 14 dB. At 22 dB, signals will push the plug-in into gain reduction (and more non-linearity and “good” harmonic distortion) more easily. Set the switch to a lower value when less gain reduction and color is desired.

The numbers on the switch indicate where 0 dBFS falls relative to nominal +4 dBu. For example, with 22 dB of headroom, 0 dBFS corresponds to +4 dBu + 22 dB = 26 dBu. With 18 dB of headroom, 0 dBFS corresponds to +4 dBu + 18 dB = 22 dBu. The headroom selected will cause the plug-in to behave as though it were a hardware 33609 connected to a nominal +4 dBu interface with the selected amount of headroom. Industry standards for most DAW interfaces are +14 dB and +18 dB headroom. The +22 dB setting approximates some analog mixing environments, and allows the entire useful dynamic range of the 33609 to be exercised.

The following settings are application guidelines for the Headroom switch:

22 dB

Typical starting point for individual track inserts where maximum gain reduction is desired. This setting is equivalent to having a real hardware 33609 connected to a +4 interface with +22 dB headroom.

18 dB

Typical starting point when used on a buss or group where nominal gain reduction is desired. This setting is equivalent to having a real hardware 33609 connected to a +4 interface with +18 dB headroom.

14 dB

Typical starting point for mastering where minimal gain reduction is desired. This setting is equivalent to having a real hardware 33609 connected to a +4 interface with +14 dB headroom.

Note: Keep in mind there are no hard and fast rules. Use the above recommendations as guidelines and feel free to experiment with the various positions of the headroom switch regardless of the audio source. If it sounds good, use it!

Factory Presets

The UAD Neve 33609/33609SE includes a bank of factory presets. These presets can be useful starting points for your particular source audio.

The factory preset names begin with MSTR, BUSS, or TRAK. These indicate the setting of the headroom parameter. (14 dB, 18 dB, and 22 dB respectively).

Mastering (MSTR) presets are optimized for mixed program material that is already at a relatively high level.

Buss/group (BUSS) presets are optimized for subgroups of audio, such as a drum group or vocal group. This type of application often has lower levels than full mixes, but higher levels than a track insert.

Track (TRAK) presets are optimized for track inserts where signal levels typically aren't as hot as groups or outputs.

The preset names are guidelines and not rules. In many cases, you can use any preset on any source with good results. You will probably need to adjust the threshold and/or gain controls to obtain the optimum results with your particular source audio.

Power

The Power switch determines whether the plug-in is active. This is useful for comparing the processed settings to the original signal, or to bypass the plug-in to reduce the UAD DSP load (load is not reduced if “UAD-2 DSP LoadLock” on page 74 is enabled). Toggle the switch to change the Power state; the switch is illuminated in red when the plug-in is active.

Note: You can click-hold the power switch then drag it like a slider to quickly compare the enabled/disabled state.

Neve 33609SE



Figure 122. The Neve 33609SE plug-in window

Overview

The UAD Neve 33609SE is derived from the UAD Neve 33609. Its algorithm has been revised in order to provide sonic characteristics very similar to the 33609 but with significantly less DSP usage. It is provided to allow 33609-like sound when DSP resources are limited. Nobody with “golden ears” will claim it sounds exactly like the 33609, but it still sounds great and is very usable in most situations.

The 33609SE interface can be differentiated from the 33609 by color and the module name. The 33609SE background is black instead of the 33609’s blue/grey, and the module name below the link switch includes “SE”.

Neve 33609SE Controls

The Neve 33609SE controls are exactly the same as the Neve 33609. Please refer to the Neve 33609 section for Neve 33609SE control descriptions (see “[Neve 33609 and 33609SE Controls](#)” on page 369).

Neve 33609 Latency

The Neve 33609 (but not the 33609SE) uses an internal upsampling technique to facilitate its amazing sonic quality. This upsampling results in a slightly larger latency than other UAD plug-ins. See “[Compensating Upsampled Plug-Ins](#)” on page 108 for more information.

The Neve 33609SE does not require additional latency compensation because it is not upsampled.

Note: *Compensating for Neve 33609 is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used only on the outputs. See “[Host PDC Implementation](#)” on page 101.*

All visual and aural references to the Neve® 1073, 1081, 31102, 88RS, and 33609 products and all use of AMS-NEVE’s trademarks are being made with written permission from AMS-Neve Limited.

Neve 88RS Channel Strip

Overview

In 2001, Neve launched the 88 Series: A new, large-format analog console that represented the best of all Neve designs that came before it. Considered the ultimate console for modern features and reliability, it is also heralded as one of the best-sounding consoles ever made by veterans of both the audio and film communities. The 88RS has found a home in some of the finest rooms and scoring stages around the world, including Ocean Way, Abbey Road, AIR, The Village, Sony Pictures, 20th Century Fox and Skywalker Sound.

With a rich palette of modern sound-sculpting tools, the Neve 88RS Channel Strip captures the EQ and dynamics section from Neve's flagship console. The controls comprise 12 dB per octave high and low cut filters, a four-band EQ plus limiting, compression, gate and expansion. The middle EQ bands are fully parametric, while the flexible high and low bands provide the user with two fixed-Q types and the ability to switch to shelving EQ.

The VCA-type Limit/Comp provides a 0.01 to 3s release, Auto Release and a continuously variable ratio control with a fixed fast or slow attack time. The Gate/Exp provides 0.01 to 3s release times, fast or slow attack times plus Threshold, Range and Hysteresis to tailor your gate or expansion effect to the perfect response for any source.

Additionally, the user may engage the P-DYN button to reorder the signal chain so that the EQ is first. With the SC-EQ button, the user may engage a sidechain feature to achieve frequency-dependent compression for such useful tasks as de-essing.

Neve 88RS Screenshot



Figure 123. The Neve 88RS plug-in window

Neve 88RS Controls

Overview

The UAD Neve 88RS controls are divided into four main sections: dynamics, EQ, cut filters, and global. Each section and control is detailed below.

In the UAD Neve 88RS plug-in, 0 dBFS is calibrated to +4 dBU plus 18 dB of headroom, so 0 dBFS is equivalent to 22 dBU.

Signal Flow

The output of the cut filters is fed to the input of the dynamics or EQ section (dependent upon the Pre-Dyn switch). Understanding this signal flow will help you obtain a more predictable result (see [Figure 124](#) below).

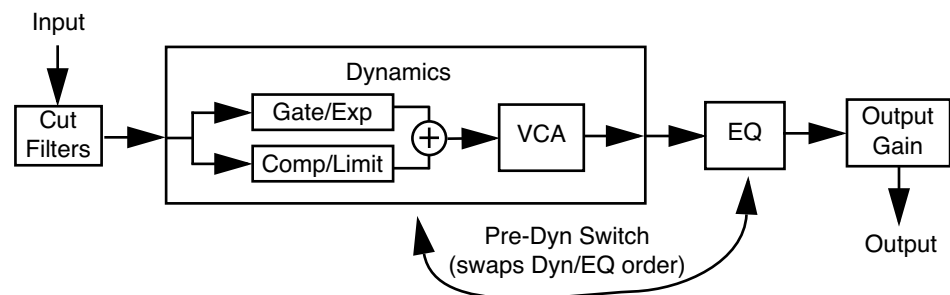


Figure 124. Simplified signal flow within UAD Neve 88RS

Dynamics

The dynamics section consists of a gate/expander and a limiter/compressor. The controls for each of these two dynamics processors are arranged in vertical columns, with the gate/expander controls in the left column, and the limiter/compressor controls in the right column. Both processors can be individually activated or disabled.

The settings of the gate do not affect operation of the compressor, and vice versa. The same sidechain signal (EQ'd or not, depending upon Pre EQ switch) is sent to both the gate and compressor. The gains for both the gate and compressor are computed based on that same signal, then both the gate and compressor gains are applied in the same place, by a single gain-reduction VCA (see [Figure 124](#) above).



Gate/Expander

The gate/expander module operates in either gate or expansion mode. In gate mode, signals below the threshold are attenuated by the range (RGE) amount (see [Figure 125 on page 380](#)), and hysteresis is available (see [Figure 126 on page 381](#)).

Expansion mode is enabled by rotating the hysteresis (HYST) control fully counter-clockwise (or clicking the EXP label). In expansion mode, the gate applies downwards expansion at a fixed 1:2 ratio, with the amount of gain reduction determined by the range control. Two attack speeds and a continuously variable release time are available in both modes.

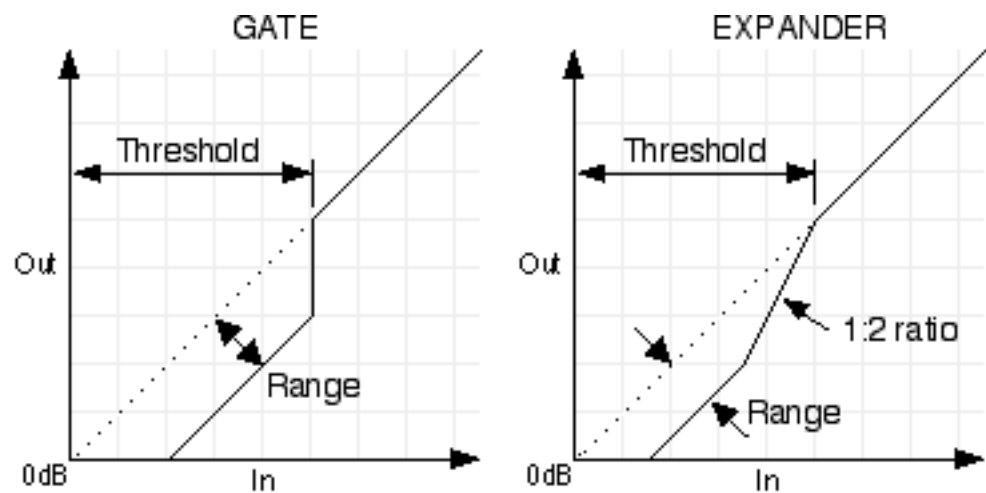


Figure 125. The Neve 88RS Gate/Expander diagram

Gate/Exp Enable (G/E)



This button activates the gate/expander module. The module is active when the button is gray and the green indicator illuminates.

You can use this button to compare the gate/expander settings to that of the original signal, or to bypass the module altogether. UAD DSP load is reduced when this module is inactive (unless “[UAD-2 DSP LoadLock](#)” on [page 74](#) is enabled).

Gate/Exp Hysteresis (HYST)



The Hysteresis knob sets the difference in threshold for signals that are either rising or falling in level. Signals that are rising in level are passed when the level reaches the threshold value plus the hysteresis value. Signals that are falling in level are not passed at the lower threshold level. Up to 25 dB of hysteresis is available. See [Figure 126 on page 381](#).

Hysteresis makes the gate less susceptible to “stuttering” by making the threshold value dependent upon whether the gate is off or on. Raising the threshold for rising signal levels prevents noise from turning the gate on, while allowing a lower threshold for falling levels. This prevents reverb tails from being prematurely gated. For example, if the threshold is set at -50 and the hysteresis is set at 10, the level would have to rise above -40 dB before the signals pass, and the gate would remain open until the level falls below -50 dB.

This control also activates expander mode. Rotating Hysteresis fully counter-clockwise switches the gate off and the 1:2 downward expander on.

Note: Expander mode can also be activated by clicking the EXP label text near the knob. When EXP is clicked again, the knob returns to the previous value in gate mode.

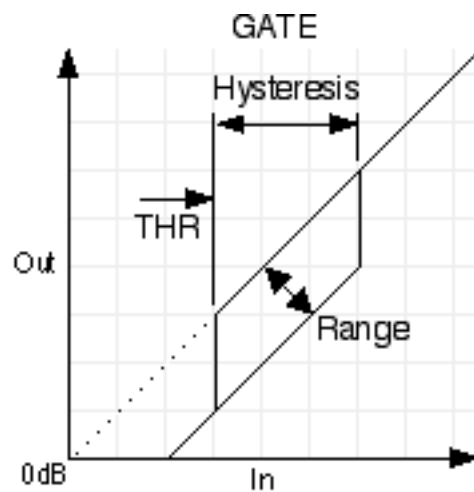


Figure 126. Hysteresis in the Neve 88RS Gate

Gate/Exp Threshold (THR)



Threshold defines the input level at which expansion or gating occurs. Any signals below this level are processed. Signals above the threshold are unaffected.

The available range is -25 dB to $+15$ dB. A range of -25 dB to -65 dB is available when the -40 dB switch is engaged (see “Gate/Exp Threshold -40 dB” on page 382).

In typical use it’s best to set the threshold value to just above the noise floor of the desired signal (so the noise doesn’t pass when the desired signal is not present), but below the desired signal level (so the signal passes when present).

Gate/Exp Threshold -40 dB



The -40 dB button increases the sensitivity of the gate and expander by lowering the range of the available threshold values. When -40 dB mode is active, the threshold range is -25 dB to -65 dB. When -40 is inactive, the threshold range is -25 dB to $+15$ dB.

To activate -40 dB mode, click the “pull -40 ” label text or the red indicator just below the Threshold control. -40 dB mode is active when the red indicator illuminates.

Gate/Exp Range (RGE)



Range (RGE) controls the difference in gain between the gated/expanded and non-gated/expanded signal. Higher values increase the attenuation of signals below the threshold. When set to zero, no gating or expansion occurs. The available range is 0 dB to -60 dB.

Gate/Exp Fast



The Fast mode switch defines the gate/expander attack time, which is the duration between the input signal reaching the threshold and processing being applied. Two times are available: 500 microseconds (when Fast is off) and 50 microseconds (when Fast is active).

To activate Fast mode, click the “pull FAST” label text or the red indicator just below the Range (RGE) control. Fast mode is active when the red indicator illuminates.

Gate/Exp Release (REL)



Release sets the amount of time it takes for processing to engage once the input signal drops below the threshold level. The available range is 10 milliseconds to 3 seconds.

Slower release times can smooth the transition that occurs when the signal dips below the threshold, which is especially useful for material with frequent peaks.

Note: Fast release times are typically only suitable for certain types of percussion and other instruments with very fast decays. Using fast settings on other sources may produce undesirable results.

Gate/Exp Meter



This meter displays the amount of gain attenuation (downward expansion) occurring in the gate/expander module.

Limitier/Compressor

The limiter/compressor module offers a continuously variable ratio between 1:1 (no compression) and infinity:1 (limiting). Signals above the threshold are attenuated according to the ratio (RAT) value. Two attack speeds and continuously variable release times are available, along with a pleasing automatic triple time-constant program-dependent release mode (auto mode has a three-stage release). A makeup gain control and a hard/soft knee setting are also available in the module.

From the AMS-Neve 88RS User Manual: “Anti pumping and breathing circuitry allows the unit to operate on the source musically whilst retaining absolute control over the dynamic range.”

The 88RS compressor has another nifty property: Two thresholds. When the signal falls below the threshold, the compressor is releasing. But, if the signal falls below a second (non-adjustable) threshold, which is roughly 40 dB below the adjustable threshold value, then the release slows down drastically. This acts as a “silence detector.” The concept is that if there is a quiet signal, then the compressor should release to reduce the dynamic range. But if there is a sudden onset of silence, it is likely that, when the signal returns, it will be at about the same level as the region before the silence. So in that case, the compressor doesn't release quickly.

An example: When compressing a snare track with a standard compressor, if the snare hits are sparse, the compressor will release between each hit, so that each hit has a squashed sound. With the 88R compressor, distortion will be reduced, because the compressor will not come out of compression as much between the snare hits. The compressor will still release somewhat during the snare hits, however.

Note: For additional information, see “Compressor Basics” on page 281.

L/C Enable (L/C)



This button activates the limiter/compressor module. The module is active when the button is gray and the green indicator illuminates.

You can use this button to compare the limiter/compressor settings to that of the original signal, or to bypass the module altogether. UAD DSP load is reduced when this module is inactive (unless “UAD-2 DSP LoadLock” on page 74 is enabled).

L/C Gain



The Gain control adjusts the output level of the limiter/compressor module. The available range is 0 dB to 30 dB.

Generally speaking, adjust this makeup gain control after the desired amount of processing is achieved with the Threshold control. The Gain control does not affect the amount of processing.

L/C Hard Knee (HN)



Normally, the limiter and compressor operate with soft knee characteristics. This switch gives the limiter and compressor a hard knee instead.

To activate Hard Knee mode, click the “pull HN” label text or the red indicator just below the Gain control. Hard Knee mode is active when the red indicator illuminates.

L/C Threshold



Threshold defines the input level at which limiting or compression begins. Signals that exceed this level are processed. Signals below the threshold are unaffected.

The available range is +20 dB to –10 dB. A range of 0 dB to –30 dB is available when the –20 dB switch is engaged (see “L/C Threshold –20 dB” on page 385).

Note: As the Threshold control is increased and more processing occurs, output level is typically reduced. Adjust the Gain control to modify the output of the module to compensate if desired.


L/C Threshold -20 dB



The -20 dB switch increases the sensitivity of the limiter/compressor by lowering the range of the available threshold values. When -20 dB mode is active, the threshold range is 0 dB to -30 dB. When -20 is inactive, the threshold range is +20 dB to -10 dB.

To activate -20 dB mode, click the “pull -20” label text or the red indicator just below the Threshold control. -20 dB mode is active when the red indicator illuminates.

L/C Ratio (RAT)

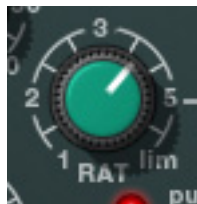

Ratio defines the amount of gain reduction to be processed by the module. For example, a value of 2 (expressed as a 2:1 ratio) reduces the signal by half, with an input signal of 20 dB being reduced to 10 dB.

A value of 1 yields no gain reduction. When the control is at maximum (“lim”), the ratio is effectively infinity to one, yielding the limiting effect. The available range is 1 to infinity.

L/C Fast



The Fast mode switch defines the attack time (the duration between the input signal reaching the threshold and processing being applied) of the limiter and compressor.

Attack time is program dependent. Two ranges are available: 3 milliseconds to 7 milliseconds (Fast off) and 1 millisecond to 7 milliseconds (Fast active).

To activate Fast mode, click the “pull FAST” label text or the red indicator just below the Ratio (RAT) control. Fast mode is active when the red indicator illuminates.

L/C Release




Release sets the amount of time it takes for processing to cease once the input signal drops below the threshold level. The available range is 10 milliseconds to 3 seconds, and automatic.

Automatic triple time-constant program dependent release time is activated by turning the release control fully clockwise (to 3s) or by clicking the “AUTO” label text.

Slower release times can smooth the transition that occurs when the signal dips below the threshold, which is especially useful for material with frequent peaks. However, if the release is too long, compression for sections of audio with loud signals may extend to sections of audio with lower signals.

Note: Fast release times are typically only suitable for certain types of percussion and other instruments with very fast decays. Using fast settings on other sources may produce undesirable results.

L/C Meter

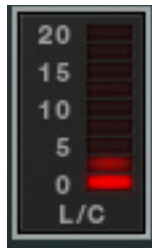

This meter displays the amount of gain attenuation occurring in the limiter/compressor module.

EQ

The UAD Neve 88RS “Formant Spectrum EQ” (AMS-Neve's descriptor) is divided into four frequency bands (see [Figure 127 on page 387](#)): High Frequency (HF), High Midrange Frequency (HMF), Low Midrange Frequency (LMF), and Low Frequency (LF). The high and low bands can be switched into shelving and/or High-Q modes. The two midrange bands are fully parametric. The EQ module can be disabled altogether.

When the high frequency (HF) and/or low frequency (LF) band is in shelf mode, the band gain affects the band frequency. As gain is increased, the shelf frequency more closely matches the knob value. As gain is reduced however, the low shelving frequency moves higher, and the high shelving frequency moves lower.

With the UAD Neve 88RS EQ, the Q value and range is dependent on the gain setting of the band. With any non-zero gain setting, the Q will be calculated in real-time for that band. But if the band gain is zero, Q will always display zero.

“The unique sound of AMS-Neve EQ is the result of years of research and extensive studio experience.”

88RS EQ Band Layout


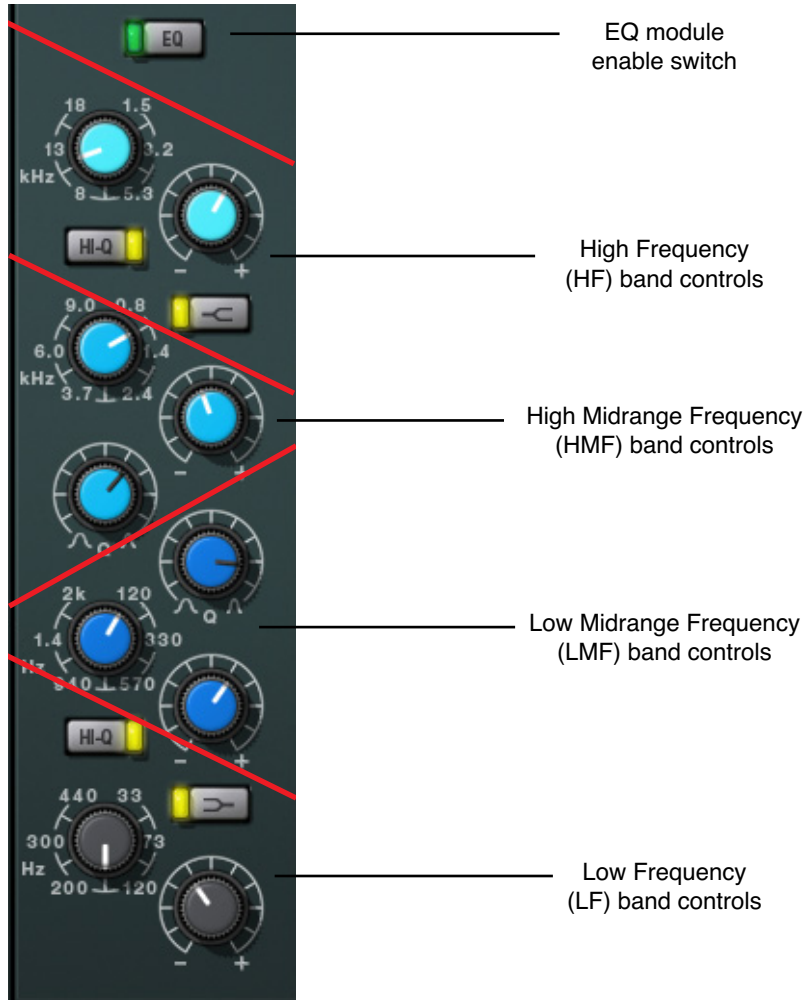


Figure 127. Neve 88RS EQ Controls Layout

EQ Enable (EQ)

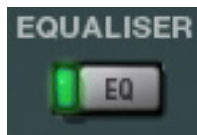

This button activates the equalizer module. The module is active when the button is gray and the green indicator illuminates.

You can use this button to compare the equalized signal to the original signal or bypass the EQ altogether. UAD DSP load is reduced when this module is inactive (unless “UAD-2 DSP LoadLock” on page 74 is enabled).

HF Freq



 
This parameter determines the HF band center frequency to be boosted or attenuated by the band Gain setting. The available range is 1.5 kHz to 18 kHz.

HF Gain



This control determines the amount by which the frequency setting for the HF band is boosted or attenuated. The available range is ± 20 dB.

HF Hi-Q Enable




The filter slope of the HF band can be changed with this control. When Hi-Q is off, the Q is 0.7. When Hi-Q is active, the Q is 2. Higher Q values mean the peak (or trough) has steeper slopes.

Hi-Q is active when the button is gray and the yellow indicator illuminates. Hi-Q is off by default.

Note: Hi-Q has no effect when the band is in shelf mode.

 HF Shelf Enable



The HF band can be switched from bell mode to shelving mode by clicking the shelf enable button. Shelf mode is active when the button is gray and the yellow indicator illuminates. Shelf is off by default.

HMF Freq



This control determines the HMF band center frequency to be boosted or attenuated by the HMF Gain setting. The available range is 800 Hz to 9 kHz.

HMF Gain



This control determines the amount by which the frequency setting for the HMF band is boosted or attenuated. The available range is ± 20 dB.

HMF Q



The Q (bandwidth) control defines the proportion of frequencies surrounding the HMF band center frequency to be affected by the band gain control. The filter slopes get steeper (narrower) as the control is rotated clockwise. The available range is 0.4 to 10.

- LMF Freq** This control determines the LMF band center frequency to be boosted or attenuated by the LMF Gain setting. The available range is 120 Hz to 2 kHz.
- LMF Gain** This control determines the amount by which the frequency setting for the LMF band is boosted or attenuated. The available range is ± 20 dB.
- LMF Q** The Q (bandwidth) control defines the proportion of frequencies surrounding the LMF band center frequency to be affected by the band gain control. The filter slopes get steeper (narrower) as the control is rotated clockwise. The available range is 0.4 to 10.
- LF Freq** This parameter determines the LF band center frequency to be boosted or attenuated by the band Gain setting. The available range is 33 Hz to 440 kHz.
- LF Gain** This control determines the amount by which the frequency setting for the LF band is boosted or attenuated. The available range is ± 20 dB.
- LF Shelf Enable** The LF band can be switched from bell mode to shelving mode by clicking the shelf enable button. Shelf mode is active when the button is gray and the yellow indicator illuminates. Shelf is off by default.
- LF Hi-Q Enable** The filter slope of the LF band can be switched with this control. When Hi-Q is off, the Q is 0.7. When Hi-Q is active, the Q is 2. Higher Q values mean the peak/trough has steeper slopes.
- Hi-Q is active when the button is gray and the yellow indicator illuminates. Hi-Q is off by default.
- Note:** *Hi-Q has no effect when the band is in shelf mode.*

Cut Filters

In addition to the four-band EQ, UAD Neve 88RS offers two cut filters, one each for low and high frequencies. The slope of the cut filters is 12 dB per octave. Each cut filter has two controls: Cut Enable and Frequency. Both controls are detailed below.

Note: *UAD DSP load is not reduced when the cut filters are disabled.*



Cut Enable



This button activates the cut filter. The cut filter is active when the button is gray and the red indicator illuminates.


Cut Frequency



This knob determines the cutoff frequency for the cut filter. The available range is 7.5 kHz to 18 kHz for the high cut filter (lighter blue control), and 31.5 Hz to 315 Hz for the low cut filter (darker blue control).

Global

Sidechain EQ (SC-EQ)

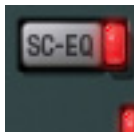

This control enables the UAD Neve 88RS sidechain function. When sidechain is active, signal output from the EQ module is removed from the audio path and is instead routed to control the dynamics module.

Sidechaining is typically used for de-essing and similar frequency-conscious techniques. To listen to the sidechain key, simply disengage SC-EQ to hear the EQ'd signal. The sidechain dynamics/EQ implementations are true stereo when used in a stereo in/stereo out configuration.

Note: The EQ module must be active in conjunction with SC-EQ for the sidechain to function (see “EQ Enable (EQ)” on page 387).

Pre-Dynamics (P-DYN)



This button re-routes the UAD Neve 88RS signal. Normally, the audio signal is routed from the dynamics module into the EQ module (i.e., the EQ is post-dynamics). When P-DYN is enabled, the EQ module precedes the dynamics module.

Pre-dynamics is active when the button is gray and the red indicator illuminates.

Phase




The Phase (Ø) button inverts the polarity of the signal. The signal is inverted when the button is gray and the red indicator illuminates. Leave the button inactive (unlit) for normal phase.

Output



The Output knob controls the signal level that is output from the plug-in. The default value is 0 dB. The available range is ±20 dB.

Power

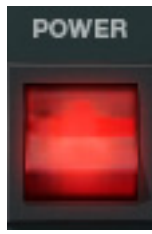

The Power switch determines whether the plug-in is active. This is useful for comparing the processed settings to the original signal or bypassing the plug-in to reduce the UAD DSP load (load is not reduced if “UAD-2 DSP LoadLock” on page 74 is enabled).

Toggle the switch to change the Power state; the switch is illuminated in red when the plug-in is active.

Note: You can click-hold the power switch then drag it like a slider to quickly compare the enabled/disabled state.

WebZine Article

An article about the Neve 88RS console can be found in the “Analog Obsession” article of the Universal Audio May 2007 Webzine (Volume 5, Number 4), published on the internet at:

- <http://www.uaudio.com/webzine/2007/may/index4.html>



The Neve 88RS at Skywalker Sound in California

All visual and aural references to the Neve® 1073, 1081, 31102, 88RS, and 33609 products and all use of AMS-NEVE’s trademarks are being made with written permission from AMS-Neve Limited.

CHAPTER 38

Nigel

Introduction

Nigel offers the latest generation of guitar processing technology integrated into a complete multi-effects plug-in solution. Utilizing Universal Audio's exclusive component modeling technology, along with some very creative digital design, Nigel delivers a complete palette of guitar tones along with most every effect a guitar player might need, all with minimal latency and no load on your host computer's CPU.

Nigel's Preflex™ advanced guitar amp modeling technology goes well beyond the usual pre-amp/amp/cabinet emulators. In addition to delivering a wide range of highly playable classic amp tones from the "Clean & Warm" California tube sound to more metal soaked "British" tones, a bevy of original timbres simply not possible on any other guitar system can be realized. Preflex also offers variable component-level morphing between any two amp presets, truly bringing creative guitar voicing to the next level.

As with the UAD Powered Plug-Ins CS-1 channel strip, the components of Nigel are also supplied as individual plug-ins for unprecedented DSP and creative efficiency. Each Nigel module includes Universal Audio's proven smoothing algorithm for zipper free automation of all parameters.

Nigel may change the way you think about guitar signal processing. Never before have such exciting, realistic, and extreme guitar sounds been heard from a software plug-in. Enjoy!

Nigel Screenshot



Figure 128. The Nigel plug-in window

Nigel Modules

Nigel is comprised of eight modules: Gate/Compressor, Phasor, Mod Filter, Preflex, Cabinet, Trem/Fade, Mod Delay, and Echo. In order to conserve UAD DSP resources when all of the modules are not required simultaneously, some of the Nigel components are also supplied as separate plug-ins.

The following UAD Powered Plug-Ins are part of the complete Nigel package:

- Nigel (all of the modules in one plug-in)
- Preflex (Gate/Compressor + Amp + Cabinet)
- GateComp (Gate/Compressor)
- Phasor
- Mod Filter
- TremFade (Tremolo/Fade)
- TremModEcho (Tremolo/Fade + Mod Delay + Echo)

Preflex Plug-in

Preflex is the heart of Nigel. All of our plug-ins sound amazing but when it comes to guitar, Preflex really shines. This exciting new guitar processing technology offers truly dynamic sonic possibilities. Multiple equalizers, amp types, and cabinets use sophisticated algorithms to provide analog sound quality never before available in a digital environment.

The Color and Bent controls modify frequency and gain characteristics in interesting and musically useful ways, and realtime component-level morphing between any two amp types is possible.



Figure 129. The Preflex plug-in window

Preflex Modules

The Preflex plug-in consists of three sub-modules: gate/compressor, amplifier, and cabinet simulator. Controls for each of these sub-modules is described below.

Gate/Comp Module



Figure 130. The Gate/Comp module

The Gate is the first sub-module in the Preflex signal chain. Its output is passed to the input of the Compressor. The compressor output is then passed to the input of the Amp module within Preflex.

A gate stops the input signal from passing when the signal level drops below a specified threshold value. Gates are generally used to reduce noise levels by eliminating the noise floor when the 'main' signal is not present, but they are also useful for special effects.

The Preflex Gate is optimized for use with guitars. The threshold is dynamic and the gate output has multiple soft knees and dynamic slope, providing a more natural and less choppy sound.

The Compressor reduces the dynamic range of the signal based on the threshold and ratio settings. Guitarists often use compressors to increase perceived sustain on long notes and for special effects. Refer to Chapter 5 for more details on compressor theory and operation. Note that Nigel's compressor sounds different than the CS-1/EX-1 compressor; it sounds "more vintage".

Gate Level Display

This LED-style VU meter displays the level of the signal at the input of Preflex. For minimum distortion and maximum signal-to-noise, the input level should be as high as possible. The signal is at 0 dB just before the red 'LED' is illuminated.

Gate Off/On Button

Enables or disables the Gate module within Preflex. The Gate is engaged when the button indicator is bright red. Use this switch to compare the Gate settings to the original signal or bypass the entire Gate section to reduce UAD DSP load.

Gate Fast Button The Fast control reduces the release time of the gate. It has no effect on the attack time. When enabled, the gate will release quickly. On signals that slowly decay and/or have a wide dynamic range, a smoother (less choppy) sound may be obtained with Fast mode turned off.

Fast mode is engaged when the button indicator is bright red. The time values are 50ms when engaged and 170ms when off.

Gate Threshold Knob Sets the threshold level for the gate. Any signals that exceed this level are passed into the module. Signals below the threshold level are increasingly attenuated. A Threshold of -96 dB means the gate is always open. The range is 0 dB to -96 dB.

In typical use it's best to set the gate threshold value to just above the noise floor of the desired signal (so the noise doesn't pass when you are not playing), but below the desired signal input level (so the signal passes as you play).

Boost Button The Boost button ([Figure 129 on page 394](#)) increases the overall signal level within Preflex by 20 dB. It is completely independent of the Gate and Compressor On/Off controls and will provide a signal boost even with the Gate and Compressor are off.

***Note:** The Boost button is only available within Nigel and Preflex. The individual Gate/Comp plug-in does not contain the Boost button because Boost only affects the Amp within Preflex.*

Compressor Threshold Knob Sets the threshold level for the compression. Any signals that exceed this level are compressed. Signals below the level are unaffected. A Threshold of 0 dB yields no compression. The range is 0 dB to -60 dB.

As the Threshold control is increased and more compression occurs, output level is typically reduced. However, the compressor provides an auto-makeup gain function to automatically compensate for reduced levels. Adjust the Output level control if more gain is desired.

Compressor Ratio Knob Determines the amount of gain reduction used by the compressor. For example, a value of 2 (expressed as a 2:1 ratio) reduces the signal by half, with an input signal of 20 dB being reduced to 10 dB. A value of 1 yields no compression. Values beyond 10 yield a limiting effect. The range is 1 to 60.

**Compressor
Attack Menu**

Sets the amount of time that must elapse, once the input signal reaches the Threshold level, before compression will occur. The faster the Attack, the more rapidly compression is applied to signals above the Threshold.

Three Attack values are available: Slow (50ms), Medium (8ms), and Fast (400 μ s).

**Compressor
Release Menu**

Sets the amount of time it takes for compression to cease once the input signal drops below the Threshold level. Slower release times can smooth the transition that occurs when the signal dips below the threshold, especially useful for material with frequent peaks. However, if you set too large of a Release time, compression for sections of audio with loud signals may extend to lengthy sections of audio with lower signals.

Three Release values are available: Slow (500ms), Medium (120ms), and Fast (40ms).

**Compressor
On/Off Button**

Enables or disables the Compressor module within Preflex. The Compressor is engaged when the button indicator is bright red. You can use this switch to compare the compressor settings to the original signal or bypass the entire compressor section to reduce UAD DSP load.

Amp Module

The Preflex Amp is where Nigel's real magic happens. Behind its deceptively simple user interface is "rocket science" in action. The input to the Amp module is received from the Compressor output. The Amp output is passed to the input of the Cabinet module.



Figure 131. The Amp module within Preflex

Amp Type and Variable Knob Functions

The function of the amp knobs vary depending on the amp type. When an amp type is selected, Preflex is internally reconfigured. Although the amp types are essentially factory programmed presets, they are not simply a set of knob values. As different amp types are selected, the actual function and range of the amp knobs assume new characteristics.

Color and Bent: Supercontrol

The Color and Bent knobs have especially powerful functionality. Each modifies several amplifier characteristics simultaneously, so they behave as "super controls" that can have a dramatic effect on your sound with just one knob turn.

These are generally the main controls you will reach for when you want to make major changes to the overall dynamic response, timbre, or distortion characteristics of Preflex.

Knob Values Are Offsets

Knob settings do not change to new values when an amp type is selected. This is because knob values are not absolute. Instead, they are an offset to the factory programmed amp type value. For example, if Post-Lo EQ displays a value of 3.0, then 3 dB is added to the amp type internal (preset) value. Of course, knob settings do change when user settings are loaded.

Amp Types and Morph

The Amp submodule within Preflex is actually comprised of two independent amplifier processors, Amp-A and Amp-B. The amp types to be used are selected with the Amp Type pull-down menus. The two amp types share the amp controls.

These two amp types can then be 'morphed' to smoothly transform one amp type into another, creating new sounds never before possible. Morph accomplishes this task by interpolating between amplifier component values of the A and B Amp types as the slider is moved. Morph is NOT a blend or crossfade control.

Morph allows you to continuously shift between two completely different amp sounds in realtime with full automation. And because the Color and Bent knobs also control multiple parameters simultaneously (which is essentially a morph), amazing new dynamically shifting timbres can be realized.

Amp Controls

Amp EQ Groups

Preflex has two groups of Lo, Mid, and Hi equalizer controls. Pre-EQ is before the amplifier, and Post-EQ is after the amplifier. Both sets of EQ are available simultaneously.

The actual frequency and bandwidth of a particular EQ knob depends on the amp type setting. The EQ knob values are offsets relative to the preset amp type value; they do not display absolute values.

Amp Pre-EQ Knobs

The Pre-EQ group modifies the tone of the signal before it passes into the Amp. Note that the EQ knob values are offsets relative to the preset amp type value; they do not display absolute values.

Pre-EQ Lo Knob

Modifies the low frequency response of the signal before the Amp. This control is a set to a fixed frequency, but the frequency changes with the amp type.

Pre-EQ Mid Knob

Modifies the middle frequency response of the signal before the Amp. The frequency that this knob controls is determined by the Color knob (see Color knob description for more details).

Pre-EQ Hi Knob

Modifies the high frequency response of the signal before the Amp. This knob behaves differently than the Lo and Mid knob. Rather than boosting or cutting the gain of a certain frequency, the Hi knob increases the amplifier's sensitivity to high frequencies. The Hi control is VERY interactive with the Bent control.

Amp Post-EQ Knobs

The Post-EQ group modifies the tone of the signal after it passes through the Amp but before it goes to the Cabinet. Note that the EQ knob values are offsets relative to the preset amp type value; they do not display absolute values.

Post-EQ LO Knob

Modifies the low frequency response of the signal after the Amp. This control is a set to a fixed frequency, but the frequency changes with the amp type.

Post-EQ Mid Knob

Modifies the middle frequencies response of the signal after the Amp. The frequency that this knob controls is determined by the Color knob (see Color knob description for more details).

Post-EQ Hi Knob

Modifies the high frequency response of the signal after the Amp. This control is a set to a fixed frequency, but the frequency changes with the amp type.

Amp Color Knob

The Color knob is like a super tone control. It controls several amplifier characteristics simultaneously, and its behavior is determined by the selected amp type.

Amp Bent Knob

The Bent knob is like a super gain control. It controls several amplifier characteristics simultaneously, and its behavior is determined by the selected amp type.

Amp Output Knob

Adjusts the signal output level of Preflex. This may be necessary if the signal is dramatically boosted or reduced by the Gate/Compressor or Amp settings.

Bright Button

Increases the brightness of the Amp model. Bright is on when the button glows bright red.

Amp On/Off Button

Enables or disables the Amp module within Preflex. The Amp is engaged when the button indicator is bright red. You can use this switch to compare the Amp settings to the original signal or bypass the entire Amp section to reduce UAD DSP load.

Amp Type Menus

The Amp Type pull down menus establish the overall sound and response of Preflex and also determine the function and ranges of the Amp knobs. Two amp types (A and B) can be active simultaneously by positioning the Morph control between them.

***Note:** For the following descriptions of the Amp models and other references that you may find throughout this manual, please be aware that Fender, Marshall, Mesa, Matchless, Aiken, and any other manufacturer, model name, description, and designations are all trademarks of their respective owners, which are in no way associated or affiliated with Universal Audio. These trademarks and names are used solely for the purpose of describing certain timbres produced using Universal Audio's exclusive modeling technology.*

Amp Type List and Descriptions

Table 26. Amp Type List and Descriptions

AMP TYPE	DESCRIPTION
Rectified	Modern super-high gain amplifiers
Marsha	Emulations from range of new and old Marshall amps
Bassmon	Fender Bassman and similar amplifiers
Boutique	Matchless, Aiken, and other high-end tube amplifiers
Custom Blues	Designed to achieve those hard-to-nail blues tones. Lower gain.
Supa Clean	Direct input into a channel strip
Super Sat	Extremely high gain amp, breaks up easily in low end
Gemini	Fender Twin and similar clean tube amplifiers
Big Beaver	Distortion pedal stomp-box emulations
Super Custom	Higher-gain and more power than Custom Blues
Big Bottom	Optimized for bass guitar
Super Tweed	Small Fender Champ and Princeton when cranked up loud

Amp-A Type Menu

Determines the amp type for the “A” section of the Amp. Selecting an Amp Type reconfigures the amplifier characteristics and the function of the other Amp parameters.

Amp-B Type Menu

Determines the amp type for the “B” section of the Amp. Selecting an Amp Type reconfigures the amplifier characteristics and the function of the other Amp parameters.

Amp Morph Slider

The Morph control is used to smoothly transform one amp type into another, creating new sounds never before possible. Morph accomplishes this task by interpolating between amplifier component values of the A and B Amp types as the slider is moved. Morph is NOT a blend or crossfade control.

Morph allows you to continuously shift between two completely different amp sounds in realtime with full automation. And because the Color and Bent knobs also control multiple parameters simultaneously (which is essentially a morph), amazing new dynamically shifting timbres can be realized.

Cabinet Module



Figure 132. The Cabinet module within Preflex

The Cabinet module reproduces the sonic character of a guitar speaker and its enclosure as captured by a microphone. The Cabinet receives its input signal from the Preflex Amp output. The Cabinet output is the final Preflex signal output.

The Preflex Cabinets are emulations of actual guitar speaker enclosures that were captured by a Shure SM57 microphone then meticulously analyzed (as usual) by our team of rocket scientists. A wide variety of cabinets are included, using several speaker types, configurations, and microphone placement techniques.

Cabinet Type Menu

Each cabinet type has a unique sound and frequency response characteristic. Select the desired speaker from the Cabinet Type pull-down menu. Abbreviations used in the Cabinet Types list for the speaker, enclosure, and mic techniques are detailed in [Table 27](#). The Cabinet Types list itself is in [Table 28](#).

Note: For the following descriptions of the Cabinet models and other references that you may find throughout this manual, please be aware that Celestion, Greenback, Oxford Blue, Marshall, Fender, Line 6, Pod, SansAmp, Shure, ADA, Utah and any other manufacturer, model name, description, and designations are all trademarks of their respective owners, which are in no way associated or affiliated with Universal Audio. These trademarks and names are used solely for the purpose of describing certain timbres produced using Universal Audio’s exclusive modeling technology.

Cabinet Abbreviations

Table 27. Cabinet Abbreviation Descriptions

ABBREVIATION	DESCRIPTION
1-12, 2-12, 4-12	One, two, or four twelve-inch speaker(s)
1-10, 2-10, 4-10	One, two, or four ten-inch speaker(s)
OB	Open Back cabinet
SC	Sealed Cabinet (closed back cabinet)
On Axis	Mic close and perpendicular (at 90 degrees), off-center
Off Axis	Mic close and angled, off-center
Edge	Mic close and angled at edge of speaker
Far	Mic approximately 2 feet from speaker
1-12 OB	90-watt Celestion (early 1990’s)
2-12 OB	Left speaker: Oxford Blue, Right: Utah (both 60-watt, early 1960’s)
2-12 SC	90-watt Celestions (early 1990’s)
4-12 SC	25-watt Celestion Greenbacks (circa 1967)
British	Emulation of Marshall effects box cabinet
NoCA FXB	Emulation of ADA effects box cabinet
LA FXB	Emulation of Line 6 Pod effects box cabinet
NY FXB	Emulation of SansAmp effects box cabinet

Cabinet Type List

Table 28. List of Cabinet Types

1-12 OB Off Axis	4-12 SC Edge
2-12 OB Off Axis	2-12 SC Far
1-12 OB On Axis	4-12 SC Far
2-12 OB On Axis	4-12 British
1-12 OB Edge	1-10 NoCA FXB
2-12 OB Edge	2-10 NoCA FXB
1-12 OB Far	4-10 NoCA FXB
2-12 OB Far	1-12 LA FXB
2-12 SC Off Axis	2-12 LA FXB
4-12 SC Off Axis	4-10 LA FXB
2-12 SC On Axis	1-12 NY FXB
4-12 SC On Axis	

Cabinet On/Off Button

Enables or disables the Cabinet module within Preflex. The Cabinet is engaged when the button indicator is bright red. You can use this switch to compare the Cabinet settings to that of the original signal or bypass the entire Cabinet section to reduce UAD DSP load.

Output Level Meter

This LED-style VU meter displays the level of the signal at the output of the Cabinet. Just before the red 'LED' is illuminated, the signal is at 0 dB. In order to avoid overloading your host application signal path, adjust the Preflex output level so that the signal is at or below 0 dB.

Phasor Module

The Phasor is a frequency-variable comb-filter with low frequency oscillator modulation. It is capable of producing dramatic sweeping and swooshing effects, including modern and classic sounds such as those produced by the Mutron Bi-Phase, Small Stone and MXR series of phasors.



Figure 133. The Phasor plug-in window

Sync Button

This button puts the plug-in into Tempo Sync mode. See [Chapter 8, "Tempo Sync"](#) for more information.

Rate Knob

Sets the LFO modulation (sweep) rate of the Phasor. The available range is from 0.03 Hz to 10 Hz.

Sweep Knobs

The Sweep knobs determine the frequency range that will be affected by the Phasor. The low and high frequency values can be independently adjusted. This flexible arrangement allows the Phasor to affect a narrow or broad frequency range, and also enables you to tune the frequency response characteristic to match the signal if desired.

Sweep Lo Knob

Sets the lowest frequency of the Phasor. The available range is from 50 Hz to 6000 Hz.

Because the Sweep Lo frequency cannot be set higher than the Sweep Hi frequency, if the Lo value is increased beyond the Hi value the Hi value will increase to match the Lo value.

Sweep Hi Knob

Sets the highest frequency of the Phasor. The available range is from 50 Hz to 6000 Hz.

Because the Sweep Hi frequency cannot be set lower than the Sweep Lo frequency, if the Hi value is decreased below the Lo value the Lo value will decrease to match the Hi value.

Recirculation (Recir) Knob

Sets the intensity of the filtering effect. Higher values increase the intensity.

Recirculation allows both positive and negative values. The polarity refers to the phase of the feedback as compared to the original signal. If Recirculation displays a positive value, the feedback will be in phase with the source. If it displays a negative value, then the feedback will be out of phase.

Mix Knob

This control determines the balance between the processed and the original signal. Values greater than 50% emphasize the processed signal, and values less than 50% emphasize the original signal. A value of 100% delivers just the processed (wet) signal, and a value of 0% delivers just the source (dry) signal.

Mix allows both positive and negative values. The polarity refers to the phase of the processed signal as compared to the original signal. If a positive value is displayed, then the processed signal will be in phase with the source. With a negative value, the processed signal is flipped 180 degrees out of phase with the source signal.

LFO Type Menu

Determines the LFO (low frequency oscillator) waveshape and phase used to modulate the signal. The waveshape can be set to triangle or sine, each with varying duty cycles and phases.

Table 29. Phasor LFO Types and Descriptions

Sin	Pure sine wave.
Sin 2	Modified sine wave that stays high longer.
Sin 3	Modified sine wave that stays low longer.
Square	Square wave.
Square 2	Modified square wave that stays high longer.
Square 3	Modified square wave that stays low longer.
Sin 180	Sine wave 180 degrees out of phase.
Square 180	Square wave 180 degrees out of phase.

Order Menu

Determines the filter order for the Phasor filter banks. This setting affects the tonal complexity of the Phasor. Higher Order filters are more detailed than lower Order filters. Ten filter Order values are available, 3 through 12.

Phasor On/Off Button

Enables or disables the Phasor module. You can use this switch to compare the Phasor settings to that of the original signal or bypass the Phasor to reduce UAD DSP load.

Mod Filter Module

The Mod Filter is an advanced filter plug-in that is capable of fixed-wah, auto-wah, envelope follower, sample/hold-driven filter, and other modulated filter effects. It has been modeled after the Mutron III and other popular filters. The filter cutoff frequency can be controlled by the signal level at the input to the module or a low frequency oscillator (LFO). This realtime dynamic response is what gives the Mod Filter its unique sound.



Figure 134. The Mod Filter plug-in window
The label and function of the first knob depends upon the Mod Type menu selection.

Sync Button

This button puts the plug-in into Tempo Sync mode. See [Chapter 8, "Tempo Sync"](#) for more information.

Sens/Rate/ Wah Knob

The function and label of the first knob in the Mod Filter is determined by the Mod Type setting (see [Figure 134 on page 407](#)). When the Mod Type is an envelope, the label changes to “Sens” and determines the gain sensitivity of the Mod Filter. When the Mod Type is an LFO, the label changes to “Rate” and determines the rate of the LFO. When the Mod Type is set to Wah, the label changes to “Wah” and adjusts the wah pedal position.

Sens

When the knob is controlling Sensitivity, a higher setting will have a greater (more sensitive) response to variations in dynamic level.

Rate

When the knob is controlling Rate, a higher setting will increase the rate of filter cutoff frequency modulation by the LFO. The range is from 0 Hz to 8 Hz.

Wah

When the knob is controlling Wah, a higher setting will have a brighter sound, just like when a real wah pedal is pressed forward.

On a real wah pedal, the wah filter is alternately enabled and disabled by rocking the pedal to the maximum forward position. Similarly, when the Wah knob is moved to the maximum position the wah effect is alternately enabled/disabled until the knob (or an external controller mapped to the knob) is moved to maximum again. This emulates real wah pedal behavior when an external MIDI control pedal is used in realtime. (Hint: add a rubber stopper to the front of your MIDI pedal to fully emulate a real wah pedal.)

Sweep Knobs

The Sweep knobs determine the frequency range of the Mod Filter. The low and high frequency values can be independently adjusted. This flexible arrangement allows the Mod Filter to affect a narrow or broad frequency range, and also enables you to tune the frequency response characteristic to match the signal if desired.

Sweep Lo Knob

Sets the lowest frequency to be affected by the Mod Filter. The available range is from 50 Hz to 4000 Hz.

Because the Sweep Lo frequency cannot be set higher than the Sweep Hi frequency, if the Lo value is increased beyond the Hi value the Hi value will increase to match the Lo value.

Sweep Hi Knob

Sets the highest frequency to be affected by the Mod Filter. The available range is from 50 Hz to 4000 Hz.

Because the Sweep Hi frequency cannot be set lower than the Sweep Lo frequency, if the Hi value is decreased below the Lo value the Lo value will decrease to match the Hi value.

Resonance (Res) Knob

Sets the amount of filter intensity for the Mod Filter. A higher value will deliver a sharper, more pronounced effect.

Output Knob

Adjusts the signal output level of the Mod Filter. This may be necessary if the signal is dramatically boosted or reduced by the other settings within the module. The range is from -20 dB to 40 dB.

Mod Type Menu

Determines the source of the filter modulation. There are three main Mod Types: LFO, Envelope, and Wah Pedal. Each Mod Type is described below.

LFO Mode

Three LFO modes are available: Sine, Square, and Random. The only difference between the three LFO modes is the waveshape of the Low Frequency Oscillator. Random LFO is chromatically tuned for maximum musicality.

When LFO mode is engaged, the filter cutoff frequency does not respond dynamically to changes in input signal level. Instead, the filter cutoff frequency is varied according to the Rate knob setting.

Envelope Mode

When Envelope mode is engaged, the filter cutoff frequency responds dynamically in realtime to variations in the input signal level. The amount of dynamic response is determined by the Sensitivity (Sens) knob.

In Env Up mode, a higher signal level sets the filter cutoff to a higher value. In Env Down mode, the envelope is inverted, and a higher signal level sets the filter cutoff to a lower value.

Wah Mode

When the Wah mode is engaged, the filter cutoff frequency is varied according to the Wah knob setting.

Wah Pedal Mode

Similar to Wah mode, in Wah Pedal mode the filter cutoff frequency is varied according to the Wah knob setting. However, when the knob reaches its maximum value the effect is bypassed until the knob reaches its maximum value again at which time the effect is re-engaged.

Wah Pedal mode is ideally suited to emulating a real Wah pedal by using a MIDI foot pedal controller.

Mod Menu Table

Table 30. Mod Filter: Mod Types and Descriptions

Sin	LFO mode with Sine waveshape.
Square	LFO mode with Square waveshape.
Random	LFO mode with Random waveshape.
Env Up	Normal Envelope mode. Filter cutoff frequency is dynamically increased as signal level increases.
Env Down	Inverted Envelope mode. Filter cutoff frequency is dynamically decreased as signal level increases.
Wah	Fixed Wah mode.
Wah Pedal	Fixed Wah mode with latched bypass mode.

Filter Type Menu

Determines the type of filter to be used by the Mod Filter. This parameter will affect the overall sonic character of the plug-in. Four filter types are available.

Table 31. Mod Filter: Filter Types and Descriptions

Lowpass	Frequencies below the filter cutoff frequency are allowed to pass through the filter.
Bandpass	Frequencies around the filter cutoff frequency are allowed to pass through the filter. Lowest and highest frequencies are not passed.
Highpass	Frequencies above the filter cutoff frequency are allowed to pass through the filter.
Wah	Traditional wah pedal setting.

Mod Filter On/Off Button

Enables or disables the Mod Filter. You can use this switch to compare the Mod Filter settings to that of the original signal or bypass the Mod Filter to reduce the UAD DSP load.

TremModEcho plug-in

The TremModEcho is loaded as one plug-in but consists of three modules: Trem/Fade, Mod Delay, and Echo (Figure 135). Each of the module controls is described in the following pages.



Figure 135. The TremModEcho plug-in contains three modules

Trem/Fade Module



Figure 136. The Trem/Fade module

Trem/Fade is a sophisticated envelope-controlled modulation processor that can produce classic tremolo, fade, and other gain modulation effects. Tremolo is achieved by modulating the amplitude (volume) of a signal with a low frequency oscillator (LFO). Trem/Fade includes some new modes such as Shimmer and VariTrem that enable the production of new volume effects.

Sync Button

This button puts the plug-in into Tempo Sync mode. See [Chapter 8, “Tempo Sync”](#) for more information.

Threshold (Thresh) Knob

Sets the threshold level for the Trem/Fade effect. When the signal level exceeds the threshold, the Trem/Fade effect is triggered. The range is 0 dB to -80 dB.

Note: When Trem/Fade is used within the complete Nigel plug-in, the threshold detector is connected to the output of the Gate module. This allows for optimal level tracking independent of the amplifier and other effect settings.

Once a Trem/Fade effect is instigated by crossing the threshold level, the effect will continue until the signal drops below the Threshold level. For example, if a signal is faded in, the signal won't fade in again until its level drops below the Threshold value.

Trigger LED

The Trigger LED indicates when the Trem/Fade input signal is above the Threshold. It provides visual feedback for optimizing the Threshold setting. The Trigger LED glows bright red when the signal is above the Threshold value.

- Fade In Knob** Determines the signal fade in time. Fade In is typically used to create automatic volume swells. The range is from None to 4000 milliseconds. When set to None, there is no fade in and only the Tremolo effect is active.
- Onset Knob** Determines the time for the Tremolo effect to reach the specified depth. Onset behaves as an intensity ramp for the Tremolo effect. The range is from None to 4000 milliseconds. When set to None, the Tremolo effect begins immediately (when the Threshold value is exceeded).
- Rate knob** Sets the LFO rate for the Tremolo. The range is from 0 Hz to 16 Hz.
- Depth Knob** Sets the maximum Tremolo depth. The range is from zero to 100%.
- LFO Type Menu** Determines the LFO waveshape used to modulate the signal. The waveshape can be set to sine or square.
- Mode Menu** The Mode menu reconfigures the behavior of the Trem/Fade algorithms and/or the preset parameter settings. Each of the Modes is described below.

Fade Mode

In Fade mode, when the input signal level crosses the threshold value, the audio will fade in (ramp up) according to the time set with the Fade In knob. The Onset, Rate, and Depth controls are also active in Fade mode.

Two Fade modes are available. Each has a different Fade In curve and therefore a different volume envelope shape.

***Note:** If the Threshold value is set too high for the source signal in Fade mode, the effect will not be triggered and the audio will never fade in.*

Shimmer Mode

In Shimmer mode, when the input signal level crosses the threshold value, the Tremolo effect will gradually increase according to the time set with the Onset knob. The Fade In knob is also active in Shimmer mode.

Three Shimmer modes are available. Each has a different Onset curve.

***Note:** If the Depth value is zero and/or the Threshold value is set too high in Shimmer mode, you will not hear the Shimmer effect.*

Tremolo Mode

When Tremolo mode is selected, the Fade In and Onset controls are set to zero and the Trem/Fade module behaves as a 'normal' tremolo effect. However, the Fade In and Onset controls are still active and can be adjusted as desired.

Two Tremolo modes are available. Each has different settings but the controls behave exactly the same in both modes.

***Note:** If the Depth value is zero and/or the Threshold value is set too high in Tremolo mode, you will not hear the tremolo effect.*

VariTrem Mode

In VariTrem mode, the tremolo rate is automatically increased or decreased in realtime. The rate is ramped up or down according to the value of the Onset control. For example, if VariTrem Up is selected and Onset has a value of 2 seconds, the Tremolo rate will gradually increase for 2 seconds.

Two VariTrem modes are available. Vari T Up gradually increases the Tremolo rate, and Vari T Dn gradually decreases the Tremolo rate.

***Note:** If the Depth value is zero and/or the Threshold value is set too high in VariTrem mode, you will not hear the VariTrem effect.*

Trem/Fade On/Off Button

Enables or disables Trem/Fade. You can use this switch to compare the Trem/Fade settings to that of the original signal or to disable Trem/Fade amplitude processing.

UAD DSP load is not reduced when Trem/Fade is disabled with the On/Off button. The Trem/Fade amplitude processor remains active even when its audio is disabled so it can be used as a modulation source when using "Trem" as the LFO Type in the Mod Delay module.

Mod Delay Module



Figure 137. The Mod Delay module
The label and function of the second two knobs depend upon the Mode menu selection.

The Mod Delay is a short digital delay line that includes a low frequency oscillator. The Mod Delay produces lush chorus, flange, and vibrato effects.

Because the Trem/Fade amplitude processor can be used to control the Mod Delay, sophisticated envelope-controlled flange, chorus, and vibrato modulations can be achieved.

Sync Button

This button puts the plug-in into Tempo Sync mode. See [Chapter 8, "Tempo Sync"](#) for more information.

Rate Knob

Sets the LFO modulation rate of the delayed signal. The available range is 0.01Hz to 25 Hz.

If the LFO Type menu is set to one of the Trem modes, the Rate is linked to the Trem/Fade module rate. In this scenario the Rate knob value changes to "Trem", adjusting the Mod Delay Rate will have no effect, and the modulation rate is determined by the Trem/Fade module settings (even if the Trem/Fade module is disabled with the On/Off button).

Depth & Time/ Sweep Knobs

The function and label of the second and third controls in the Mod Delay module are determined by the Mode pull-down menu. When the Mod Delay Mode is set to Flanger, the second and third knobs are labeled Sweep Lo and Sweep Hi respectively. When the Mod Delay Mode is set to Chorus or Vibrato, the second and third knobs are labeled Depth and Time respectively.

Sweep Knobs

The Sweep knobs determine the frequency range that will be affected by the Mod Delay. The low and high frequency values can be independently adjusted. This flexible arrangement allows the Mod Delay to affect a narrow or broad frequency range, and also enables you to tune the frequency response characteristic to match the signal if desired.

***Note:** The Sweep knobs are only visible in Flanger mode.*

Sweep Lo Knob

Sets the lowest frequency to be affected by the Mod Delay. The available range is from 100 Hz to 6000 Hz.

Because the Sweep Lo frequency cannot be set higher than the Sweep Hi frequency, if the Lo value is increased beyond the Hi value the Hi value will increase to match the Lo value.

Sweep Hi Knob

Sets the highest frequency to be affected by the Mod Delay. The available range is from 100 Hz to 6000 Hz.

Because the Sweep Hi frequency cannot be set lower than the Sweep Lo frequency, if the Hi value is decreased below the Lo value the Lo value will decrease to match the Hi value.

Depth Knob

Sets the amount of modulation to be applied to the signal. The maximum available range is 0 to 300 cents. However, the available range is dependent on the Rate setting. Less Depth range is available at slower Rate settings.

***Note:** The Depth knob is only visible in Chorus and Vibrato modes.*

- Time Knob** Sets the modulation delay time. The available range is from 0 to 125 milliseconds. In Vibrato mode, this setting will appear to have no effect if the Recirculation value is zero because the signal is “100% wet” in Vibrato mode.
- Note: The Time knob is only visible in Chorus and Vibrato modes.*
- Recirculation (Recir) Knob** Sets the amount of processed signal fed back into its input. Higher values increase the intensity of the processed signal.
- Recirculation allows both positive and negative values. The polarity refers to the phase of the delays as compared to the original signal. If Recirculation displays a positive value, all the delays will be in phase with the source. If it displays a negative value, then the phase of the delays flips back and forth between in phase and out of phase.
- In the flanger mode, Recirculation has the potential to make some very interesting sounds. Try turning RECIR fully clockwise or counter-clockwise, and set the delay to very short values.
- Damping Knob** This low pass filter reduces the amount of high frequencies in the signal. Turn down this control to reduce the brightness of the sound. Higher values yield a brighter signal. Damping also mimics air absorption, or high frequency rolloff inherent in tape-based delay systems.
- LFO Type Menu** Determines the LFO (low frequency oscillator) source, waveshape, and phase used to modulate the Mod Delay signal.
- When the LFO Type is set to one of the Trem modes, the Rate is linked to the Trem/Fade module rate. In this scenario, the Rate knob value changes to “Trem” and adjusting Rate will have no effect.
- By using the Trem/Fade amplitude processor as the LFO source of the Mod Delay module, extraordinary new timbres can be realized.

Mod Delay LFO Type Table

Table 32. Mod Delay LFO Types and Descriptions

Sin 0	In-phase sine wave
Sin 90	Sine wave 90 degrees out of phase
Sin 180	Sine wave 180 degrees out of phase
Tri 0	In-phase triangle wave
Tri 90	Sine wave 90 degrees out of phase
Tri 180	Sine wave 180 degrees out of phase
Trem Up	The Trem/Fade module is used as the LFO source. On a stereo signal, both channels ascend in pitch in synchronization with the Trem/Fade amplitude ramp.
Trem Down	The Trem/Fade module is used as the LFO source. On a stereo signal, both channels descend in pitch in synchronization with the Trem/Fade amplitude ramp.
Trem U/D	The Trem/Fade module is used as the LFO source. On a stereo signal, the left channel ascends in pitch as the right channel descends in synchronization with the Trem/Fade amplitude ramp.
Trem D/U	The Trem/Fade module is used as the LFO source. On a stereo signal, the right channel descends in pitch as the left channel ascends in pitch in synchronization with the Trem/Fade amplitude ramp.

Mode Menu

The Mode menu reconfigures the settings of the Mod Delay controls. Additionally, the function and label of the second and third controls in the Mod Delay module are determined by the Mode menu.

When the Mod Delay Mode is set to Flanger, the second and third knobs are labeled Sweep Lo and Sweep Hi respectively. When the Mod Delay Mode is set to Chorus or Vibrato, the second and third knobs are labeled Depth and Time respectively.

In all modes except Flanger, the function and sound of the controls are identical; only the settings are different. Similarly, in Flanger 1 and 2 modes, the function and sound of the controls are identical; only the settings are different.

Table 33. Mod Delay Mode Menu List

Chorus 1	Flanger 1	Vibrato 2
Chorus 2	Flanger 2	Comb Filter 1
Quad Chorus	Vibrato 1	Comb Filter 2

Mod Delay On/Off Button

Enables or disables the Mod Delay. You can use this switch to compare the Mod Delay settings to that of the original signal or bypass the Mod Delay to reduce UAD DSP load.

Echo Module



Figure 138. The Echo module

The Echo module is a delay line used primarily for longer echo effects. When very short delay times or modulation are desired, use the Mod Delay instead. When VERY long delay times are desired, use the UAD DM-L plug-in which has up to 2400 milliseconds available delay per stereo channel.

Sync Button

This button puts the plug-in into Tempo Sync mode. See [“Tempo Sync” on page 96](#) for more information.

Input Knob

The Input knob attenuates the signal coming into the Echo module. The signal already passed into the Echo module is still processed even when the Input knob is at its minimum value (maximum attenuation).

This functionality enables the Echo to continue to process its signal even when no new signal is being input. Therefore, volume swells with Echo can be automated and high Recirculation effects such as sampling and “infinite repeat” techniques can be realized.

Time Knob

Sets the delay time between the original signal and the delayed signal. The maximum available delay time is 1200 milliseconds.

Recirculation (Recir) Knob

Sets the amount of processed signal fed back into its input. Higher values increase the number of delays and intensity of the processed signal.

Recirculation allows both positive and negative values. The polarity refers to the phase of the delays as compared to the original signal. If Recirculation displays a positive value, all the delays will be in phase with the source. If it displays a negative value, then the phase of the delays flips back and forth between in phase and out of phase.

Damping Knob

This low pass filter reduces the amount of high frequencies in the processed signal. Higher values yield a brighter signal. Turn down this control for a darker sound. Damping also mimics air absorption, or high frequency rolloff inherent in tape-based delay systems.

Mix Knob

This control determines the balance between the delayed and original signal. Values greater than 50% emphasize the wet signal, and values less than 50% emphasize the dry signal. A value of 100% delivers just the processed (wet) signal, and a value of 0% delivers just the source (dry) signal. A value of 50% delivers equal signals.

Mix allows both positive and negative values. The polarity refers to the phase of the delays as compared to the original signal. If a positive value is displayed, then all the delays will be in phase with the source. With a negative value, the delayed signal is flipped 180 degrees out of phase with the source.

Mode Menu

The Mode menu determines how the Echoes are processed. The Echo Mode differences can only be heard when the module is applied to a signal on an insert, buss, group, or return that has a stereo output path.

Table 34. Echo Mode Menu List

Echo 1	Ping Pong 2
Echo 2	Clang 1
Echo 3	Clang 2
Ping Pong 1	Slapback

Echo On/Off Button

Enables or disables Echo. You can use this switch to compare Echo settings to that of the original signal or bypass Echo to reduce UAD DSP load.

Precision Buss Compressor

Overview

The Precision Buss Compressor is a dual-VCA-type dynamic processor that yields modern, transparent gain reduction characteristics. It is specifically designed to “glue” mix elements together for that cohesive and polished sound typical of master section console compressors. A flexible and intuitive tool, the Precision Buss Compressor is intended primarily for controlling the final output of your mix, but can be usefully applied to a variety of sources from drum busses or overheads to vocal groups, or even as a channel compressor on individual track inserts.

The Precision Buss Compressor’s control set features Threshold, Ratio, Attack and Release, with all parameters specifically tailored to buss compressor usage. The Release control includes a multi-stage Auto Release also designed for a wide variety of program material. Input and Output Gain control is offered with metering for input, output and gain reduction. A high pass Filter is offered for the internal control signal sidechain to reduce the sensitivity of the compression to lower frequencies while retaining them in the output signal. An automatic Fade feature is included, which allows the user to set a custom fade-out or fade-in of the mix between 1 and 60 seconds long. Rounding out the feature set is a Mix control that allows the user to achieve “parallel” style dynamics control, without the need for a second buss or channel.

Precision Buss Compressor Screenshot



Figure 139. The Precision Buss Compressor plug-in window

Precision Buss Compressor Controls

Control knobs for the Precision Buss Compressor behave the same way as with all UAD plug-ins. Parameters with text values can be modified with text entry. See “Text Entry” on page 92 for more information.

Filter



Filter regulates the cutoff frequency of the filter on the compressor's control signal sidechain. Removing low-frequency content from the sidechain can reduce excessive gain reduction and/or “pumping” on bass-heavy audio signals without reducing bass content of the audio signal itself.

The filter is an 18 dB per octave, coincident-pole high-pass filter. The available range is 20 Hz–500 Hz and Off.

Note: The Filter parameter affects the control signal (sidechain) of the compressor only. It does not filter the audio signal.

Threshold



This parameter determines the threshold level for the onset of compression. Incoming signals that exceed this level are compressed. Signals below the level are unaffected.

The available threshold range depends on ratio setting. At higher Ratio values, more headroom is available. Since the plug-in is designed primarily as a buss compressor, where signal levels typically run hotter than individual tracks, this feature increases the control resolution for fine-tuning these higher levels.

When Ratio is changed, the Threshold value is updated accordingly:

When Ratio is set to 2:1, the Threshold range is -55 dB to 0 dB.

When Ratio is set to 4:1, the Threshold range is -45 dB to $+10$ dB.

When Ratio is set to 10:1, the Threshold range is -40 dB to $+15$ dB.

Note: When Ratio is changed, Threshold numerical values are updated but the Threshold knob position does not move.

As the Threshold control is decreased and more compression occurs, output level is typically reduced. Adjust the Gain control to modify the output to compensate if desired.

Ratio



Ratio determines the amount of gain reduction for the compressor. For example, a 2:1 ratio reduces the signal above the threshold by half, with an input signal of 20 dB being reduced to 10 dB.

The available Ratio values are 2:1 (default), 4:1, and 10:1.

Attack



Attack sets the amount of time that must elapse once the input signal reaches the Threshold level before compression is applied. The faster the Attack, the more rapidly compression is applied to signals above the threshold.

The Attack range is from 0.10 milliseconds to 32 milliseconds. The availability of relatively slow attack times (as compared to other compressors) is one factor that can provide the in-your-face-pumping quality that is so popular with large console VCA-style compressors.

Release



Release sets the amount of time it takes for compression to cease once the input signal drops below the threshold level.

The available range is from 0.10 seconds to 1.20 seconds, with Automatic release available at the full-clockwise position.

The Auto release characteristic for Precision Buss Compressor has a unique quality that is optimized for program material.

Slower release times can smooth the transition that occurs when the signal dips below the threshold, especially useful for material with frequent peaks. However, if you set too large of a Release time, compression for sections of audio with loud signals may extend to lengthy sections of audio with lower signals.

Fade

The Precision Buss Compressor provides a Fade function that, upon activation, automatically reduces the plug-in output to minimum within a specified time period. This function enables extremely smooth-sounding fade outs (and fade ins), plus it can be automated as well. The Fade function processes the signal at the output of the compressor.



Fade Set

Fade Set determines the amount of time that will pass between the Fade button being activated and the plug-in output level being reduced to minimum (or being raised to 0 dB in the case of a fade in). The available range is from 1.0 second to 60 seconds.

Fade times immediately reflect the current Fade Set value. Therefore a fade out that has already been initiated can be accelerated by changing Fade Set during the fade out. Conversely, a fade in can be accelerated by changing Fade Set during the fade in.

Note that although the Fade Set control itself has linear taper, the fade signal level that is output has an exponential curve.



Fade Switch

Activating the Fade switch initiates a fade out. The fade out time is determined by the Fade Set parameter.



The Fade switch flashes red when a fade out is in progress, and glows solid red when the fade out is complete (when the Fade Set time has elapsed).



Deactivating Fade initiates a fade in. During a fade in, the signal level is increased from the current level of attenuation to 0 dB of attenuation. The Fade switch flashes blue when a fade in is in progress, and is no longer illuminated when the fade in is complete (when the Fade Set time has elapsed).

Toggling the Fade switch causes an already active fade to reverse direction, without a jump in output level. The Fade Set rate is constant even if an active fade is interrupted. For example: If the Fade Set value is 30 seconds and a fade out is initiated, then Fade is clicked again after 20 seconds, it will take 20 seconds to fade back in.

Note: Shift+click the Fade button to instantly return the level back to 0 dB (this feature cannot be automated).

Input Level



Input controls the signal level that is input to the plug-in. Increasing the input may result in more compression, depending on the values of the Threshold and Ratio parameters.

The default value is 0 dB. The available range is ± 20 dB.

Mix



The Mix control determines the balance between the original and the processed signal. The range is from 0% (dry unprocessed signal only) to 100% (wet processed signal only). The default value is 100%.

Output Level



Output controls the signal level that is output from the plug-in. The default value is 0 dB. The available range is ± 20 dB.

Output controls both the dry unprocessed and wet processed signals (as determined by the Mix control).

Generally speaking, adjust the Output control after the desired amount of compression is achieved with the Threshold and Ratio controls. Output does not affect the amount of compression.

Level Meters



The stereo peak/hold Input and Output Meters display the signal level at the input and output of the plug-in.

The range is from -30 dB to 0 dB. Signal peaks are held for 3 seconds before resetting.

Gain Reduction Meter



The Gain Reduction meter displays the amount of gain reduction occurring within the compressor.

More blue bars moving to the left indicate more gain reduction is occurring.

The meter range is from -16 dB to 0 dB. Signal peaks are held for 3 seconds before resetting.

Power



The Power switch determines whether the plug-in is active. Click the toggle button or the UA logo to change the state.

When the Power switch is in the Off position, plug-in processing is disabled and UAD DSP usage is reduced (unless "UAD-2 DSP LoadLock" on page 74 is enabled). When the plug-in is bypassed with this switch (but not by the host bypass), the I/O meters and the Input Level knob remain active.

Extra Presets

Extra presets for the UAD Precision Buss Compressor that are not in the factory bank can be downloaded from our website. These presets replicate all the fixed attack and release setting combinations that are found on large console VCA-style compressors. The extra presets can be found here:

<http://www.uaudio.com/support/software/UAD/downloads-support.html>

WebZine Article

An interesting article about the Precision Buss Compressor is available in the "Ask The Doctors" section of our December 2007 WebZine:

- <http://www.uaudio.com/webzine/2007/december/index2.html>

CHAPTER 40

Precision De-Esser

Overview

The Precision De-Esser seamlessly and accurately removes sibilance from individual audio tracks or even composite mixes via its intuitive interface and sophisticated yet transparent filter processing.

The Threshold knob dials in the amount of sibilance reduction, while the two-position “Speed” button gives control over the envelope (attack and release) of the detector. The Frequency knob sweeps a continuous target frequency range from 2-16 kHz, allowing repairs on a large range of voices (or even overheads and hi-hats), while the Solo button allows the user to isolate and monitor the target sibilant frequencies. The Width control offers a variable 1/6 to 1 2/3 octave bandpass filter that is perfect for complex program material, adapting technology from the TEC-nominated Precision Multiband. The Width control also switches into a more traditional highpass filter more commonly employed when tailoring individual voices. For even greater transparency, the Split feature gives the user the option to compress only the sibilant range, or may be turned off to compress the entire spectrum for more traditional de-essing.

Precision De-Esser Screenshot



Figure 140. The Precision De-Esser plug-in window

Precision De-Esser Controls

Control knobs for the Precision De-Esser behave the same way as all UAD plug-ins. Threshold, Frequency, and Width values can be modified with text entry. See [“Text Entry” on page 92](#) for more information.

Threshold



Threshold controls the amount of de-essing by defining the signal level at which the processor is activated. Rotate Threshold counter-clockwise for more de-essing.

Signals peaks as determined by Frequency ([“Frequency” on page 428](#)) and Width ([“Width” on page 429](#)) that exceed the Threshold level are compressed by a ratio of 7:1.

The available range is -40 dB to 0 dB.

Speed



Speed determines the response of the sibilance detector. Fast mode will usually make sibilance reduction more obvious. In Slow mode the effect is usually more subtle but can produce a more natural-sounding result. The actual times of the two modes are as follows:

- Fast: Attack = 0.5ms, Release = 30ms.
- Slow: Attack = 2.0ms, Release = 120ms.

Click the Speed button to change the mode. Alternately, you can click+hold the LED area and drag like a slider to change the value.

Frequency



This control defines the center frequency of the de-esser when in bandpass mode, or the cutoff frequency of the de-esser when in highpass mode. For bandpass use, the value is set to the center of the undesirable frequency range that is to be reduced. For highpass use, the value is set below the frequency range that is to be reduced. Used in conjunction with the Width control ([“Width” on page 429](#)), a broad range of de-essing is possible.

The available range is 2 kHz – 16 kHz.

Solo



The Solo button isolates the de-essing sidechain (the signal defined by Frequency and Width). Solo makes it easier to hear the problem frequencies to be attenuated.

Click the button to active Solo mode. The button is red when Solo is active.

Note: When Solo is active, changes to the Threshold and Split controls cannot be heard.

Width



Width controls the bandwidth of the de-essing sidechain when in bandpass mode. Bandpass mode is active when the control is in any position except fully clockwise.

Smaller values have a narrower bandwidth, causing a tighter, more focused de-essing effect. Higher values have wider bandwidth, for de-essing when undesirable frequency ranges are broader.

When Width is rotated fully clockwise, High Pass mode is activated. In High Pass mode, Frequency ([“Frequency” on page 428](#)) defines the cutoff frequency of the high pass filter (instead of the center frequency of the bandpass filter). High Pass mode is useful when you want to attenuate all frequencies above the cutoff frequency.

The available range is 0.15 (about 1/6 octave) to 1.61 (about 1 2/3 octaves), plus High Pass mode.

Note: UAD DSP usage is slightly decreased when Precision De-Esser is in High Pass mode versus bandpass mode (unless [“UAD-2 DSP LoadLock” on page 74](#) is enabled).

Split



Split determines if attenuation (compression) is applied to the sidechain signal only, or to the entire audio signal.

In normal use Split should be enabled, causing only the “ess” spectrum as defined by Frequency and Width (i.e., the sidechain), to be attenuated. This provides the most precise de-essing control.

Split can be disabled, which causes the entire input signal to be attenuated (instead of just the “ess” sidechain) which results in more traditional compression. However, the sidechain still controls attenuation when Split is off.

Click the Split button to change the mode. Alternately, you can click+hold the LED area and drag like a slider to change the value.

Note: UAD DSP usage is slightly decreased when Split is disabled (unless [“UAD-2 DSP LoadLock” on page 74](#) is enabled).

Gain Reduction



The Gain Reduction meter provides a visual indication of how much attenuation (compression) is occurring. Signal peaks are held for 3 seconds before resetting.

When Split is on, the amount of sidechain attenuation is displayed. When Split is off, it displays the attenuation of the entire signal.

Power



The Power switch determines whether the plug-in is active. This is useful for comparing the processed settings to the original signal or bypassing the plug-in to reduce the UAD DSP load (load is not reduced if “UAD-2 DSP LoadLock” on page 74 is enabled).

Toggle the switch to change the Power state; the UA logo is illuminated in blue when the plug-in is active.

Note: You can click-hold the power switch then drag it like a slider to quickly compare the enabled/disabled state.

Operating Tips

- For taming sibilance for a full mix/mastering, best results will usually be obtained by enabling Highpass and Split modes.
- Generally, female “ess” and “shh” sounds vary more in frequency than those of males. Due to this situation, you may find that using the sidechain filter in Highpass mode (or Bandpass mode with a large width) may be more responsive.
- Over de-essing can degrade the natural sound of a vocal.

CHAPTER 41

Precision Enhancer Hz

Overview

The Precision Enhancer Hz allows the user to selectively add upper harmonics to bass fundamentals, sometimes referred to as “phantom bass.” This significantly enhances the perception of low-end energy beyond the conventional frequency response of small speakers. These harmonics stimulate a psychoacoustic bass-enhancing effect in the listener, giving even the smallest speakers greater translation of low frequency sources. Universal Audio’s unique approach to this common problem combines a simple control set that yields exacting results with minimal adjustment and allows the widest range of tonality available in its class, from subtle to decidedly audible.

The Hz Frequency control sets the corner frequency of the bass-isolation low pass filter, while Effect blends the generated signal into the original signal. Four effect slopes are available for variations in harmonic density, while five modes present various internal control configurations to support the widest array of source material. Finally, the Precision Enhancer Hz includes control over the final output with metering to compensate for gain changes created by the effect.

Precision Enhancer Hz does for low frequencies what Precision Enhancer kHz does for the highs. Together, they are a great complementary pair.

Precision Enhancer Hz Screenshot



Figure 141. The Precision Enhancer Hz plug-in window

Precision Enhancer Hz Controls

Control knobs for the Precision Enhancer Hz behave the same way as with all UAD plug-ins. Effect, Hz Frequency, and Output values can be modified with text entry. See [“Text Entry” on page 92](#) for more information.

Effect Knob



The Effect Knob controls the amount of processing that occurs in the plug-in. The available range is from 0.00 to 100.0%.

Technically speaking, Effect scales the input to the enhancer. Increasing this parameter makes the enhancer have a higher amplitude output for a given input level. Increasing Effect increases the overall enhancement effect.

Note: *The signal level at the plug-in input will interact with the Effect control.*

Effect Meter

The Effect Meter indicates the amount of signal processing that is occurring. More illuminated blue segments indicate more signal enhancement.

Effect Solo

Effect Solo isolates the generated signal and is affected by Effect level. Effect Solo is active when the button is red.



The Effect Solo signal is “pure” and contains no added original or filtered bass signal. Therefore the soloed signal may not sound “pleasant” when heard by itself. When Effect Solo is used in conjunction with [“Hz Solo” on page 434](#), the complete “mixed” effect is heard.

Mode



The five Modes (A, B, C, D, and “All”) optimize the plug-in internally to support the widest array of source material.

The Mode control determines the type of enhancement that will be applied to the signal.

Tip: *The active Mode can be selected by clicking the Mode button repeatedly to rotate through the Modes, or by clicking each Mode letter or LED.*

Mode A (Bass 1)

Mode A is tuned for both acoustic and electric bass instruments. Adds low frequency emphasis when set to low frequency value, mid to high frequencies aid in phantom bass generation for smaller sound systems.

Mode B (Bass 2)

Mode B is primarily for electric and DI bass with balanced mid range harmonics to help the bass stick out of the mix.

Mode C (Synth)

Mode C is tuned specifically for synth bass and other full-range material. It produces a wider range of harmonics than the Bass modes A and B. Mode C also works well on sub-mixes and program material. Moderate compression is applied to the harmonics signal, increasing the amplitude of the harmonics and altering their timbre.

Mode D (Kick)

Mode D has a short decay, which makes this setting ideal for kick drum sounds and other percussive instruments. Moderate compression is applied to the harmonics signal, increasing the amplitude of the harmonics and altering their timbre.

All Mode

 
All mode offers a more exaggerated and audible effect for creative purposes or when less subtle results are desired.



Compression is applied to the harmonics signal, increasing the amplitude of the harmonics and altering their timbre. The frequency range is similar to Mode A.

Tip: "All" mode can be selected by shift+clicking Mode letters or LEDs.

Slope



Slope changes the shape of the high pass filter that is applied to the effect signal. The high pass filter helps eliminate rumble/muddiness in the signal.

Slope can be set to 6, 12, 24, or 36 dB per octave. The active Slope can be selected by clicking the Slope button repeatedly to rotate through the values, or by clicking each Slope value or LED.

Note: When the Hz Frequency is set to a low value, Slope may have little or no audible effect.

Hz Frequency



Through filter isolation of the original bass content, the Hz Frequency parameter defines the cutoff frequency for the enhancement process. Frequencies below this value are enhanced by the processor. The available range is 16 Hz to 320 Hz.

Hz Solo

Hz Solo isolates the original bass signal and can be combined with Effect Solo. Hz Solo is active when the button is red.



Output



Output controls the signal level that is output from the plug-in. The available range is -20 dB to 0 dB.

Generally speaking, adjust the Output control after the desired amount of processing is achieved with the Effect and Hz Frequency controls. Output does not affect the amount of enhancement processing, nor does it have any effect when the plug-in is disabled.

Output Meter

The stereo Output Meter displays the signal level at the output of the plug-in.

When the plug-in is disabled with the plug-in Power switch (but not the host plug-in enable switch), the output meters still function.

Power



The Power switch determines whether the plug-in is active. This is useful for comparing the processed settings to the original signal or bypassing the plug-in to reduce the UAD DSP load (load is not reduced if “UAD-2 DSP LoadLock” on page 74 is enabled).

Toggle the switch or click the UA logo to change the Power state. The UA logo is illuminated in blue when the plug-in is active.

Note: You can click-hold the power switch then drag it like a slider to quickly compare the enabled/disabled state.

Precision Enhancer Hz Usage Notes

- The Precision Enhancer Hz effect can serve multiple purposes. When the frequency control is set low, the effect extends into the audible low end. Lower frequencies work well for adding a low end thump or beefing up percussive bass/kicks, but be careful not to overdo it. With the frequency control set to mid to higher frequencies, the effect is designed to add bass tone that would ordinarily disappear on smaller speakers.
- For the most predictable results, it is recommended to audition your mix on both full range systems with a subwoofer, as well as small consumer systems such as a boombox or computer speakers.
- A different effect response will be achieved when the plug-in is used pre-compression. It is recommended to experiment with processing order as results can vary substantially.

Precision Enhancer kHz

Overview

The Precision Enhancer kHz is a sophisticated tool with a simple control set, primarily designed to bring dull or poorly recorded tracks to life. However, with five distinct Enhancement “Modes”, the Precision Enhancer kHz will find uses on virtually any source. It can be used to minimally massage the middle and upper frequencies of a mix, or drastically alter the presence or dynamics of individual tracks or groups; Unlike other enhancers that function by frequency delay or filtered clipping, the Precision Enhancer kHz works on specialized techniques of equalization and dynamic expansion that can be used as a highly versatile effect.

The five Modes (A, B, C, D and the shift-clickable “All”) present various control configurations to support the widest array of source material. With Modes A and B, the filtered audio is mixed in with the dry signal according to the Effect control. For Modes C, D and All, audio is passed through a unique upwards expander where the expanded audio is then filtered before being mixed with the dry signal. For these modes, Effect is used as a fader on the way into the expander. The release can be adjusted to either Fast or Slow via the Speed button, giving a greater range of dynamic/frequency enhancement. For Mode C, the sweepable filter applied to the expander's output is identical to the filter used with Mode A. For Mode D and All, the expander's output is passed to a set of filters in parallel. Finally, the Precision Enhancer kHz includes control over the final Output level metering to compensate for gain changes created by the effect.

Precision Enhancer kHz Screenshot



Figure 142. The Precision Enhancer kHz plug-in window

Precision Enhancer kHz Controls

Control knobs for the Precision Enhancer kHz behave the same way as with all UAD plug-ins. Effect, kHz Frequency, and Output values can be modified with text entry. See [“Text Entry” on page 92](#) for more information.

Effect Knob



The Effect Knob controls the amount of processing that occurs in the plug-in. The available range is from 0.00 to 100.0%.

Technically speaking, Effect scales the input to the enhancer. Increasing this parameter makes the enhancer have a higher amplitude output for a given input level. Increasing Effect increases the overall enhancement effect.

Note: *The signal level at the plug-in input will interact with the Effect control.*

Effect Meter

The Effect Meter indicates the amount of signal processing that is occurring. More illuminated blue segments indicate more signal enhancement.

Mode



The Mode control determines the type of enhancement that will be applied to the signal. The active Mode can be selected by clicking the Mode button repeatedly to rotate through the Modes, or by clicking each Mode letter or LED. “All” mode is selected by shift+clicking Mode letters or LEDs.

Mode A

Mode A enhances the high frequency content statically. Input dynamics have no affect on the enhancement process.

Mode B

Mode B is optimized for vocal range content. The kHz Frequency parameter is disabled in this mode.

Mode C

Mode C dynamically enhances the high frequency content. The enhancement amount is increased as the input signal level increases.

Mode D

Mode D dynamically enhances both high and low frequency content. The enhancement amount is increased as the input signal level increases. The kHz Frequency parameter is disabled in this mode.

All Mode

“All” mode is selected by shift+clicking Mode letters or LEDs. All Mode expands all frequencies of the input signal. The enhancement amount is increased as the input signal level increases. The kHz Frequency parameter is disabled in this mode.

Speed



The Speed parameter defines the attack and release characteristic of the enhancement process.

Fast

In Fast mode, the enhancement processor has a quick response time of 30ms, which yields a more percussive “bite” and/or a more aggressive sound.

Slow

Slow mode has a slower response time of 180ms which can deliver a smoother sound overall.

kHz Frequency



The kHz Frequency parameter defines the cutoff frequency for the enhancement process in Mode A and Mode C. Frequencies above this value are enhanced by the processor. The available range is 1.00 kHz to 10.0 kHz.

Note: kHz Frequency is disabled in Modes B/D/All.

Output



Output controls the signal level that is output from the plug-in. The available range is -20 dB to 0 dB.

Generally speaking, adjust the Output control after the desired amount of processing is achieved with the Effect and kHz Frequency controls. Output does not affect the amount of enhancement processing, nor does it have any effect when the plug-in is disabled.

Output Meter

The Output Meter displays the signal level at the output of the plug-in.

When the plug-in is disabled with the plug-in Power switch (but not the host plug-in enable switch), the output meters still function.

Power



The Power switch determines whether the plug-in is active. This is useful for comparing the processed settings to the original signal or bypassing the plug-in to reduce the UAD DSP load (load is not reduced if “UAD-2 DSP LoadLock” on page 74 is enabled).

Toggle the switch or click the UA logo to change the Power state; the UA logo is illuminated in blue when the plug-in is active.

Note: You can click-hold the power switch then drag it like a slider to quickly compare the enabled/disabled state.

Precision Equalizer

Overview

The Universal Audio Precision Equalizer™ is a stereo or dual-mono four band EQ and high-pass filter designed primarily for mastering program material. The Precision Equalizer may also be used in recording and mixing where the utmost in EQ quality is required. The Precision Equalizer is based on industry standard analog mastering filters, and uses the classic parametric controls arrangement. The Precision Equalizer utilizes the best from those designs while incorporating features convenient to digital mastering. To preserve the greatest sonic detail and ensure a minimum of artifacts in the upper frequency range, the Precision Equalizer is upsampled to 192 kHz.

Precision Equalizer Screenshot



Figure 143. The UAD Precision Equalizer plug-in window

Precision Equalizer Controls

The easy to use Precision Equalizer features stepped controls throughout for easy recall. Both the left and right channels feature four bands of EQ, grouped in two overlapping pairs. There are two bands for low frequencies (L1 and L2), and two for highs (H1 and H2). There is also a shelving or peak/notch filter available for each band, along with five peak/notch (Q) responses per band. The high-pass filter is a far-reaching 18 dB per octave, which enables precise filtering of power-robbing sub-harmonic content, or other creative uses.

The Precision Equalizer also features flexibility in auditioning. There are three separate EQ configurations, allowing selection of two complete sets of stereo parameters or the Dual mode when disparate channel adjustments are necessary. In addition, parameter values can be easily transferred between parameter groups using the Copy buttons.

Control Grouping



The L and R equalizer sections are independent groups of parameters, each controlling one side (left or right) of the stereo source signal.

The L and R controls are linked except when in Dual mode. In Dual mode, control groups L and R can be independently adjusted.

Modes



The Mode switches define the operating mode of Precision Equalizer. The currently active mode is indicated by a blue light. Each mode is detailed below.

Stereo Mode

In Stereo mode, the L and R equalizer sections both control one side of the stereo source signal. The L and R controls are linked in stereo mode.

In stereo mode there are two sets of EQ settings (referred to as A and B), with each set containing the full set of L and R parameter values (the high-pass filter value is global per preset). This feature enables easy switching between two EQ settings for comparison purposes. Both the A and B parameter sets are contained within a single Precision Equalizer preset.

Dual Mode

In Dual mode (dual-mono mode), the left and right parameters can be independently adjusted so that each side of the stereo signal can have different EQ settings. Note that this mode is infrequently used during mastering because phase, imaging, and level inconsistencies may be induced in the resulting stereo signal.

Mode Selection

Any of the below methods may be used to modify the Mode value:

- Click the Stereo button to cycle through modes A and B
- Click the Dual button to activate dual-mono mode
- Click the indicator light above each mode
- Click+hold+drag the indicator light above each mode.

Parameter Copy Buttons



The Parameter Copy buttons provide an easy method for copying parameter values. The behavior of the buttons is determined by the current operating mode of Precision Equalizer.

Note: *The values that existed at the destination before copying are lost.*

Stereo Mode

When in Stereo mode (see “Stereo Mode” on page 441), clicking A > B copies the left AND right parameter values from parameter set A to parameter set B, and clicking the A < B button copies all the values from parameter set B to parameter set A.


This feature is useful when you want to make an EQ change to a stereo signal while maintaining the original values so the two settings can be easily compared.

Note: *The high-pass filter parameter is global per preset and is not affected by this control.*

Parameter Copy in Dual Mode

When in Dual mode, the A and B buttons behave as left and right channel copy buttons. Clicking A > B copies all the values from the left channel parameters to the right channel parameters, and clicking A < B copies all the values from the right channel parameters to the left channel parameters.

Power Switch

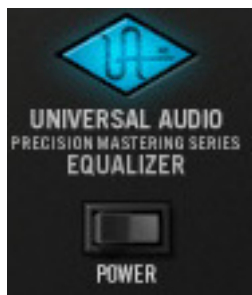

The Power Switch determines whether the plug-in is active. This is useful for comparing the processed settings to the original signal, or to bypass the plug-in to reduce the UAD DSP load (load is not reduced if “UAD-2 DSP LoadLock” on page 74 is enabled).

Click the rocker switch to change the Power state. Alternately, you can click the blue UA logo to toggle the Power state.

Band Controls

Each control set (L and R) has four EQ bands. Two bands are overlapping low frequency bands labeled L1 and L2, and two bands are overlapping high frequency bands labeled H1 and H2.

Each of the four bands has a control for bandwidth, enable, frequency, and gain. All four of the EQ bands can be used in parametric or shelf mode. The controls are exactly the same for each band; only the available frequency values differ.

Bandwidth Knob

The Bandwidth (Q) knob defines the proportion of frequencies surrounding the band center frequency to be affected by the band gain control.

The numbers represent the filter slope in dB per octave. The available selections are 4, 6, 9, 14, 20, and Shelf.

When set to Shelf on the L1 and L2 bands, the band becomes a low shelving filter. When set to Shelf on the H1 and H2 bands, the band becomes a high shelving filter.

Band Enable Button



Each band can be individually engaged with the Enable button. All bands default to disabled. When a band is enabled, the button glows blue. To enable a band, click the Enable button or move the band Gain knob.

You can use these buttons to compare the band settings to that of the original signal, or to bypass the individual band. UAD DSP usage is slightly decreased when a band is disabled (unless “UAD-2 DSP LoadLock” on page 74 is enabled).

Frequency Knob

The Frequency knob determines the center frequency of the filter band to be boosted or attenuated by the band Gain setting.

This knob is stepped with 41 values for easy reproducibility during mastering. To double the resolution of the available knob values (for fine control), press the shift key on the computer keyboard while adjusting the knob. This increased 2x frequency resolution (within the available range) can also be specified using text entry, parameter automation, or 'controls' mode. The available values for each of the four bands is the same in both parametric and shelf modes, and are listed in [Table 35](#) below.

Note: *Not all host applications support automation and/or controls mode.*

Table 35. Precision Equalizer Band Frequency Ranges

Low Frequencies (L1 and L2)	19 – 572 Hertz
High Frequencies (H1 and H2)	617 – 27k Hertz

Gain Knob

The Gain knob determines the amount by which the frequency setting for the band is boosted or attenuated. The available Gain values are listed in [Table 36](#) below.

Table 36. Precision Equalizer band gain values

0.0 dB	±2.0 dB	±5.0 dB
±0.5 dB	±2.5 dB	±6.0 dB
±1.0 dB	±3.0 dB	±8.0 dB
±1.5 dB	±4.0 dB	

High-Pass Filter



The high-pass filter is useful for reducing low frequency content. It is a global filter; it always affects both left and right channels, regardless of the active mode. See [Table 37](#) below for available settings.

Table 37. Precision Equalizer high-pass filter frequencies

Off (disabled)	40 Hz
10 Hz	60 Hz
20 Hz	80 Hz
30 Hz	100 Hz

Precision Equalizer Latency

The Precision Equalizer uses an internal sample rate of 192 kHz to facilitate its amazing sonic quality. This upsampling results in a slightly larger latency than other UAD plug-ins. See [“Compensating Upsampled Plug-Ins”](#) on [page 108](#) for more information.

Note: *Compensating for Precision Equalizer is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used only on the outputs. See [“Host PDC Implementation”](#) on [page 101](#).*

CHAPTER 44

Precision Limiter

Overview

The Universal Audio Precision Limiter™ is a single-band, look-ahead, brick-wall limiter designed primarily for mastering with program material. The easy-to-use Limiter achieves 100% attack within a 1.5ms look-ahead window, which prevents clipping and guarantees zero overshoot performance. Both the attack and release curves are optimized for mastering, which minimizes aliasing.

Since the Precision Limiter is a colorless, transparent mastering limiter—no up-sampling is used, nor does the UA Precision Limiter pass audio through any filters—audio remains untouched unless the compressor is working, in which case only gain is affected.

To really be considered a professional limiter, the metering needs to be superb. The Precision Limiter features comprehensive, high-resolution metering and conforms to the Bob Katz “K-System” metering specifications. This metering allows the user to see what is happening to audio with a great deal of accuracy, with simultaneous RMS and Peak metering and adjustable Peak Hold. And since we know how valuable good metering is, the plug-in can also be bypassed and used strictly as a high-resolution meter.

Key features include user-adjustable Release or intelligent Auto Release, which allows for fast recovery—minimizing distortion and pumping—and a unique selectable Mode switch, which allows you to delicately tailor the attack shape and control the “presentation” for different material. Mode A is the default shape, suitable for most material, while Mode B can be particularly useful on minimal and/or acoustic program material, yielding a more subtle touch.

The Precision Limiter is yet another indispensable UAD tool for your audio arsenal.

Precision Limiter Screenshot

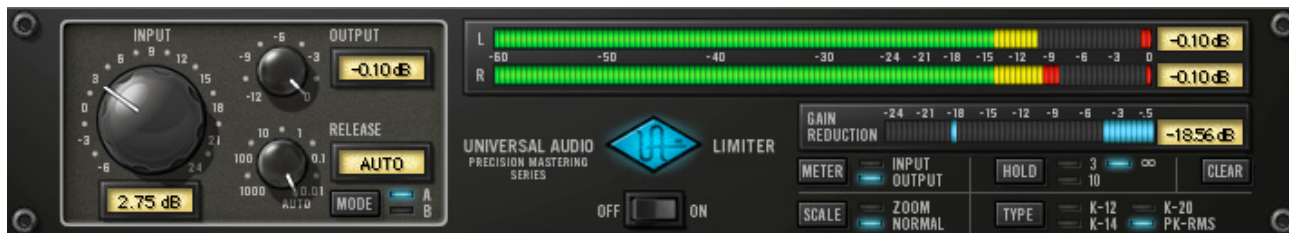


Figure 144. The Precision Limiter plug-in window

Controls Overview

Control knobs for the Precision Limiter behave the same way as all UAD plug-ins. Input, Output, and Release values can be modified with text entry. See [“Text Entry” on page 92](#) for more information.

The Precision Limiter introduced a new control style for UAD plug-ins. For the Mode, Meter, Scale, and Clear parameters, click the parameter label, the value text, or the LED to toggle between available values.

Precision Limiter Controls

Input

The Input knob controls the signal level that is input into the limiter. Increasing the input will result in more limiting as the input signal exceeds 0 dB.

The default value is 0 dB. The available range is -6 dB to 24 dB.

Output

The Output knob determines the maximum level at the output of the plug-in. This control does not affect the actual limiting.

The Precision Limiter always limits the signal to 0 dB internally, and the actual output is set by attenuating this internal level. Likewise, the input control can drive the signal over 0 dB to get more limiting.

If the Precision Limiter is the last processor in the signal path when mixing down to disk (bouncing), the Output value will be the level of the highest peak in the resultant audio file.

The default value is -0.10 dB. The available range is from -12 dB to 0 dB. Non-zero values are always negative, therefore during text entry operations positive or negative values may be entered and the result will be negative.

Release The Release knob sets the value of the limiter release time. The default value is Auto. The available range is from 1 second to 0.01 milliseconds.

Auto Mode

When the Release knob is fully clockwise, Automatic mode is active. In Auto mode, release time is program-dependent. Isolated peaks will have a fast release time, while program material will have a slower release.

Note: You can type “A” or “a” to enter Auto mode during text entry.

Mode The Mode switch affects the attack shape of the limiter. Subtle tonal variations are possible by switching the Mode between A and B.

Mode A is the default shape, suitable for most material, while Mode B can be particularly useful on minimal and/or acoustic program material, yielding a more subtle touch.

Power The Power switch determines whether the plug-in is active. When the Power switch is in the Off position, plug-in processing is disabled and UAD DSP usage is reduced (unless “UAD-2 DSP LoadLock” on page 74 is enabled). When the plug-in is bypassed with this switch (but not by the host bypass), the VU meter displays the unprocessed input signal level.

Precision Limiter Meters Overview

K-System The Precision Limiter has precise, calibrated stereo metering. It offers the option to use K-System metering, which is a method devised by renown audio engineer Bob Katz (<http://digido.com>). The K-System is essentially a method of integrating metering and monitoring levels to standardize the apparent loudness of audio material while providing useful visual feedback of average and peak levels.

Integrated Meter/Monitor System

The K-System is not just a metering system; it is designed to be integrated with calibrated monitoring system levels. In a full K-System implementation, 0 dB on the level meter yields 83 dB sound pressure level (SPL) per channel in the monitor output level (86 dB running two channels in stereo), when measured

with 20-20 kHz pink noise on an SPL meter set to C-weighted slow (i.e. average) response. It is this calibrated meter/monitor relationship that establishes a consistent average “perceived loudness” with reference to 0 dB on the meter.

Sliding Meter Scale

With the K-System, programs with different amounts of dynamic range and headroom can be produced by using a loudness meter with a sliding scale, because the moveable 0 dB point is always tied to the same calibrated monitor SPL. The Precision Limiter provides several meter ranges for various types of program material (see “[Type](#)” on page 449).

Long Live Dynamic Range!

The K-System can help combat the bane of the “loudness wars” which is all-too common in today’s music, whereby material is made to appear louder when compared to other material at the same playback volume, at the expense of dynamic range and fidelity.

Type

The Type switch defines the 0 dB point in the meter scale (see “[Sliding Meter Scale](#)” on page 449). There are three different K-System meter scales, with 0 dB at either 20, 14, or 12 dB below full scale, for typical headroom and SNR requirements of various program materials.

Each of these modes displays the The RMS and instantaneous peak levels, which follow the signal, and the peak-hold level (see “Meter Response” on page 451).

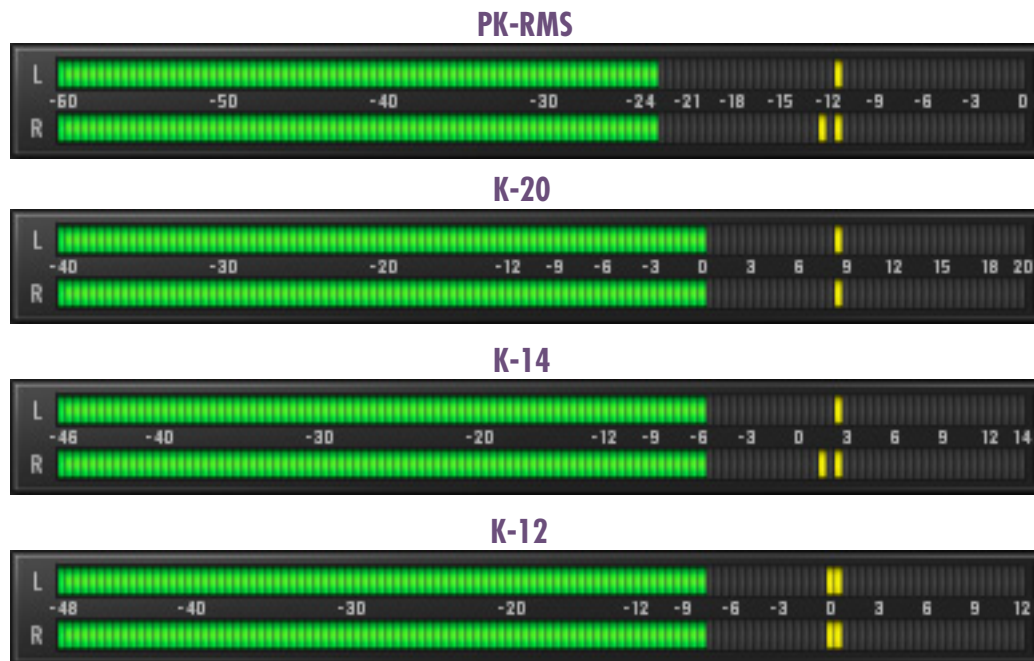


Figure 145. Precision Limiter Meter Types

K-20

K-20 mode displays 0 dB at –20 dB below full scale. K-20 is intended for material with very wide dynamic range, such as symphonic music and mixing for film for theatre.

K-14

K-14 mode displays 0 dB at –14 dB below full scale. K-14 is intended for the vast majority of moderately-compressed material destined for home listening, such as rock, pop, and folk music.

K-12

K-12 mode displays 0 dB at –12 dB below full scale. K-12 is recommended for material intended for broadcast.

Peak-RMS

This is what is often considered a “normal” digital meter, where 0 dB is full-scale digital code.

Note: When the meters are in the K-modes, the displayed RMS level is 3.01 dB higher when compared to the same signal level in the Peak-RMS mode. This is done to conform to the AES-17 specification, so that peak and average measurements are referenced to the same decibel value with sine waves.

Meter Response

The main stereo Input/Output meter actually displays three meters simultaneously: The RMS and instantaneous peak levels, which follow the signal, and the “peak-hold” (also known as global peak) level.

The peak-hold level is the maximum instantaneous peak within the interval set by the Hold button, and is also displayed as text to the right of the meters. To reset the peak hold levels, press the Clear button.

Precision Limiter metering is also active when plug-in processing is deactivated with the Precision Limiter Power switch. Metering is disabled when the plug-in is bypassed by the host application.

Gain Reduction Meter

The Gain Reduction meter displays the amount of limiter gain reduction. More green bars moving to the left indicate more gain reduction is occurring.

Gain reduction only occurs when the input signal level exceeds 0 dB. Therefore, increasing the Input knob usually results in more gain reduction.

Meter

The Meter switch specifies the signal source for the main stereo meter, either input or output.

Input

When the Meter switch is in Input mode, the main level meters display the signal level at the input of the plug-in (and is not affected by the Input knob).

Output

When the Meter switch is in Output mode, the main level meters display the level at the output of the plug-in. When the Limiter is enabled, the Output and Input knobs will affect this display.

Scale

The meter Scale switch increases the resolution of the main stereo level meter (See [Figure 146](#) below). The meter range that is displayed in Normal and Zoom modes is dependent upon the meter Type setting (see “Type” on [page 449](#)).



Figure 146. Precision Limiter meter scale in PK-RMS Zoom mode

The main level meters in Normal mode, and the gain reduction meter in both Normal and Zoom modes, are linear (level differences between LED segments is the same). In PK-RMS and K-20 Zoom modes however, the main level meters use two different linear ranges for increased accuracy.

The ranges and response for each meter type and scale is detailed below.

PK-RMS

In Normal mode, the meter range is -60 dB to 0 dB with a linear response of 0.5 dB per segment. In Zoom mode, the range is -18 dB to 0 dB with two different linear responses: 0.2 dB per segment from -18 to -6 dB, and 0.1 dB per segment from -6 to 0 dB.

K-20

In Normal mode, the meter range is -40 dB to 20 dB with a linear response of 0.5 dB per segment. In Zoom mode, the range is -8 dB to 20 dB with two different linear responses: 0.2 dB per segment from -8 to 15 dB, and 0.1 dB per segment from 15 dB to 20 dB.

K-14

In Normal mode, the meter range is -46 dB to 14 dB with a linear response of 0.5 dB per segment. In Zoom mode, the range is -10 dB to 14 dB, with linear response of 0.2 dB per segment.

K-12

In Normal mode, the meter range is -48 dB to 12 dB with a linear response of 0.5 dB per segment. In Zoom mode, the range is -12 dB to 12 dB, with linear response of 0.2 dB per segment.

Hold The meter Hold Time switch determines how much time will pass before the peak values for the main meter and the gain reduction meter are reset. It affects both the peak LED's and the peak text display.

Values of 3 seconds, 10 seconds, or Infinite (indicated by the lazy-8 symbol) can be selected.

Clear The meter Peak Clear switch clears the meter peak value display. It affects both the peak LED's and the peak text display.

Precision Limiter Latency

The Precision Limiter has a 1.5ms look-ahead window to ensure clipping does not occur. This look-ahead function results in a slightly larger latency than other UAD plug-ins. See ["Compensating Upsampled Plug-Ins" on page 108](#) for more information.

Note: *Compensating for Precision Limiter is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used only on the outputs. See ["Host PDC Implementation" on page 101](#).*

Precision Maximizer

Overview

The Precision Maximizer is a dynamic impact processor that uniquely enhances the apparent loudness, warmth, and presence of individual tracks or program material without appreciably reducing dynamic range or peak level control. Significant audio improvements can be achieved without the fatiguing artifacts typically associated with traditional dynamic processors.

The plug-in uses a proprietary soft-saturation process that maximizes signal energy while minimizing undesirable distortion and aliasing. A wide variety of sounds are available using relatively few controls. The primary sonic parameter is the Shape control, which can range from simply increasing the apparent loudness at lower settings, to dramatically improved clarity, punch, and “musical” tube-like distortion at higher values.

The nature of the source material, as well as the input levels to the processor, also greatly affect the sonic character at the output. The Limit function and 3-band mode enable further manipulation of signal levels for additional creative options.

Note: See “Operating Tips” on page 459 for practical usage information.

Signal Flow

The input signal first passes through the Input control (page 455), then the Input Meter (page 455), before arriving at the Bands divider (page 456). After being optionally divided by the Bands parameter, the signal is then split into the dry path and the wet saturation path. The saturation path is processed by the Shape control (page 456), then the wet and dry signals are combined with the Mix control (page 457). Finally, the mixed signal is processed by the Limit control (page 457) before being passed to the Output control (page 458) and Output Meter (page 458).

Precision Maximizer Screenshot



Figure 147. The Precision Maximizer plug-in window

Precision Maximizer Controls

Control knobs for the Precision Maximizer behave the same way as all UAD plug-ins. Input, Shape, Mix, and Output values can be modified with text entry. See [“Text Entry” on page 92](#) for more information.

Input Meter



The stereo peak Input Meter displays the signal level at the input of the processor, after the Input control.

0 dB represents digital full scale (0 dBFS). Precision Maximizer can utilize input signals up to +6 dB at the input before input clipping occurs.

The displayed range is from -40 dB to +6 dB.

Input



The Input Level knob controls the signal level that is input to the plug-in. Increasing the input will generally result in more processing (depending on the settings of the other parameters).

By increasing the Input knob, input levels higher than 0 dBFS (up to +6 dBFS) within the plug-in can be processed. This can increase the distortion characteristic at the output, particularly when the Limit function ([“Limit” on page 457](#)) is engaged.

The available range is ± 12 dB. A good starting point for sonic experimentation is to set the input level so the input peaks occur around 0 dB, then adjust the other controls to taste.

Shape



The Shape knob is the primary saturation control for the Maximizer effect. It contours the harmonic content and apparent dynamic range of the processor by changing the small-signal gain of the saturator. The available range is 0–100%.

At lower settings, apparent loudness is not as dramatic but harmonic processing still occurs, producing a richer sound with minimal reduction of dynamic range. As Shape is increased, the sound becomes more saturated with “sonically pleasing” distortion and perceived loudness, punch, and clarity.

Shape values between 0-50% will make the effect more subtle, but a richer sound is still obtained. Lower Shape values accentuate louder peaks, which can sound great on percussive instruments. Solo instruments can also benefit from lower Shape values by taming the peaks while maintaining dynamic range.

As Shape is increased beyond 50%, presence, excitement, and harmonic coloration can be dramatic, yet still highly musical and without the dynamic squashing of typical limiters.

The most natural warmth and tube-like distortion is obtained with Shape at 50%. This setting generates the lowest amount of higher order harmonics and most closely emulates characteristic tube qualities.

Bands



Precision Maximizer can operate in one-band or three-band mode. In one-band mode, all frequencies are processed equally. In three-band mode, the frequency spectrum is split into three separate bands before maximizing is applied.

One-band mode is the normal setting for general usage. In this mode, more dramatic results can often be obtained because more saturation effect is possible before the output is clipped. At higher levels of distortion, the phase of the harmonics are also better retained in this mode, which usually produces a more desirable sound quality.

Higher levels of perceived loudness may be obtained in three-band mode, especially if the frequency spectrum of the source material is not balanced. In this mode, certain settings can produce higher output levels than input levels (and potential clipping), so it may be necessary to compensate by reducing the input/output levels, and/or engaging the Limit control.

The crossover frequencies in three-band mode are 200 Hz and 2.45 kHz.

Click the Bands button to change the mode. Alternately, you can click+hold the LED area and drag like a slider to change the value.

Note: UAD DSP usage is increased when three-band mode is active (unless “UAD-2 DSP LoadLock” on page 74 is enabled).

Limit



The Limit function provides a second stage of soft-saturation just before the output control for the plug-in. It prevents digital “overs” by protecting the plug-in output from exceeding 0 dBFS. Limit enters into clipping range gradually instead of hard-clipping at 0 dB.

The Limit function has the same saturation form as the Shape parameter, but the effect is milder. Limit is especially useful for three-band mode, where output peaks over 0 dB (and clipping) can occur. However, great results can also be obtained in one-band mode when Limit is engaged.

If Limit is used to reduce levels by a significant amount, it is usually best to have Mix set to 100% in order to minimize audio artifacts (aliasing).

Click the Limit button to engage Limit. Alternately, you can click+hold the LED area and drag like a slider to change the value.

Note: UAD DSP usage is slightly decreased when Limit mode is inactive (unless “UAD-2 DSP LoadLock” on page 74 is enabled).

Mix



The Mix knob is a mix control for the plug-in. Mix determines the balance between the original and the processed signal.

The range is from 0% (no processing) to 100% (wet, processed signal only).

Note that when Mix is at 0%, the signal is still processed by the Limit control if it is enabled, and by the band splitter when in three-band mode. For a true bypass, the Power switch should be used.

Output



The Output knob controls the signal level that is output from the plug-in. The available range is -12 dB to 0 dB.

Note that when Limit is not engaged, it is possible for the output level to exceed 0 dB. In this case, Output can be lowered to eliminate any associated clipping.

When Precision Maximizer is used for CD mastering and it is the last processor in the signal chain, the recommended Output value is -0.10 dB

Output Meter




The stereo peak Output Meter displays the signal level at the output of the plug-in. The displayed range is from -40 dB to 0 dB.

The very top segment of the Output Meter is a clip LED (one each for the left and right channels) which illuminates when the signal exceeds 0 dB. The clip segments are held for three seconds before resetting.

Note: The Limit function prevents the output signal from exceeding 0 dB. Therefore, the clip LED's will only illuminate if Limit is off.

Power

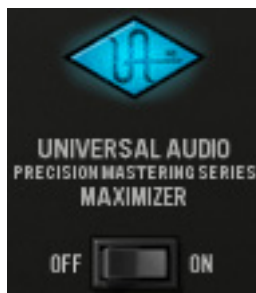

The Power switch determines whether the plug-in is active. This is useful for comparing the processed settings to the original signal or bypassing the plug-in to reduce the UAD DSP load (load is not reduced if "UAD-2 DSP Load-Lock" on page 74 is enabled).

Toggle the switch to change the Power state; the UA logo is illuminated in blue when the plug-in is active.

Note: You can click-hold the power switch then drag it like a slider to quickly compare the enabled/disabled state.

Operating Tips

- As a starting point for general loudness enhancement, set Precision Maximizer to one-band mode with Limit engaged, with Mix at 100% and Shape at 50%. Then set Input so signals peak at around 0 dB on the Input Meters. These settings offer good results under most conditions, producing more presence with a warmer sound and enhanced detail (especially with lower frequencies), while retaining the apparent dynamic range of the original signal.
- The most natural warmth and tube-style distortion can be obtained with Shape at 50% in one-band mode, with Limit off, and signal peaks just touching 0 dB at the input. Shape at 50% delivers the lowest amount of higher order harmonics and most closely emulates a tube characteristic.
- More overdrive may be obtained by disengaging the Limit function. Up to +6 dB of additional headroom is available before clipping occurs when Limit is off. This can cause clipping at the output, so reduce the Input and/or Output control to compensate if necessary.
- Input clipping can dramatically change the distortion characteristic, and may yield significantly different results in one-band versus three-band mode.
- Generally speaking, the input should be set as high as possible before undesirable sound quality is obtained.
- For optimum results (especially when Limit is off) ensure the source signal is not clipped before it arrives at the Precision Maximizer input.
- Output clipping can be completely avoided by enabling Limit.
- One-band mode is generally recommended for program material.
- Set Mix at 100% in order to hear the full affect of the Maximizer process. Reduce Mix when blending in the original signal is desired.
- Changing the order of plug-ins in the signal path can have a dramatic affect on Precision Maximizer results.
- Sonic experimentation is highly encouraged!

Precision Maximizer Latency

The Precision Maximizer uses an internal upsampling technique to facilitate its amazing sonic quality. This upsampling results in a slightly larger latency than other UAD plug-ins. See [“Compensating Upsampled Plug-Ins”](#) on [page 108](#) for more information.

Note: *Compensating for Precision Maximizer is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used only on the outputs. See “Host PDC Implementation” on page 101.*

WebZine Article

An interesting article about sonic enhancers can be found in the “Ask The Doctors” article of the Universal Audio May 2007 Webzine (Volume 5, Number 4), published on the internet at:

- <http://www.uaudio.com/webzine/2007/may/index2.html>

CHAPTER 46

Precision Multiband

Overview

The Precision Multiband is a specialized mastering tool that provides five spectral bands of dynamic range control. Compression, expansion or gate can be chosen separately for each of the five bands. The unparalleled flexibility and easy to follow graphical design of the Precision Multiband make it the ideal tool for the novice as well as the seasoned mastering engineer.

The Precision Multiband can be used for anything from complex dynamic control to simple de-essing. Two filter bank modes offer precise linear-phase or minimum-phase gain control; use the linear-phase option for perfectly phase-coherent results, or minimum-phase for a more “analog” sound. Both filter bank modes achieve the magnitude response of a Linkwitz-Riley filter and provide perfect magnitude reconstruction.

Precision Multiband Screenshot

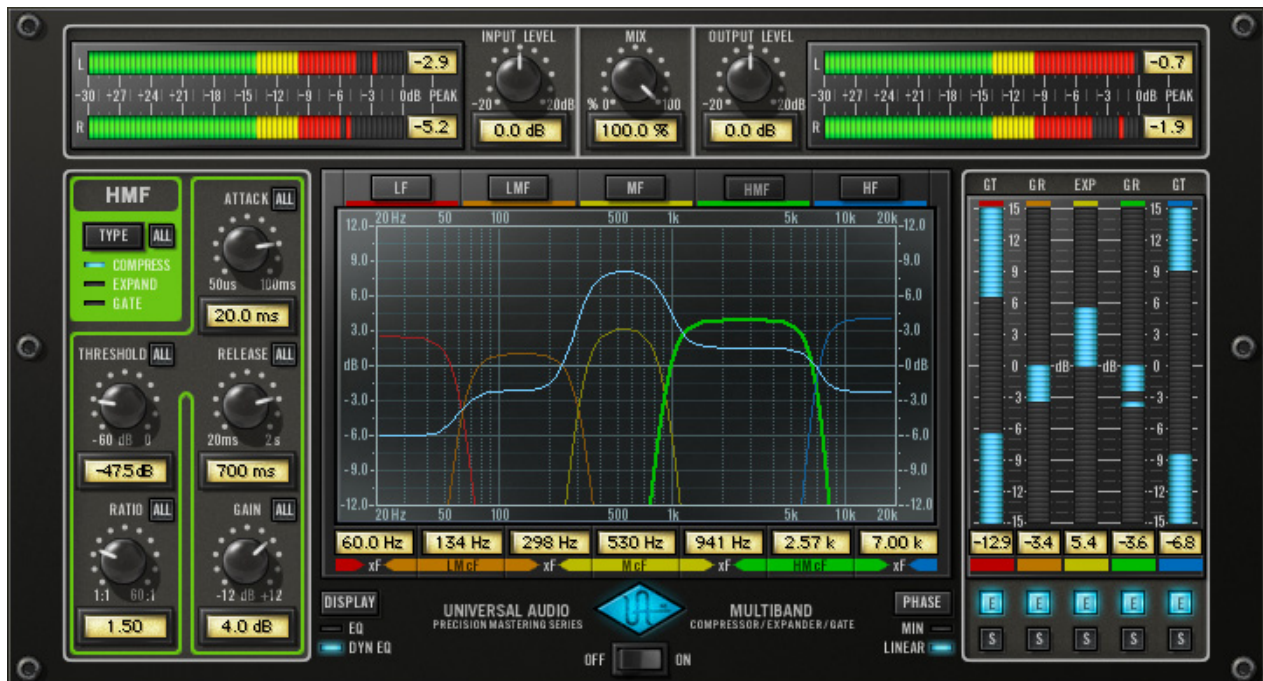


Figure 148. The UAD Precision Multiband plug-in window

Precision Multiband Interface

The Precision Multiband interface is designed to make this complex processor easier to use.

Five separate frequency bands are available for processing. Each band is identified by a unique color, and all controls specific to the band have the same color. This helps to visually associate parameters to the band that they affect. The band names and their colors are:

- Low Frequency (LF): Red
- Low-Mid Frequency (LMF): Orange
- Mid Frequency (MF): Yellow
- High-Mid Frequency (HMF): Green
- High Frequency (HF): Blue

The interface is divided into four primary areas of control:

- The Band Controls section contains the dynamic response parameters for each of the five bands. One set of band controls is displayed at a time. See [“Band Controls” on page 463](#).
- The EQ Display contains the band frequency parameters and shows a graphic representation of the band frequency response. The overall equalization response is also displayed (if enabled). See [“EQ Display” on page 468](#).
- The Dynamics Meters display the amount of gain reduction or expansion occurring on each band. The band enable and solo controls are here also. See [“Dynamics Meters” on page 471](#).
- The Global controls affect aspects of the plug-in not associated with individual bands. These include input/output controls and meters, power, and other controls. See [“Global Controls” on page 472](#).

Band Controls



The Band Controls contain the parameters that are used to specify all the settings for each band (except the frequencies; see “Frequency Controls” on page 470).

The Band Controls for each of the five bands are identical.

Only one set of Band Controls is displayed at a time. The control set for any particular band is displayed by selecting the band (see “Band Select” on page 463).

Band Select


Selecting a band causes the controls for that band to be displayed in the Band Controls area. Bands can be selected by using the Band Select buttons, or by clicking in the EQ display.

Band Select Buttons



The Band Select buttons at the top of the EQ Display specify which band parameters are displayed in the band controls section. Click the button to display the parameters for the band.

EQ Display Selection

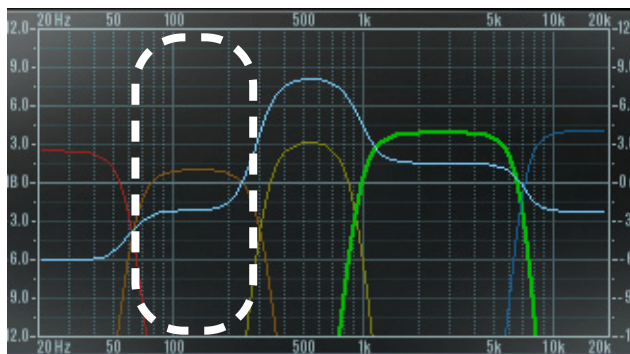

A band can also be selected by clicking within the area of the band in the EQ Display. For example, clicking within the area shown here will select the LMF band.

Band Parameters

Because the Band Controls for each of the five bands are identical, they are only described once.

All Button



The ALL button provides a facility to link controls and copy parameter values to all bands when adjusting the current band. Each of the Band Controls has an ALL button. The behavior of the ALL button is the same for all the Band Controls in all the bands (with the exception of the Type switch; see “Type Switch” on page 465)

The ALL button can perform three functions: Relative Link, Absolute Link, and Copy Value. Note that the ALL button cannot be automated.

Relative Link



In Relative mode, changes to a band control will change the same control in the other bands by a relative amount (i.e. the same amount), until any single band reaches its minimum or maximum value.

Single-click the ALL button to enter Relative mode; the button background changes to blue.


When adjusting a control in Relative mode, it may appear that the full range of the active control is unavailable; this occurs when a different band (not the active band) has reached the end of its range.

In Relative mode the Gain value can also be adjusted by dragging the Gain “handle” in the EQ Display (see “EQ Display” on page 468).

Note: No change occurs to the parameter values unless the control is actually moved. This allows you turn off relative linking without making any changes.

Note: Relative mode is not available for the Type parameter because the available Type values are discrete. Click and shift-click both activate Absolute mode for Type.

Absolute Link


 In Absolute mode, changes to a band control will force the same control in the other bands to snap to the same value as the current band.

Shift-click the ALL button to enter Absolute mode; the button background changes to red.

In Absolute mode the Gain value can also be adjusted by dragging the Gain “handle” in the EQ Display (see “EQ Display” on page 468).

Note: No change occurs to the parameter values unless the control is actually moved. This allows you turn off absolute linking without making any changes.

Copy

 Ctrl-click the ALL button when it is NOT in Relative or Absolute modes (not blue or red) to copy the current value of the active band control to the same control value in the other bands.

Note: Careful with the control Copy function! It will delete the existing values in the other bands, and no undo is available.

Type Switch



The Type button defines the dynamic nature of the band, allowing each band to function as a compressor, expander, or noise gate, independent of the Type value in the other bands.

Click the Type switch to scroll through the three available values.

The Type text (compress, expand, gate) behaves as a vertical “slider” and can be used for changing the Type as well. Alternately, the Type can be changed using the Dynamics Meters label text (see “Dynamics Meters” on page 471).

Note: When changing the band Type, the Ratio value for the band changes to 1:1. This prevents dramatic jumps in the output level that could result from extreme values of other band parameters.

COMPRESS

When a band is set to Compress, the dynamic range of the band will be reduced (dependent upon the band threshold and input level). This is the typical value in multiband compression.

EXPAND

When a band is set to Expand, the dynamic range of the band will be increased (dependent upon the band threshold and input level).

GATE

When a band is set to Gate, the band behaves as a gate. A gate stops the signal from passing when the signal level drops below the specified threshold value.

Gates are generally used to reduce noise levels by eliminating the noise floor when the 'main' signal is not present, but they are also useful for special effects.

Threshold

This parameter determines the threshold level for compression/expansion/gating. Any signals that exceed this level are processed. Signals below the level are unaffected. A Threshold of 0 dB yields no processing. The available range is -60 dB to 0 dB.

As the Threshold control is decreased and more processing occurs, output level is typically reduced (compression) or increased (expansion). Adjust the Gain control to modify the output of the band to compensate if desired.

Ratio

Ratio determines the amount of gain reduction (or expansion) for the band. For example: When a band is set to Compress, a value of 2 (expressed as a 2:1 ratio) reduces the signal by half, with an input signal of 20 dB being reduced to 10 dB.

The available range depends on the value of the Type parameter, as follows:

- Ratio range in Compress mode is 1:1 to 60:1
- Ratio range in Expand mode is 1:1 to 1:4
- Ratio range in Gate mode is 1:1 to 8:1

- Attack** Attack sets the amount of time that must elapse once the input signal reaches the Threshold level before processing is applied. The faster the Attack, the more rapidly processing is applied to signals above the threshold.
- The available range is 50 microseconds to 100 milliseconds.
- Release** Release sets the amount of time it takes for processing to cease once the input signal drops below the threshold level. Slower release times can smooth the transition that occurs when the signal dips below the threshold, especially useful for material with frequent peaks. However, if you set too large of a Release time, processing for sections of audio with loud signals may extend to lengthy sections of audio with lower signals. The available range is 20 milliseconds to 2 seconds.
- Gain** The Gain control adjusts the output level of the band. Generally speaking, adjust the Gain control *after* the desired amount of processing is achieved with the Threshold control. The Gain control does not affect the amount of processing. The available range is ± 12 dB.
- Note: The Gain for each band can also be modified by control points in the EQ Display (see "Curve Control Points" on page 468).*
- Band Frequencies** For details about the band frequencies, see "Frequency Controls" on page 470.
- Band Enable & Solo** For details about the band enable and solo controls, see "Dynamics Meters" on page 471.

EQ Display

In the EQ Display, the entire audio spectrum from 20 Hz to 20 kHz is displayed along the horizontal axis. Gain and attenuation of the five band frequencies (up to ± 12 dB) are displayed along the vertical axis.

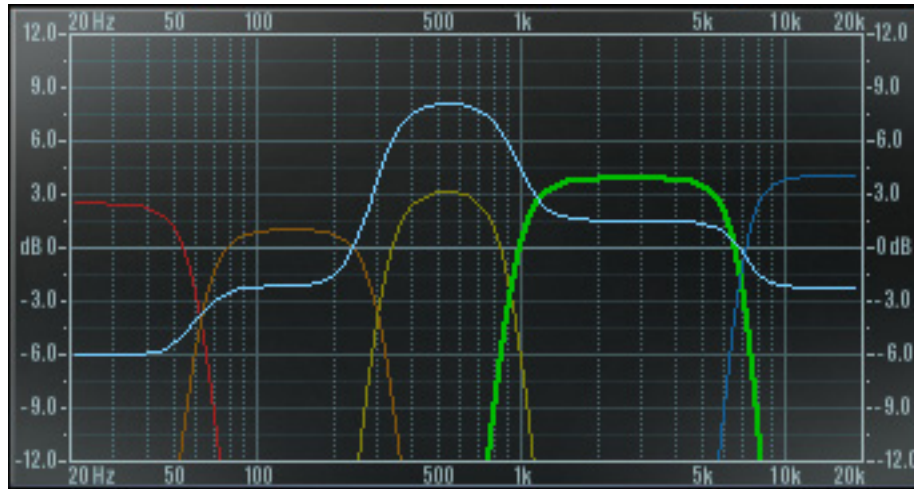


Figure 149. Precision Multiband EQ Display

Band Curves

The Band Curves show the relative frequency and gain settings of the bands. The sides of the colored curves are a representation of each band's frequency settings, and the top of each curve represents the band's gain setting.

Note: The currently selected band is displayed with a thicker bold line. Disabled bands (see "Band Enable & Solo" on page 467) are displayed with a thinner line.

EQ Response


The EQ Display also shows the processed EQ response dynamically as a light blue line across all bands (if the Dynamic EQ display option is enabled; see "EQ Display Switch" on page 473).

Curve Control Points

Band gain, center frequencies (cF), crossover frequencies (xF), and bandwidth can be modified by manipulating the colored band curves in the EQ Display with the cursor.


When the cursor is moved over the pre-defined "hot spots" in the EQ Display, the cursor changes shape to indicate that adjustments can be made. Each of these control points and their corresponding available adjustments are detailed below.

Adjusting Gain

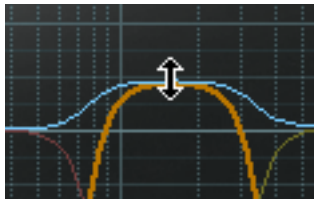

The gain of a band can be adjusted by click-dragging the top of its colored line. In this case the cursor changes to an up/down arrow when hovered over the hot spot to indicate the direction available for dragging.

Adjusting Gain and cf

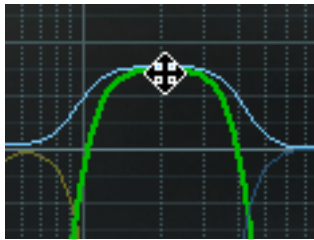


If the cursor is moved slightly lower than the above example, the gain and center frequency can be adjusted simultaneously, without adjusting the bandwidth. In this case the cursor changes to an up/down/left/right arrow when hovered over the hot spot to indicate the direction available for dragging.

Adjusting Gain and Bandwidth



If the cursor is moved to the upper-left region of the three center bands (LMF, MF, HMF), the gain and bandwidth can be adjusted simultaneously, without changing the center frequency. In this case the cursor changes to a diagonal arrow when hovered over the hot spot to indicate the direction available for dragging.

Adjusting xF

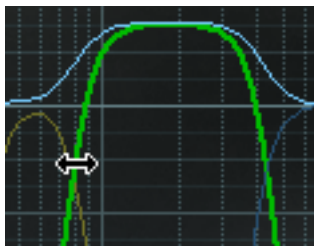

If the cursor is moved to where two bands crossover, the crossover frequencies can be adjusted, without changing the gain or center frequency. In this case the cursor changes to a left/right arrow when hovered over the hot spot to indicate the direction available for dragging.

Note: Frequencies can also be adjusted by using the *Frequency Value* parameters (see “*Frequency Values*” on page 470).

Frequency Controls

The crossover frequency (xF) between the bands and the center frequency (cF) of the Mid bands is shown at the bottom of the EQ Display (see [“EQ Display” on page 468](#)).

The frequencies for each band can be modified by entering the values directly and by manipulating the colored band curves.

Frequency Values




All band frequency values are always displayed. Values can be input directly using text entry (see [“Text Entry” on page 92](#)).

If a value is entered that is outside of the minimum and maximum allowable value, the entry field will not accept the change and the value for the entry field will remain unchanged.

For the center frequencies, if a value is entered that is still within the acceptable min/max range but the center frequency can not reach the input value because it would require a change to the width, then the nearest allowable value is set. If a lower or greater center frequency value is desired (i.e., the original center frequency value attempt), the width of the band must be reduced first, then the center frequency adjusted again. It's easiest to see the cF limits at the given width by dragging the center frequency with the mouse.

To modify the frequency (and gain) values using the EQ Display, see [“Curve Control Points” on page 468](#)).

Dynamics Meters

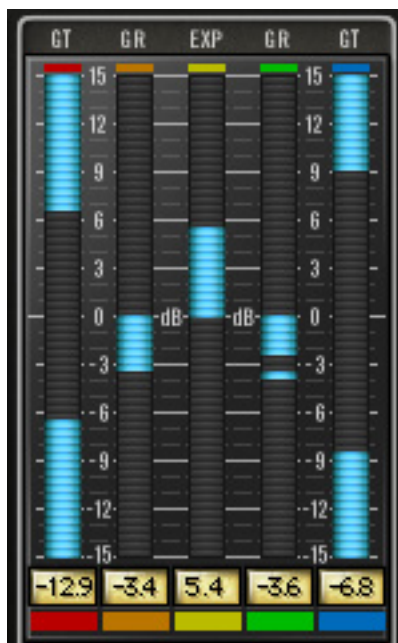

Realtime display of Precision Multiband dynamics processing is shown in the Dynamics Meters. This area also contains the band enable and band solo controls.

There is one vertical dynamics meter for each band. They are color coded to match the bands, and represent (from left to right) the LF, LMF, MF, HMF, and HF bands respectively. Dynamics processing for each band is indicated by light blue "LED-style" metering.

Zero dB is at the center of the meter, and the range is ± 15 dB. Downward/negative metering indicates compression is occurring on the band. Upward/positive metering indicates expansion is occurring.

In Gate mode, there is simultaneous inward metering from the top and bottom to the center, which provides a visual "gate" that opens and closes along with the gate processing.

Dynamics Meters signal peaks are held for 3 seconds before resetting.

Meter Labels



The labels above the Dynamics Meters reflect the mode that each band is in: GR (Gain Reduction) for compression, EXP for expansion, and GT for Gate.

 
Band Enable Buttons



Each band has an Enable button. The Enable button for the band is just below its dynamics meter.

The band is active when its Enable button is light blue. Click the button to toggle the active state of the band. Disabling bands does not reduce UAD CPU usage.

Band Solo Buttons




Each band has a Solo button. The Solo button for the band is just below its Enable button.

When one or more bands are in Solo mode, only the soloed bands can be heard and the other bands are muted.

The band is soloed when its Solo button is red. Click the button to toggle the solo state of the band. Soloing bands does not reduce UAD CPU usage.

Solo Display

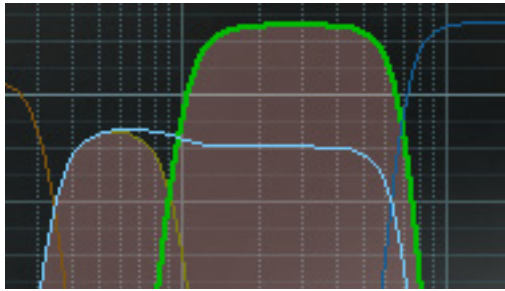


When a band is in Solo mode, its curve in the EQ Display is highlighted.

Note: In addition to the Solo buttons, you can also control-click a band in the EQ Display to put any band (or bands) into Solo mode.

Global Controls

Input Level Meter

The stereo peak/hold Input Meter displays the signal level at the input of the plug-in. Signal peaks are held for 3 seconds before resetting.

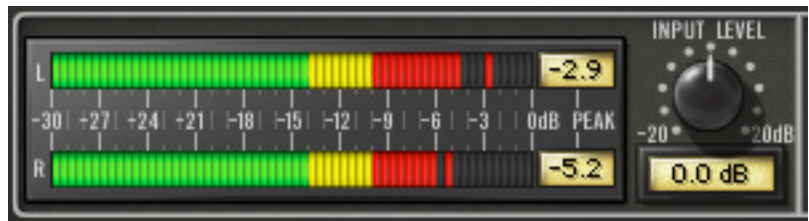

Input Level Knob

The Input Level knob controls the signal level that is input to the plug-in. Increasing the input may result in more processing, depending on the values of the band parameters. The default value is 0 dB. The available range is ± 20 dB.

Mix


The Mix control determines the balance between the original and the processed signal. The range is from 0% (no dynamics processing) to 100% (wet, processed signal only). The default value is 100%.



Note that at 0% the signal is still being processed by the band splitter in the plug-in. In linear phase mode the splitter is inaudible, but in minimum phase mode you may hear a slight coloration of the signal at 0%.

Output Level Meter

The stereo peak/hold Output Meter displays the signal level at the output of the plug-in.

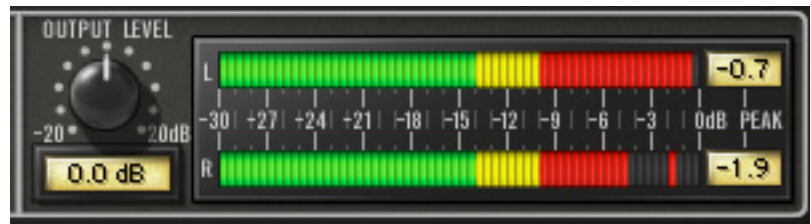

Signal peaks are held for 3 seconds before resetting.

Output Level Knob

The Output Level knob controls the signal level that is output from the plug-in. The default value is 0 dB. The available range is ± 20 dB.

EQ Display Switch

The EQ Display mode can be static or dynamic. The EQ Display switch determines the active mode. Click the switch to toggle the mode.

EQ

In this mode, the EQ Display is static. Only the colored frequency bands are displayed.

Dynamic EQ

In Dynamic EQ mode, a light blue line in the EQ Display indicates the actual frequency response of the processor in realtime.

Phase Mode Switch

The filter bank mode of Precision Multiband can be specified with the Phase Mode switch. Click the switch to toggle the mode. The default mode is Linear.

Both filter bank modes achieve the magnitude response of a Linkwitz-Riley filter and provide perfect magnitude reconstruction.

Linear

Use linear phase mode when perfectly phase-coherent results are desired.

Minimum

Minimum phase mode provides a more “analog” (i.e., colored) sound and uses slightly less UAD CPU.

While the DSP savings are rather negligible, there is a functional advantage to Min phase mode. When Precision Multiband is used as a track compressor, Min phase mode provides the advantage of rapid response time of the filters for smooth automation and filter sweeps.

Power Switch

The Power Switch determines whether the plug-in is active. Click the toggle button or the UA logo to change the state.

When the Power switch is in the Off position, plug-in processing is disabled and UAD DSP usage is reduced (unless “UAD-2 DSP LoadLock” on page 74 is enabled).

When the plug-in is bypassed with this switch (but not by the host bypass), the I/O meters and the Input Level knob remain active.

Precision Multiband Latency

The Precision Multiband requires a large processing buffer to perform its sonic wonders. This buffer results in a significantly larger latency than other UAD plug-ins, including all other upsampled plug-ins. You may use Delay-Comp or TrackAdv to compensate. See “Compensating Upsampled Plug-Ins” on page 108 for more information.

Important: *Compensating for Precision Multiband latency is not required if the host application supports full plug-in delay compensation throughout the entire signal path, or when it is used only on the outputs. See “Host PDC Implementation” on page 101.*

CHAPTER 47

Pultec and Pultec-Pro

Overview

The Pultec EQP-1A Program Equalizer and Pultec MEQ-5 plug-ins are faithful electronic reproductions of the classic hardware equalizers. Our DSP wizards have ensured that every revered sonic nuance of these vintage processors are faithfully maintained.

UAD Pultec and UAD Pultec-Pro

The UAD Pultec plug-in is the EQP-1A Program Equalizer that was introduced in version 2.2 to much acclaim. UAD Pultec-Pro was introduced in version 3.5, and includes both the EQP-1A and MEQ-5 modules. The EQP-1A is identical in UAD Pultec and UAD Pultec-Pro.

In designing the Pultec equalizer plug-ins, we performed detailed analyses of the signal path and equalization characteristics of selected well-maintained, in-spec Pultec equalizers used regularly in professional studios. A “golden unit” was selected, and the resulting model reproduces the measured equalization and signal path characteristics to within a fraction of a dB mean error for all knob settings.

All of the unique features of the original Pultec EQ’s are included in the plug-ins, including the separate boost and attenuation controls, the smooth, sweet top end, and the ability to dial in seemingly dangerous amounts of boost without getting into trouble. All front panel controls are included, and all of the knob tapers are accurately modeled. The Pultec has long been a choice of recording and mastering engineers for its ability to bring out individual frequency ranges without significantly altering other frequencies. In addition, the Pultec is one of those magical pieces of gear that makes audio program sound better just by passing through it. The sophisticated modeling technology used in the Pultec plug-ins captures both of these key attributes.

Note: *The Pultec and Pultec-Pro plug-ins always operates at a high internal sample rate for maximum accuracy. Therefore, the UAD DSP load does not increase even when processing audio at the highest sample rates.*

Pultec Latency

The Pultec and Pultec-Pro plug-ins introduce an additional 13 samples of delay due to upsampling when the session sample rate is below 100 kHz. This additional latency does not occur at sample rates above 100 kHz. You may enter a value of 13 in the “Samples” parameter in DelayComp or TrackAdv to compensate. See [“Compensating Upsampled Plug-Ins”](#) on page 108 for more information.

Note: *Compensating for Pultec and Pultec-Pro is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used on outputs. See [“Host PDC Implementation”](#) on page 101.*

Pultec EQP-1A Screenshot



Figure 150. The Pultec EQP-1A Program Equalizer plug-in window

Pultec EQP-1A Controls

The EQP-1A can control three frequency ranges simultaneously, using three groups of interacting parameters.

The first group controls the low frequencies and has three controls: boost, attenuation, and frequency select. The second group controls the high frequencies and has three controls: boost, bandwidth, and frequency select. The third group also controls the highs and has two controls: attenuation amount and frequency select.

The placement and grouping of the sections and their related controls are shown in [Figure 151](#) on page 477.



Figure 151. Control grouping within the Pultec EQP-1A

In/Out Toggle Switch

This is a signal bypass control. It allows you to compare the processed and un-processed signal. It does NOT reduce UAD DSP load.

In the hardware EQP-1A, the audio is still slightly colored even when the switch is in the Out position. This is due to the fact that the signal is still passing through its circuitry. Because the plug-in emulates the hardware in every regard, the signal will be slightly processed when this switch is in the Out position. If a true bypass is desired, use the On/Off rotary switch.

On/Off Rotary Switch

This switch enables or disables the EQP-1A altogether. You can use this switch to compare the processed settings to that of the original signal, or to bypass the plug-in to reduce UAD DSP load (load is not reduced if ["UAD-2 DSP LoadLock"](#) on page 74 is enabled).

Low Frequency Controls

CPS Selector Switch

This switch determines the frequency of the low shelf portion of the equalizer. CPS is an acronym for Cycles Per Second (Hertz). Four frequencies are available: 20, 30, 60, and 100 Hertz.

Boost Knob

This knob determines the amount of low shelf gain to be applied to the frequency set by the CPS switch.

Attenuation Knob

This knob determines the amount of low shelf cut to be applied to the frequency set by the CPS switch.

Note: In the documentation supplied with hardware version of the EQP-1A, it is recommended that both Boost and Attenuation not be applied simultaneously because in theory, they would cancel each other out. In actual use however, the Boost control has slightly higher gain than the Attenuation has cut, and the frequencies they affect are slightly different too. The EQ curve that results when boost and attenuation are simultaneously applied to the low shelf is an additional feature.

High Frequency Controls

- KCS Selector Switch** This switch determines the frequency of the high boost portion of the equalizer. KCS is an acronym for KiloCycles per Second (kiloHertz). Seven frequencies are available (all in kiloHertz): 3, 4, 5, 8, 10, 12, and 16.
- Bandwidth Knob** This knob sets the proportion of frequencies surrounding the center frequency (determined by the KCS switch) to be affected by the high boost. This is a 'Q' control. Lower values yield a narrower band and effect fewer frequencies.
- Boost Knob** This controls sets the amount of gain for the high frequency portion of the equalizer.

High Attenuation Controls

- Attenuation Selector Switch** This switch determines the frequency of the high frequency attenuator. Three frequencies are available (all in kiloHertz): 5, 10, and 20.
- Attenuation Knob** This knob determines the amount of high shelf cut to be applied to the frequency set by the Attenuation Selector switch.



Pultec MEQ-5 Screenshot



Figure 152. The Pultec-Pro MEQ-5 Midrange Equalizer plug-in window

Pultec MEQ-5 Controls

The MEQ-5 can control three frequency ranges simultaneously, using three groups of interacting parameters.

The first group controls the low–mid frequencies and has two controls: frequency select and boost. The second group controls the mid frequencies and has two controls: frequency select and attenuation. The third group controls high-mids and has two controls: frequency select and boost.

The placement and grouping of the sections and their related controls are shown in [Figure 153](#).



Figure 153. Control grouping within the Pultec-Pro MEQ-5

On/Off Toggle Switch

This switch disables the MEQ-5 portion of Pultec-Pro. It allows you to compare the processed and unprocessed signal of the MEQ-5. When in the out position, the UAD DSP load is reduced (unless “UAD-2 DSP LoadLock” on [page 74](#) is enabled).

In the hardware MEQ-5, the audio is still slightly colored even when the switch is in the Out position and the peak/dip controls are at zero. This is due to the fact that the signal is still passing through its circuitry. Because the plug-in emulates the hardware in every regard, the signal will be slightly processed when this switch is in the In position and the peak/dip controls are at zero. If a true bypass is desired, use the host disable switch.

Low Peak Controls

Frequency Selector Switch This switch determines the frequency of the low-midrange portion of the equalizer. Five frequencies are available: 200 Hz, 300 Hz, 500 Hz, 700 Hz, and 1 kHz.

Boost Knob This knob determines the amount of low-midrange “Peak” (gain) to be applied to the frequency set by the low-midrange frequency selector.

Dip Controls

Frequency Selector Switch This switch determines the frequency of the midrange portion of the equalizer. Eleven frequencies are available: 200 Hz, 300 Hz, 500 Hz, 700 Hz, 1 kHz, 1.5 kHz, 2 kHz, 3 kHz, 4 kHz, 5 kHz, and 7 kHz.

Attenuation Knob This knob determines the amount of midrange “Dip” (cut) to be applied to the frequency set by the midrange frequency selector.

High Peak Controls

Frequency Selector Switch This switch determines the frequency of the high-midrange portion of the equalizer. Five frequencies are available: 1.5 kHz, 2 kHz, 3 kHz, 4 kHz, and 5 kHz.

Boost Knob This knob determines the amount of high-midrange “Peak” (gain) to be applied to the frequency set by the high-mid frequency selector.

MEQ-5 Response Curves

We’ve included a few frequency response plots that illustrate the response curves of the MEQ-5. All plots were taken at a sample rate of 192 kHz.

Low Peak Response

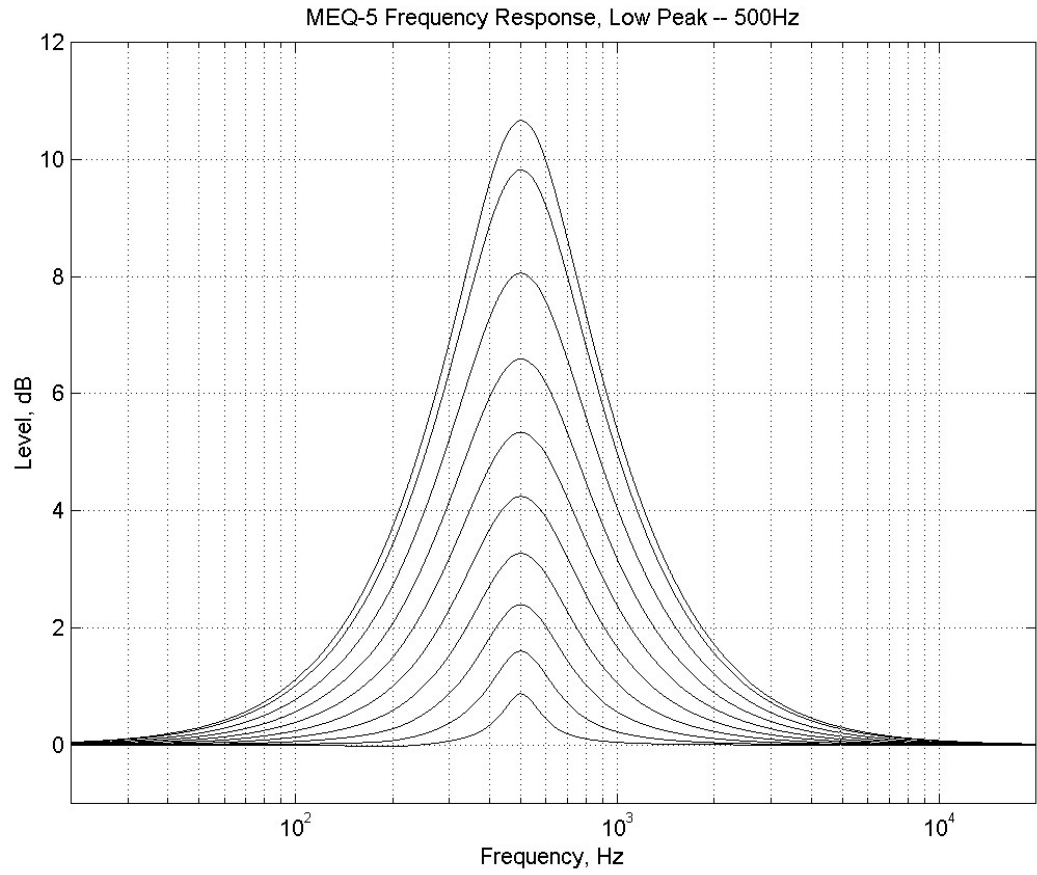


Figure 154. Pultec MEQ-5 Low Peak Response

Dip Response

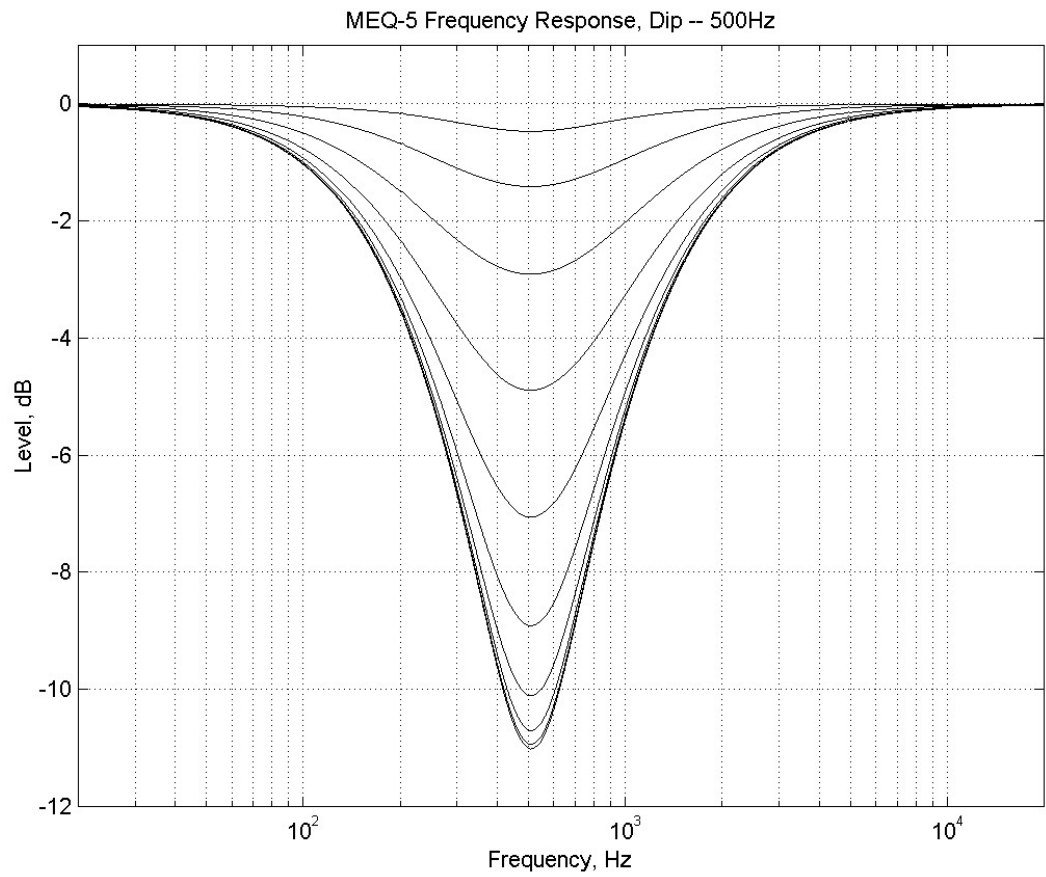


Figure 155. Pultec MEQ-5 Dip Response

High Peak Response

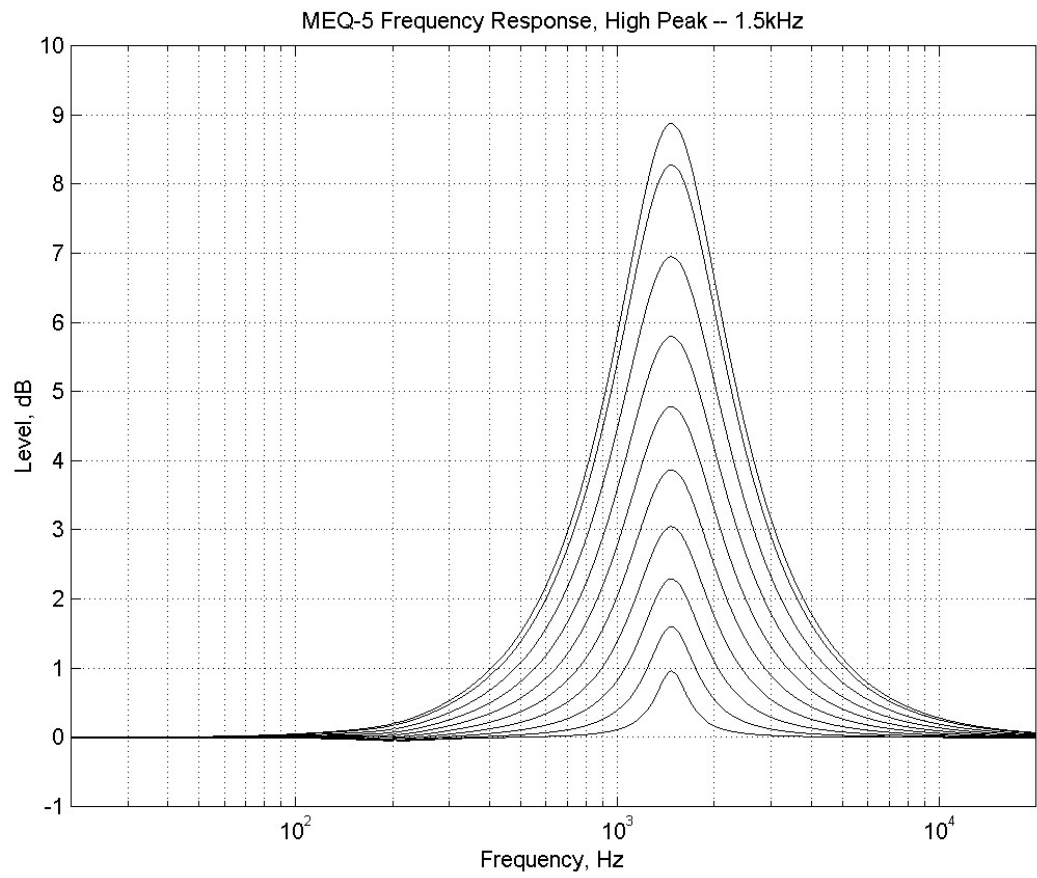


Figure 156. Pultec MEQ-5 High Peak Response

CHAPTER 48

RealVerb Pro

Overview

RealVerb Pro uses complex spatial and spectral reverberation technology to accurately model an acoustic space. What that gets you is a great sounding reverb with the ability to customize a virtual room and pan within the stereo spectrum.

Room Shape and Material

RealVerb Pro provides two graphic menus each with preset Room Shapes and Materials. You blend the shapes and material composition and adjust the room size according to the demands of your mix. Controls are provided to adjust the thickness of the materials – even inverse thickness for creative effects. Through some very clever engineering, the blending of room shapes, size and materials may be performed in real-time without distortion, pops, clicks or zipper noise. Once you've created your custom room presets, you can even morph between two presets in real-time, with no distortion.

Resonance, Timing and Diffusion

RealVerb Pro also includes intuitive graphic control over equalization, timing and diffusion patterns. To maximize the impact of your recording, we put independent control over the direct path, early reflections and late-field reverberation in your hands.

Stereo Soundfield Panning

Capitalizing on the psychoacoustic technology that went into the design of RealVerb 5.1, we have incorporated some of those principals into RealVerb Pro. Our proprietary Stereo Soundfield Panning allows you to spread and control the signal between stereo speakers creating an impression of center and width. The ability to envelop your listener in a stereo recording is an entirely new approach to reverb design.

Don't rely on your old standby. Let RealVerb Pro bring new quality and space to your recordings!

RealVerb Pro Background

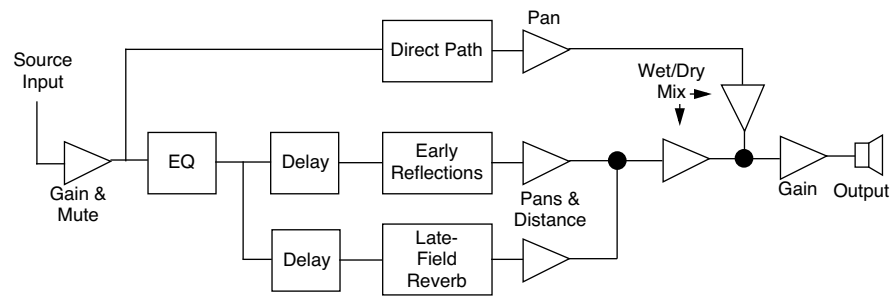


Figure 157. RealVerb Pro signal flow

Figure 157 illustrates the signal flow for RealVerb Pro. The input signal is equalized and applied to the early reflection generator and the late-field reverb unit. The resulting direct path, early reflection, and late-field reverb are then independently positioned in the soundfield.



Figure 158. The RealVerb Pro plug-in window

The RealVerb Pro user interface is similarly organized (see [Figure 158](#)). Reflected energy equalization is controlled with the Resonance panel. The pattern of early reflections (their relative timing and amplitudes) is determined by the room shapes and sizes in the Shape panel; early reflection predelay and overall energy is specified at the top of the Timing panel. The Material panel is used to select relative late-field decay rates as a function of frequency. The overall late field decay rate is chosen along with the room diffusion, late-field predelay, and late-field level at the bottom of the Timing panel. Finally, the Positioning panel contains controls for the placement of the source, early reflections, and late-field reverberation.

Spectral Characteristics

The Shape and Material panels specify the room shape, room size, room material and thickness. These room properties affect the spectral characteristics of the room's reflections.

Shape and Size

The pattern of early reflections in a reverb is determined by the room shape and size. RealVerb Pro lets you specify two room shapes and sizes that can be blended to create a hybrid of early reflection patterns. There are 15 room shapes available, including several plates, springs, and classic rooms; room sizes can be adjusted from 1–99 meters. The two rooms can be blended from 0–100%. All parameters can be adjusted dynamically in real time without causing distortion or other artifacts in the audio.

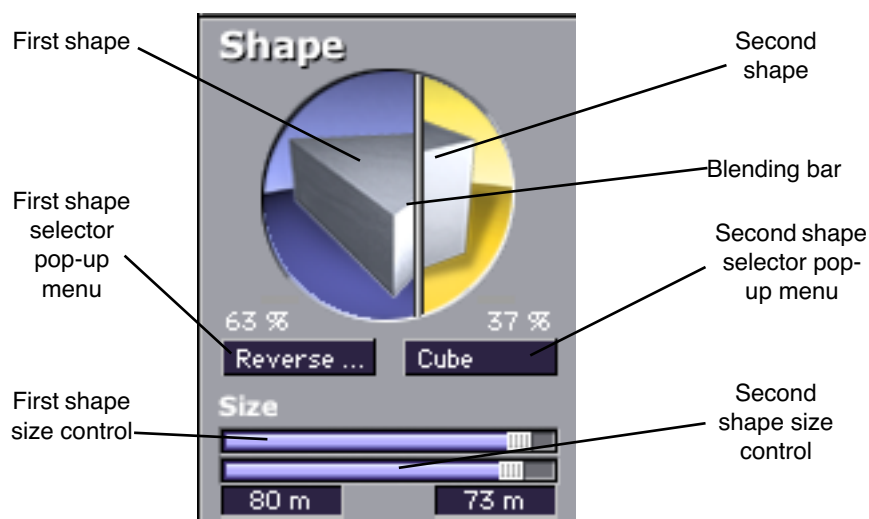


Figure 159. RealVerb Pro Shape panel

To configure the room shape and size:

1. Select a room shape from the first (left) pop-up menu. The selected shape appears in the left side of the Shape circle. Adjust the room size with the top horizontal slider.
2. Select a room shape from the second (right) pop-up menu. The selected shape appears in the right side of the Shape circle. Adjust the room size with the bottom horizontal slider.
3. Blend the early reflection patterns of the two rooms by dragging the Blending bar. The relative percentages of the two rooms appear above their pop-up menus. Drag to the right to emphasize the first room shape; drag to the left to emphasize the second room shape. To use only one room shape, drag the Blending bar so the shape is set to 100%.

The resulting early reflection pattern is displayed at the top of the Timing panel (see [Figure 162 on page 493](#)), where each reflection is represented by a yellow vertical line with a height indicating its arrival energy, and a location indicating its arrival time.

Material and Thickness

The material composition of an acoustical space affects how different frequency components decay over time. Materials are characterized by their absorption rates as a function of frequency—the more the material absorbs a certain frequency, the faster that frequency decays. RealVerb Pro lets you specify two room materials with independent thicknesses, which can be blended to create a hybrid of absorption and reflection properties. For example, to simulate a large glass house, a blend of glass and air could be used.

There are 24 real-world materials provided, including such diverse materials as brick, marble, hardwood, water surface, air, and audience. Also included are 12 artificial materials with predefined decay rates. The thickness of the materials can be adjusted to exaggerate or invert their absorption and reflection properties. For a description of the different room materials, see [“About the Materials” on page 489](#).

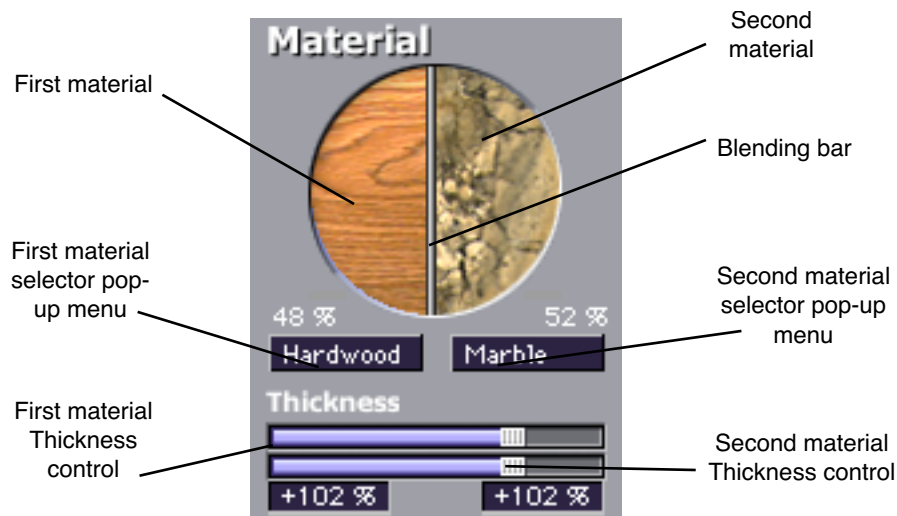


Figure 160. RealVerb Pro Material panel

Note: While materials are used to control decay rates as a function of frequency, the overall decay rate of the late-field reverberation is controlled from the Timing panel (see Figure 162 on page 493).

To configure the room material and thickness:

1. Select a room material from the first (left) pop-up menu. The selected material appears in the left side of the Material circle.
2. Adjust the thickness for the first material with the top horizontal slider:
 - A default thickness of +100% yields normal, real-world decays for the material.
 - Thicknesses beyond the default (up to +200%) exaggerate how the frequencies are absorbed and reflected.
 - Negative thicknesses invert the response of the material. If the material normally absorbs high frequencies (causing them to decay quickly) and reflects low frequencies (causing them to decay slowly), a negative thickness will instead absorb low frequencies (causing them to decay quickly) and reflect high frequencies (causing them to decay slowly).
 - A thickness of 0% yields decay rates that are not affected by the material.
3. Select a material from the second (right) pop-up menu. The selected material appears in the right side of the Material circle. Adjust the material thickness with the bottom horizontal slider.

About the Materials

4. Blend the absorption properties of the two materials by dragging the Blending bar. The relative amount of each material, expressed as a percentage, appears above their respective pop-up menu. Drag the Blending bar to the right to emphasize the first material, and drag it to the left to emphasize the second material. To use only one room material, drag the Blending bar so the material is set to 100%.

Some materials absorb high frequencies and reflect low frequencies, while other materials absorb low frequencies and reflect high frequencies. This characteristic is determined by the material surface and density.

Fiberglass, for example, absorbs high frequencies. When high frequencies strike fiberglass they bounce around inside the fibers and lose much of their energy.

At a thickness of 100%, fiberglass rolls off the high frequencies, a little bit each millisecond. After a while the high frequencies dissipate and the low frequencies linger. If we were to take fiberglass and increase its thickness to +200%, the high frequencies would roll off even faster. At +200%, this high frequency decay happens at twice its normal rate, producing a very heavy reverberant tail. At -200%, a very "sizzly" late field is created.

Some materials, such as plywood, naturally absorb low frequencies while reflecting high frequencies. Since plywood is usually very flat with little surface texture to capture high frequencies, high frequencies tend to be reflected. At +100%, the reverberation produced is very sizzly and increasingly bright. At -100%, it is very heavy.

Keeping this in mind, if you look at the graphics in the material control panel, you can get a sense of how chosen materials, material blend, and thickness will affect the decay rate as a function of frequency. Hard materials that have lots of small cavities (Brick, Gravel, Plaster on Brick) and soft materials (Carpet, Grass, Soil) tend to absorb high frequencies. Flat, somewhat flexible materials (Heavy Plate Glass, Hardwood, Seats) tend to reflect high frequencies. Marble is the one material that tends to uniformly reflect all frequencies.

You probably noticed the artificial materials the top of the Materials menu. These are materials designed to have predictable behavior and can be very handy for achieving a desired reverberation preset when you know what decay rates you desire. All these materials preferentially absorb high frequencies; they give the selected decay time at low frequencies, and a much shorter decay time at high frequencies. The frequency in each graphic is the transi-

tion frequency, the frequency at which the decay rate is halfway between the low-frequency and high-frequency values. At 100% thickness, the ratio of low-frequency to high-frequency decay times is 10:1. This means that the high frequencies will decay 10 times faster than the low frequencies. At 200% thickness, this is multiplied by two (high frequencies decay at 20x the rate of the low frequencies). At negative 100%, the sense of low frequency and high frequency is swapped —low frequencies decay 10 times faster than the high frequencies.

Many hardware and software reverbs tend to compensate for the high frequency absorption that air provides. RealVerb Pro instead provides “Air” as a material. If you do not choose to use Air as one of the materials, you can effectively compensate for the high frequency absorption properties of air with the Resonance filters. Set the right-hand Transition Frequency slider to 4.794 kHz, and bring the level down about -10 dB to -15 dB for large to huge rooms, and down about -4 dB to -9 dB for small to medium rooms.

To help you out, the following lists classify the materials under two headings: those that tend to reflect high frequencies, and those that tend to absorb them. They are listed in order of their transition frequencies, from lowest to highest.

Table 38. Materials with high-frequency absorption

Audience	Fiberglass
Cellulose	Grass
Drapery	Plaster on Brick
Plaster on Concrete Block	Water Surface
Soil	Sand
Gravel	Brick
Paint on Concrete Block	Air
Carpet	

Table 39. Materials with high-frequency reflection

Heavy Plate Glass	Seats
Plywood	Marble
Hardwood	Concrete Block
Glass Window	Linoleum
Cork	

Resonance (Equalization)

The Resonance panel has a three-band parametric equalizer that can control the overall frequency response of the reverb, affecting its perceived brilliance and warmth. By adjusting its Amplitude and Band-edge controls, the equalizer can be configured as shelf or parametric EQs, as well as hybrids between the two.

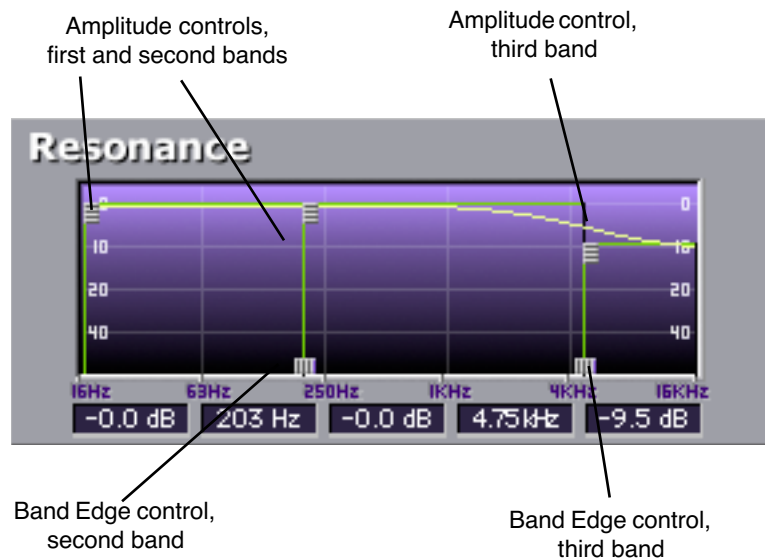


Figure 161. RealVerb Pro Resonance panel

To configure the reverb's Resonance as a parametric EQ:

1. Drag the Band Edge controls horizontally for the second and third bands to the desired frequencies. The first band is preset to 16 Hz. The frequencies for all three bands are indicated in the text fields at the bottom of the Resonance panel.
2. Adjust the amplitude of the bands (from -60 dB to 0 dB) by dragging their Amplitude controls either up or down. The amplitude values for all three bands are indicated in the text fields at the bottom of the Resonance panel. The shape of the EQ curve is displayed in the Resonance graph.

To configure the reverb's Resonance as a high-shelf EQ:

1. Drag the Amplitude control for the second EQ band all the way down.
2. Drag the Amplitude controls for the first and third bands all the way up, to equal values.

3. Adjust the Band-edge controls for the second and third bands so they are adjacent to each other. To raise the frequency for the high-shelf, drag to the right with the Band-edge control for the second band. To lower the frequency for the high-shelf, drag to the left with the Band-edge control for the third band.
4. To attenuate the frequencies above the shelf frequency, drag the Amplitude controls for the first and second bands up or down. For a true shelf EQ, make sure these amplitudes are set to equal values.

To configure the reverb's Resonance as a low-shelf EQ:

1. Drag the Amplitude control for the second EQ band all the way up.
2. Drag the Amplitude controls for the first and third bands all the way down, to equal values.
3. Adjust the Band-edge controls for the second and third bands so they are adjacent to each other. To raise the frequency for the low-shelf, drag to the right with the Band-edge control for the second band. To lower the frequency for the low-shelf, drag to the left with the Band-edge control for the third band.
4. To attenuate the frequencies below the shelf frequency, drag the Amplitude controls for the first and second bands up or down. For a true shelf EQ, make sure these amplitudes are set to equal values.

Timing

The Timing panel offers control over the timing and relative energies of the early reflections and late-field reverberations. These elements affect the reverb's perceived clarity and intimacy. The early reflections are displayed at the top of the Timing panel, with controls for Amplitude and Pre-delay. The late-field reverberations are displayed at the bottom, with controls for Amplitude, Pre-delay, and Decay Time. To illustrate the relation between both reverb components, the shape of the other is represented as an outline in both sections of the Timing panel (see [Figure 162](#)).

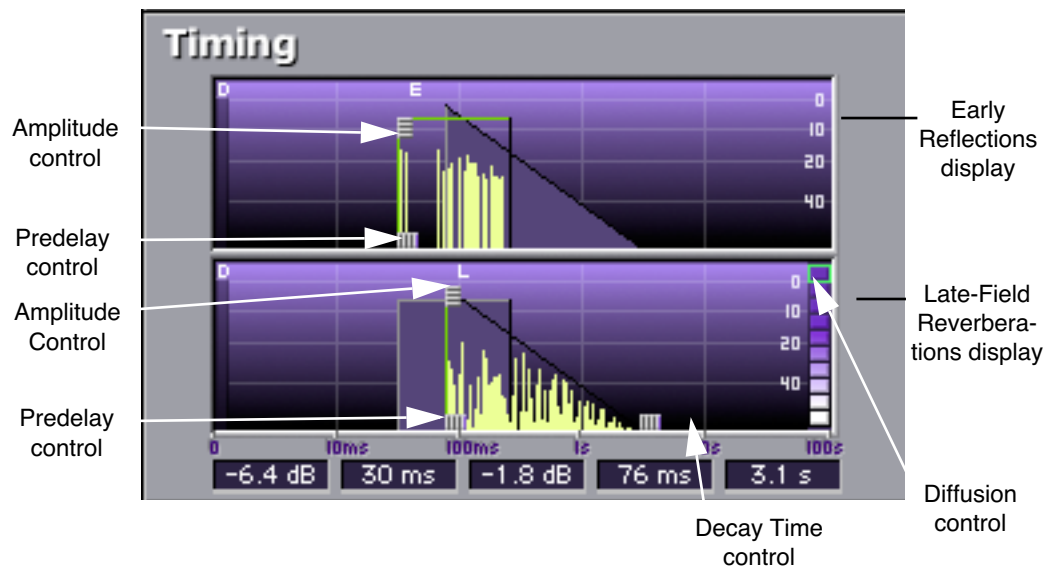


Figure 162. RealVerb Pro Timing panel

To adjust the timing of the early reflections:

1. Drag the Amplitude control for the early reflections up or down (from -80 dB to 0 dB) to affect the energy of the reflections. The Amplitude value is indicated in the text field at the bottom of the Timing panel.
2. Drag the Predelay control for the early reflections left or right (from 1 – 300 milliseconds) to affect the delay between the dry signal and the onset of early reflections. The Pre-delay time is indicated in the text field at the bottom of the Timing panel.

Note: The length in time of the early reflections cannot be adjusted from the Timing panel, and instead is determined by the reverb's shape and size (see Figure 159).

To adjust the timing of the late-field reverberations:

1. Drag the Amplitude control for the late-field reverberations up or down (from -80 dB to 0 dB) to affect the energy of the reverberations. The Amplitude value is indicated in the text field at the bottom of the Timing panel.
2. Drag the Predelay control for the late-field reverberations left or right (from 1 – 300 milliseconds) to affect the delay between the dry signal and the onset of late-field reverberations. The Predelay time is indicated in the text field at the bottom of the Timing panel.

3. Drag the Decay Time control for the late-field reverberations left or right (from 0.10–96.00 seconds) to affect the length of the reverb tail. The Decay Time is indicated in the text field at the bottom of the Timing panel.
4. To affect how quickly the late-field reverberations become more dense, adjust the Diffusion control at the right of Late Reflection display in the Timing panel. The higher the Diffusion value (near the top of the display), the more rapidly a dense reverb tail evolves.

Positioning

One of the unique features of RealVerb Pro is the ability to separately position the direct path, early reflections, and late-field reverberation. The Position panel (see [Figure 163](#)) provides panning controls for each of these reverb components. In addition, a proprietary Distance control adjusts perceived source distance. These controls allow realistic synthesis of acoustic spaces—for instance listening at the entrance of an alley way, where all response components arrive from the same direction, or listening in the same alley next to the source, where the early reflections and reverberation surround the listener.



Figure 163. RealVerb Pro Positioning panel

To pan the direct (dry) signal:

1. Drag the Direct slider left or right. A value of <100 pans the signal hard left; a value of 100> pans the signal hard right. A value of <0> places the signal in the center of the stereo field.

Set the positioning for the early reflection or late-field reverberation with any of the following methods:

1. Drag the left and right slider handles to adjust the stereo width. The length of the blue slider is adjusted. For a full stereo signal, drag the left handle all the way to left, and right handle all the way to the right.
2. Drag the blue center of the slider left or right to set the positioning of the signal. If you drag all the way to the left or right, the stereo width is adjusted. For a mono signal panned hard left or right, drag the slider all the way to the left or right.

Distance

RealVerb Pro allows you to control the distance of the perceived source with the Distance control in the Positioning panel (see [Figure 163](#)). In reverberant environments, sounds originating close to the listener have a different mix of direct and reflected energy than those originating further from the listener.

To adjust the distance of the source:

1. Drag the Distance slider to the desired percentage value. Larger percentages yield a source that is further away from the listener. A value of 0% places the source as close as possible to the listener.

Wet/Dry Mix

The wet and dry mix of the reverb is controlled from the Mix slider in the Positioning panel (see [Figure 163](#)). The two buttons above this slider labeled “D” and “W” represent Dry and Wet; clicking either will create a 100% dry or 100% wet mix.

Levels

The Levels panel adjusts the Input Gain and Output Gain for RealVerb Pro. These levels are adjusted by dragging the sliders to the desired values. You can mute the input signal by clicking the Mute button.

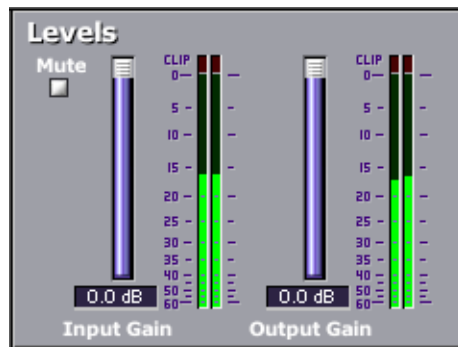


Figure 164. RealVerb Pro Levels panel

Morphing

All RealVerb Pro controls vary continuously using proprietary technology to smoothly transition between selected values. This capability enables RealVerb Pro to morph among presets by transitioning between their parameter sets. This approach is in contrast to the traditional method of morphing by cross-fading between the output of two static reverberators. The method employed by RealVerb Pro produces more faithful, physically meaningful intermediate states.

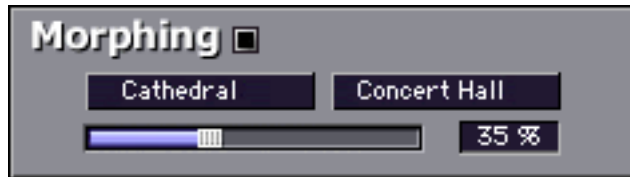


Figure 165. RealVerb Pro Morphing panel

Figure 165 depicts the Morphing Panel. Click the Morphing Mode button to enable Morphing mode. When RealVerb Pro is in morphing mode, the other RealVerb Pro spectral controls are grayed out and cannot be edited. In morphing mode, two presets are selected using the pull-down menus. Once the desired presets are selected in the pull-down menus, the morphing slider is used to morph from one preset to the other.

When in Morphing mode (Figure 166 on page 497), non user-adjustable controls will change their appearance and will no longer be accessible. When inserted on a Send effect, the 'W' button automatically turns on (to keep the mix at 100% wet).

On an insert effect, the Mix will change back and forth between the two mix values of each preset.



Figure 166. RealVerb Pro in Morphing mode

RealVerb Pro Preset Management

Factory Presets In the preset menu there are thirty factory presets that can be changed by the user. Any modification to a preset will be saved even if you change presets. If you want to return all the presets to their default settings, select “Reset all to Defaults” at the bottom of the presets menu.

Edits to any and all presets in the list are maintained separately within each instance of a plug-in within a session.

Using Host Application Management

Most host applications include their own method of managing plug-in presets.

For example, the currently selected preset is saved in Cubase/Nuendo when “Save Effect” is used. Morphing parameters and the solo/mute buttons (wet, dry, input) are not saved.

All presets and programs are saved in Cubase/Nuendo when “Save Bank” is used. They are also saved in the session file for each instance of the plug-in.

Editing the name in Cubase/Nuendo modifies the current preset's name. The new name will appear in all preset select lists, and will be saved with the session, bank or effect.

RealVerb Pro Preset List

Table 40. RealVerb Pro Presets

Acoustic Guitar	Hairy Snare
Apartment Living	High Ceiling Room
Big Ambience	Jazz Club
Big Bright Hall	Large Bathroom
Big Cement Room	Large Dark Hall
Big Empty Stadium	Long Tube
Big Snare	Medium Drum Room
Big Warm Hall	Nice Vocal 1
Cathedral	Nice Vocal 2
Church	Slap Back
Dark Ambience	Small Bright Room
Drums in a Vat	Small Dark Room
Eternity	Sparkling Hall
Far Away Source	Tight Spaces
Ghost Voice	Wooden Hall

CHAPTER 49

Boss CE-1 Chorus Ensemble

Overview

The Boss CE-1 Chorus Ensemble is another classic effect faithfully reproduced by our ace modeling engineers. The CE-1 is considered by many to be the definitive chorus effect, renowned for its rich and unique timbres.

Even for the mix engineer, stomp boxes can provide “secret weapon effects” not found any other way. In 1976, BOSS originated the chorus effect pedal, and nobody has come close to matching the CE-1’s captivating chorus sound since then. Its unmistakable warm analog stereo chorus and vibrato have been heard on countless tracks; particularly on guitars, bass and electric keys. Universal Audio has been commissioned by Roland to accurately model the CE-1, and the results are nothing short of spectacular.

Boss CE-1 Screenshot



Figure 167. The Boss CE-1 plug-in window

Boss CE-1 Controls

The Boss CE-1 has two operating modes, chorus and vibrato. Only one mode can be active at a time. The operating mode is set using the Vibrato/Chorus switch.

Clip LED



The red Clip LED illuminates when signal peaks in the plug-in occur.

Normal/Effect Switch



This is an effect bypass switch. Click to enable/disable the chorus or vibrato effect. The effect that will be heard is determined by the Vibrato/Chorus switch.

The active state is black text. The inactive state has gray text. The default state is effect.

This is not a plug-in bypass switch. The hardware CE-1 has a slight affect on the sound even when the effect is “bypassed” in normal mode. We have modeled the plug-in faithfully and like the hardware unit, when the effect is bypassed with this switch, audio is still processed to sound like the CE-1 in “normal” mode. To disable audio processing, use the CE-1 Power Switch.


Rate LED



The yellow Rate LED blinks according to the current low-frequency oscillator (LFO) rate. When CE-1 is in Vibrato mode, the LFO rate is determined by the vibrato rate knob. When in Chorus mode, this LED is affected by the Intensity knob.

Note: In Chorus mode, the fastest LFO rate is slower than the slowest LFO rate in Vibrato mode.

Vibrato/Chorus Switch

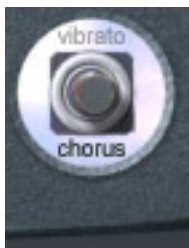

This switch determines the operating mode of the plug-in. Click to switch between chorus and vibrato modes.

The active mode is black text. The inactive mode has gray text. The default mode is chorus.

Stereo Mode Switch



The Stereo Mode switch determines the operating mode of CE-1 when the plug-in is used in a configuration with stereo input, such as a stereo audio track insert or stereo effects bus.

The hardware CE-1 has only a monophonic input. Its output can be mono (wet and dry signal mixed at one output jack) or stereo (dry signal in one output jack, wet signal in other output jack). We've adapted the model for the modern era, enabling a true stereo input.

Note: This switch has no affect in a mono-in/mono-out or mono-in/stereo-out configuration.

When CE-1 is used in a stereo input configuration, the Stereo Mode switch affects the output as follows:

Dual Mode

In Dual mode the CE-1 behaves as a dual-mono device, functioning as two independent CE-1's, each running in mono mode on one side of the stereo signal.

The left output contains a mix of the dry left input signal and the processed left channel signal, while the right output contains a mix of the dry right input signal and the processed right channel signal. Additionally, the LFO's of the dual CE-1 channels are 90 degrees out of phase (quadrature) for maximum effect.

Classic Mode

In Classic mode, the CE-1 behavior is similar to that of a mono-in/stereo out configuration. The left and right channel inputs are mixed to mono, and the dry signal (mixed left and right channels) appear at the left output, and the wet effect signal appears at the right output.

Output Level Knob



This knob determines the signal level at the output of the plug-in. The range is 0 – 100%.

Note: This is not a wet/dry mix control.

Chorus Intensity Knob



When CE-1 is in chorus mode, the amount of chorusing effect is determined by this knob.

Note: When in vibrato mode, chorus intensity has no affect.

Vibrato Controls



These two knobs control rate and depth of the vibrato effect when CE-1 is in vibrato mode.

Depth Knob

The depth knob controls the intensity of the vibrato effect.

Rate Knob

The rate knob controls the rate of the vibrato LFO. The rate is indicated by the the Rate LED indicator.

***Note:** When in chorus mode, the vibrato controls have no affect.*

Power Switch



This switch determines whether the plug-in is active. This is useful for comparing the processed settings to the original signal, or to bypass the plug-in to reduce the UAD DSP load (load is not reduced if ["UAD-2 DSP LoadLock"](#) on page 74 is enabled).

Click the rocker switch to change the Power state.

CHAPTER 50

Roland Dimension D

Overview

The Roland SDD-320 Dimension D is another classic effect faithfully reproduced by our ace modeling engineers. The Dimension D is a one of a kind studio gem that adheres to the principle of doing one thing, and doing it extremely well. Its one and only function: some of the best sounding stereo chorus ever made. However, the Dimension D is more than a chorus, it is really a unique sound enhancer for adding spatial effects to mono or stereo sources. The Dimension D does not create a dramatically new sound, but enhances the characteristics of any voice or instrument, and gives a new “dimension” without the apparent movement of sound produced by other chorus devices. The strength of the Dimension D is in its subtlety.

This classic 1979 Roland device has been heard on countless records, from luminaries such as Peter Gabriel, Talking Heads and INXS. Entrusted by the Roland company to emulate this classic studio tool, Universal Audio went to great lengths to preserve this Bucket Brigade chorus with all its unique design elements and sonic characteristics. With only four pushbutton ‘dimension’ settings, the Dimension D is the ultimate in functional simplicity.

Roland Dimension D Screenshot

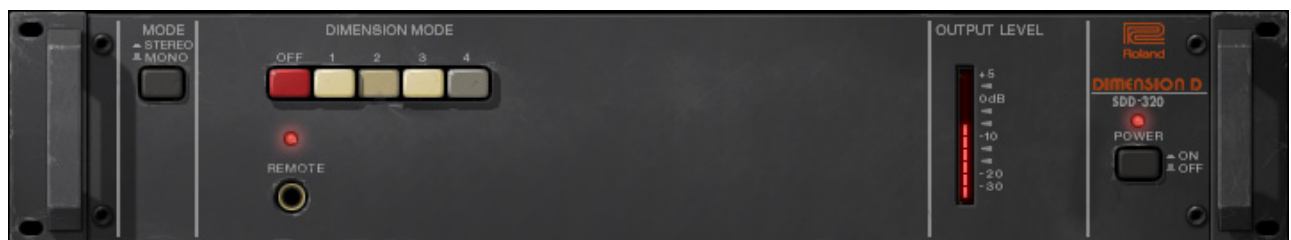


Figure 168. The Roland Dimension D plug-in window

Roland Dimension D Controls

The Roland Dimension D is very simple device to operate; it has only three controls: Power, Mono, and Mode. Each control is detailed below.

Dimension Mode



The Dimension Mode determines the effect intensity. Four different modes are available. Mode 1 is the most subtle effect, and Mode 4 is maximum intensity.

Multiple Buttons

True to the original hardware, multiple Dimension Mode buttons can be engaged simultaneously for subtle sonic variations of the four main modes. To engage multiple Dimension Mode buttons, press the Shift key on the computer keyboard while clicking the Mode buttons.

Input Mode Switch



The original Roland Dimension D has an input switch on the back that puts the unit into mono-in/stereo-out mode. We have included this function and moved the switch "to the front" for your processing convenience.

When in Mono mode, the input to Dimension D is monophonic even when used in a stereo-input configuration (stereo inputs are summed to mono). This can be useful for sonic variation, such as when the plug-in is used in an auxiliary/effect send configuration.

The default position (in) is stereo mode. Click the pushbutton switch (out) to enable Mono mode.

Power Switch



This switch determines whether the plug-in is active. This is useful for comparing the processed settings to the original signal, or to bypass the plug-in to reduce the UAD DSP load (load is not reduced if "[UAD-2 DSP LoadLock](#)" on page 74 is enabled). Click the pushbutton switch to change the Power state.

Power LED

The Power LED is illuminated when the plug-in is active.

Output Level



This LED-style meter indicates the level of the signal at the output of the plug-in.

When the Dimension Mode is OFF but the Power switch is ON, audio is not processed but the Output Level meter is still active.

Roland RE-201 Space Echo

Overview

In 1973, Roland created the Space Echo system that utilized multiple play heads to create warm, highly adjustable echo effects, which added wonderful tape character and chaos to performances and recordings. The Space Echo can be heard on numerous recordings, from 70's space rock like Pink Floyd and David Bowie, to countless Reggae and Dub albums, to more recent bands like Portishead and Radiohead. Universal Audio has been entrusted by Roland to re-create the highly beloved RE-201 unit, considered the best of the Space Echo line. Our team spent over a year developing our RE-201 Space Echo, which truly captures the physical behavior of this complex device "warts and all", down to the distortion, wow and flutter, pitch shifting, and warmth that tape based delays are famous for; but our plug-in goes even further, capturing the complex self-oscillation that makes the Space Echo more than an effect, but a unique instrument unto itself.

UA's RE-201 Space Echo faithfully retains all the controls and features of the original, such as the Mode Selector for various head combinations, Repeat Rate for fine timing control, and Intensity which sets repeat count and allows the unit to achieve self-oscillation. The all-important Echo/Normal "Dub" switch is retained for muting, as well as the simple tone controls. Last but certainly not least, the atmospheric shimmer of the Space Echo's spring reverb is faithfully captured, putting this fantastic plug-in on par with the original unit as a tool of infinite creativity.

Roland RE-201 Screenshot



Figure 169. The Roland RE-201 plug-in window

Roland RE-201 Interface

The RE-201 interface is true to the original hardware, with a few customizations to bring it into the digital era.

The original mic and instrument volume controls have been replaced with echo/reverb pan controls and an input control. We've also added a "Tape Age" switch to emulate new and older tape, a Wet Solo control for use as a bus/send effect, and an output volume control for utility. The clever "Splice" switch allows the user to trigger the tape splice at will.

Tempo synchronization controls round out the modernization of this classic analog processor. The fabulous sound of the original is untouched!

Roland RE-201 Controls

Each feature of the Roland RE-201 interface is detailed below.

Peak Level



The Peak lamp indicates when transient signal peaks and clipping are detected just after the input volume control. It begins illuminating at approximately -2 dB to -1.5 dB, then gets brighter as the level increases.

VU Meter



The VU meter indicates the average signal that is about to be written to the "tape." Used in conjunction with the Peak lamp, an indication of signal level can be deduced.

The VU is essentially an input meter, therefore it doesn't react when the Echo/Normal switch is switched from Echo to Normal.

Note: The Peak lamp and VU meter measure signal just after the input volume control. However, like the original hardware, echo intensity (feedback) is applied just before the level detection circuit. For this reason, the Intensity control will affect the level readings.

Echo Pan



Echo Pan determines the placement of the echo signal in the stereo panorama when the plug-in is used in mono-in/stereo-out and stereo-in/stereo-out configurations. When the RE-201 is used in a mono-in/mono-out configuration, this control is disabled.

Reverb Pan



Reverb Pan determines the placement of the reverb signal in the stereo panorama when the plug-in is used in mono-in/stereo-out and stereo-in/stereo-out configurations. When the RE-201 is used in a mono-in/mono-out configuration, this control is disabled.

Input Volume



This control determines the signal level that is input to the plug-in. Unity gain is at the 12 o'clock position.

Like the original hardware, clipping distortion at the input to the plug-in affects the tone of the echo and reverb. Clipping is often used as part of the desired effect. At unity gain clipping can be easily induced. However if a cleaner sound is desired, reduce the input volume below unity and increase the plug-in output volume to compensate.

Mode Selector



The RE-201 is a combination of a tape echo and a spring reverb effect. Echo, reverb, or both can be selected with the Mode Selector to determine which effect(s) are active.

The original Space Echo has three tape playback heads. By changing the combination and positions of the heads, a total of 12 different echo variations can be obtained (4 echo only, 7 echo/reverb, and 1 reverb only). These modes are faithfully reproduced with the UAD Roland RE-201.

Note: The RE-201 uses less UAD DSP in reverb-only or echo-only modes versus when both modes are used simultaneously.

The affect of each knob position is detailed in [Table 41 on page 508](#).

Table 41. RE-201 Mode Selector Positions

Mode Knob Position		REPEAT (echo only)				REVERB + ECHO						REVERB ONLY	
		1	2	3	4	5	6	7	8	9	10	11	Reverb
Active	1	
Tape	2		
Heads	3			
Active Reverb					

Bass



This knob controls the low frequency response in the tape echo portion of the signal. It does not affect the dry signal or the reverb signal. This is a cut/boost control; it has no effect when in the 12 o'clock (straight up) position.

Treble



This knob controls the high frequency response in the tape echo portion of the signal. It does not affect the dry signal or the reverb signal. This is a cut/boost control; it has no effect when in the 12 o'clock (straight up) position.

Reverb Volume



This control determines the volume of the spring reverb effect. Rotate the control clockwise for more reverb. Reducing the control to its minimum value will disable the reverb.

On the original hardware the reverb output is quite low, and with some sources, unusable due to a high noise floor. Our model of the spring reverb has no noise, and has an increased available output level to improve usability.

Note: *Reverb Volume has no affect when the Mode Selector is in positions 1 through 4.*

Output Volume



This control determines the output volume of the plug-in. It affects the dry and effect signals.

The range of this control is ± 20 dB from unity gain. Therefore, some signal may still be heard when this control is set to its minimum value.

Repeat Rate



This knob controls the time interval of the echo effect. Rotating the control clockwise will decrease the delay time, and counter-clockwise rotation will increase the delay time.

The available delay times are as follows:

- Head 1: 69ms – 177ms
- Head 2: 131ms – 337ms
- Head 3: 189ms – 489ms

The head times available with this control are dependent upon the [“Mode Selector” on page 507](#). As with the original hardware, this control varies the tape playback speed in realtime by manipulating the tape capstan motor and therefore has a musically useful “ramp-up” and “ramp-down” effect.

When Tempo Sync is enabled, this control is quantized to allow only rhythmic notes available at the leading head.

Intensity



This knob controls the repeat level (feedback) of the echo signal. Rotating the control clockwise increases the number of echoes. Higher values will cause self-oscillation; the exact position is program and Mode dependent.

The self-oscillation of the RE-201 is one of the magic features that really makes it more than a mixing tool; it’s also an instrument to be played. The effect may be used subtly, sending the unit into gentle oscillation on held notes, or can be put into “over the top” oscillation with extreme intensity settings. Different Modes will reveal different qualities of oscillation. Single head Modes tend to have simpler oscillation qualities, while multiple head modes will have a more complex sound when oscillating.

The RE-201’s oscillation qualities are heavily program and control dependent. Different sources of audio, gain, tone, repeat rate, and tape settings will all effect “oscillation performance.” The RE-201 can also achieve oscillation with no signal, making the RE-201 a truly unique instrument.

Echo Volume



This control determines the volume of the echo effect. Rotate the control clockwise for louder echo. Reducing the control to its minimum value will disable the echo.

Note: Echo Volume has no effect when the Mode Selector is in the “Reverb Only” position.

Power Switch



This switch determines whether the plug-in is active. This is useful for comparing the processed settings to the original signal, or to bypass the plug-in to reduce the UAD DSP load. Toggle the switch to change the Power state.

Toggleing the power switch will also clear the tape echo. This can be useful if the RE-201 is self-oscillating and restarting the feedback loop is desired.

Echo/Normal



This switch disables the signal sent into the echo portion of the processor when set to NORMAL. The switch will have no effect if “Mode Selector” on page 507 is set to “Reverb Only.” This control is sometimes affectionately referred to as the “dub” switch.

Sync



This switch puts the plug-in into tempo sync mode. See Chapter 8, “Tempo Sync” for information, including additional sync info specific to the RE-201 (page 100).

Delay Time Display



These LCD-style readouts display the current delay time(s) of the RE-201. The three displays correspond to the three virtual “heads” in the plug-in, and always maintain their proportional relationship to each other.

The delay time values are displayed in milliseconds unless tempo sync is active, in which case beat values are displayed. When a particular head is inactive (see “Mode Selector” on page 507), a dash is displayed.

When in tempo sync mode, note values that are out of range will flash. Imprecise note values due to head relationships are displayed with superscript + or – symbol before the note.

Tape Age



In the original hardware, the tape loop is contained in a user-replaceable cartridge. As the tape wears out, it is subject to fidelity loss plus increased wow and flutter. The Tape Age switch allows the plug-in to mimic the behavior of new, used, and old tape cartridges.

Newer tape may be ideal for a pristine vocal track, while older tape could be described as having more “character” and might be more appropriate for sources where greater chaos may be musical.

Splice



Normally, the splice on the tape loop comes around at regular intervals. This interval varies, and is determined by the selected Repeat Rate. Depending on what Tape Quality is selected, the splice can be subtle or obvious, and can work as a catalyst for chaos especially when the RE-201 is in a state of self-oscillation.

This switch resets the location of the tape "splice" when the switch is actuated. It is a momentary switch that pops back into the off position immediately after it is activated, allowing the user to trigger the splice point at will.

Note that the splice effect isn't immediate. It drops the splice at the write head, and it needs time to go over the read heads (at which point there will be a dropout), and then the tape capstan (where it will create some wow and flutter).

Wet Solo



When this switch is OFF, the dry/unprocessed signal is mixed with the wet/processed signal. When set to ON, only the processed signal is heard.

Wet Solo is useful when the plug-in is placed on an effect group/bus that is configured for use with channel sends. When the plug-in is used on a channel insert, this control should generally be OFF.

Note: *Wet Solo is a global (per RE-201 plug-in instance) control.*

Caution :-D

If the RE-201 generates noise after installation, changing the location or position is indicated to correct the situation. Avoid prolonged use in dusty, hot or high humidity places.



The Roland RE-201 original hardware unit

Roland® and RE-201 Space Echo® are registered trademarks of Roland Corporation, Japan and are used under license. Portions of this RE-201 manual section is ©copyright Roland Corporation, Japan and are used under license with kind permission from Roland.

CHAPTER 52

SPL Transient Designer

Overview

Universal Audio has partnered with German company Sound Performance Lab (SPL) to bring you the Transient Designer, with its unique and compelling Differential Envelope Technology for shaping the dynamic response of a sound. Only two simple audio controls are required to allow you to effortlessly reshape the attack and sustain characteristics. SPL was the first company to design an analog solution for level-independent shaping of envelopes, allowing transients to be accelerated or slowed down and sustain prolonged or shortened.

You can shorten or lengthen the attack and sustain of percussive signals such as kick drum, snare or toms, easily take the bleed from open mics, or expand the room sound of overheads. The Transient Designer's magic can be applied to virtually any other signal as well: Amplify or reduce the picking sound of an acoustic guitar, hold the sound of strings longer, or reduce the reverb time of a choir.

SPL Transient Designer Screenshot



Figure 170. The SPL Transient Designer plug-in window

SPL Transient Designer Controls

Containing only two primary controls, the UAD SPL Transient Designer is extremely simple to operate. The technology behind the processor isn't as important as how it sounds. However, for those who desire a deeper understanding of the process, a deeper explanation of the underlying technology is presented at the end of this chapter (see [“Technology” on page 519](#)).

Attack



Attack enables amplification or attenuation of the attack of a signal by up to ± 15 dB.

The Attack control circuitry uses two envelope generators. One follows the shape of the original curve and adapts perfectly to the dynamic gradient. The second envelope generator produces an envelope with a slower attack. From the difference of both envelopes the VCA control voltage is derived. Positive Attack values emphasize attack events; negative values smooth out the attack envelopes of sound events.

For more information, see [“The ATTACK Control Circuitry” on page 519](#)

Sustain



Sustain enables amplification or attenuation of the sustain of a signal by up to ± 24 dB.

The Sustain control circuitry also uses two envelope generators. One follows the shape of the original curve and adapts perfectly to the dynamic gradient. The second envelope generator produces an envelope with a longer sustain. From the difference of both envelopes the VCA control voltage is derived. The gradient of the control voltage matches the time flow of the original signal. Positive Sustain values lengthen the sustain; negative values shorten the sustain.

For more information, see [“The SUSTAIN Control Circuitry” on page 521](#).

Gain



Gain controls the signal level that is output from the plug-in. The available range is from -20 dB to $+6$ dB. The default value is 0 dB.

Signal




This 4-stage “LED” indicates the presence of audio signals at the input of the plug-in. When the input signal is below -25 dB, the indicator is off. At -25 dB to -19 dB, the indicator glows slightly. At -18 dB to -10 dB, it lights with medium intensity. At -9 dB to 0 dB, it shines brightly.

Overload



The Overload “LED” illuminates when the signal level at the output of the plug-in reaches 0 dBFS. The indicator matches the behavior of the original hardware unit. However, in the software plug-in version, the output can be “overloaded” without causing distortion.

 Link



Link indicates when stereo operation is active. It illuminates when used in a stereo-in/stereo-out or mono-in/stereo out configuration. It does not illuminate when used in a mono-in/mono-out configuration.

Note: Link is an indicator only; it does not control any plug-in parameter.

On/Power



The On and Power switches determine whether the plug-in is active. Click the On or Power switches to change the state. On and Power illuminate when the plug-in is active.

When the plug-in is inactive, processing is disabled and UAD DSP usage is reduced (unless “UAD-2 DSP LoadLock” on page 74 is enabled).

Note: The On and Power switches perform the exact same function.

WebZine Article

An interesting article about the SPL Transient Designer is available in the “Ask The Doctors” section of our November 2007 WebZine:

- <http://www.uaudio.com/webzine/2007/november/index2.html>

Acknowledgement

In addition to creating an amazing piece of hardware, Sound Performance Lab also wrote an extensive user manual for the Transient Designer. Because Universal Audio has full license to make use of the Transient Designer technology, SPL has graciously authorized us to use their documentation as well.

The remainder of this chapter is excerpted from the SPL Transient Designer (RackPack) User Manual, and is used with kind permission from SPL. All copyrights are retained by SPL.

Applications

The SPL Transient Designer is ideally suited for use in professional recording, in project or home studios and sound reinforcement applications.

For the first time you can manipulate and control the attack and sustain characteristics of a signal regardless of level in the most intuitive and simple way. Usually equalizers are used to separate instruments in a mix – the tonal aspect of the signal is considered, but not the temporal aspect.

The Transient Designer opens this further dimension in signal processing. By manipulating the attack and sustain curves of a sound event, the mix can be made to sound more transparent. Instruments can be mixed at lower levels while still maintaining their positions in the mix—but occupying less space.

During a remix or in general after micing you can arrange new positions of instruments. Reduce ATTACK and increase SUSTAIN to move signals back into the mix that are too present. Additionally the FX parts of too dry signals are strengthened.

Applied to single instruments or loops the Transient Designer allows you to create entirely new sounds and/or effects.

The following examples are given as suggestions and examples. The described procedures with specific instruments can of course be transferred to others that are not mentioned here.

Drums & Percussions

Processing drum and percussion sounds is probably the Transient Designer's most typical range of application; both from samples to live drum sets

- Emphasize the attack of a kick drum or a loop to increase the power and presence in the mix.

- Shorten the sustain period of a snare or a reverb tail in a very musical way to obtain more transparency in the mix.
- When recording a live drum set, shorten the toms or overheads without physically damping them. Usual efforts to damp and mike are reduced remarkably. Since muffling of any drum also changes the dynamic response, the Transient Designer opens up a whole new soundscape.
- Micing live drums is considerably faster and easier because you can correct the apparent “distance” of the microphone by simply varying the ATTACK and SUSTAIN values.
- The Transient Designer is a perfect alternative to noise gates in live drum micing. Adaptively reacting to the duration of the original signal, the sustain is shortened more musically than with fixed release times and a drumset is freed from any crosstalk quickly and effectively.
- Create unusual dynamic effects including new and interesting pan effects. For example, patch a mono loop through two channels of the Transient Designer and pan fully left and right in the mix. Process the left channel with increased ATTACK and reduced SUSTAIN while you adjust the right channel the opposite way and you get very special stereo loop sounds. You have to try this to appreciate what it sounds like, but expect to hear a lot of unusual stereo movement.
- Enjoy an amazingly simple integration of drum sounds into a mix. If the acoustic level of a snare is expanded to approximately +4 dB by increasing the attack value, the effective increase of peak levels in the overall mix is merely about 0.5 dB to 1 dB.

Drums: Ambience

If your drums happen to sound as if the room mics have been placed in a shoe closet, the Transient Designer can immediately turn that sound into the ambience of an empty warehouse. Just send the stereo room mics through the Transient Designer and crank the ATTACK control to emphasize the first wave.

Now slowly increase SUSTAIN values to bring up an “all-buttons-in-1176-sound” room tone—but without pumping cymbals. For a solid and driving rhythm track just fine-tune the SUSTAIN control to make sure that the room mic envelope ends more or less exactly on the desired upbeat or downbeat.

Guitars

Use the Transient Designer on guitars to soften the sound by lowering the ATTACK. Increase ATTACK for in-the-face sounds, which is very useful and works particularly well for picking guitars. Or blow life and juice into quietly played guitar parts.

Distorted guitars usually are very compressed, thus not very dynamic. Simply increase the ATTACK to get a clearer sound with more precision and better intonation despite any distortion.

Heavy distortion also leads to very long sustain. The sound tends to become mushy; simply reduce SUSTAIN to change that. If you, however, want to create soaring guitar solos that would make even David Gilmour blush, just crank up the SUSTAIN control to the max and there you go.

With miced acoustic guitars you can emphasize the room sound by turning up SUSTAIN. If you want the guitars to sound more intimate and with less ambience, simply reduce SUSTAIN.

Bass: Staccato vs. Legato

Speaking of bass: Imagine a too sluggishly played bass track... you may not have to re-record it: Reduce the SUSTAIN until you can hear clear gaps between the downbeats—the legato will turn into a nice staccato, driving the rhythm-section forward.

The Re-Invention Of Reverb

Always and everywhere the same reverb presets – boring, aren't they? Try sending the output of your reverb through the Transient Designer. Now crank the ATTACK control to the max and reduce SUSTAIN to a bare minimum. The intensity of the reverb is now much higher in the beginning while the reverb time is reduced.

The opposite can be just as intriguing: manipulate a reverb pattern so that it takes on a pyramidal slope. Turn the ATTACK all the way to the left and SUSTAIN all the way to the right. Now the beginning of the reverb is strongly reduced whereas the sustain blossoms and seems almost endless (obviously that will only happen if the decay of the reverb in the actual reverb device has been set to a sufficient value—a signal must always be present as long as the sustain time lasts.

You can also create a reverb effect that moves from one channel to the other. Reverb presets with a long decay or a long pre-delay and especially those that have flamboyant reflections set to appear after the beginning of the diffuse reverberation tail are predestined for that. Insert the left and the right

channels of the reverb return through two separate Transient Designer instances. Turn the ATTACK fully right on one instance and reduce SUSTAIN slightly (about -1.5 dB). On the other instance turn the ATTACK fully left and the SUSTAIN to the 3-o'clock position (about $+12$ dB).

These settings preserve the original complexity of the reflections in the reverb but the maximum intensity of the effect will move from the left to the right in the mix while the reverb will maintain its presence in both channels. You can make this effect even more dramatic by setting all controls to their most extreme positions, but you run the danger of ending up with a lopsided effect that appears out of balance.

Backings

A common problem especially with tracks that are recorded and mixed in different studios: Backings lack of ambience, and finding a reverb that “matches” takes time... so simply emphasize the original ambience by turning up the Transient Designer’s SUSTAIN control.

And the opposite problem, too much ambience, is similarly simply solved with the opposite processing —just reduce SUSTAIN.

Keyboards & Sampler

Sounds in keyboards and samples are usually highly compressed and maintain only little of natural dynamics. Increase the ATTACK values to re-gain a more natural response characteristic. The sounds occupy less space in the mix and appear more identifiable even at lower volumes.

Post Production

When dealing with overdubs in movies you can easily add more punch and definition to effect sounds from any sample library.

The same applies to outdoor recordings that suffer from poor microphone positioning—simply optimize them afterwards.

Mastering

Like with any good thing, you also have to know where not to use it. For example, using a Transient Designer in mastering is not recommended, as it is rarely a good idea to treat a whole mix at once. Instead, treat individual elements within the mix.

Technology

Of course you don't have to know how the Transient Designer works in order to use it. However, since it offers a completely novel signal processing, nothing shall be concealed from the more curious users.

Differential Envelope Technology (DET)

SPL's DET is capable of level-independent envelope processing and thus makes any threshold settings unnecessary. Two envelopes are generated and then compared. From the difference of both envelopes the VCA control voltage is derived. The DET ensures that both low and loud signals (pianissimo to fortissimo) are treated the same way.

Both ATTACK and SUSTAIN control circuitries operate simultaneously and don't affect each other.

The ATTACK Control Circuitry

The ATTACK control circuitry uses two envelope generators. The first one generates a voltage (Env 1) that follows the original waveform. The second envelope generator creates the envelope Env 2 with a slower attack envelope.

Figure 171 on page 519 illustrates the original curve and the two created envelopes that control the ATTACK processing. Envelope generator Env 1 follows the original waveform. Env 2 is generated with reduced attack.

Diagram 1: Generated Envelopes (Attack)

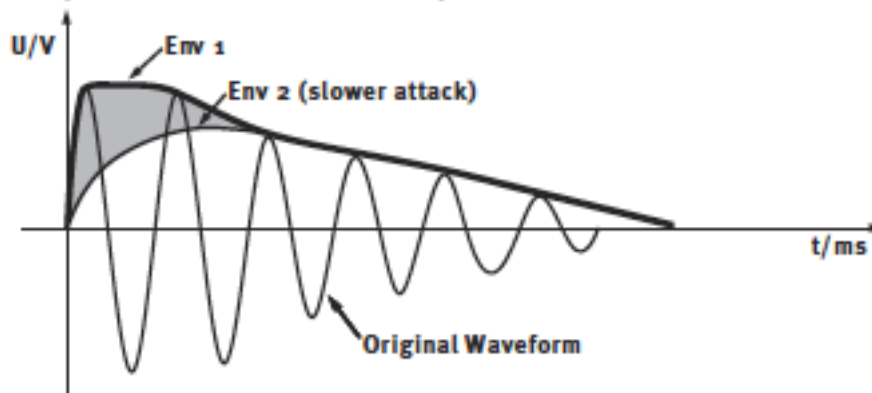


Figure 171. SPL Transient Designer Attack Envelopes

Figure 172 on page 520 shows the difference between Env 1 and Env 2 that defines the control voltage of the VCA. The shaded area marks the difference between Env 1 and Env 2 that controls the control voltage of the VCA. The amplitude of the attack is increased if positive ATTACK values are set. Negative ATTACK values reduce the level of the attack transient.

Diagram 2: Calculated Control Voltage (Attack)

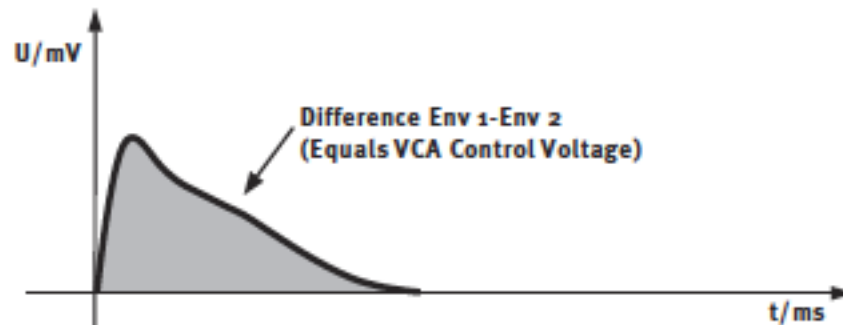


Figure 172. SPL Transient Designer Attack Control Voltage

Figure 173 on page 520 displays the processed waveforms with maximum and minimal ATTACK to compare against the original waveform in diagram 1.

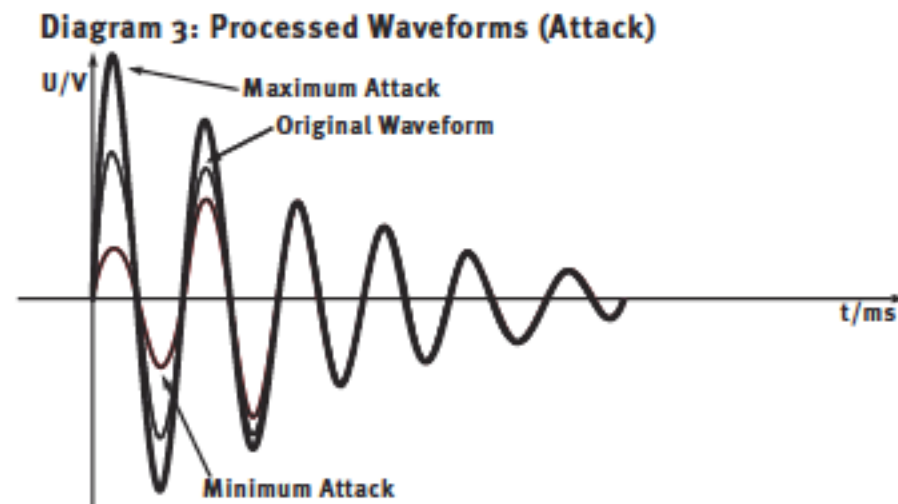


Figure 173. SPL Transient Designer Processed Attack

The SUSTAIN Control Circuitry

The SUSTAIN control circuitry also plays host to two envelope generators. The envelope tracker Env 3 again follows the original waveform. The envelope generator Env 4 maintains the level of the sustain on the peak-level over a longer period of time. The control voltage of the VCA is again derived from the difference between the two voltages. Sustain amplitude is increased for positive SUSTAIN settings and reduced for negative settings.

Figure 174 on page 521 illustrates the original waveform and the envelope creation to control the SUSTAIN processing. Envelope generator Env 1 follows the original waveform, Env 2 is generated with prolonged sustain.

Diagram 4: Generated Envelopes (Sustain)

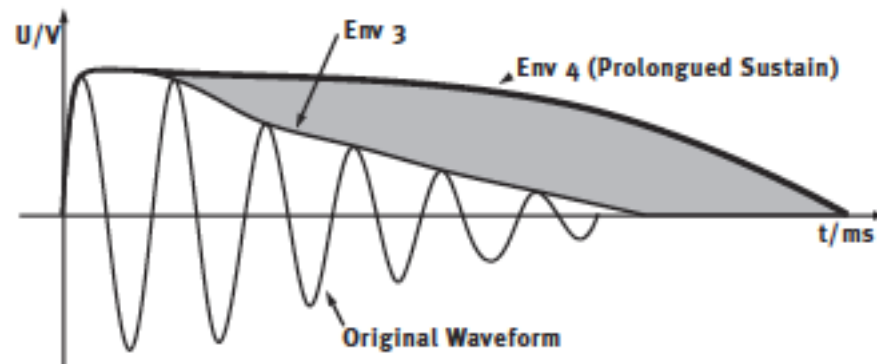


Figure 174. SPL Transient Designer Sustain Envelopes

Figure 175 on page 521 shows the difference between Env 4 and Env 3 that defines the control voltage of the VCA.

Diagram 5: Calculated Control Voltage (Sustain)

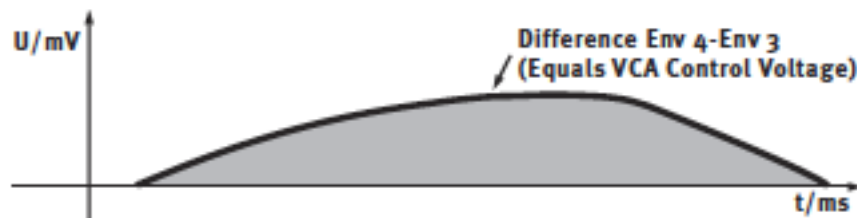


Figure 175. SPL Transient Designer Sustain Control Voltage

Figure 176 on page 522 displays the processed waveforms with maximum and minimal sustain to compare against the original waveform in diagram 4.

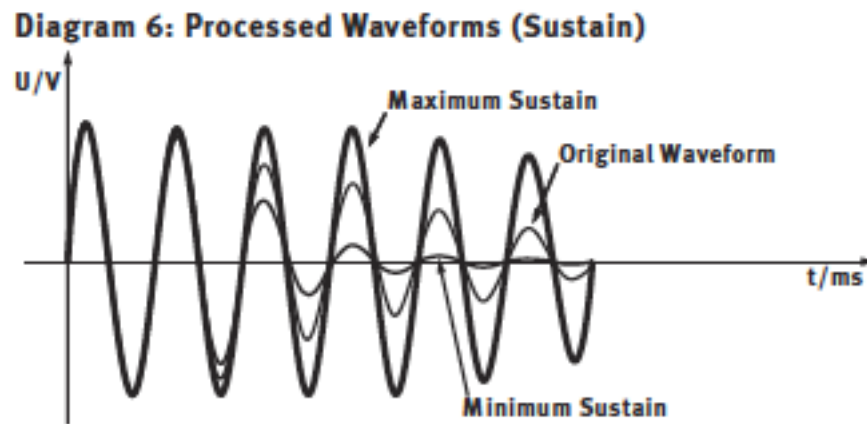


Figure 176. SPL Transient Designer Processed Sustain

SPL Sound Performance Lab® and Transient Designer® are registered trademarks of SPL Electronics, GmbH Germany and are used under license. Portions of this SPL Transient Designer manual section is ©copyright SPL Electronics GmbH Germany and are used under license with kind permission from SPL.

SSL E Channel Strip

Large Format Mix Module

The SSL 4000 is famous as the console employed on more Platinum-selling records than any other. With its wide range of VCA compression characteristics and intuitive EQ — rich with colorful band interdependencies — it's easy to hear why. Today, working in close partnership with Solid State Logic®, UA proudly unveils the SSL E Series Channel Strip plug-in for UAD-2 — an exacting circuit emulation of this certified hit-making machine.

The SSL E Series Channel Strip plug-in allows UAD-2 users on Mac and PC to apply classic SSL 4000 EQ curves and dynamics control to their music. This unique plug-in is distinguished by its remarkably authentic sound, and its inclusion of both the Type E “black knob” and “brown knob” four-band EQ and filters, long considered favorites in SSL lineage. Other features include high and low cut filters, independent Expander/Gate, and bespoke Compressor/Limiter.

The E Series' middle EQ bands are fully parametric, while the high and low bands provide the user with switchable bell or shelving filters. The Comp/Limiter provides Threshold, fast or slow Attack time, a 0.1 to 4 second Release, and a continuously variable Ratio control. The Exp/Gate offers Threshold, fast or slow Attack time, a 0.1 to 4 second Release time, and a Range control to tailor the Gate or Expansion effect. In addition, the SSL E Series Channel Strip plug-in adds a second Gate setting, featuring a “no-chatter” circuit borrowed from later SSL designs.

For increased flexibility, a PRE-DYN button allows users to reorder the signal chain, placing the EQ before the dynamics section. With the DYN-SC button, users may engage a sidechain feature, providing frequency-dependent compression using the EQ filters, cut filters, or both. Lastly, a Link button adds the ability to link or unlink the sidechain when using the stereo version of the plug-in.

Taken together, these features make the SSL E Series plug-in for UAD-2 among the most flexible and best-sounding channel strip emulations available today, bar none.

SSL E Channel Strip Screenshot



Figure 177. The UAD SSL E and 4K Channel Strip plug-in windows

SSL E Channel Strip Controls

The SSL E Channel Strip controls are divided into four main sections: filters, dynamics, EQ, and global.

Note: Knob settings, when compared to the graphical user interface silk-screen numbers, may not match the actual parameter values. This behavior is identical to the original hardware, which we modeled exactly. When the plug-in is viewed in parameter list mode (see “Controls View” on page 87), the actual parameter values are displayed.

Note: SSL consoles adopt a different pan law than what the host application may be set to by default. Most DAW's allow configuring the panning spread preference to match various consoles. In the event you want to capture SSL-style stereo response when using multiple instantiations of the SSL E Channel Strip, set the pan law preference in the host to a value of -4.5 dB.

Filters



In addition to the four-band EQ, UAD SSL E Channel Strip offers individual high and low pass filters.

When the Filter control is at minimum value (fully counter-clockwise), the filter is disabled.

The control ranges and sonics of these filters can be changed between “Black” and “Brown” modes with the EQ Type switch. See

“EQ Type” on page 530 for more information.

High Pass

The left knob determines the cutoff frequency for the high pass filter. Rotate clockwise to reduce low frequencies.

In Black mode, the slope of the high pass filter is 18 dB per octave and the available range is 16 Hz to 350 Hz. In Brown mode, the slope of the high pass filter is 12 dB per octave and the available range is 20 Hz to 350 Hz.

Low Pass

The right knob determines the cutoff frequency for the low pass filter. Rotate clockwise to reduce high frequencies.

In Black mode the slope of the low pass filter is 12 dB per octave and the available range is 22 kHz to 3 kHz. In Brown mode the slope of the low pass filter is 12 dB per octave and the available range is 16 kHz to 3 kHz.

Filters to Sidechain (DYN SC)

This button enables the Filters sidechain function. When the Filters sidechain is active, signal output from the Filters module is removed from the audio path and is instead routed to control (“key”) the dynamics module.

Sidechaining is typically used for de-essing and similar frequency-conscious techniques. To listen to the sidechain key, simply disengage DYN SC to hear the filtered signal. The sidechain dynamics/EQ implementations are true stereo when used in a stereo in/stereo out (“SISO”) configuration.

Note: The Filters module must be active (not at minimum value) in conjunction with the Filters DYN SC button for the Filters sidechain to function. An additional dynamics sidechain is available in the EQ section (“EQ to Sidechain (DYN SC)” on page 533).

Dynamics

Separate “soft-knee” compressor/limiter and expansion/gate modules are available in the dynamics section. Each module has their own set of controls.

Important: Dynamics are not processed unless enabled by the Dynamics selector buttons (“Dynamics In (DYN IN)” on page 529).

Compressor/Limiter

Link



When UAD SSL E Channel Strip is used in a stereo-in/stereo-out configuration, two separate dynamics processors are active (one for each stereo channel). When Link is engaged, the two compressors are constrained so that they both compress by the same amount at any instant.

This prevents transients which appear only on one channel from shifting the stereo image of the output. Any big transient on either channel will cause both channels to compress.

Link is active when its amber LED is illuminated. When the plug-in is used in a mono-input configuration, Link has no affect.

Compress Ratio

Ratio defines the amount of gain reduction to be processed by the compressor. For example, a value of 2 (expressed as a 2:1 ratio) reduces the signal above the threshold by half, with an input signal of 20 dB being attenuated to 10 dB.



The UAD SSL E Channel Strip compressor offers a continuously variable ratio between 1:1 (no compression) and infinity:1 (limiting).

Note: Signals must exceed the Threshold value before they are attenuated by the Ratio amount.

Compress Threshold



Threshold defines the signal level at which the onset of compression occurs. Incoming signals that exceed this level are compressed. Signals below the level are unaffected.

The available range is +10 dB to –20 dB. Rotate the control clockwise for more compression.

This compressor has an automatic make-up gain function. As Threshold is lowered and compression increases (as knob is rotated clockwise), output gain from the module is increased automatically to compensate.

Compress Release



Release sets the amount of time it takes for gain reduction to cease once the input signal drops below the threshold level. Longer release times can smooth the transition that occurs when the signal dips below the threshold, which is especially useful for material with frequent peaks. However, if you set the Release time too long, the gain reduction imposed by loud sections of audio may initially reduce the level of subsequent sections of audio with lower signals.

Available Release times are continuously variable between 0.1 seconds and 4 seconds.

Compress Attack

Attack defines the duration between the input signal reaching the threshold and processing being applied by the compressor. Attack time is normally 30 milliseconds (“slow” mode in [Controls View](#)). When Fast Attack is enabled, attack time is 3 milliseconds.



Fast Attack is active when the “F.ATT” LED is illuminated. To toggle Fast Attack, click the LED or its label text.

Gate/Expander

The gate/expander module operates in either gate or expansion mode, as determined by the [Dynamics Select](#) button. Two attack speeds and a continuously variable release time are available in both modes.

Dynamics Select



The Select button cycles through the three modes available in the gate/expander module: Expand, Gate 1, and Gate 2.

Expand (EX)

In Expand mode, the module applies downwards expansion at a fixed 1:2 ratio, with the amount of gain reduction determined by the Range control (“[Expand Range](#)” on page 528).

Gate 1 (G1)

In Gate 1 mode, signals below the **Expand Threshold** are attenuated by the **Expand Range** amount. Gate 1 is authentic to the gate mode on earlier hardware consoles.

Gate 2 (G2)

Gate 2 mode operates the same way as Gate 1, but has a different “no-chatter” response characteristic that is derived from later versions of the hardware.

Expand Threshold



Threshold defines the input level at which expansion or gating occurs. Any signals below this level are processed. Signals above the threshold are unaffected. Threshold is continuously variable from -30 dB to $+10$ dB.

In typical use it's best to set the threshold value to just above the noise floor of the desired signal (so the noise doesn't pass when the desired signal is not present), but below the desired signal level (so the signal passes when present).

Expand Range

Range (depth) controls the difference in gain between the gated/expanded and non-gated/expanded signal. Higher values increase the attenuation of signals below the threshold. When set to zero, no gating or expansion occurs. Range is continuously variable from 0 dB to -40 dB.



Expand Release



Release sets the amount of time it takes for gate/expander processing to engage once the input signal drops below the Threshold value. The available range is 0.1 ms to 4 seconds.

Slower release times can smooth the transition that occurs when the signal dips below the threshold, which is especially useful for material with frequent peaks.

Note: Fast release times are typically only suitable for certain types of percussion and other instruments with very fast decays. Using fast settings on other sources may produce undesirable results.


Expand Attack

Attack defines the duration between the input signal reaching the threshold and processing being applied by the expander/gate. Attack time is normally auto-sensing and program dependent. When Fast Attack is enabled, attack time is 1 ms.



Fast Attack is active when the "F.ATT" LED is illuminated. To toggle Fast Attack, click the LED or its label text.

Dynamics Enable

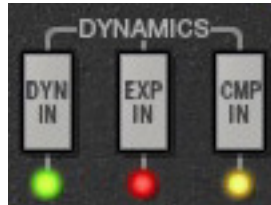

These three buttons determine the status of the dynamics processors.

Dynamics In (DYN IN)

The DYN IN button enables both the compressor/limiter and the expander/gate modules; neither module will function when DYN IN is disabled. The dynamics modules are enabled when the green LED is illuminated.

DYN IN is useful for quickly comparing the original signal dynamics to the dynamically processed signal.

Important: *DYN IN must be engaged to enable compressor/limiter and/or expander/gate processing.*

Expander In (EXP IN)

The EXP IN button enables the expander/gate module. The module is enabled when the amber LED is illuminated. This button has no effect when DYN IN is disabled.

Compressor In (CMP IN)

The CMP IN button enables the compressor/limiter module. The module is enabled when the red LED is illuminated. This button has no effect when DYN IN is disabled.

Dynamics Meters

The Expansion Meter uses green LED's (left column) to display the amount of downward expansion occurring in the expander/gate module. Higher values indicate more gain reduction.

The Compression Meter uses amber LED's (right column) to display the amount of gain attenuation occurring in the compressor/limiter module. Higher values indicate more dynamics compression.



EQ

The UAD SSL E Channel Strip EQ module is divided into four frequency bands: High Frequency (HF, blue knobs), High Midrange Frequency (HMF, green knobs), Low Midrange Frequency (LMF, yellow knobs), and Low Frequency (LF, orange knobs). The high and low bands can be switched from shelving mode into bell (peak/dip) mode. The two midrange bands are fully parametric. The EQ module can be disabled altogether or routed for dynamics sidechain keying.

EQ Type



Two different types of SSL EQ are available. The EQ Type button selects between the two types, either Black or Brown. The knob color of the LF band controls changes to reflect the current setting.

The Black and Brown EQs sound different. Black is a bit deeper due to its higher gain values, while Brown is more gentle at extreme settings.

EQ Type Background

The original E series equaliser section was the 'Brown Knob' circuit. This was standard on all early production E Series consoles. The two parametric mid-band sections feature a classic logarithmically symmetric design that ensures that the ± 3 dB up/down points retain the same musical interval from the centre frequency regardless of frequency and amplitude settings. The two shelving sections are traditional 6 dB/octave designs with an option for a fixed Q parametric response (Bell). The '02' EQ, to give it its correct name (the last two digits of the card's part number), was used on countless recordings and mixes in the early eighties.

In 1983 a new '242' EQ circuit was developed in conjunction with the legendary George Martin for the first SSL console to be installed in AIR studios. The 'Black Knob' EQ, as it became known, featured enhanced cut and boost ranges (± 18 dB instead of ± 15 dB) together with a different control law and a steeper 18dB/octave high pass filter for tighter control of low frequencies. It is this design which is retained today as the 'E-Series' EQ option of the X-Rack, Duality and AWS consoles.

High Frequency (HF) Band



HF Gain

This control determines the amount by which the frequency value for the band is boosted or attenuated. The available range is ± 15 dB in both Black and Brown modes.

Tip: Click the “0” to return the Gain knob to its center position.

HF Frequency

This control determines the band frequency to be boosted or attenuated by the band Gain setting. The available range is 1.5 kHz to 16 kHz in both Black and Brown modes.

HF Bell

The Bell button switches the HF band from shelf mode to peak/dip mode. In normal (shelf) mode, only frequencies above the frequency value are boosted or attenuated. In Bell (peak/dip) mode, frequencies above and below the frequency value are boosted or attenuated.

In Black mode, the HF Bell Q is 1.3 and in Brown mode the HF Bell Q is 0.8.

High-Mid Frequency (HMF) Band

HMF Gain

This control determines the amount by which the frequency value for the band is boosted or attenuated. The available range is ± 15 dB in both Black and Brown modes.

Tip: Click the “0” to return the control knob to its center position.

HMF Frequency

This control determines the HMF band center frequency to be boosted or attenuated by the band Gain setting. The available range is 0.6 kHz to 7 kHz in both Black and Brown modes.



HMF Q

The Q (bandwidth) control defines the proportion of frequencies surrounding the band center frequency to be affected by the band gain control. The filter slopes get steeper (narrower bandwidth) as the control is rotated counter-clockwise. The available range is 0.5 to 2.5 in both Black and Brown modes.

Low-Mid Frequency (LMF) Band



LMF Gain

This control determines the amount by which the frequency value for the band is boosted or attenuated. The available range is ± 15 dB in both Black and Brown modes.

Tip: Click the "0" to return the control knob to its center position.

LMF Frequency

This control determines the LMF band center frequency to be boosted or attenuated by the band Gain setting. The available range is 0.2 kHz to 2.5 kHz in both Black and Brown modes.

LMF Q

The Q (bandwidth) control defines the proportion of frequencies surrounding the band center frequency to be affected by the band gain control. The filter slopes get steeper (narrower bandwidth) as the control is rotated counter-clockwise. The available range is 0.5 to 2.5 in both Black and Brown modes.

Low Frequency (LF) Band

LF Gain

This control determines the amount by which the frequency value for the LF band is boosted or attenuated. The available range is ± 15 dB in both Black and Brown modes.

Tip: Click the "0" to return the control knob to its center position.



LF Frequency


This control determines the band center frequency to be boosted or attenuated by the band Gain setting. The available range is 30 Hz to 450 Hz in both Black and Brown modes.

LF Bell

The Bell button switches the LF band from shelf mode to peak/dip mode. In normal (shelf) mode, only frequencies below the frequency value are boosted or attenuated. In Bell (peak/dip) mode, frequencies below and above the frequency value are boosted or attenuated.

In Black mode, the LF Bell Q is 1.3 and in the Brown mode the Bell Q is 0.8.

EQ Enable

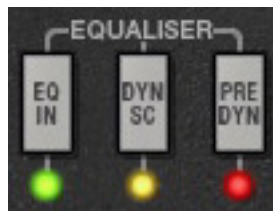

These three buttons determine the status of the EQ module.

EQ In

The EQ IN button enables the EQ module. The module is enabled when the green LED below the button is illuminated.

EQ to Sidechain (DYN SC)

This control enables the EQ sidechain function. When the EQ sidechain is active, signal output from the EQ module is removed from the audio path and is instead routed to control (“key”) the dynamics module. The EQ sidechain is enabled when the amber LED below the button is illuminated.

Sidechaining is typically used for de-essing and similar frequency-conscious techniques. To listen to the sidechain key, simply disengage DYN SC to hear the equalised signal. The sidechain dynamics/EQ implementations are true stereo when used in a stereo in/stereo out (“SISO”) configuration.


Note: The EQ module must be active in conjunction with the EQ DYN SC button for the EQ sidechain to function. Note there is another dynamics sidechain available in the Filters section (“Filters to Sidechain (DYN SC)” on page 525).

Pre-Dynamics (PRE DYN)

During “normal” operation (PRE DYN disengaged) the audio signal is output from the dynamics module into the EQ module. Activating PRE DYN reverses this routing, so the EQ is ahead of the dynamics module instead. Pre-dynamics is active when the red LED below the button is illuminated.

Global

I/O Meters

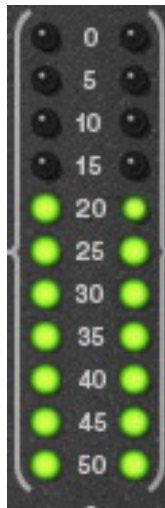

The vertical LED-style metering provides a visual indication of the signal levels at the input and output of the plug-in (the meters are not calibrated).

The input meter is the left LED column and the output meter is the right LED column.

Note: Each meter column represents the sum of the left and right channels (it is not a stereo meter).

Input



Input controls the signal level at the input to the plug-in. The default value is 0 dB. The available range is ± 20 dB. Increasing the input may result in more compression, depending on the values of the Threshold and Ratio parameters.

Tip: Click the “0” to return the control knob to its center position.

 
Output

Output controls the signal level that is output from the plug-in. The default value is 0 dB. The available range is ± 20 dB.

Tip: Click the “0” to return the control knob to its center position.



Phase (Ø)



The Phase (Ø) button inverts the polarity of the signal. The signal is inverted when the button is depressed. Leave the button out for normal polarity.

Power

The Power button determines whether the plug-in is active. Click the Power button to disable the processor. Power is useful for comparing the processed sound to that of the original signal.



Usage Notes

The SSL E Series channel has been used to mix more hit records than any other in history. Its no-nonsense feature and control set make it easy to get the sound you're looking for.

A useful approach to getting to know the SSL E is to start with a fresh mix, where little to no EQ or dynamic mixing has been done yet. Even better, start you mix with the SSL G Bus Comp on the master fader as well, which will give you the complete SSL sound. For an even more authentic SSL experience, adjust your DAW's default pan rule (usually +3) to SSL's custom +4.5 rule.

There are two four-band (LF, LMF, HMF HF) EQ options on the SSL E, known as "brown" and "black". It is important to note that while only the LF bass knobs change color when switching EQ's, ALL bands are affected.

Brown is the original SSL design, with gentler Q, and smaller gain and frequency ranges. It is the easier of the two to easily get a good, musical sound. LC and HC filtering is a gentle 12 dB. Brown is the recommended starting place for those unfamiliar with SSL. The black EQ is a later design, with the option for narrower Q and broader gain and frequency ranges, making it more useful for fixative EQ as sweetening. The black EQ design changes were recommended by famed Beatles producer George Martin. Each band is different from the brown design, plus the The LC is a steeper 18 dB per octave. The normal arrangement is dynamics first, but the EQ can be put as the first process with the "PRE DYN" (Pre Dynamics) button.

It is interesting to note that the console labels did not change on the consoles moving from the -/+ 15 dB gain range to the -/+ 18 dB of the black EQ, nor did the frequency or Q labels.

The gain section has remained largely the same on SSL consoles from the beginning until now, with dedicated VCA compressor and expand/gate circuits.

The compressor's simple control set allows for a wide variety dynamics control, from transparent to aggressive. A fully continuous ratio allows for the full range of knee from very gentle to fully limited. A fixed two position attack and the continuously adjustable release are perfect control sets for general console dynamics control. It is interesting to note that at heavy compression with quick release times, the SSL design has a similar room-expanding quality as the 1176 on things like drums and room mics.

While gates are not as relevant in the DAW as they once were for analog mixing, the SSL has one of the most transparent and musical console gates available, which can be used for fixative or creative purposes. There are two gate modes, G1 is the original E series gate response, with G2 has a minimal chatter response borrowed from the later G series gate. The "DYN SC" (Dynamic Sidechain) button allows the user to create frequency dependent gain reduction arrangements with either the Compressor or Gate/expander.

WebZine Article

An interesting article about the SSL E Series Channel Strip can be found in the "Ask The Doctors" section of the Universal Audio April 2009 Webzine:

- <http://www.uaudio.com/webzine/2009/april/doctors.html>

UAD, UAD-1, UAD-2 and UAD 4K are trademarks of Universal Audio, Inc. All other names are trademarks of Solid State Logic, which are in no way associated or affiliated with Universal Audio, Inc. These trademarks of other manufacturers are used solely to identify the products of those manufacturers whose circuits and sounds were studied during the sound development of the UAD 4K products. Use of third party trademarks are for informational purposes only and do not imply an endorsement or sponsorship of Universal Audio's products.

CHAPTER 54

SSL G Bus Compressor

Large Format Console Dynamics

The SSL G Series Bus Compressor plug-in for UAD-2 is an incredibly faithful circuit emulation of the legendary SSL 4000 G console's bus compressor. The undeniable drive and punch of this G Series master compressor — modeled to exacting detail by Universal Audio and fully authenticated by Solid State Logic® — helped make the original 4000 G Series the world's most successful studio production console. Engineers have come to rely on this master compressor to “glue together” mixes like nothing else, as well as patching into it for wonderful results on drums, pianos and more.

With simple, intuitive controls and transparent compression characteristics, the G Series Bus Compressor plug-in for UAD-2 captures the iconic SSL sound with stunning accuracy. Plug-in controls comprise fixed Compression Ratios (2:1, 4:1 and 10:1), and Attack and Release controls with program-dependent Auto Release function. Continuous Threshold Control and Make-Up Gain, compressor bypass, and the original Auto Fade (1-60 seconds) feature provide full operational authenticity.

SSL G Bus Compressor Screenshot



Figure 178. The SSL G and 4K Bus Compressor plug-in windows

SSL G Bus Compressor Controls

Threshold

Threshold defines the signal level at which the onset of compression occurs. Incoming signals that exceed this level are compressed. Signals below the level are unaffected. The control range is ± 15 dB.

As the Threshold control is decreased and more compression occurs, output level is typically reduced. Adjust the Make Up control to modify the output to compensate if desired.



Make Up

Make Up controls the signal level that is output from the plug-in. The range is 0 dB to +15 dB.

Generally speaking, adjust the Make Up control after the desired amount of compression is achieved with the Threshold and Ratio controls. Make Up does not affect the amount of compression.

Attack

Attack sets the amount of time that must elapse once the input signal reaches the Threshold level before compression is applied. The faster the Attack, the more rapidly compression is applied to signals above the threshold. Available Attack times are discrete values of 0.1 ms, 0.3 ms, 1 ms, 3 ms, 10 ms, and 30 ms.

The availability of relatively slow attack times (as compared to other compressors) is one factor that can provide the in-your-face-pumping quality that is so popular with large console VCA-style compressors.

Release

Release sets the amount of time it takes for compression to cease once the input signal drops below the threshold level. Slower release times can smooth the transition that occurs when the signal dips below the threshold, especially useful for material with frequent peaks. However, if you set the Release time too long, compression for sections of audio with loud signals may extend to lengthy sections of audio with lower signals.

Available Release times are discrete values of 100ms, 300ms, 600ms, 1.2s, and Auto. The Auto release characteristic for SSL G Bus Compressor has a unique quality that is optimized for program material.

Ratio

Ratio defines the amount of gain reduction to be processed by the compressor. For example, a value of 2 (expressed as a 2:1 ratio) reduces the signal above the threshold by half, with an input signal of 20 dB being reduced to 10 dB. The available Ratio values are 2:1, 4:1, and 10:1.



Power (IN)

The Power button determines whether the plug-in is active. Click the Power button to toggle the processor state. Power is useful for comparing the processed sound to that of the original signal.

Gain Reduction Meter




The Gain Reduction VU-style meter displays the amount of gain reduction occurring in the compressor. Higher values indicate more gain reduction.

Increase the signal level into the plug-in and/or lower the Threshold control to increase gain reduction.

Fade

The SSL G Bus Compressor provides a Fade function that, upon activation, automatically reduces the plug-in output to minimum within a specified time period. This function enables extremely smooth-sounding fade outs (and fade ins), plus it can be automated as well.

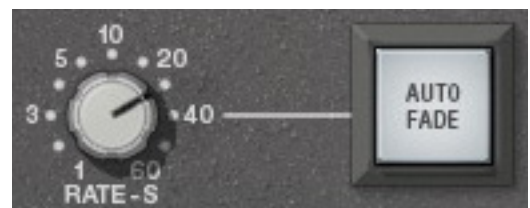

The Fade function processes the signal at the output of the compressor. The fade signal level that is output has an exponential curve.

Fade Rate

Fade Rate determines the amount of time that will pass between the Fade button being activated and the plug-in output level being reduced to minimum (or being raised to 0 dB in the case of a fade in). The available range is from 1.0 second to 60 seconds.

Fade times immediately reflect the current Fade Rate value. Therefore a fade out that has already been initiated can be accelerated by changing Fade Rate during the fade out. Conversely, a fade in can be accelerated by changing Fade Rate during the fade in.

Auto Fade Button

Activating the Auto Fade button initiates a fade out. The fade out time is determined by the Fade Rate parameter. The Fade button blinks when a fade out is in progress, and is continuously lit when the fade out is complete (when the Fade Rate time has elapsed).

Deactivating Fade (clicking the solid-lit button) initiates a fade in. During a fade in, the signal level is increased from the current level of attenuation to 0 dB of attenuation. The Fade button flashes when a fade in is in progress, and is no longer illuminated when the fade in is complete (when the Fade Rate time has elapsed).

Toggleing the Fade button causes an already active fade to reverse direction, without a jump in output level. The Fade Rate is constant even if an active fade is interrupted. For example: If the Fade Rate value is 30 seconds and a fade out is initiated, then Fade is clicked again after 20 seconds, it will take 20 seconds to fade back in.

Tip: *Shift+click the Fade button to instantly return the level back to 0 dB (this feature cannot be automated).*

General Usage Notes

The SSL G Bus compressor has been used to put the final touch of cohesiveness or “glue” to more mixes than any other compressor in history! Its true usefulness and beauty is usually in its subtle ability to make your mix “pop” just a little more, with a subtle increase in energy and excitement.

The SSL G is designed with the 2-bus in mind, and the control set adjusts the L/R simultaneously. The ratios, attack and release settings are also specially tailored for bus use, and give just the right variety of options to make it useful for a wide variety of source material. Attack and release times allow the compression behavior to be ‘tuned’ to the tempo and feel of the song to some de-

gree, and the “Auto” setting provides a program-dependent, multi-stage release for the greatest degree of transparency. Use the 2:1 for the most transparent sound and 10:1 for tougher, more audible sound, or 4:1 for in between. Usually, this processor is meant to be used with minimal gain reduction. In most cases, setting the threshold for 1-2 dB average gain reduction is most common, with occasional transients that go beyond the average. In quieter passages little or no meter movement will occur. Use make up gain to get a good gain match between active and bypassed.

Traditionally, the SSL G is most commonly used from the beginning of the mix process, and the engineer is “mixing to” the sound and behavior of the compressor. The ideal way to audition this plugin is on a new mix, dropped into an insert on your stereo master fader. In this case, you will be spending a lot of time keeping an eye on gain reduction metering and you may make tweaks to the setup as the mix progresses. Of course it can also be dropped in existing mixes at any time, but keep in mind it may take a bit more effort to dial in, especially if your ear is already used to the sound without its compression properties.

The SSL G is also useful of groups, such as drum busses. in this case, a more aggressive approach may be appropriate, with a greater range of gain reduction. 10:1 will give a harder sound often desired for drum groups. Fast attacks releases will give the most audible sound of the compressor working.

Finally Auto Fade is useful when the end of a song needs a gradual decrease in volume. The speed of the fade can be tuned from 1 to 60 seconds, and incorporates SSL's unique fade curves. fade in is also available.

WebZine Article

An interesting article about the SSL G Series Bus Compressor can be found in the “Ask The Doctors” section of the Universal Audio April 2009 Webzine:

- <http://www.uaudio.com/webzine/2009/april/doctors.html>

UAD, UAD-1, UAD-2 and UAD 4K are trademarks of Universal Audio, Inc. All other names are trademarks of Solid State Logic, which are in no way associated or affiliated with Universal Audio, Inc. These trademarks of other manufacturers are used solely to identify the products of those manufacturers whose circuits and sounds were studied during the sound development of the UAD 4K products. Use of third party trademarks are for informational purposes only and do not imply an endorsement or sponsorship of Universal Audio's products.

Studer A800

Multichannel Tape Recorder

For more than 30 years, artists and engineers alike have been drawn to the warm sound, solid “punchy” low-end, and overall presence of the Studer® A800 Multichannel Tape Recorder. The sheer number of albums recorded on this legendary 2” analog tape machine — including classics from Metallica, Stevie Wonder, Tom Petty and Jeff Buckley — serve as shining examples of the musicality of analog tape.

Authenticated by Studer, and modeled by UA’s world-renowned team of DSP engineers and AES magnetic recording expert Jay McKnight over a 12-month period, the Studer A800 Multi-Channel Tape Recorder plug-in for UAD-2 is the first and only product of its kind. This plug-in faithfully models the entire multitrack tape circuit path and electronics of an A800 machine — plus the distinct sounds of multiple tape formulas. Put simply, it’s the world’s most accurate representation of professional analog tape recording, now available on Mac and PC.

As the first microprocessor-controlled tape machine, the Studer A800 marked a new generation of professional multitrack recorders when it was introduced in 1978. Years ahead of its time, the A800 remains a sonic benchmark, and can still be found in studios all over the planet. However, with their massive steel frame and meter bridge, twin half-horsepower motors and cast alloy deck plates, original A800 units tip the scales at a backbreaking 900 pounds (408 kg) — not to mention the space required to house such a device. The UAD-2 plug-in version poses none of the hardware hassles of manual calibration and maintenance, nor the potential for tape degradation — while retaining all the beautiful sonic qualities that make tape such a beloved recording medium. Just drop the A800 in your first insert on every track desired, and enjoy the benefits of having recorded to tape.

All visual and aural references to Studer products and all use of Studer trademarks are being made with written permission from Harman International Industries, Inc. Any references to third party tape formulations are used solely for identification and do not imply any endorsement by, or affiliation with, any tape manufacturer.

Studer A800 Screenshot



Figure 179. The Studer A800 plug-in window

Operational Overview

The Studer A800 for UAD-2 provides all of the original unit's desirable analog sweetness; like magnetic tape, users can dial in a clean sound, or just the right amount of harmonic saturation using the Input and Output controls. The reel deck IPS control steps through the three tape speed choices available on the original hardware (7.5, 15, or 30 IPS), each with distinct frequency shift, head bump and distortion characteristics. The Tape Type control lets users choose from four of the most popular magnetic tape formulas of the last three decades, each with their own subtle sonic variation and tape compression characteristics. The Cal control allows the user to choose between +3dB,

+6dB, +7.5dB, or +9dB calibration levels, which can be used at their recommended settings, or tweaked for additional tonal options. Input, Sync and Re-pro paths, plus Thru (bypass) are available for authenticity, providing all available circuit options of the A800. A huge time saver, the Studer A800 plug-in features an innovative Gang Controls setting, allowing for instant global adjustment of any parameters for all Studer A800 instances in your session.

Secondary controls are hidden behind the reel deck, and can be exposed by clicking on the Studer badge or Open label of the plug-in GUI. The Equaliser control allows the user to select between the American (NAB) and European (CCIR) standardized EQs, providing regional pre-emphasis/de-emphasis filtering at 7.5 and 15 IPS, each with its own sonic qualities — plus the AES EQ at 30 IPS. The HF Bias calibration parameter allows the user to tune the HF oscillation voltage feed to the magnetic record head, striking a balance between record sensitivity and distortion. This can also be used creatively as an effect — from warm, overbiased sounds, to voltage-starved distortion and chatter. HF Record is a calibration filter that allows for HF makeup when the ideal Bias leaves a high frequency deficiency; both HF Bias and HF record are fed into the tape nonlinearity. Sync and Re-pro HF and LF calibration EQs allow for adjusting for a flat playback response, or can also be used creatively. All [Secondary Controls \(page 549\)](#) can be automatically calibrated to the manufacturer’s recommended settings via the A800’s Auto Cal feature, or may be disabled. Finally, separate controls for Hiss and Hum are available — each tuned to default settings to match the hardware behavior — with a global noise bypass option.

Multitrack Tape Machine

The primary purpose of Studer A800 is to obtain multichannel tape sonics within the DAW environment. To obtain the classic multitrack tape sound, the plug-in should be placed as the first insert on individual tracks, before other processing is applied. Creative “non-standard” results can be obtained by placing the Studer A800 in subsequent inserts after other processors or on busses in a send/return configuration. Mixdown to two tracks can be emulated by placing the plug-in on the stereo output bus.

Primary & Secondary Controls

The primary controls (those that are typically most used) are on the main panel at the bottom portion of the interface. Additional (typically less used) controls are available on the secondary panel. The secondary panel (see [Figure 180](#)) is accessed by clicking the Studer A800 label or the "OPEN" text label above it.



For detailed descriptions of the parameters, see ["Primary Controls"](#) on page 546 and ["Secondary Controls"](#) on page 549.



Figure 180. The Studer A800 plug-in window with exposed secondary controls

Ganged Operation

The UAD Studer A800 implements a control ganging feature that allows easy simultaneous parameter modification for all instances of the plug-in. The feature enables the DAW to emulate the multitrack tape deck scenario more accurately, where a single change to some multitrack machine parameters (such as tape speed, formula, and calibration settings) would affect all tape channels. See “Gang Controls” on page 551 for details.

Mono/Stereo Operation

The UAD Studer A800 is designed with a single-channel interface, to emulate the individual channels of a multitrack tape recorder. However, when the plug-in is used on a stereo track, the “mono” controls affect both channels of the stereo signal identically.

Primary Controls

Path Select

The Path Select buttons specify which of the four possible signal paths is active in the A800. The active mode is indicated by an illuminated button.



Thru

Thru is a bypass control. When enabled, emulation processing is disabled and DSP usage is reduced. Thru is useful for comparing the processed settings to the original signal. Thru is identical to the OFF position in the IPS control (page 548).

Note: DSP usage is reduced only when DSP LoadLock (page 74) is disabled. If DSP LoadLock is enabled (the default setting), activating Thru will not reduce DSP usage.

Input

Input mode emulates the sound of the A800 through the machine electronics only, without tape sonics. This is the scenario when the machine is in live monitoring mode but the tape transport is not running.

Sync

Sync mode models the sound of direct recording and playback via the sync/record head, plus all corresponding machine electronics.

Repro

Repro mode models the sound of recording through the record head and playback through the reproduction head, plus all corresponding electronics.

Tape Type



Tape Type selects the active tape stock formulation. Four of the most popular 2" magnetic tape formulas are modeled in the A800 plug-in: 250, 456, 900, and GP9. Each type has its own subtle sonic variation, distortion onset, and "tape compression" characteristics.

Generally speaking, the lower the [Cal Level](#) for each formula, the higher the signal level required to reach saturation and distortion.

Cal Level

Cal Level automatically sets tape calibration/fluxivity. The Cal Level setting takes care of the setup one would need to make under equivalent hardware operation, and sets the reference tape/flux level without disturbing the (unity) gain of the plug-in.



The record, repro, and sync gain trims found on the A800 channel cards are not present on the plug-in. Instead (when ["Auto Cal"](#) on [page 551](#) is enabled), these controls are amalgamated into this single Cal Level gain control.

As tape formulas advanced, their output level increased, thus lowering relative noise floor. +3, +6 and +9dB output formulas were available in the 2" format. Under normal use, the machine would be calibrated to the tape's output level. However, users would sometimes under-calibrate to leave more headroom for a broader sweet or to prevent electronics from clipping. Therefore, the user can go traditional and calibrate to the recommended levels, or select a non-corresponding calibration setting with Cal Level.

As an example, if 456 is the selected Tape Type and when Cal Level is set at +6 (6 dB higher than the NAB tape standard), the reference fluxivity level is 355 nW/m (nanoweber per meter) and is 10 dB below the point where THD reaches 3% (referred to as the maximum operating level). Therefore, with a 1 kHz test tone at -12dBFS sent to the plug-in, with Tape Type set to 456, Cal Level set to +6, and Auto Cal enabled, output levels of the plug-in will match the input level and fluxivity on the tape will be 355 nW/m.

The manufacturer's recommended calibration settings for each [Tape Type](#) are as follows:

- 250: +3 Calibration (251 nWb/m)
- 456: +6 Calibration (355 nWb/m)
- 900: +9 Calibration (502 nWb/m)
- GP9: +9 Calibration (502 nWb/m)

Note: The noise floor is affected by Cal Level when [Noise Enable \(page 550\)](#) is active.

Tip: The UAD Studer A800 default bank offers a variety of preset Tape Type, Tape Speed, CAL level, and EQ configurations that are commonly used for the recording of specific genres.

IPS (Tape Speed)



The IPS (Inches Per Second) control determines the speed of the tape transport and the associated “head bump.”

(Head bump is bass frequency build-up that occurs with magnetic tape; the dominant frequencies shift according to transport speed.)

15 IPS is considered the favorite for rock and acoustic music due to its low frequency “head bump” (low frequency rise) and warmer sound, while 30 IPS is the norm for classical and jazz due to its lower noise floor, greater fidelity and flatter response. 7.5 IPS is also available for an even more colored experience, with even greater frequency shift.

Tip: Click on the “IPS” text label to stop/start the spinning reels animation.

The OFF position is a bypass control. When set to OFF, emulation processing is disabled, the VU Meter and control LEDs are dimmed, and DSP usage is reduced. OFF is useful for comparing the processed settings to the original signal. OFF is identical to the Thru position in the Path Select control ([page 546](#)).

Note: DSP usage is reduced only when DSP LoadLock ([page 74](#)) is disabled. If DSP LoadLock is enabled (the default setting), activating OFF will not reduce DSP usage.

Input

Input acts as an outside gain control (like an external console fader), and adjusts the signal level going into the tape circuitry. The available range is -12 dB to +24 dB.



Just like real magnetic tape, lower Input levels will have a cleaner sound, while higher levels result in more harmonic saturation and coloration.

Higher Input levels will also increase the output level from the plug-in. The Output control can be lowered to compensate.

Tip: Click the “0” control label text to return to the Input value to 0.

Output



Output acts as an outside gain control (like an external console fader) and adjusts the gain at the output of the plug-in. The available range is -24 dB to $+12$ dB.

Tip: Click the “0” control label text to return to the Output value to 0.

VU Meter

The VU Meter provides a visual representation of the signal levels after the virtual tape. The Input control affects how “hot” the signal is.



Higher VU levels typically indicate more harmonic saturation, coloration, and/or distortion. However, this will depend on the other control values.

The plug-in operates at an internal level of -12 dBFS. Therefore a digital signal with a level of -12 dB below full scale digital (0 dBFS) at the plug-in input will equate to 0 dB on the plug-in meters.

Secondary Controls

The Secondary Controls are exposed by clicking the “Studer A800” label or the “OPEN” text above it. See [Figure 180](#) and “Primary & Secondary Controls” on page 545 for more information.

Tip: The last-used state of the Secondary Controls panel (open or closed) is retained when a new Studer A800 plug-in is instantiated.

The state of the panel (open or closed) settings retained with new plug-in instantiations.

Equaliser (Emphasis EQ)

The Equaliser buttons determine the active Emphasis EQ values and the frequency of the hum noise. Click the equaliser buttons to alternate between the two different types.



NAB or CCIR curves can be selected when the Tape Speed is 7.5 or 15 IPS. When the Tape Speed is 30 IPS, neither value is available (the LEDs are dimmed) because the EQ is fixed with the AES emphasis curve.

When the value is set to NAB, the Hum Noise frequency is 60 Hz (the United States standard). When set to CCIR, the Hum Noise frequency is 50 Hz (the standard in Europe and other regions). See [“Noise Enable” on page 550](#) and [“Hum Noise” on page 555](#) for more information about Hum.


Note: When IPS (Tape Speed) is set to 30 IPS, the yellow LEDs are not illuminated, indicating that the Emphasis EQ is set to AES. However, in 30 IPS mode, the Equaliser switch can still be changed to set the frequency of Hum Noise.

Tape Speed and Emphasis EQ were originally practical controls for record duration vs. noise and local standards. It is important to note that historically, the origin of the tape machine (US or European) dictated the built-in EQ emphasis, but later machines like the A800 had both circuits available.

While the hardware A800 has discrete controls for tape speed and emphasis EQ, the user has to recalibrate the machine for various speeds and re-jumper the whole machine for 30/15 or 15/7.5 IPS usage. The A800 plug-in has three speeds and related EQ pre-emphasis/de-emphasis filtering, presented as two easy to use controls for simple auditioning of the sonic variations.

CCIR (also known as IEC) is the EQ pre-emphasis made famous on British records and is considered the technically superior EQ; many say this EQ was part of the “British sound” during tape’s heyday. NAB (also referred to as IEC2) was the American standard with its own sound. AES is truly standardized for 30 IPS and is the sole EQ found on the Studer A800 for 30 IPS.

Noise Enable

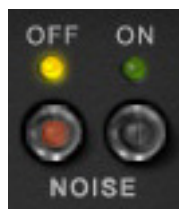


The Noise Enable buttons are a global enable/disable control for the individual hum and hiss components of the A800 model. The amount of hum and hiss noises are continuously variable and are set with the [Hum Noise](#) and [Hiss Noise](#) controls ([page 554](#)). Click the Noise buttons to alternate between OFF and ON.

While noise is historically considered a negative, and was the attribute that pushed the technical envelope for better machines and formulas, noise is still an ever-present component of the sound of using tape and tape machines.

Auto Cal

The Studer A800 has individual parameters for Bias, HF Record EQ, and Sync/Repro EQ. On the hardware tape machine, these calibration controls are usually adjusted whenever Tape Type, Tape Speed, or Emphasis EQ is changed.

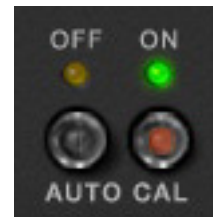

When Auto Cal (Automatic Calibration) is ON in the plug-in, these calibration controls (see [Figure 181 on page 553](#)) are automatically adjusted to the calibrated values whenever the Tape Type, Tape Speed, and Emphasis EQ are modified. After Auto Calibration occurs, the automatically adjusted parameters can then be modified to any value if desired.

When Auto Cal is OFF, the calibration parameters do not change values when Tape Type, Tape Speed, and Emphasis EQ are modified.

Note: *Auto Cal is enabled by default.*

Tip: *When making manual calibration settings, consider disabling Auto Cal so the manually calibrated settings are not accidentally lost if another control is modified.*

Gang Controls



Gang Controls enables global control adjustments of all parameters for all Studer A800 instantiations. This functionality may be accessed from within any active Studer A800 plug-in.

Click the Gang Controls buttons to alternate between the two states. A red flashing LED is present whenever Gang Controls is enabled as a reminder to use this feature with caution.

Important: *When Gang Controls is ON and a Studer A800 parameter is modified, the current value of that parameter on all other Studer A800 instantiations will be overwritten and cannot be recovered.*

Gang Controls Notes

- Gang Controls is a read-only, non-automatable parameter and its current value is not saved with the session.

- Gang Controls is a static control without the ability to make relative offsets. Disable Gang Controls if offsets between the same control within different instantiations is desired.
- If Gang Controls is enabled when Auto Cal is enabled, any adjustments made to Tape Type, Tape Speed or Emphasis EQ causes the **Calibration Controls** to be automatically adjusted for all instantiations. However, if the Tape Type, Tape Speed or Emphasis EQ values do not already match between instantiations before Gang Controls is active, the resulting calibrated values may not match either.
- When Gang Controls is enabled, there are no audible or visual changes to the other Studer A800 instantiations until a control is actually changed.
- When Gang Controls is enabled and a Studer A800 settings preset is loaded via the UAD Toolbar (see “**Settings Menu**” on page 88), the loaded parameter settings are pushed to all Studer A800 instances.

Calibration Controls

Refer to **Figure 181 on page 553** for the HF Record EQ, Bias, Sync EQ, and Repro EQ controls. These controls are automatically adjusted when **Auto Cal** is active, or they can be manually modified as desired.

The “flat” calibrated position for these controls is determined by Tape Type and Tape Speed; therefore the available \pm range for these controls is dependent on the current calibration.

Tip: Clicking the text label for any of the HF Record EQ, Bias, and Sync/Repro EQ controls will return that parameter to the calibrated value.

Note: When making manual calibration settings, consider disabling **Auto Cal** (page 551) so the manually calibrated settings are not accidentally lost if another control is modified.

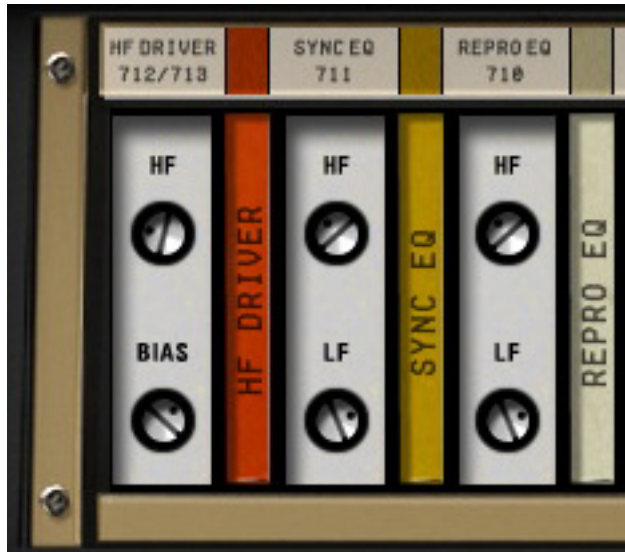


Figure 181. The calibration controls for Studer A800

HF Record EQ

HF (High Frequency) Record EQ is provided to make up for common residual HF loss due to Bias optimization and system filtering. It is used to tune HF content into the incoming signal prior to the tape non-linearity. The control provides a continuous “boost filter” gain and affects saturation characteristics.

Note: *This filter is prior to the tape record circuit, while the other EQs (Sync, Repro) are for tape playback only.*

HF Driver Bias

Bias is defined as an oscillator beyond the audible range applied to the audio at the record head, allowing for adjustment of the record behavior. Ideal bias voltage settings provide maximum record sensitivity and low distortion. Intentionally overbiasing is a common technique especially for “tape compression” of drums, giving a warmer, gently saturated sound. Underbiasing can also be used to add distortion and other nonlinear responses, similar to gate chatter or cold solder joints; extremely low voltages may even cause audio to drop out entirely. Bias voltage, HF Record EQ, and fixed Emphasis EQ (CCIR, NAB, AES) work together to provide a linear response to the recorded signal.

Sync/Repro EQ

Sync and Repro Playback EQ Controls are available for tape playback calibration. They affect the signal coming out of the tape circuitry.

With the hardware machine, these controls enable compensation for any tape frequency loss or head wear. Under hardware use, the Sync and Repr playback heads are calibrated to normal operating standards and are nearly identical when set correctly. However, they may be tuned incorrectly to achieve a desired sound. Sync EQ and Repr EQ are used as filters to shape the frequency response of the system in maintaining a flat response, but they may be used on their own for high or low frequency adjustment.

Sync HF EQ

Adjusts the high frequency content when [Path Select \(page 546\)](#) is set to Sync. When Path Select is not set to Sync, the control has no effect.

Sync LF EQ

Adjusts the low frequency content when [Path Select \(page 546\)](#) is set to Sync. When Path Select is not set to Sync, the control has no effect.

Repro HF EQ

Adjusts the high frequency content when [Path Select \(page 546\)](#) is set to Repr. When Path Select is not set to Repr, the control has no effect.

Repro LF EQ

Adjusts the low frequency content when [Path Select \(page 546\)](#) is set to Repr. When Path Select is not set to Repr, the control has no effect.

Noise



The Noise controls allow the user to control the Hum and Hiss elements found on the original hardware. Separate controls for Hum and Hiss are available and each can be adjusted for creative purposes.

Tip: Click the control label text to return to the Hum or Hiss value to 0.

Hiss affects the signal at the tape head; Hum is added after the tape circuitry. Hum and Hiss values default to comparative levels found on the original hardware. The available range for both controls is ± 25 dB.

The global [Noise Enable control \(page 550\)](#) must be ON for the Hum and Hiss parameters to have any effect.

Hum Noise

The Hum Noise frequency is dependent on the setting of the [Equaliser \(Emphasis EQ\)](#) control ([page 550](#)). The frequency is 60 Hz when set to NAB (US) and 50 Hz when set to CCIR (European).

Note: *When IPS (Tape Speed) is set to 30 IPS, the yellow Equaliser (Emphasis EQ) LEDs are not illuminated, indicating that the Emphasis EQ is set to AES. However, in 30 IPS mode, the Equaliser switch can still be changed to set the frequency of Hum Noise.*

Hiss Noise

Just like the hardware, the amount of hiss is dependent on settings of the various controls. Overall Hiss Noise is set with this control, but may change based on the Path Select, Tape Speed, Tape Type, Emphasis EQ, Cal Level, Bias, Playback EQs, and Output Level controls.

Because hiss noise is an element of tape playback, Hiss is disabled when [Path Select](#) is to INPUT.

Note: *Hiss timbre and level can change with Tape Type.*

Studer A800 Latency

The Studer A800 uses an internal upsampling technique. This upsampling results in a slightly larger latency than most other UAD plug-ins. See [“Compensating Upsampled Plug-Ins”](#) on [page 108](#) for more information.



The Studer A800 Professional Multichannel Magnetic Tape Recorder

All visual and aural references to Studer products and all use of Studer trademarks are being made with written permission from Harman International Industries, Inc. Any references to third party tape formulations are used solely for identification and do not imply any endorsement by, or affiliation with, any tape manufacturer.

CHAPTER 56

Trident A-Range EQ

Overview

The original Trident A-Range desk holds near-mythic status in the professional recording industry, and is arguably the best loved of the classic Trident console designs. Particularly noted for its fantastic preamps and the unique band interactions of its colorful EQ section, the Malcolm Toft / Trident-designed A-Range console has made an indelible impact on the sound of record making. During the “Golden Years” of rock, the A-Range was employed to record some truly great records — David Bowie’s *The Rise and Fall of Ziggy Stardust*, Lou Reed’s *Transformer* and Queen’s *Sheer Heart Attack*, to name a few — helping to solidify this console’s reputation forever. And now, this sound comes to the UAD Powered Plug-Ins platform, courtesy of the Trident A-Range Classic Console EQ plug-in.

Working in partnership with Trident Audio Developments, UA scrupulously analyzed and faithfully reproduced the EQ section from the specific Trident A-Range console used to record classic albums by both The Police and Rush. One of only 13 A-Range consoles ever built, this desk was hand-picked by Elliott Smith for his private studio, and now resides at New Monkey Studio in Van Nuys, CA.

Trident A-Range EQ Screenshot

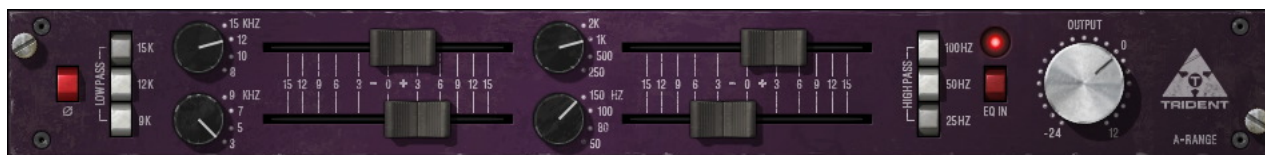


Figure 182. The Trident A-Range EQ plug-in window

Operational Overview

Unique Band Interactions & Distinct Cut-Filter Combinations

The unique inductor-based EQ section of the board is what the Trident A-Range sound is all about. A series of three high pass filters and three low pass filters are arranged at the ends of the EQ section (see [Figure 183](#)). These are unique in that the switches can be pushed in simultaneously, offering distinct cut filter combinations with unusual filter curves.

The rest of the EQ section contains four bands: low shelf, low-mid bell, high-mid bell, and high shelf (see [Figure 183](#)). Each band has four selectable fixed frequencies and ± 15 dB of gain. These were the good old days before sweepable frequencies and bandwidth controls, but the results are wonderfully warm and musical. The controls complement is rounded out with phase, output level, and bypass.

There is band interaction between the high and low shelving filters, and also between the low-mid and high-mid bell filters. The midband interactions can be significant if the center frequencies are near each other.

Band Layout

Each of the four main EQ bands have similar controls. The band frequency is controlled by its knob, and the band gain is controlled by its slider.

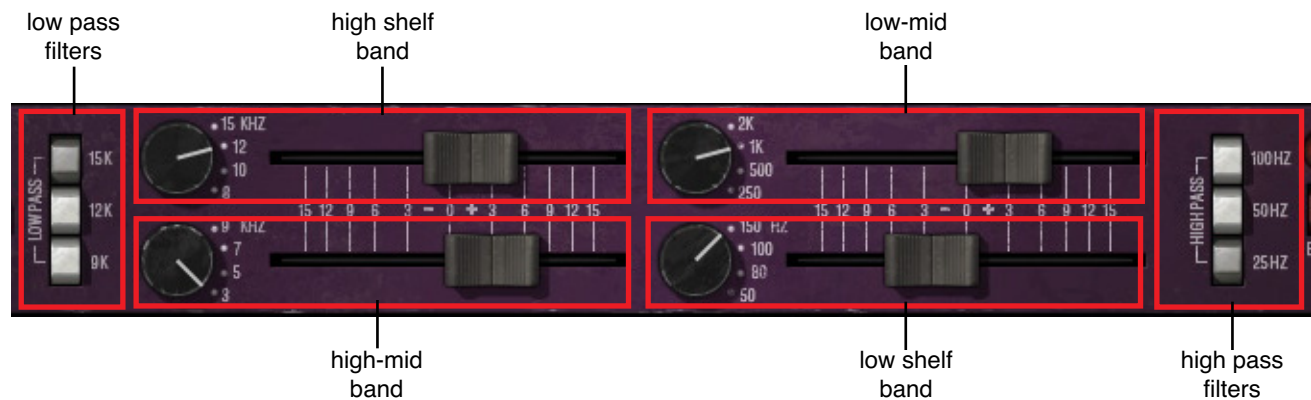


Figure 183. Trident A-Range band control layout

Trident A-Range EQ Controls

Phase



The Phase (Ø) button inverts the polarity of the signal. The signal is inverted when the button is engaged (darker). Leave the button inactive (lighter) for normal phase. Phase is independent of the EQ IN setting.

Low Pass Filters

Three low pass filters are available, and they can be used simultaneously in any combination. The available cutoff frequencies are 15 kHz, 12 kHz, and 9 kHz with a slope of 12 dB per octave. Each filter is active when its button is engaged (darker).

Each low pass filter “adds” to the others. For example, engaging the 15K filter will rolloff frequencies above 15 kHz, but engaging 9K as well will also attenuate frequencies above 15 kHz, even more than if 15K was used by itself.



Note: See Figure 183 on page 558 and Figure 184 on page 560 when referring to the band parameters below.

High Shelf

The high shelf offers Trident-A’s famous high frequency shelving EQ.

High Shelving Frequency

The edge frequency of the high shelf filter is specified by this knob. Four shelf edge frequencies are available: 15 kHz, 12 kHz, 10 kHz, and 8 kHz.

High Shelving Gain

The gain for the high shelf filter is specified by the horizontal slider control. The available range is ± 15 dB. The gain value is zero when the slider is in the center position.

High-Mid Band

The high-mid EQ offers peak/dip “bell” equalization for the high-to-middle frequencies.

High-Mid Frequency

The center frequency of the high-mid filter is specified by this knob. Four center frequencies are available: 9 kHz, 7 kHz, 5 kHz, and 3 kHz.

High-Mid Gain

The gain for the high-mid filter is specified by the horizontal slider control. The available range is approximately ± 15 dB. The gain value is zero when the slider is in the center position.

Low-Mid Band

The low-mid EQ offers peak/dip “bell” equalization for the middle-to- low frequencies.

Low-Mid Frequency

The center frequency of the low-mid filter is specified by this knob. Four center frequencies are available: 2 kHz, 1 kHz, 500 Hz, and 250 Hz.

Low-Mid Gain

The gain for the low-mid filter is specified by the horizontal slider control. The available range is approximately ± 15 dB. The gain value is zero when the slider is in the center position.

Low Shelf

The low shelf offers low frequency shelving equalization.

Low Shelving Frequency

The edge frequency of the low shelf filter is specified by this knob. Four shelf edge frequencies are available: 150 Hz, 100 Hz, 80 Hz, and 50 Hz.

Low Shelving Gain

The gain for the low shelf filter is specified by the horizontal slider control. The available range is ± 15 dB. The gain value is zero when the slider is in the center position.

Gain slider shortcuts

The band gain sliders can be instantly moved to any position by clicking anywhere within its range.

Tip: Clicking just above or below the “0” (zero) graphic returns the associated slider to its center (zero gain) position.



Figure 184. Trident A-Range slider shortcuts


The band gain sliders will jump to any position clicked within the red zones.

Click near the “0” to return to zero gain.

High Pass Filters

Three high pass filters are available, and they can be used simultaneously in any combination. The available cutoff frequencies are 100 Hz, 50 Hz, and 25 Hz with a slope of 18 dB per octave. Each filter is active when its button is engaged (darker).

Each high pass filter “adds” to the others. For example, engaging the 50 Hz filter will rolloff frequencies below 50 Hz, but engaging 100 Hz as well will also attenuate frequencies below 50 Hz, even more than if 50 Hz was used by itself.

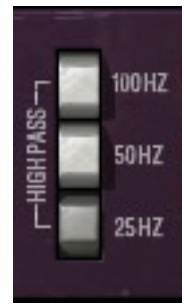

Output Level



The Output knob controls the signal level that is output from the plug-in. The default value is 0 dB. The available range is -24 dB to 12 dB.

Tip: Click “Output’ or “0” (zero) to return to zero gain position.

EQ In

The EQ In switch determines whether the plug-in is active. When the switch is in the Off (lighter) position, plug-in processing is disabled and UAD DSP usage is reduced (unless “UAD-2 DSP LoadLock” on page 74 is enabled). Note the Phase setting (“Phase” on page 559) remains in effect even if EQ In is in the off position.



Trident A-Range Latency


The Trident A-Range EQ uses an internal upsampling technique to facilitate its amazing sonic qualities. This upsampling results in a slightly larger latency than other UAD plug-ins. See “Compensating Upsampled Plug-Ins” on page 108 for more information.

Note: *Compensating for Trident A-Range EQ is not required if the host application supports full plug-in delay compensation throughout the signal path, or when it is used only on the outputs. See “Host PDC Implementation” on page 101.*

WebZine Article

An interesting article about the Trident A-Range console and its revered EQ can be found in the “Analog Obsession” article of the Universal Audio September 2009 Webzine at:

- <http://www.uaudio.com/webzine/2009/september/analog.html>

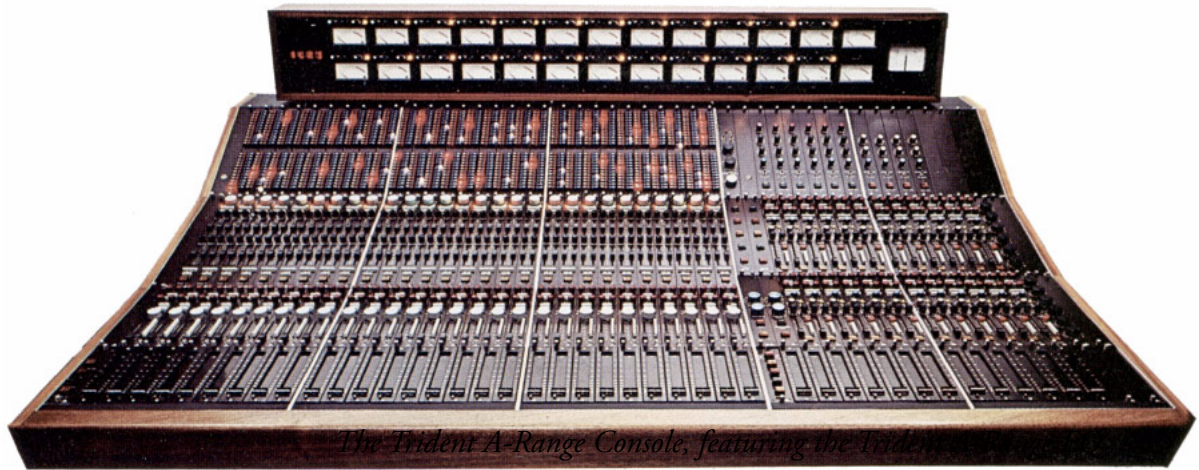

The Trident A-Range Console, featuring the Trident A-Range EQ



All visual and aural references to the TRIDENT A-RANGE EQ are trademarks being made with written permission from PMI AUDIO.

CHAPTER 57

History

Bill Putnam Sr.

The name M.T. “Bill” Putnam retains a unique status in the audio industry hall of fame- it's legendary even among those who are considered to be legends themselves. Called the “father of modern recording” by no less a luminary than Bruce Swedien, and a “visionary, responsible for motivating new thinking,” by respected studio engineer Tom Hidley, Putnam was a true renaissance man in the world of sound and music. As a record producer, engineer, inventor, writer, singer, technician, studio owner and businessman, he excelled at combining his talents in a creative way. A pioneer in recording studio acoustics, Putnam is acknowledged to be the first person to use artificial reverberation for commercial recordings. He also developed the first multi-band equalizers, and with his company Universal Audio, was responsible for the development of classic equipment like the 1176LN and UREI® Time Align monitors. He was involved in the early development of stereophonic recording, and founded studios in Chicago, Hollywood and San Francisco whose legacy still lives on today.

Early Interests Born in 1920 in Danville, Illinois, he was influenced by his father, a businessman who also put on radio programs, including a number one country music show. Young Putnam's interests surfaced early; in Boy Scouts he earned a merit badge in wireless, building a crystal set and a one-tube radio. By 15 he was taking the ham radio operator's exam and constructing his own equipment. In high school both his artistic and technical sides emerged full on. He worked repairing radios and renting out P.A. systems, while also singing on weekends with dance bands (for five dollars a night, which included the P.A. rental!), developing his interest in the music business, and realizing, as he has said, that “musicians were my favorite people.”

Universal Recording Corp. Opens in Chicago Technical college followed, then work at radio stations, and radio engineering work for the Army during World War II. In 1946 Putnam started his own recording studio, Universal Recording Corp., in Evanston Illinois. His goals at the time, besides having a successful business, were the development of new recording techniques and specialized equipment for recording studios.

To that end the manufacturing company Universal Audio, which later became UREI®, was formed. Most of the equipment, including the console, for Universal Recording was built by



Universal Audio. It wasn't long before the company relocated to Chicago, and it was there, in 1947, that Putnam recorded what is generally accepted to be the first "pop" record to use artificial reverberation. The founder of the group The Harmonicats, Jerry Murad, wanted to record using an echo chamber like he'd heard on effects in spooky radio mysteries. Putnam not only financed the record for a piece of the profits, he came up with the idea of using the tiled men's room at Universal Recording to create that echo. The Harmonicats song "Peg-O-My-Heart," became the first million seller smash with more than 1,400,000 copies sold, and the rest was, well, history.

Landmark Recordings Bruce Swedien, a teenager at the time, recalls that the sound on "Peg-O-My-Heart" was a seminal influence on him. "It was the first pop music recording where artificially controlled reverb was used for artistic effect," he explains. "Many of the recordings that were done prior to that had reverb, but it was part of the acoustics of the recording environment. Bill's contribution to the art was that he literally came up with the design of the way the echo or reverb sound is sent from the recording desk and the way it's returned to the mix so that it can be used in a variable amount.

"I was a youngster in Minneapolis in the early 50s when I first heard "Peg-O-My-Heart," Swedien continues, "And I can remember it like it was yesterday. It had an extraordinary effect on me. I didn't understand how the techniques were done, but I knew it had tremendous artistic impact."

Putnam's engineering credits grew quickly; at that time he worked with artists such as Patti Page, Vic Damone and Dinah Washington, and had a million selling record on his own Universal Records label with "Jealous Heart" by Al Morgan. A number of firsts occurred at Universal: the first use of tape repeat, the first vocal booth, the first multiple voice recording, the first 8-track recording trials and experiments with half speed disc mastering.

Universal was becoming famous, doing recordings for the Chicago based labels VeeJay, Mercury and Chess. It was a hub for rhythm and blues recordings including cuts for Muddy Waters, Willie Dixon, Bo Diddley, Little Walter, and Chuck Berry. Jazz artists recorded by Putnam included Stan Kenton, Tommy Dorsey, Count Basie, Dizzy Gillespie, Ella Fitzgerald, Sarah Vaughn, Nat King Cole, and the master, Duke Ellington. Putnam was also producing records for Decca, as well as writing songs and lyrics.



With all this success, Universal Recording went through several incarnations, with the dream version completed in 1955. At that time it was the most advanced and largest independent recording facility in the country attracting top producers like Nelson Riddle, Mitch Miller and Quincy Jones. It was also at that time that Bruce Swedien went to work for the studio.

"It's absolutely true," he states. "Bill Putnam was the father of recording as we know it today. The processes and designs which we take for granted — the design of modern recording desks, the way components are laid out and the way they function, console design, cue sends, echo returns, multitrack switching — they all originated in Bill's imagination."

Murray Allen, who purchased Chicago's Universal Recording from Putnam in 1972 elaborates. "Bill was a brilliant person, highly talented, with a great set of ears," he says. "He was Duke Ellington's favorite engineer, among many, and at one time he had more singles in the top 40 than anybody else. At the time, if you needed something in sound, he was the guy. He designed systems for the Sands and other big showrooms in Las Vegas; John Kennedy flew him out to arrange the sound for the broadcast of his inauguration. He did it all."

Moving West- United Recording Corp. With his Chicago studio so successful, Putnam's clients began urging him to open a facility on the West Coast, and finally he was convinced. In 1957 he sold his interest in Universal Recording, started a new company called United Recording Corp. and moved to Hollywood, taking over a building at 6050 Sunset and starting construction on new studios. Stereo was taking off, and Putnam was determined to incorporate as many technological innovations into the complex as possible.

In 1958, Studio B was completed along with two reverb chambers. The facility soon grew to three studios, a mixdown room, three mastering rooms including one with stereo, and a small manufacturing plant, all in 15,000 square feet. The studios were busy around the clock, with projects from Ricky Nelson to voice-overs for Hanna Barbera cartoons like the Flintstones.

In the early 60s Western Recorders, one block away at 6000 Sunset, was acquired and re-modeled. The studio was renamed United Western, and business continued to grow. The talent behind and in front of the glass in those days reads like a who's who of classic recording: Bones Howe, Wally Heider and Lee Hirschberg were on staff. During the 60s and 70s the studios were jumping 24 hours a day, seven days a week with artists like Frank Sinatra, Bing Crosby, Dean Martin, Sammy Davis, Nat King Cole, Johnny Mercer and Ray Charles. Charles classic "I Can't Stop Loving You" was recorded there, as



well as Sinatra's "It Was A Very Good Year," and The Mamas and The Papas' "California Dreamin'". The United Western studios, still in existence today as both Cello Studios and Allen Sides' Ocean Way Recording, are still considered to be some of the best sounding rooms ever built.

Universal Audio and UREI Meanwhile, upstairs in the 6050 Sunset building Universal Audio was thriving, and changing names. Now called UREI®, the company had acquired the patent rights to the LA-2A leveling amplifier, and also to National Intertel, which became the Teletronix division of UREI®. It was a unique situation; Putnam was always searching for better ways to do things and the combination of studios and manufacturing led readily to new product ideas. Out of this synergy came the 1176LN leveling amplifier, the 1108 FET preamp and, in conjunction with Ed Long, the 813 family of speakers.

Mentor and Innovator Allen Sides, currently owner of Ocean Way Recording, whose studios today encompass almost unchanged what was part of United Western, calls Putnam "my best friend." "When Bill started designing control rooms they were about eight feet by six feet and they were calling them booths," he says. "He built the first of what we now call conventional control rooms, with speakers above the windows. The whole control room concept we think of today was Bill's. The first console that had equalizers in every channel was Bill's, the feedback equalizer was Bill's creation, he built all his own limiters, his own consoles, he could tune his own pianos; he basically did the whole deal.

"Around 1962 he was doing half speed cutting, to get the high frequencies on the discs," recalls Sides. "He'd designed his own mastering systems, because you couldn't do it any other way. He was recording on custom made 30ips machines and he was doing all the super hi fi stuff, like the Mercury Living Presence series."

Sides, who is renowned for both his golden ears and his abilities in the 'art of the deal,' appreciated Putnam on many levels. "He was an exceptional businessman, with a tremendous understanding of things," he says. "If I had a complex deal and I couldn't quite figure out how to approach it, I'd sit down with Bill and he'd reason it out in the most amazing way.


"There's a great story about when stereo was coming on. The record companies really weren't that interested — everyone was cost conscious. They didn't want to spend any more money and they were saying that stereo was a waste of time. But Bill could see the potential, and around 1959



he started recording everything with feeds to two control rooms, one for a stereo mix, one for a mono mix. In late '58, '59 and '60 everything Bill did was recorded in both stereo and mono.

“When stereo hit big around '61, none of the record companies had any catalog. But Bill did — he had two and one half years worth. It was a lot of material — understand at that period of time he was doing about \$200,000 a month in the United Western Complex — which is like a million dollars a month now.

“So the record companies came to Bill and said, 'We'll pay you for the tape.' And he said, 'No, you can't pay for the tape, but if you repay me all the studio time that was used in the last two and a half years you have a deal.' And they did. They wrote him a check for the whole thing.”

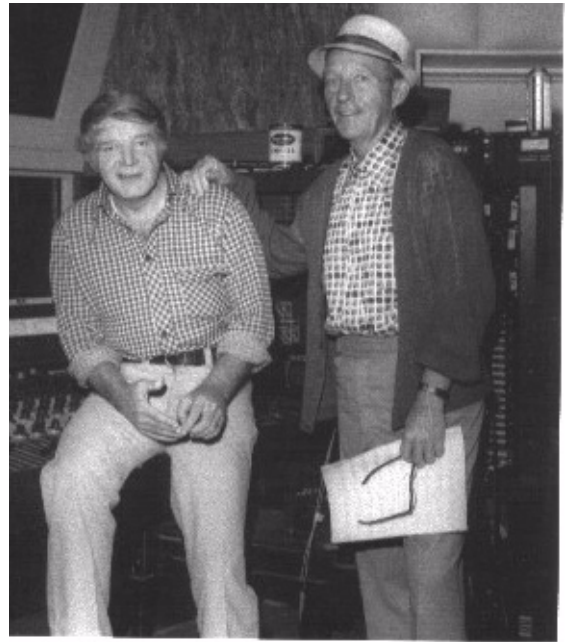

It's recollections like these that bring home Putnam's visionary and entrepreneurial style. An undisputed leader in music recording and in recording technology, with innumerable accolades to his credit, it's his son, Bill Putnam, who perhaps sums it up best, in a way Bill Sr. himself might like. Bill Jr. says, simply, “He was a guy who built equipment to solve problems in the studio.”

“There's a whole school of what I'd call Bill Putnam engineers out there,” concludes Murray Allen. “People like Allen Sides and Bruce Swedien who worked with him and who really understood what recording sound should be about. They've carried on his tradition, and I think we all agree that it's very important for people to know what he contributed.”

Classic Compressors

The LA-2A and 1176 compressor/limiters long ago achieved classic status. They're a given in almost any studio in the world — relied upon daily by engineers whose styles range from rock to rap, classical to country and everything in between. With so many newer products on the market to choose from, it's worth looking at the reasons why these classics remain a necessary part of any professional studio's outboard equipment collection.

The basic concept of a compressor/limiter, is of course, relatively simple. It's a device in which the gain of a circuit is automatically adjusted using a predetermined ratio that acts in response to the input signal level. A compressor/limiter "rides gain" like a recording engineer does by hand with the fader of a console: it keeps the volume up during softer sections and brings it down when the signal gets louder. The dynamic processing that occurs at ratios below 10 or 12 to one is generally referred to as compression; above that it's known as limiting.


Modern day compressors offer a great degree of programmability and flexibility – older devices such as the 1176 and the LA-2A are more straightforward in their design. Perhaps it is this fact that has contributed to their appealing sound and the longevity of their popularity.

LA-2A

The LA-2A leveling amplifier, a tube unit with hand wired components and three simple controls, was introduced in the mid-1960s. It utilized a system of electro-luminescent optical gain control that was quite revolutionary. Gain reduction was controlled by applying the audio voltage to a luminescent driver amplifier, with a second matched photoconductive cell used to control the metering section. With its 0 to 40 dB of gain limiting, a balanced stereo interconnection, flat frequency response of 0.1 dB from 30-15,000 Hz and a low noise level (better than 70 dB below plus 10 dBm output), the LA-2A quickly became a studio standard. Originally patented by Jim Lawrence, it was produced by Teletronix in Pasadena, California, which became a division of Babcock Electronics Corporation in 1965. In 1967 Babcock's broadcast division was acquired by the legendary Bill Putnam's company, Studio Electronics Corporation shortly before he changed the company's name to UREI®. Three different versions of the LA-2A were produced under the auspices of these different companies before production was discontinued around 1969.

1176LN

It was Bill Putnam himself who, in 1966, was responsible for the initial design of the 1176. Its circuit was rooted in the 1108 preamplifier which was also designed by Putnam. As is evident from entries and schematics in his design notebook, he experimented with the recently developed Field Effect Transistor (F.E.T.) in various configurations to control the gain reduction in the circuit. He began using F.E.T.s as voltage variable resistors, in which the resistance between the drain and the source terminals is controlled by a voltage applied to the gate. His greatest challenge was to ensure that distortion was minimized by operating the F.E.T.s within a linear region of operation.

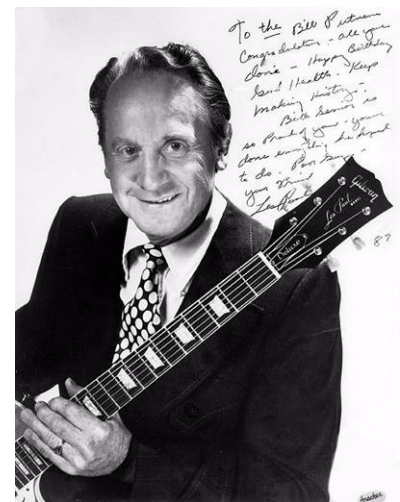

After several unsuccessful attempts at using F.E.T.s in gain reduction circuits, Putnam settled upon the straightforward approach of using the F.E.T. as the bottom leg in a voltage divider circuit, which is placed ahead of a preamp stage.

The output stage of the 1176 is a carefully crafted class A line level amplifier, designed to work with the (then) standard load of 600 ohms. The heart of this stage is the output transformer, whose design and performance is critical. Its primary function is to convert the unbalanced nature of the 1176 circuit to a balanced line output, and to provide the proper impedance matching to drive the line impedance of 600 ohms. These two jobs are accomplished by the primary and secondary windings whose turns' ratio defines the impedance ratio.

This transformer is critical due to the fact that it uses several additional sets of windings to provide feedback, which makes it an integral component in the operation of the output amplifier. Putnam spent a great deal of time perfecting the design of this tricky transformer and carefully qualified the few vendors capable of producing it.

The first major modification to the 1176 circuit was designed by Brad Plunkett in an effort to reduce noise—hence the birth of the 1176LN, whose LN stands for low noise. Numerous design improvements followed, resulting in at least 13 revisions of the 1176. Legend has it that the D and E blackface revisions sound the most “authentic”.

The original Universal Audio 1176LN designed by Bill Putnam was a major breakthrough in limiter technology – the first true peak limiter with all transistor circuitry offering superior performance and a signature sound. Evolved from the popular Universal Audio 175 and 176 vacuum tube limiters, the 1176LN retained the proven qualities of these industry leaders, and set the standard for all limiters to follow.



Pros Talk UA

Both the 1176 and the LA-2A remain in daily use. Busy engineers and producers' comments about both the 1176 and the LA-2A demonstrate their impact on the industry:

Mike Shipley:

Mike Shipley (Def Leppard, Shania Twain, Blondie): "I grew up using 1176s – in England they were the compressor of choice. They're especially good for vocals, which is also what I primarily use the LA-2 for. Most anything else I can do without, but I can't be without at least a pair of 1176s and an LA-2A. For example, on the Enrique Iglesias project I'm currently mixing, I'm using both an 1176 and an LA2 on his voice, which is not unusual for me.

"The 1176 absolutely adds a bright character to a sound, and you can set the attack so it's got a nice bite to it. I usually use them on four to one, with quite a lot of gain reduction. I like how variable the attack and release is; there's a sound on the attack and release which I don't think you can get with any other compressor. I listen for how it affects the vocal, and depending on the song I set the attack or release – faster attack if I want a bit more bite. My preference is for the black face model, the 4000 series – I think the top end is especially clean.

"The LA-2A is not as versatile, but it also has a sound that I really like. On certain voices you can crank it heavily, to where you almost want to put a piece of tape over the meter because there's so much gain reduction that you don't want anyone else to see it! I'm not particularly into overcompression, but when you use it that way there's something about it that just sounds really great. It does depend how it's set on the back, where there's a flat control that can be set to roll off certain frequencies when you reduce more gain. If you have a singer with an intensely piercing voice I find that compressor a good one, incredibly useful. It makes things warmer, especially when you crank it, and for thinner voices that can be just the ticket."

Allen Sides

Allen Sides has always been known for having golden ears when it comes to the sound of equipment. The owner of Ocean Way Studios in Los Angeles and Nashville, he's also a speaker designer and engineer who is especially respected for his work with live musicians, including orchestra



and string dates. Among his recent credits are work with the Goo Goo Dolls, Alanis Morissette and Green Day. Sides brings his different perspectives into play when he talks about using the 1176.

“The 1176 is standard equipment for my sessions. I just used them last night, as a matter of fact, on a project for singer Lisa Bonet that Rob Cavallo was producing at Ocean Way. We were recording drums and I used them on the left/right overheads as effects limiters. It's something I learned from (engineer) Don Landy, who worked with Randy Newman a lot. I mult the left and right overheads and bring them back on the console, then insert a pair of 1176s into a pair of the mults. Push in 20 to one and four to one simultaneously and it puts the unit into overdrive creating a very impressive sound.”

Murray Allen

Murray Allen is a veteran engineer and Director of Post Production for the San Francisco Bay Area company Electronic Arts. He has a fascination for gear both old and new and he explains why he thinks the 1176 has been so popular for so long. “It has a unique sound to it that people like, it's very easy to operate, and it does a great job. You have just two controls relative to the ratio of compression. You have input and output and you have attack and release. That's all there is. It's still my favorite limiter for Fender basses and string basses, because you don't know it's working. It doesn't change the way the bass sounds, it just keeps the level at a more controllable place.

Ken Kessie

Mixer Ken Kessie (En Vogue, Tony! Toni! Tone!, Celine Dion) is known for being experimental. “Seems like everybody knows the basic tricks for the 1176,” he says, “But here are two that might be lesser known. If you turn the attack knob fully counterclockwise until it clicks, the 1176 ceases to be a compressor and acts only as an amplifier. Sometimes this is the perfect sound for a vocal. And of course the unit can be overdriven, adding another flavor of distortion in case your plug-ins are maxed out!

“Then, for that hard-to-tame lead vocalist (the one that backs up from the mic to whisper and leans in for the big ending chorus), try an 1176 followed by a DBX 165. Use the 1176 as a compressor, and the DBX as a peak limiter...it's guaranteed to be smooth as silk.”



Jim Scott

Jim Scott shared a Grammy for Best Engineered Album for Tom Petty's Wildflowers. He's also known for his work with Red Hot Chili Peppers, Natalie Merchant and Wilco. "I use 1176s real conservatively and they still do amazing things," he comments. "I'm always on the four to one button, and the Dr. Pepper – you know, 10 o'clock, 2 o'clock, and it does everything I need.

"I always use them on vocals. I use them on room mics, on acoustic guitars – sometimes in mixing I'll sneak a little on a snare drum or a separated channel of a snare drum. I'm not one of those guys who leaves it on everything, but I'd have to say I've used an 1176 on everything at one time or another.

"They have an equalizer kind of effect, adding a coloration that's bright and clear. Not only do they give you a little more impact from the compression, they also sort of clear things up; maybe a little bottom end gets squeezed out or maybe they are just sort of excitingly solid state or whatever they are. The big thing for me is the clarity, and the improvement in the top end.

"The 1176 has that same kind of phenomenon, where, when you patch something through a Neve equalizer and you don't even engage the EQ, it sounds better. It's just a combination of the amps.

"I also use LA-2As all the time. I use them on bass, and it's one of the compressors I use for reverb. Often I'll send a bunch of things to one LA2A and bring it back into the console like a return – it's great for drums, great for kick drum especially.

"LA-2As warm things up. They're the opposite of the 1176 – they EQ all the warmth and low mids and bass. When you put bass and drums in them they get fatter and bigger. And unless you hit them way hard and make the tubes sizzle they don't really distort. Of course, you can get them to sound like an AC30 if you want to, just turn them all the way up. They are very loud, powerful amplifiers.

"I've also used both the 1176 and the LA-2A for stereo buss compressors – you just have to be a little bit careful that your mixes don't go one sided. Tom's [Petty's] records have often been mixed through 1176s. I've also done that with LA-2As – they are of course, more inconsistent piece to piece than the 1176s, because of the tubes and the difference in fatigue of the tubes.



"My big mentors were Andy Johns and Lee DeCarlo and Ron Nevison because they were all Record Plant guys. I learned how to make a rock and roll record from them. Although over the years it's become my own thing, my style still tends to be that Record Plant style, U87s, 1176s, LA-2As, 47 F.E.T.s...it's what I like."

Mike Clink

Producer/Engineer Mike Clink (Guns N' Roses, Sammy Hagar, Pushmonkey) also comes from the Record Plant school of recording. "I find that I actually use 1176s more now than I ever did," he comments. "I like them because they bring out the brightness and presence of a sound – they give it an energy. It seems like when I'm mixing I end up using an 1176 on the vocals every time. And if I want to compress a room sound I'll take a mono room mic, put an 1176 across it and push in all the buttons."

Bruce Swedien

Bruce Swedien is a master engineer who needs no introduction. He also is a die-hard 1176 fan. "I have two silverface 1176LNs in my rack that Bill Putnam personally picked out for me," he says. "I remember sitting at Bill's place in the Channel Islands, and talking about the 1176 and how I wanted a pair. The next time we went over he'd picked this pair out and they were sitting in his garage waiting for me. I love them on vocals. All of the Michael Jackson and James Ingram vocals that everyone has heard so much were done with at least one of those 1176s. I couldn't part with them for anything. They sound fabulous."



Thank You

We would like to thank you again for becoming a Universal Audio customer. We urge you subscribe to our email lists so we can keep you informed about UA product developments and promotions. Email preferences are set in your registration profile (see “My Profile” on page 53).


We always like to hear from our customers and welcome your comments and suggestions. If you have any questions you can email us at:

- info@uaudio.com

In case your audio toolbox needs might include hardware such our UA Classics series please be sure to have a look at our web site for more information about the entire UA family of products:

- <http://www.uaudio.com>

The Universal Audio Team

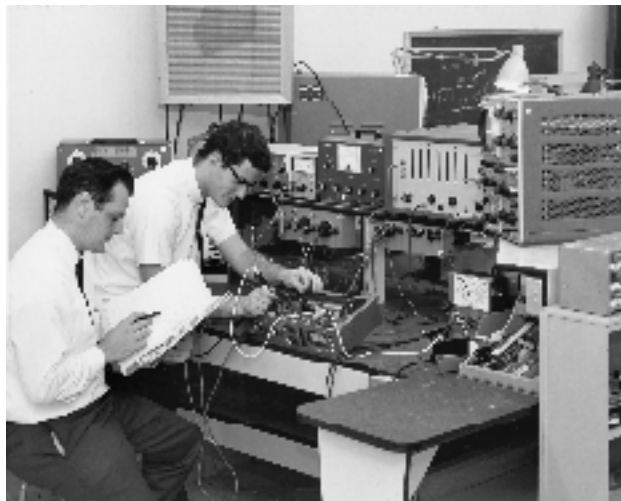

INDEX

Numerics

1176LN 281, 568
1176LN Controls 287
1176SE “Special Edition” 289
1176SE Controls 289
4K Buss Compressor 537

A

A/B Selector 176, 375, 443, 502, 504, 510
Accessing Meter Functions 63
Account 53
acoustical space 209
Adjusting Parameters 87, 91
AGC Mode 267
Air Blending 211
Air Density Menu 210
algorithm 208
All Button 464
All Buttons mode 288
Always On Top 62
AMD-8131 Mode 75
Amp Bent Knob 400
Amp Color Knob 400
Amp EQ Groups 399
Amp On/Off Button 401
Amp Output Knob 400
Amp Overview 398
Amp Post-EQ Knobs 400
Amp Pre-EQ Knobs 399
Amp Type and Variable Knob Functions 398
Amp Type Descriptions 401
Amp Type Menus 401
Amp Types 399
Amp-A Type Menu 402
Amp-B Type Menu 402
Ampex ATR-102 146
Ampex ATR-102 Manual Calibration Notes 170
Ampex ATR-102 Manual Calibration Procedure 167
Ampex ATR-102 Operational Overview 148, 316, 348

Ampex ATR-102 Parameter Dependencies 171
Ampex ATR-102 Primary Controls 151
Ampex ATR-102 Screenshots 147
Ampex ATR-102 Secondary Controls 159
Amplitude & Slope 214
Attack 287
Attack Knob 192
Attenuation Knob 477, 478, 480
Attenuation Selector Switch 478
Audio Interface 45
Authorization 32, 46
Authorization File 49
Authorization Notes 50
Authorization Overview 48
Authorize Plug-Ins 49
Authorize Plug-ins button 68
Authorize Plug-Ins Procedure 33
Authorizing Multiple Cards 57
Auto Mode 448
Automation 94
automation 94

B

Balance 268
Balance Control 237
Band Controls 375, 443, 502, 504, 510
Band Curves 468
Band Disable Button 191
Band Enable Button 443
Band Parameters 464
Bands 456
Bandwidth (Q) Knob 192
Bandwidth Knob 443, 478
Bass 277
Bent Knob 400
Blending Bar 208
Blending Bars 211
Boost Button 396
Boost Knob 477, 478, 480
Boss CE-1 Chorus Ensemble 499

INDEX

Boss CE-1 Controls 500
Boss CE-1 Screenshot 499
Bright Button 401
Buy Button 71, 91
Buying Plug-Ins 53
Bypass 212, 213

C

Cabinet 402
Cabinet On/Off Button 404
Cabinet Type Menu 402
Cambridge EQ Controls 174
Cambridge EQ Screenshot 173
Cambridge Equaliser 173
Card Info Display 59
Card Status 67
CE-1 Chorus Intensity Knob 501
CE-1 Clip LED 500
CE-1 Depth Knob 502
CE-1 Normal/Effect Switch 500
CE-1 Output Level Knob 501
CE-1 Rate Knob 502
CE-1 Rate LED 500
CE-1 Stereo Mode Switch 501
CE-1 Vibrato Controls 502
CE-1 Vibrato/Chorus Switch 500
Channel Input Gain 269
Circular (jump) 77
Classic Mode 501
Color and Bent 398
Color Knob 400
Compensating Upsampled Plug-Ins 108
Compressor Attack Menu 397
Compressor On/Off Button 397
Compressor Output Knob 193
Compressor Ratio Knob 396
Compressor Release Menu 397
Compressor Threshold Knob 396
Configuration Panel 71
Connections 123

Control Bats 175
Control Grouping 441
Control Panel 64
Controls Link 269
Controls View 87
Cooper Time Cube 184
Cooper Time Cube Controls 185
Cooper Time Cube Screenshot 184
Copy/Paste Settings 89
Coupons 48
CPS Selector Switch 477
CS-1 Channel Strip 190
Current Link Speed 79
Curve Control Bats 175
Curve Control Points 468
Customer Support 23
Cut Enable Button 177
Cut Filter 235
Cut Frequency Knob 178
Cut Type Menu 177

D

Damper Controls (Reverb Time) 236
Damping Knob 196, 199, 417, 420
DAW Environment 44
dbx 160 Compressor/Limiter 200
dbx 160 Controls 201
dbx 160 Screenshot 200
DC Bias 269
Decay Time 214
Default Preset Location 88, 217
Default Preset Locations 88
Delay Compensation 101
Delay Compensator 103
Delay Knob 198
Delay/Size Settings Interaction 198
DelayComp Examples 105
Demo Activation 51
Demo Mode 51, 52, 339
Demo Notes 52

INDEX

Depth Knob 195, 413
Desktop 62
Detailed System Profile 68
Diffusion 214
Dimension D 503
Dimension D Controls 504
Dimension D Screenshot 503
Dimension Mode 504
Disable Current 63
Disabling Cards 59
Disconnect 125, 134
Distance 216
DM-1 Controls 194
DM-1 Delay Modulator 194
DM-1L 194
DM-1L Overview 196
Documentation Overview 21
DreamVerb 203
Dry 217
DSP 64
DSP Load 68
DSP Load Limiting Overview 72
DSP Loading Information 93
DSP LoadLock 74
DSP Settings 84
Dual Mode 442, 501
Dynamics 379
Dynamics Meters 471

E

Early 215
Early & Late Adjustment 215
Echo On/Off Button 420
Echo Overview 419
EL7 FATS0 221
Emagic Logic Audio 86
Empirical Labs EL7 FATS0 221
EMT 140 Controls 235
EMT 140 Plate Reverb 234
EMT 250 Electronic Reverberator 241

EMT 250 Functional Overview 242
EMT 250 Program Mode Controls 245
EMT 250 Screenshot 242
EMT 250 Webzine Article 253
Enable Button 178
Enable/Bypass Switch 192, 193, 196, 199
energy 205
Envelope Mode 409
EP-34 Classic Tape Echo 255
EP-34 Controls 256
EP-34 Hardware History 260
EP-34 Overview 255
EP-34 Tape Echo Screenshot 256
EP-34 WebZine Article 261
EQ Bands 178
EQ Display 468
EQ Enable Button 176
EQ Enable Switch 237
EQ Response 468
EQP-1A 475
EQP-1A Program Equalizer 475
ER Relative Timing 214
EX-1 Compressor Controls 192
EX-1 Equalizer and Compressor 191
EX-1 Equalizer Controls 191
EX-1M Overview 193
External MIDI Control 95
Extra Buffering 74

F

Factory Presets 217
Fade In Knob 413
Fade Mode 413
Fairchild 670 262
Fairchild screenshot 263
FATS0 Controls 225
FATS0 Functional Overview 222
FATS0 Jr. 221
FATS0 Screenshots 222
FATS0 Sr. 221

INDEX

Features 20
Feedback 24
Filter Type Menu 410
Filtering 212
Firewire Bandwidth 141
Firewire Bandwidth vs. UAD DSP 143
Firewire Basics 137
Firewire Bus Power 144
Firewire Panel 78
Firewire System 78
Frequency 428
Frequency (fc) Knob 192
Frequency Controls 470
Frequency Knob 178, 444

G

Gain (G) Knob 192
Gain Knob 179, 444
Gain Reduction 430
Gain Reduction Meter 451
Gate Fast Button 396
Gate Level Display 395
Gate Off/On Button 395
Gate Threshold Knob 396
Gate/Comp 395
Grit 288
Group/Bus 105, 108
Grouping Tracks Requiring DelayComp 105

H

Hardware Installation 30
Harrison 32C EQ 270
Harrison 32C EQ and Harrison 32C SE Controls 271
Harrison 32C EQ Screenshot 270
Harrison 32C Latency 274
Headroom 373
Headroom Switch 374
Helios 69 Latency 279
Helios Type 69 Band Layout 276
Helios Type 69 Controls 276

Helios Type 69 Equalizer 275
Helios Type 69 Screenshot 275
Help & Support Panel 84
Help Menu 71, 91
Hi Knob 405, 409, 416
Hidden Controls 240
High Attenuation Controls 478, 480
High Frequency Controls 478
High Frequency Knob 238
High Gain Knob 238
High Resolution 94
High-Pass Filter 444
History 563
Host Application 44, 218
Host Application Settings 103
Host Computer 44
Host CPU 59
Host CPU Loads 94
Host PDC Implementation 101
Hot Disconnect 125, 134
Hot Swapping 125, 134
How to use TrackAdv 107
http 23, 340
Hysteresis 381

I

I/O Buffers and Latency 46
In/Out Toggle Switch 477, 479
Info Display 78, 83
Input 216, 287
Input Mode Switch 504
Install Software First 27, 117, 122, 130
Installation 25
Installer 42
Installing the UAD Hardware 31
Introduction 18

K

KCS Selector Switch 478
K-System 448

INDEX

L

- LA-2A 281, 567
- LA-3A Compressor 290
- LA-3A Controls 291
- LA-3A Screenshot 290
- Late 215
- Late-Field Relative Timing 213
- Late-Field Start 214
- Latency 66
- latency 101
- Latency & Delay Compensation 101
- Latency Calculator 84
- Latest Information 27
- Launching a Powered Plug-In 85
- Launching a UAD Powered Plug-In 85
- Launching the Meter
 - Windows 62
- Launching the UAD Meter & Control Panel 62
- L-Delay Knob 194
- Levels 216
- Lexicon 224 292
- Lexicon 224 Controls 299
- Lexicon 224 Screenshot 294
- LFO Mode 409
- LFO Type Menu 406, 413, 417
- LFO Type Pop-up Menu 195
- Limit 457
- Limit CPU Load 73
- Limit DSP Load 73
- Limiter 446
- Linear (slider) 77
- Link Button 197
- Little Labs IBP 312
- Little Labs IBP Controls 313
- Little Labs IBP Latency 314
- Little Labs IBP Screenshot 312
- Little Labs VOG 315
- Little Labs VOG Parameters 317
- Little Labs VOG Screenshot 316

- Little Labs Voice Of God 315
- Live Processing 113
- LiveTrack Mode 89
- Lo Knob 405, 408, 416
- Load Authorization File 49
- Load/Save Preset 88
- Logic Audio 86
- Low Cut / High Cut Filters 177
- Low Frequency Controls 477, 480
- Low Frequency Knob 237
- Low Gain Knob 238
- L-Pan Knob 196, 199

M

- Mac OS 22
- Mackie UAD-1 41
- Manley Massive Passive EQ 319
- Manual Conventions 22, 24
- Massive Passive Controls 322
- Massive Passive EQ 319
- Massive Passive Latency 329
- Massive Passive Mastering EQ 321
- Massive Passive Notes 329
- Master 176
- Master Level Knob 176
- Materials Blending 211
- Materials Blending Bars 211
- Materials Menus 210
- Materials Panel 209
- Materials panel 205
- Memory 64
- MEQ-5 475
- Meter 288
- Meter Elements 63
- Meter On/Off Button 64
- Meter Pop-up Menu 193
- MIDI Control 95
- MIN 74
- MIN_GNT 74
- Misc Settings 84

INDEX

Mix 217, 457
Mix Knob 239, 405, 420
Mixed UAD System 55
Mod Delay On/Off Button 418
Mod Delay Overview 415
Mod Depth 238
Mod Filter Module 407
Mod Filter On/Off Button 410
Mod Rate 238
Mod Type Menu 409
Mode Menu 413
Mode Pop-up Menu 195
Mode Switch 448
Modes 441
Modulation 238
Moog Filter Controls 333
Moog Filter Latency 340
Moog Filter Screenshot 333
Moog Filter SE 339
Moog Filter SE Controls 339
Moog Multimode Filter 332
Morph Slider 402
Multicard DSP Loading 58
Multicard Setup 120
Multiple Buttons 504
Multiple UAD Cards 55
Mute 217
MXR Flanger/Doubler 341
MXR Flanger/Doubler Controls 343
MXR Flanger/Doubler Screenshot 342
My Profile 53
My Systems 50
My.uaudio.com 46, 47

N

Neve 1073 Equalizer 349
Neve 1073 Latency 353, 376, 459
Neve 1073 Screenshot 349, 368
Neve 1073SE 352, 376
Neve 1073SE Controls 353, 376
Neve 1081 Band Layout 355
Neve 1081 Controls 276, 291, 355, 379, 428, 437
Neve 1081 Equalizer 354
Neve 1081 Latency 360
Neve 1081 Screenshot 275, 290, 354, 378
Neve 1081SE 360
Neve 1081SE Controls 273, 360
Neve 31102 Console EQ 361
Neve 31102 Controls 362
Neve 31102 Latency 366
Neve 31102 Screenshot 361
Neve 31102SE 365
Neve 31102SE Controls 365
Neve 33609 Compressor 367
Neve 33609 Controls 369
Neve 33609 Screenshot 368
Neve 33609SE 376
Neve 88RS Band Layout 387
Neve 88RS Channel Strip 377
Neve 88RS Controls 379, 455
Neve 88RS Screenshot 378
Nigel 392, 393, 475
Nigel Modules 393, 478, 480
Noise 253
Note Values 97
Nuendo 85

O

Offline Authorization 34
On/Off Button 418, 420
On/Off Rotary Switch 477
Online 23
Online Documentation 23
Onset Knob 413
Optional Plug-Ins 42, 47
Order Menu 406
Output 216, 287
Output Knob 192, 196, 199, 409
Output Level Meter 404
Output VU Meter 239

INDEX

Overview 190, 200, 275, 290, 349, 354, 361, 367, 377, 421, 427, 431, 436, 454, 461, 505, 512

P

Package Contents 21, 116, 129

parameter 91

Parameter Copy Buttons 442

Parametric EQ 179

Parametric Type Selector 179

Peak 291

Peak Level 350, 355, 362, 506

Peak Reduction 285

Phasor Module 404

Phasor On/Off Button 406

Plate 140 Overview 234

Plate Select Switch 236

Platforms 22

Plug-In Formats 45

Plug-In License Policy 55

Plug-Ins Panel 68

Plugs parameter 107

Positioning panel 205, 214

Post-EQ Hi Knob 400

Post-EQ LO Knob 400

Post-EQ Mid Knob 400

Power 502, 504

Power Down! 123

Power Lamp 240

Power Requirement 57

Power Switch 240, 443

Powered Plug-Ins 42

Precision Buss Compressor 200, 421

Precision Buss Compressor Controls 201, 422

Precision Buss Compressor Screenshot 422

Precision De-Esser 421, 427

Precision De-Esser Controls 428

Precision De-Esser Screenshot 427

Precision Enhancer Hz 431

Precision Enhancer Hz Controls 432, 435

Precision Enhancer Hz Screenshot 431

Precision Enhancer Hz Usage Notes 435

Precision Enhancer kHz 436

Precision Enhancer kHz Controls 437

Precision Enhancer kHz Screenshot 437

Precision Equalizer 440

Precision Equalizer Controls 441

Precision Limiter 446

Precision Limiter Controls 447

Precision Limiter Latency 445, 453, 474

Precision Limiter Meters 448

Precision Limiter Screenshot 447

Precision LimiterGroup/Bus Example 111

Precision Maximizer 454

Precision Maximizer Controls 455

Precision Maximizer Operating Tips 459

Precision Maximizer Screenshot 455

Precision Multiband 461

Precision Multiband Latency 474

Precision Multiband Screenshot 461

Pre-Delay 218

Predelay Knob 239

Pre-EQ Hi Knob 400

Pre-EQ Lo Knob 399

Pre-EQ Mid Knob 400

Preflex Features 394

Preflex Module 394

Preflex Overview 394

Pre-Flight Check 124

Preset Design Tips 219

Preset Management 217

Preset/Settings Compatibility 88

Primary Controls 299, 546

Pro Tools Configuration Window 84

Program 64

Pultec EQP-1A Program Equalizer 475

Pultec Latency 476

Pultec MEQ-5 475

Pultec-Pro 475

Purchase Procedure 54

INDEX

Purchasing Plug-Ins 53

Q

Q (Bandwidth) Knob 179

R

Rate 408

Rate Knob 195, 404, 408, 415

Rate knob 413

Ratio 287

Ratio Knob 193

R-Delay Knob 194

ReadMe 21

RealVerb Pro 484

RealVerb Pro Background 485

Recirculation (RECIR) Knob 195, 198

Recirculation (Recir) Knob 405, 417, 419

Reconnect 126, 134

Recovery 369, 370

Reflections End 212

Reflections Panel 211

Reflections panel 205

Reflections Start 212

Registration 53

Relative Circular (grab) 77

Release 287

Release all DSP resources on Audio Unit bypass 76

Release all DSP resources on AudioUnit bypass 76

Release Knob 192

Resonance (Res) Knob 409

Resonance panel 205

Resource Gauges 63

resources 85

Response Curve Color 174

Response Curve Display 174

Retail Packages 47

Reverb Time Meters 236

Reverberation panel 205, 213

Roland 503, 504

Roland CE-1 Controls 500

Roland CE-1 Overview 499

Roland Dimension D 503

Roland Dimension D Controls 504

Roland Dimension D Overview 503

Roland Dimension D Screenshot 503

Roland RE-201 505

Roland RE-201 Controls 506

Roland RE-201 Interface 506

Roland RE-201 Screenshot 506

Room Shape and Material 484

R-Pan Knob 196, 199

RS-1 Controls 198

RS-1 Reflection Engine 197

Run On Menu 71

S

Samples parameter 104, 107

Satellite 128

Save/Load 217

Screen Shots 23

Scroll Wheel 92

Secondary Controls 549

Sends 105

Sens 408

Sens/Rate/Wah Knob 408

Settings Menu 88

Shape 456

Shape Blending Bar 208

Shape Menus 208

Shape Panel 207

Shape panel 205

Shape Pop-up Menu 198

Shelf Enable Button 182

Shelf EQ 182

Shelf Type Button 182

Shimmer Mode 413

Shortcuts 92

Sidechain Link 268

Signal Flow 204

Size 218

INDEX

Size Knob 198
Slope 214
Software Installation 28
Software Instructions 124
Software Removal 37
Software Updates 27
Solo 428
Solo Display 472
Space 219
Spatial Characteristics 218
Spectral Characteristics 486
spectral characteristics 213
Speed 428
SPL Transient Designer 512
SPL Transient Designer Applications 515
SPL Transient Designer Controls 513
SPL Transient Designer Screenshot 512
SPL Transient Designer Technology 519
Split 429
SSL G Buss Compressor 537
SSL G Buss Compressor Controls 538
SSL G Buss Compressor Screenshot 537
SSL G Channel Strip 523
SSL G Channel Strip Controls 524
SSL G Channel Strip Screenshot 524
Startup Sequence 124
Stereo 291
Stereo Mode 441
Stereo Operation 285, 289
Studer A800 542
Studer A800 Screenshot 543
Studer Operational Overview 543
Support Website 23
Supported Hosts 26
Sweep Hi Knob 405, 409, 416
Sweep Knobs 404, 408, 416
Sweep Lo Knob 405, 408, 416
Sync Button 194, 198
System 50

System Information Panel 65
System Overview 38
System Requirements 26, 27, 116, 121, 130

T

Target Link Speed 80
Tempo Sync 96
Tempo Sync Modes 99
Tempo Sync Plugins 96
Text Entry 92
Thank You 574
The UAD System 21
Threshold 267, 422, 428
Threshold (Thresh) Knob 412
Threshold Knob 193
Time Constant 268
Time Knob 419
Toggle initial value modifier 78
Toolbar 87
Track Advance 106
TrackAdv Examples 107
Transfer Video 54
Transferring UAD cards and licenses 54
Transient Designer 512
Trem/Fade 412
Trem/Fade On/Off Button 414
TremModEcho Module 411
Tremolo Mode 414
Trident A-Range EQ 557
Trident A-Range EQ Controls 559
Trident A-Range EQ Screenshot 557
Trident A-Range Latency 561
Trigger LED 412
Type I 180
Type II 180
Type III 181
Type Menu 409, 410, 413, 417

U

UA Online Store 52

INDEX

UAD 116, 129
UAD Bandwidth Allocation 80
UAD Control Panel 64
UAD Drivers 43
UAD Environment 38
UAD ExpressCard Products 114
UAD Hardware 31, 38, 120
UAD Meter & Control Panel 43, 61
UAD Nomenclature 22
UAD Plug-In Window 86
UAD Software 42
UAD Software Installation 28
UAD Toolbar 87
UAD-1 Family 40
UAD-1 Hardware 31, 120
UAD-1 Host Compatibility 75
UAD-1 PCI 74
UAD-2 DSP 73
UAD-2 Family 39
UAD-2 LED 36
UAD-2 Satellite 128
UAD-2 Satellite Notes 135
UAD-2 Satellite Operation 133
UAD-2 SOLO/Laptop 116, 129
UAD-2 SOLO/Laptop Important Notes 119
UAD-Xpander 39, 41
UAD-Xpander Details 121
UAD-Xpander Important Notes 127
UAD-Xtenda 39, 40, 41, 120
UAD-Xtenda Installation 120
Unlicensed Plug-Ins 35
Upsampled Plug-Ins 108
Upsampling Values Table 110
Use Host Mode 77
User Documentation 43
User Interface Settings 77
User Manual 22
Users Forum 23
Using Powered Plug-Ins 61, 85, 101, 123, 133

Using the Meter 62
Using the UAD Meter 62
Using UAD Powered Plug-Ins 85
Using UAD-Xpander 124

V

VariTrem Mode 414
Verifying Installation 35
Video Documentation 23
Vouchers 48
VSTi 104
VU Meter 506

W

Wah 408
Wah Pedal Mode 409, 410
Welcome 18
Wet 217
Wet Solo Button 239
Wet/Dry Mix Knob 196, 199
When to use TrackAdv 106
Width 429
Width Knob 239
Windows 22



INDEX

X

Xpander Connections 123

Xpander Notes 127

Xpander Operation 123

Xpander System Sleep 126, 135

Z

Zoom Buttons 175