

ANTI 1992
HIGH
GAIN
AMP




UNIVERSAL AUDIO

GET MORE TONES!
Scan here, or go to
uaudio.com/uafx/start
for free cabs, presets
and deep editing.



- PRE GAIN** Adjusts gain to the preamp circuit
- [RESO]** Adjusts low frequency response and thump
- PRESENCE** Adjusts high end sparkle
- [GATE]** Adjusts gate threshold, bypassed at minimum
- OUTPUT** Overall volume control
- CAB** Cycles through available speakers
When LED is off, amp remains active but cab and room are disabled
- SWITCH** [ALT]: Activates Reso, Gate, Overdrive, OD Tone, and OD Level controls
AMP: Standard knob controls
STORE: Hold down to save sound as preset
- CHANNEL** RTHM: Clean channel
CRNCH: Crunch channel for overdrive
LEAD: Lead channel for heavy saturation
- LOW** Adjusts bass frequencies
- [OVERDRIVE]** Adjusts overdrive pedal gain
- MID** Adjusts midrange frequencies
- [OD TONE]** Adjusts overdrive pedal tone
- HIGH** Adjusts treble frequencies
- [OD LEVEL]** Adjusts overdrive pedal output, bypassed at minimum
- ON** Toggles amp on/off*
LED lit when knob settings are active
- PRESET** Toggles preset on/off*
LED lit when stored settings are active

*Get more footswitch modes and deep editing with the UAFX Control app

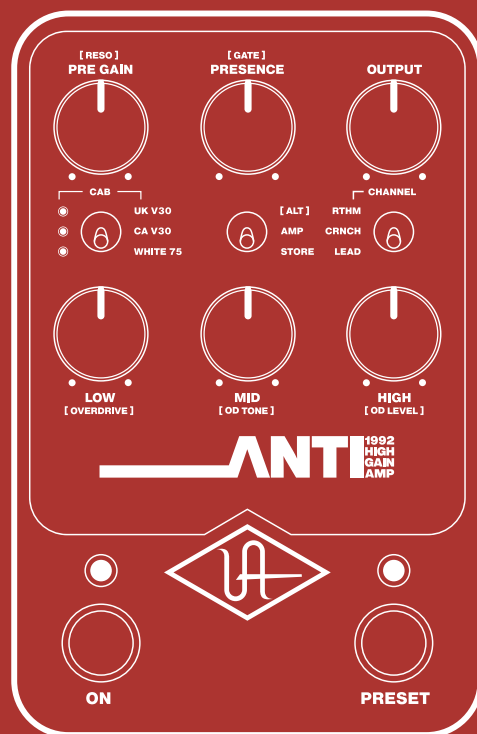

- MONO IN** Connect TS cable from guitar or other gear for mono operation
- STEREO IN** Connect TS cable for stereo only (in addition to MONO IN)
- MONO OUT** Connect TS cable to amp or other gear for mono operation
- STEREO OUT** Connect TS cable for stereo only (in addition to MONO OUT)
- POWER IN** Connect 400 mA isolated power supply (sold separately)
- USB TYPE-C** Connect to computer for firmware updates with the UA Connect desktop app
- PAIR** Activate Bluetooth discovery for UAFX Control mobile app

Power Supply Isolated 9VDC, center-negative, 400 mA minimum, 2.1x5.5 mm barrel connector (sold separately)

Find complete documentation at
uaudio.com/uafx/start

